

byward

INDEX
By Section

*Click on the desired Installation Guide to jump to the Guide page.


Product Name	Product Code	Guide No.	Last Updated
DESK AND RETURN			
Return, Wall Mounted	LWBRW	TLW_001	Sept 2024
ACCESSORIES			
Byward Wall Shelves	LWBWS	TLW_002	Sept 2024
Byward Additional Wall Tether	LWBWT	TLW_003	May 2025

CABINETS AND TOWERS			
Byward High Cabinet	LWBHC		
Byward High Cabinet, Casual Drawer	LWBHD		
Byward Open High Tower	LWBOH		
Byward Open Medium Tower	LWBOM		
Byward Medium Tower	LWBTM		
Byward High Tower	LWBTH		
Low Cabinet, Top access	LWBCT	TLW_101	May 2025


Product Name	Product Code	Guide No.	Last Updated
--------------	--------------	-----------	--------------

Product Name	Product Code	Guide No.	Last Updated
NO INSTALLATION GUIDE			
Wall Shelves	LWBWS	No Guide	May 2021
Desk	LWBDS	No Guide	May 2021
Desk with Pedestal	LWBDP	No Guide	May 2021
Return with storage	LWBRW	No Guide	May 2021
Carrier Desk	LWCD	No Guide	May 2021
Byward Desk with Hinge Door	LWBHD	No Guide	May 2025
Byward Desk	LWBDC	No Guide	May 2025


Wall Mounted Return (LWBRW)

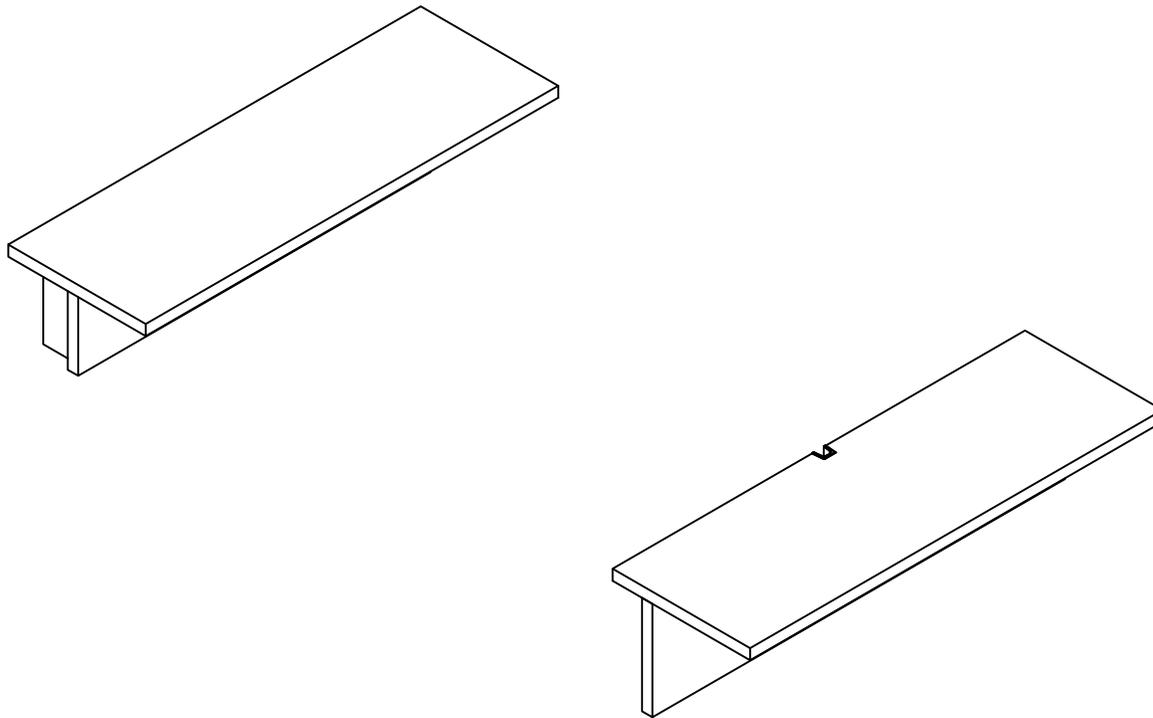

Part and Product Identification

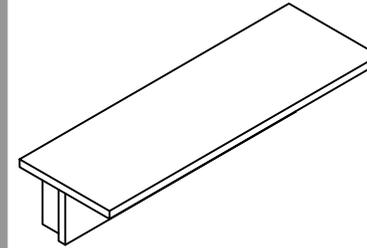

or

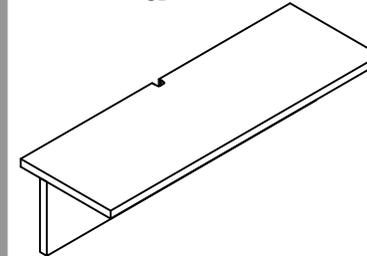

A - Worksurface
(C07-6727) x1




B - Special-Mouse Hole
Wire Management
Grommet
(B02-0547) x1



C - Anti-Lift Bracket
(A16-8563) x2



D - Screw 1/4-20X5/8 QD
(E01-0992) x4

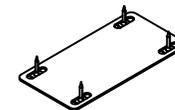


E - Flush Plate
(UNRF) x1

Section: **RETURN**

Date: Sept 2024 Page No: 2 of 3
TLW_001


Description: **RETURN, WALL MOUNT**

INSTALL WALL CLEATS

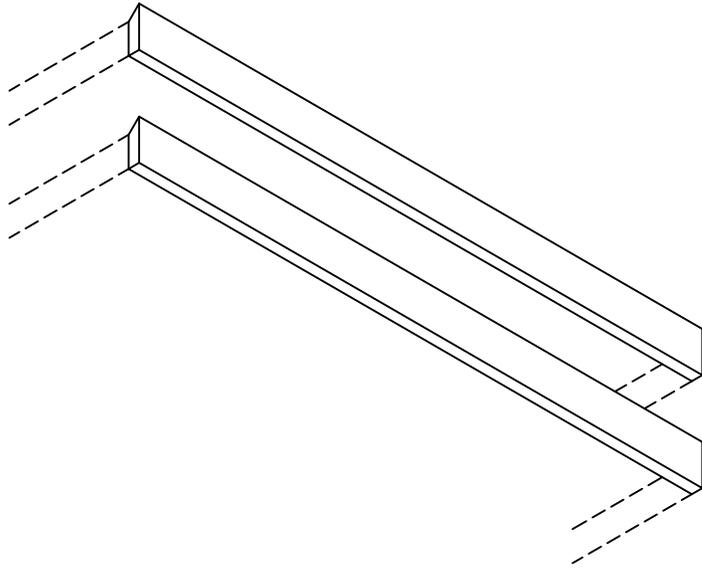



NOTE: Wood Wall Cleats will be in two splits when Surface Grommet (B) is selected for wire management purposes

NOTE: Installer is responsible to assess the site condition and provide applicable hardware to attach the cleats to a wall.

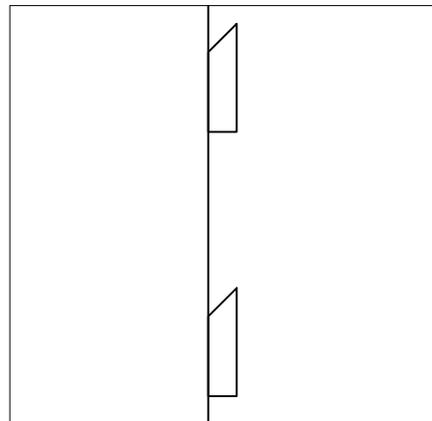


STEP 1: Install the Wood Wall Cleats as shown

INSTALL WORKSURFACE

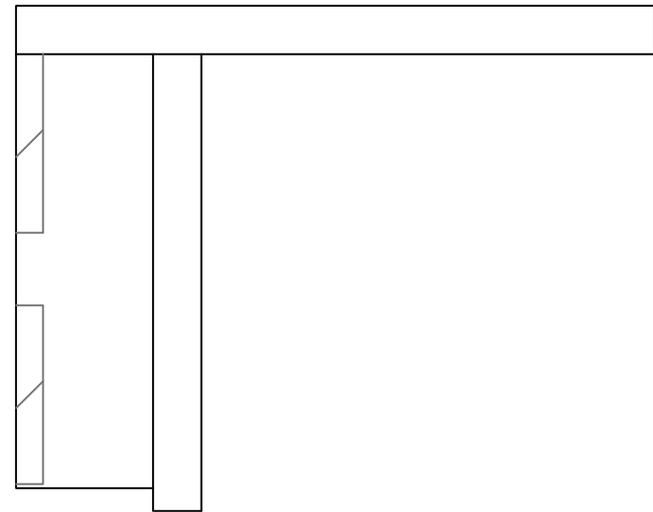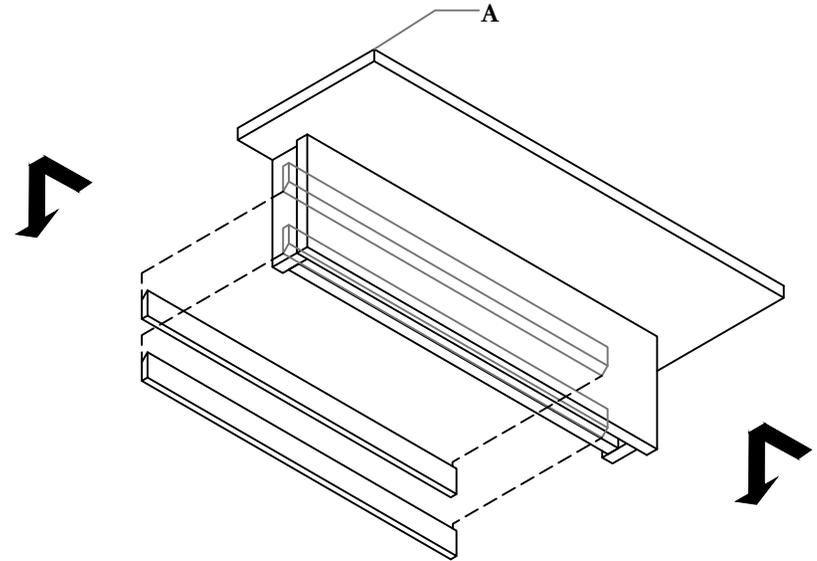


STEP 2: Simply place the Worksurface on installed Wall Cleats as shown

INSTALL ANTLIFT BRACKETS

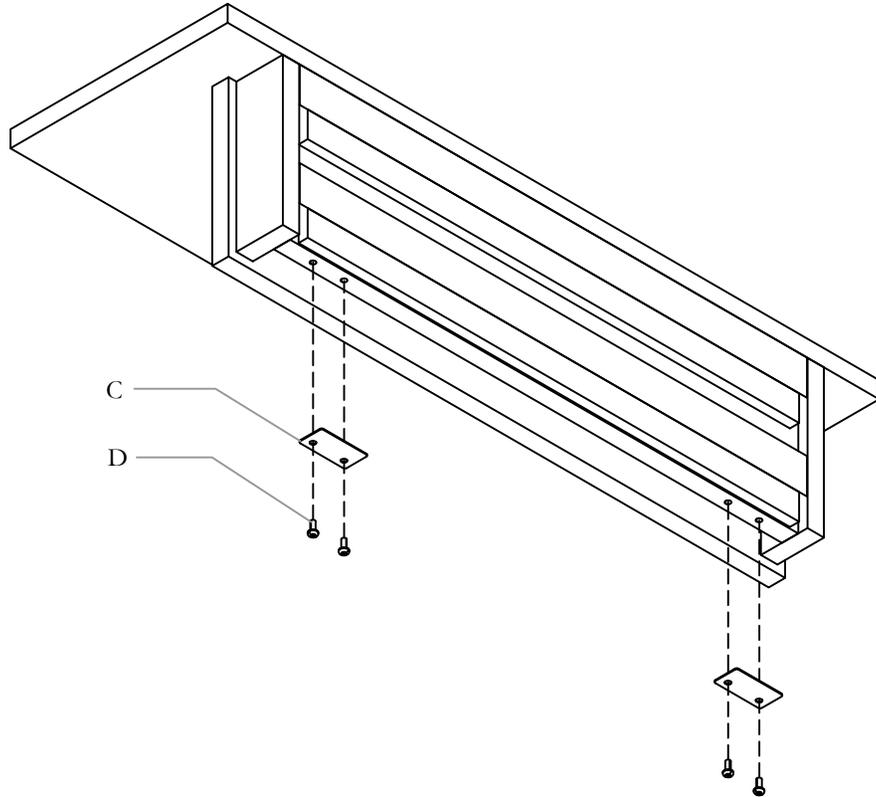


STEP 3: Install Antilift Brackets using screws as shown

TETHERING

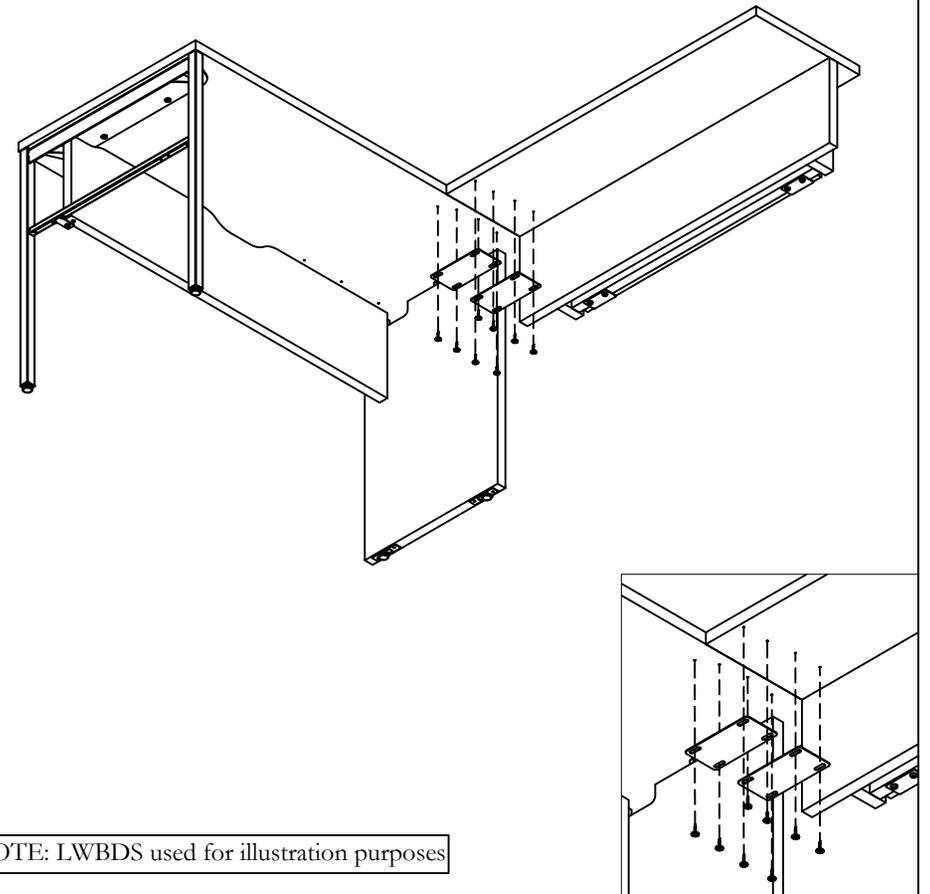


STEP 4: Tether the Worksurface with the Main Desk using Flush Plates as shown

Byward Wall Shelves (LWBWS)

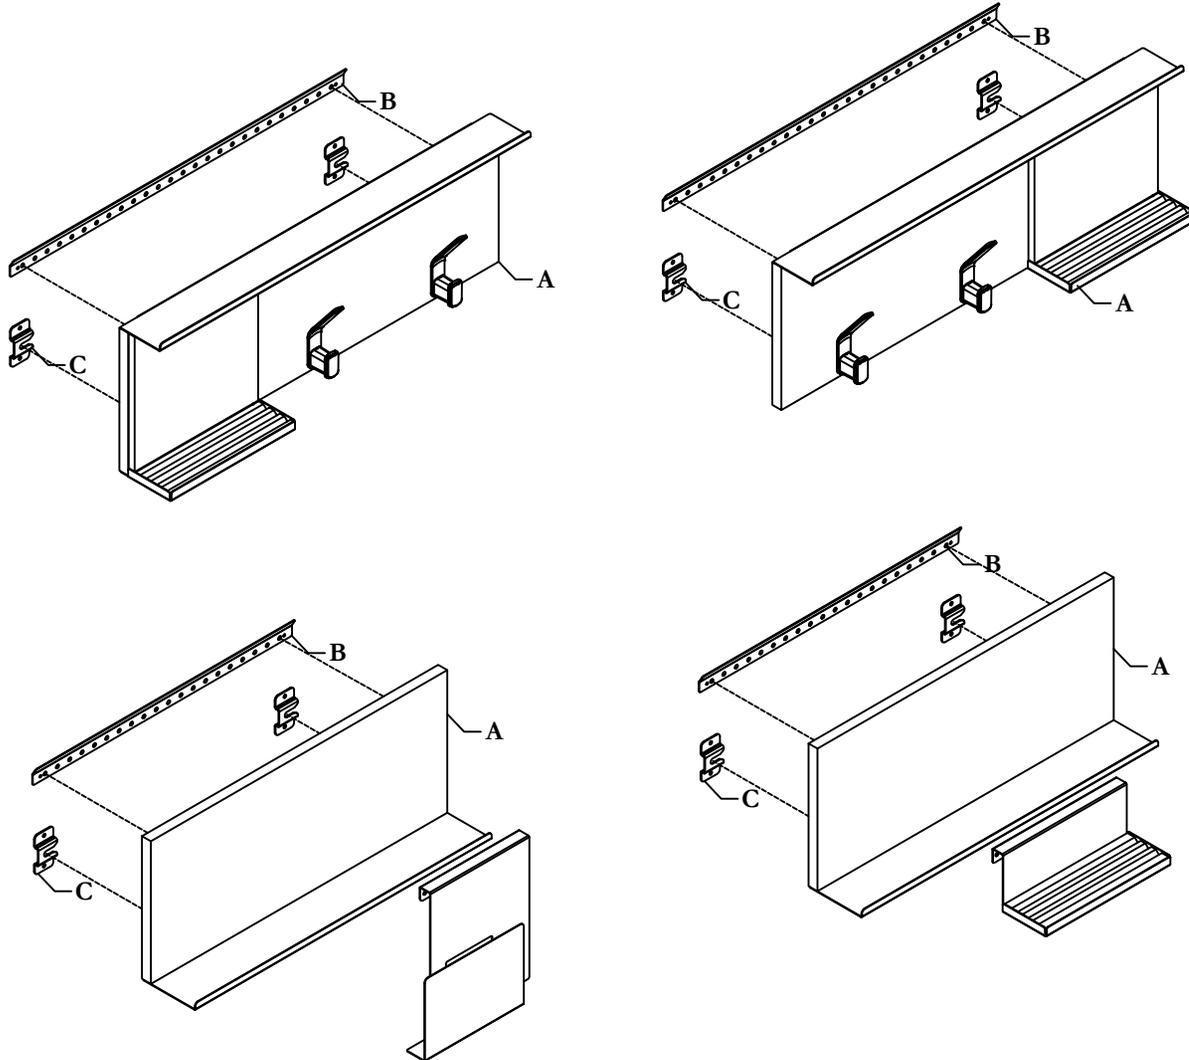


Part and Product Identification


A - Shelf Style
(LWBWS_) x1

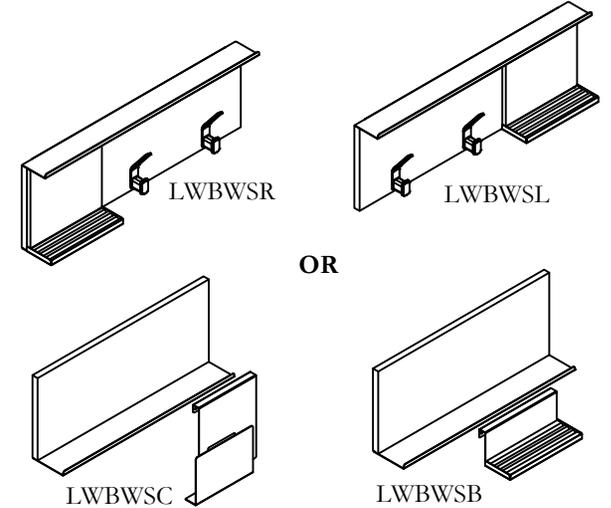


B - Bracket, Wall Attachment
(A16-8934-X) x1

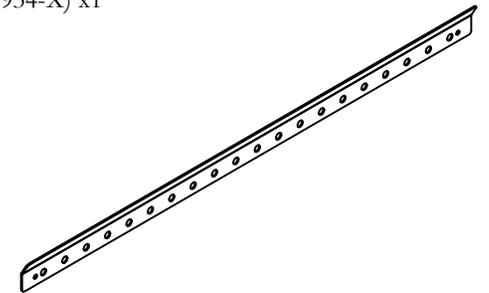

C - Bracket, Wall Attachment
(A16-8601) x2

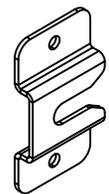


PLACEMENT OF WALL CHANNEL BRACKET

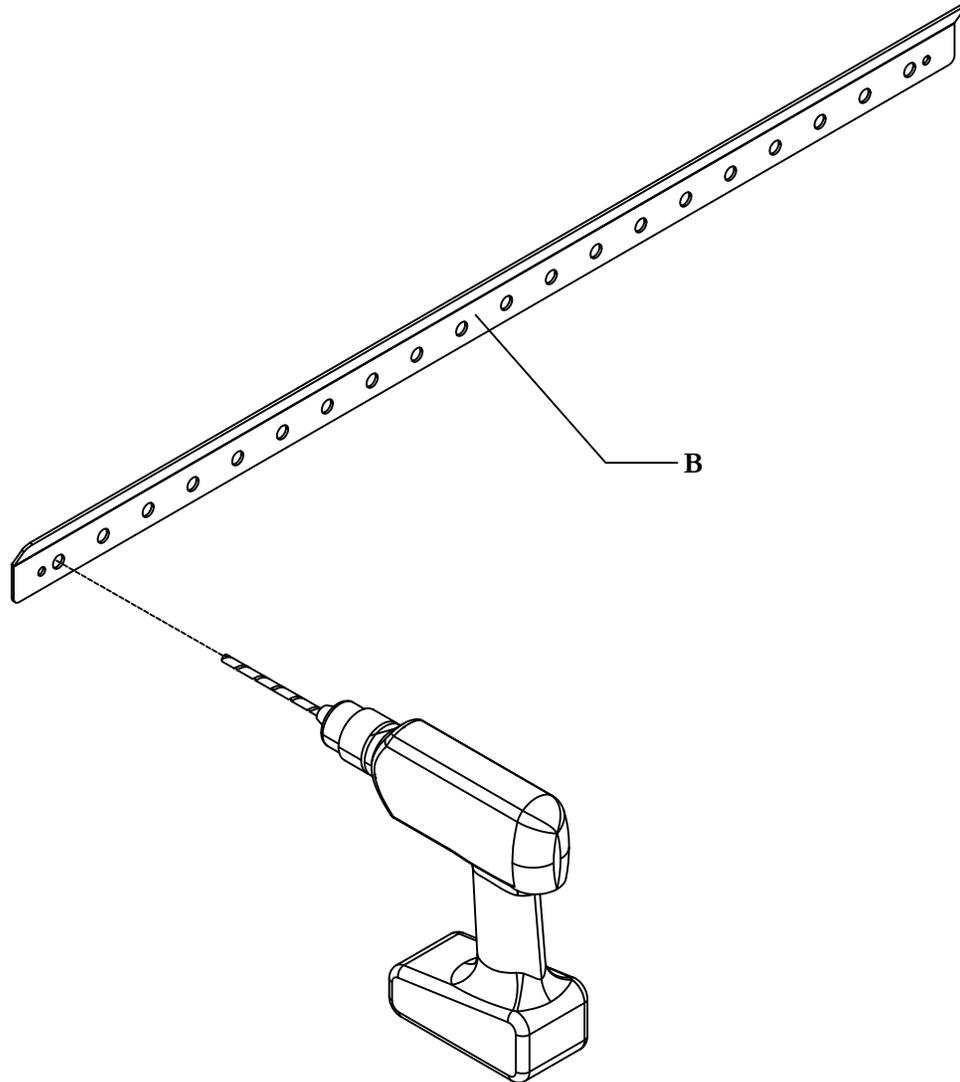

STEP 1: Position channel bracket on the wall. Mark the position of the holes and drill two holes in the wall.



SECURING THE WALL CHANNEL BRACKET

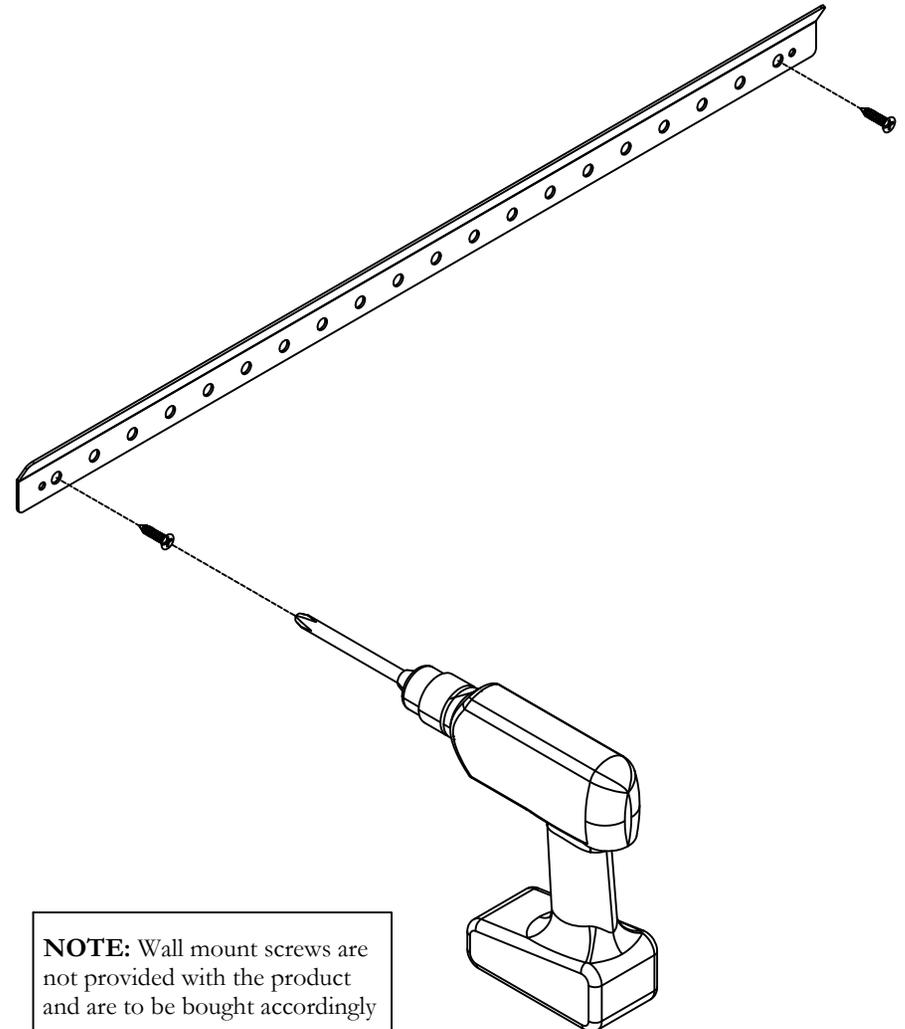

NOTE: Wall mount screws are not provided with the product and are to be bought accordingly


STEP 2: Secure the channel bracket using wall mount screws.

PLACEMENT OF WALL BRACKETS

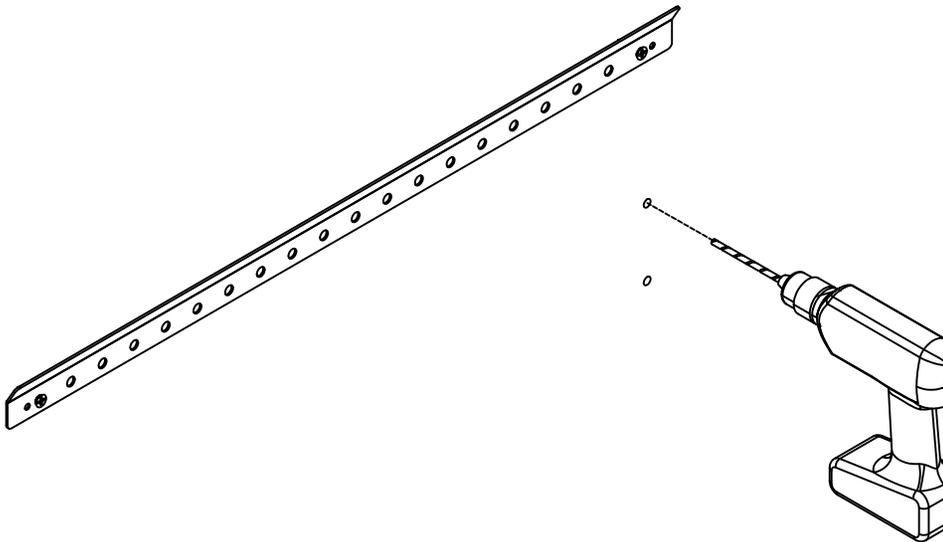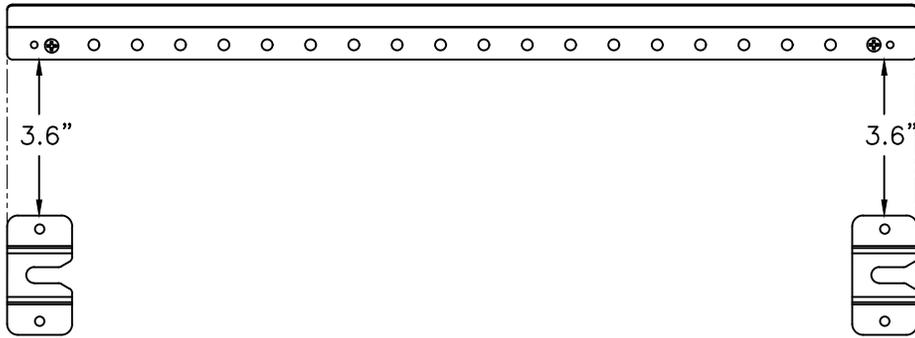



STEP 3: Position the wall brackets so that their edges align and they are 3.6" below the channel bracket. Mark the location of the holes and drill 2 holes for each bracket.

SECURING THE WALL BRACKETS

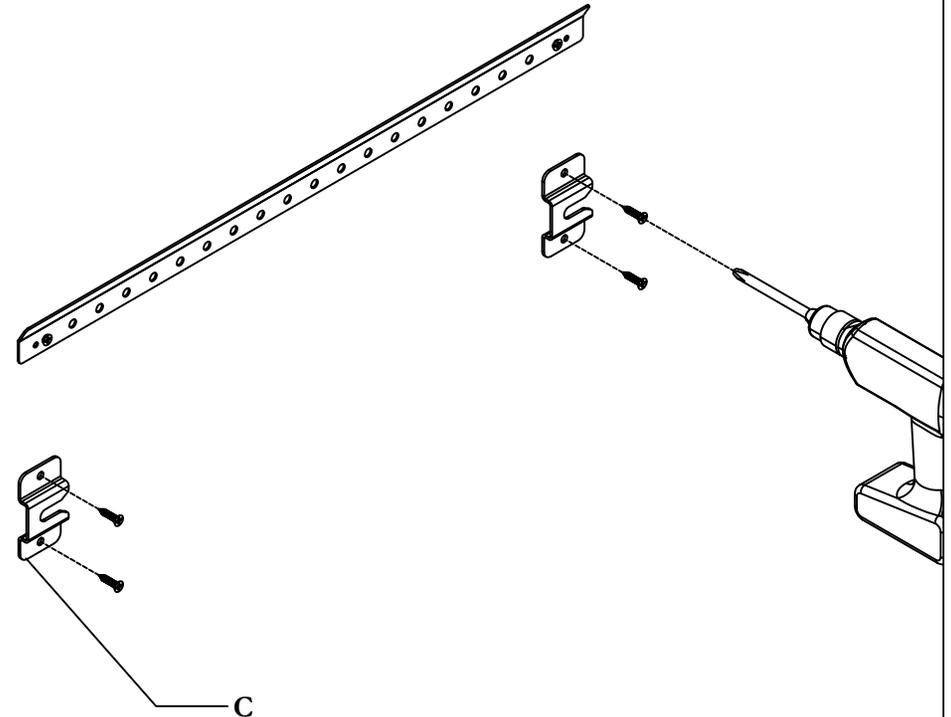


STEP 4: Secure the wall brackets using wall mount screws.

SECURE PLACEMENT OF THE WALL SHELF

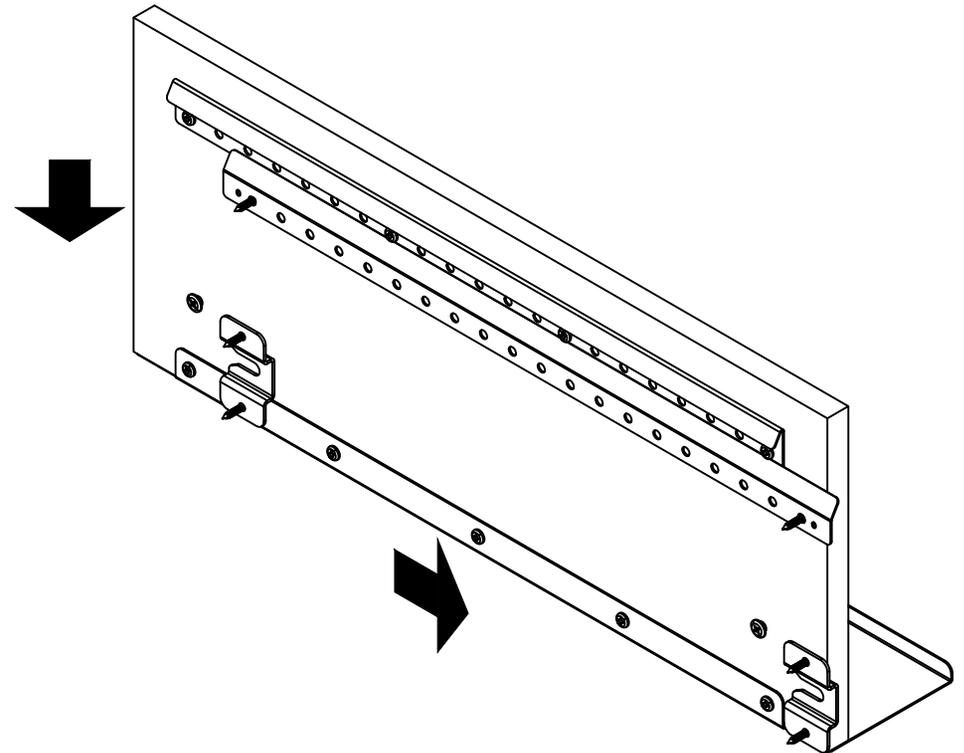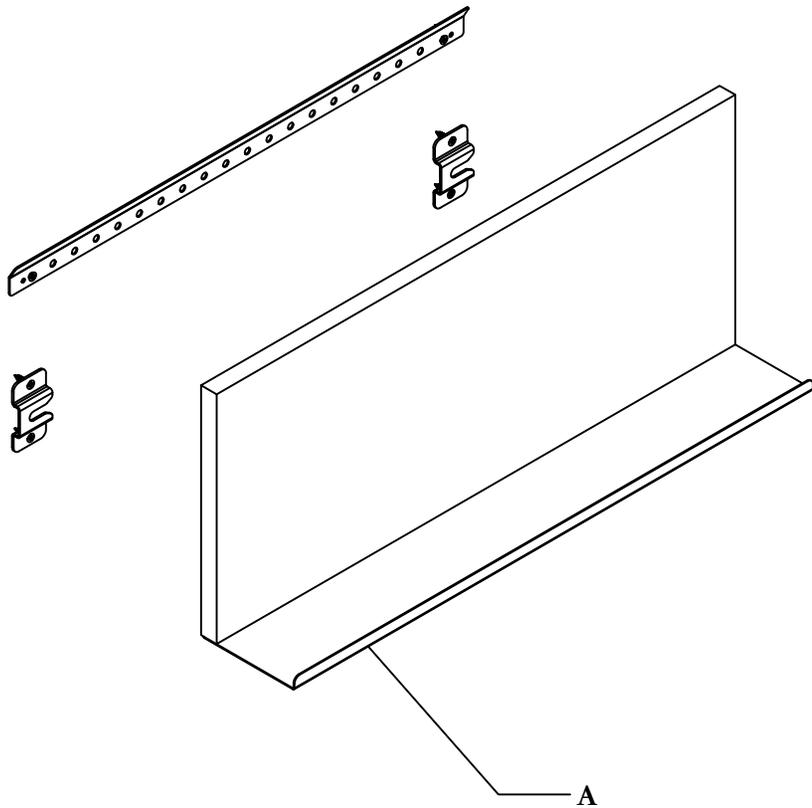

STEP 5: Hang the wall shelf on the wall channel bracket and slide it right to secure it with the wall brackets.


Byward Additional Wall Tether (LWBWT)

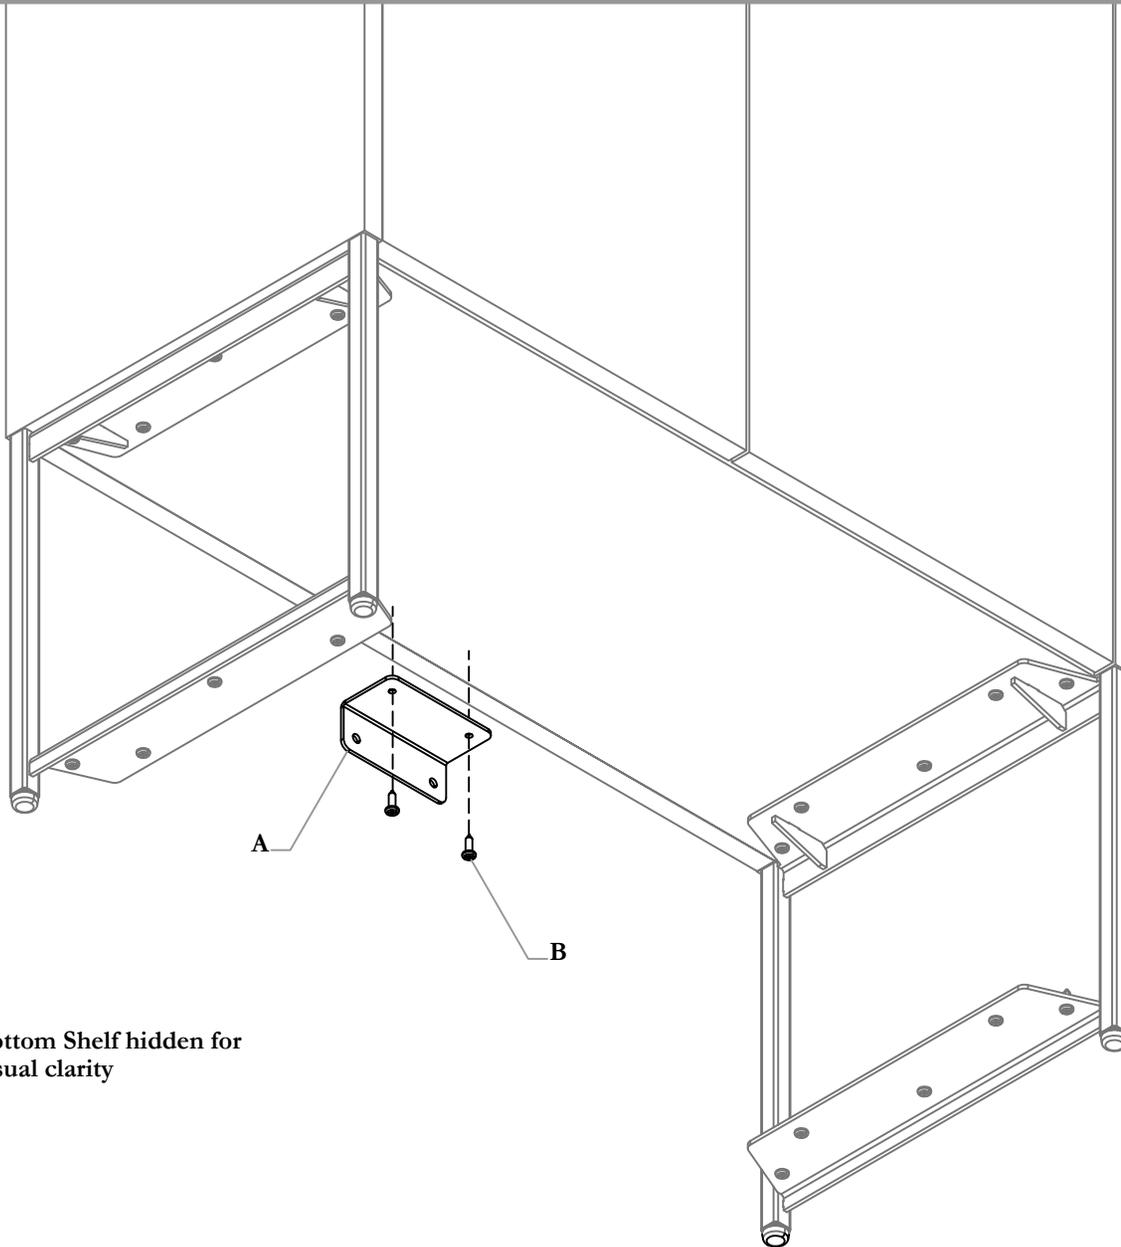


Bottom Shelf hidden for visual clarity

Part and Product Identification


A - Bracket
(A16-8641) x1

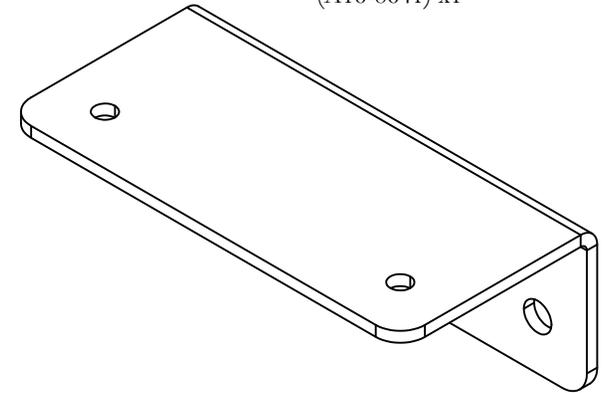

B - Wood Screw #1x5/8
(E04-0068) x2

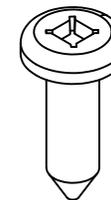


AFFIX TETHER TO CABINET

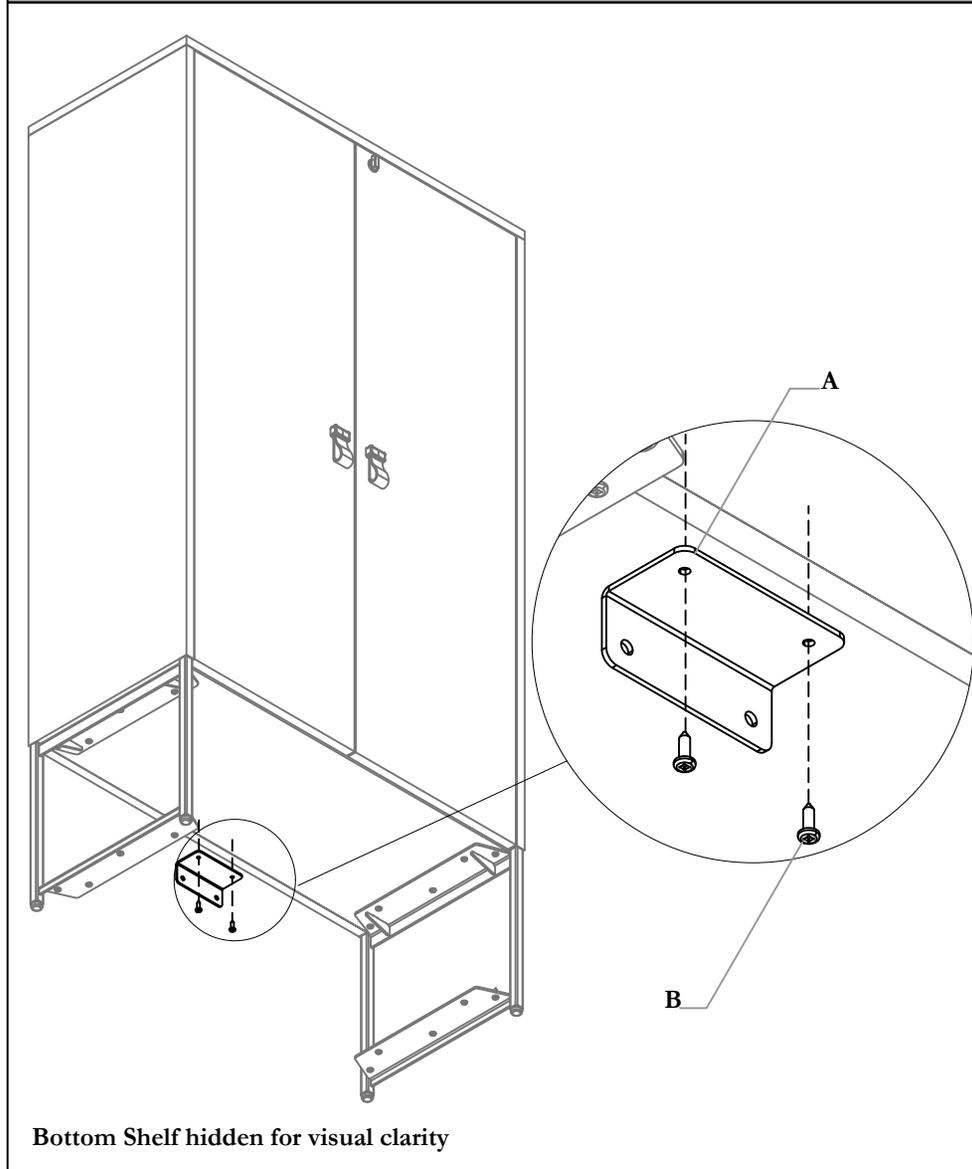

STEP 1: Using included Wood Screws (B) fix the Wall Tether (A) to the the bottom, back of the cabinet or tower, making sure it is flush with the back

AFFIX CABINET TO WALL

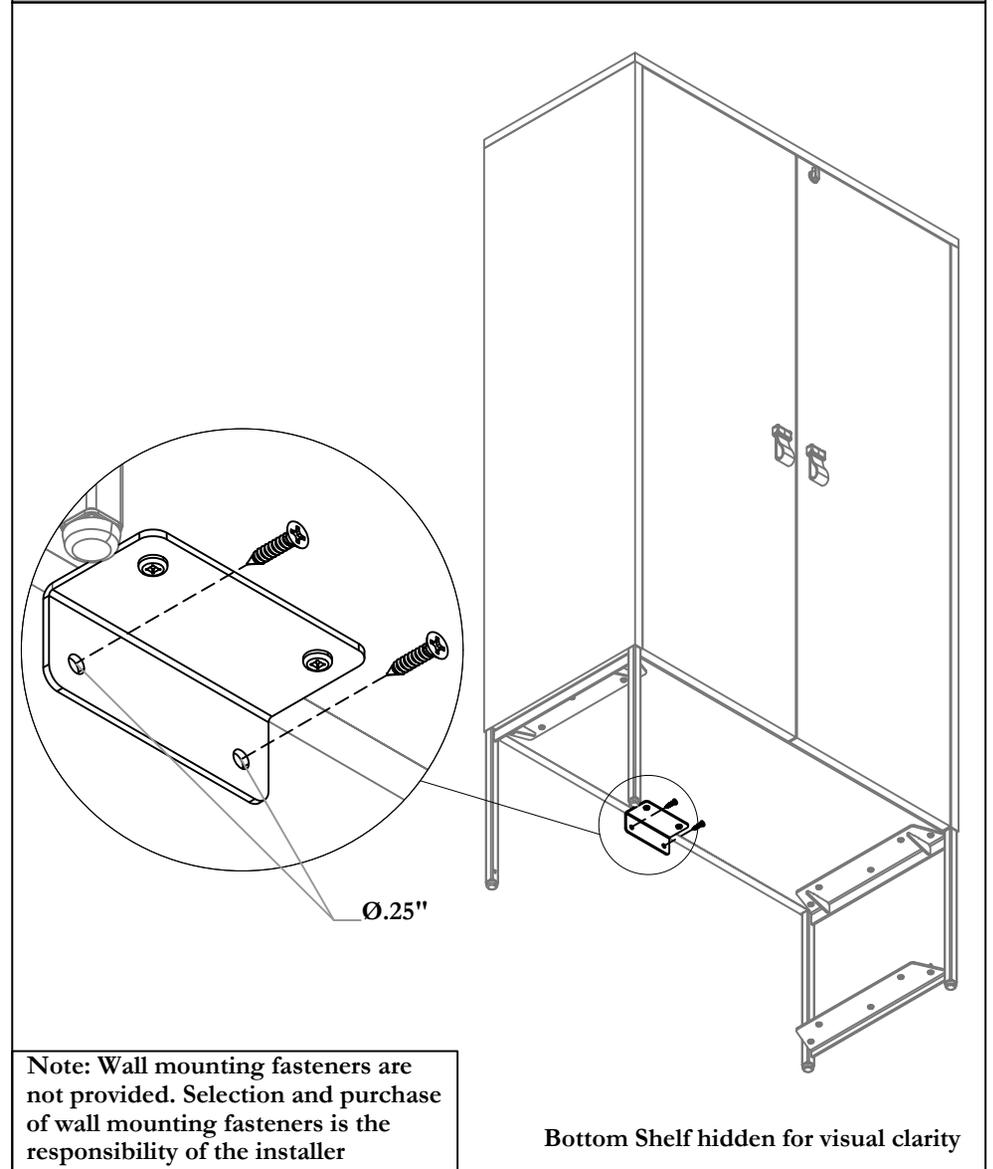


Note: Wall mounting fasteners are not provided. Selection and purchase of wall mounting fasteners is the responsibility of the installer

STEP 2: Fix the Wall Tether (A) to the wall


Byward High Cabinet (LWBHC), Byward High Cabinet, Casual Drawer (LWBHD), Byward Open High Tower (LWBOH), Byward Open Medium Tower (LWBOM), Byward High Tower (LWBTH), Byward Medium Tower (LWBTM), Byward Low Cabinet, Top Access (LWBCT)

LWBHC

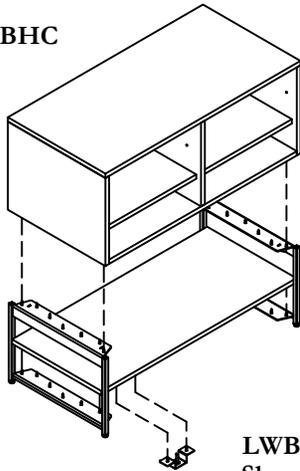


LWBHCOO271836_
Shown

LWBHD

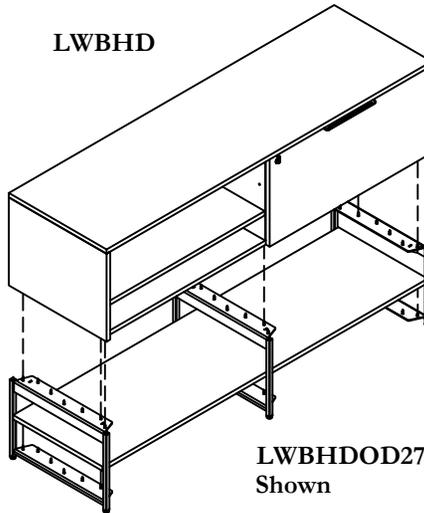


LWBHDOD271860_
Shown

LWBOM

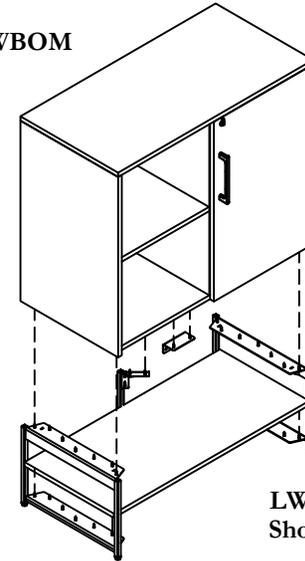


LWBOMOC421836_
Shown

LWBOH

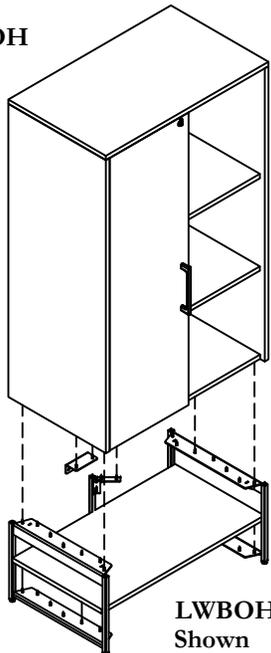


LWBOHJO601830_
Shown

LWBTH

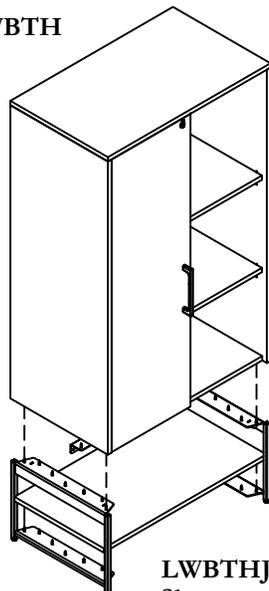


LWBTHJO601830_
Shown

LWBTM

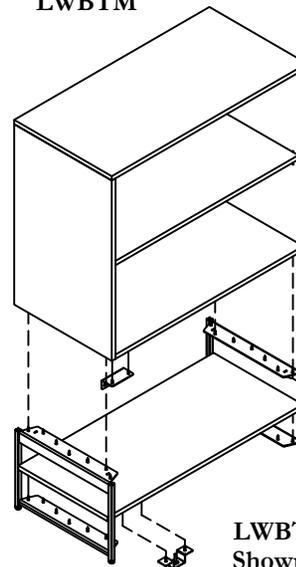

LWBTMOO421836_
Shown


LWBCT

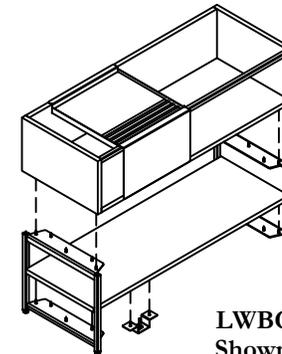


LWBCT211436_
Shown

Part and Product Identification


A - Byward Cabinet Leg Kit (N02-5154-X)
x2 for width 24", 30", 36", 42" & 48"
x3 for width 60" & 72"

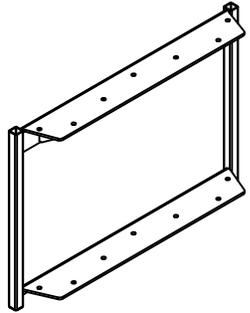

A1 - Byward Cabinet Leg Assy (N01-6020-X) x1




A2 - 1/4 - 20x1.5" Leveler, 3/4 base (D01-0348) x2




A3 - Wood Screw #10x5/8 Pan Hd, QDRX, Type A (E04-0068) Qty varies

B - Middle Leveler Kit, Byward (N01-4436) x 1

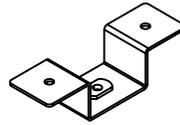

B1 - Middle Leveler Bracket (N01-4435) x1




B2 - 1/4 - 20x1.5" Leveler, 3/4 base (D01-0348) x1



B3 - Wood Screw #10x5/8 Pan Hd, QDRX, Type A (E04-0068) x2

NOTE:
Applicable for :
1. LWBHC & LWBHD, width 36" & 48" only.
2. LWBCT, LWBTH & LWBTM, width 36" & 42" only.

C - Back Leg Kit, Byward (X01-6404) x1

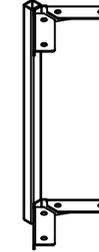

C1 - Back Leg Assy (N02-8463) x1




C2 - 1/4 - 20x1.5" Leveler, 3/4 base (D01-0348) x1



C3 - Wood Screw #10x5/8 Pan Hd, QDRX, Type A (E04-0068) x8

NOTE:
Applicable for:
LWBOM & LWBOH only.

D - Wall Tether Kit, Byward (X01-6498) x1

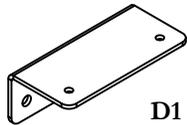


D1 - Bracket, Wall Attachment (A16-8641) x1



D2 - Wood Screw #10x5/8 Pan Hd, QDRX, Type A (E04-0068) x2

NOTE:
Applicable for :
LWBOH, LWBOM, LWBTH & LWBTM only.

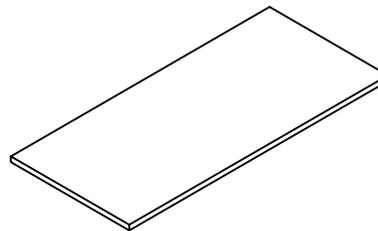

E1 - Byward Storage Shelf (C07-6671-X) x1

or

E2 - Bottom Shelf, Cabinet with Drawer (C08-4100-X) x1


or

E3 - Shelf, Open Tower (C07-3827-X) x1

NOTE:
1. E1 applicable for LWBCT, LWBHC, LWBTH & LWBTM only.
2. E2 applicable for LWBHD only.
3. E3 applicable for LWBOH & LWBOM only.


INSTALL BYWARD CABINET LEG KIT

Installation for 2 Cabinet Leg Kits.

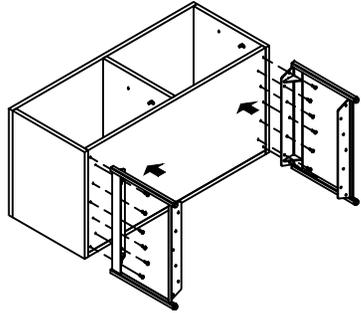

LWBHCOO271836_ Shown


Installation for 3 Cabinet Leg Kits.

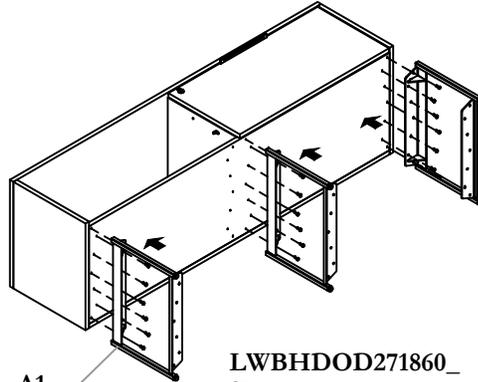


A1 LWBHDOD271860_ Shown

NOTE:
Position center Cabinet Leg's cantilever towards the drawer side.

Installation for 2 Cabinet Leg Kits and 1 Back Leg Kit. Applicable for LWBOH & LWBOM only.

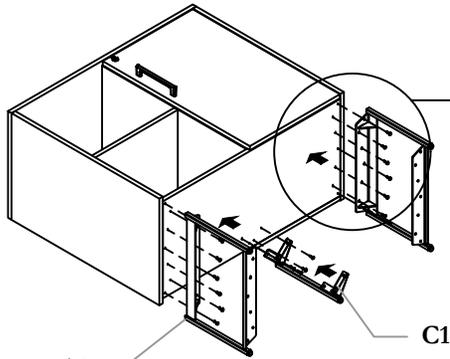


A1 LWBOMOC421836_ Shown

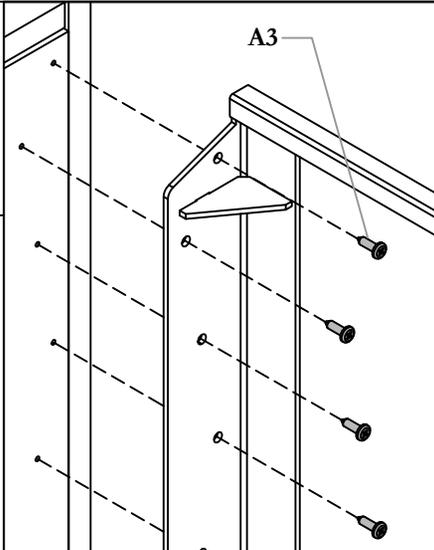

A3


STEP 1: Remove adjustable shelves and put the cabinet case on its back. Align Cabinet Leg (A1) and Back Leg Kit (C1) with pilot holes under the Cabinet. Fasten it using Wood Screws (A3) provided.

INSTALL WALL TETHER KIT TO CABINET

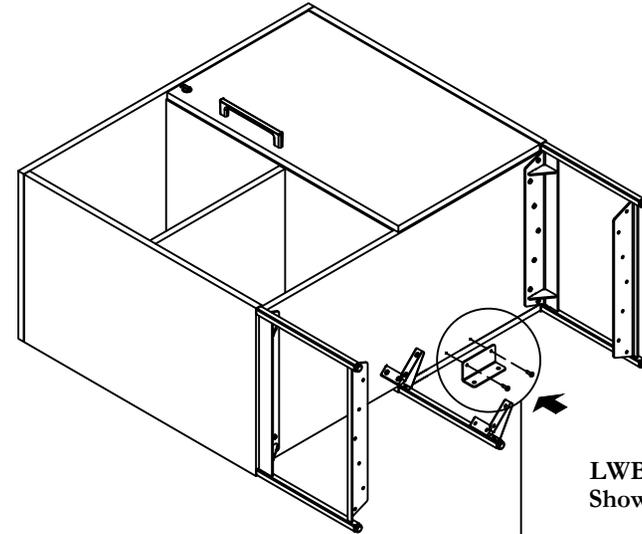

LWBOMOC421836_ Shown

NOTE:
Pilot holes are not provided. It can be mounted anywhere along the back edge, preferable in the center if possible.

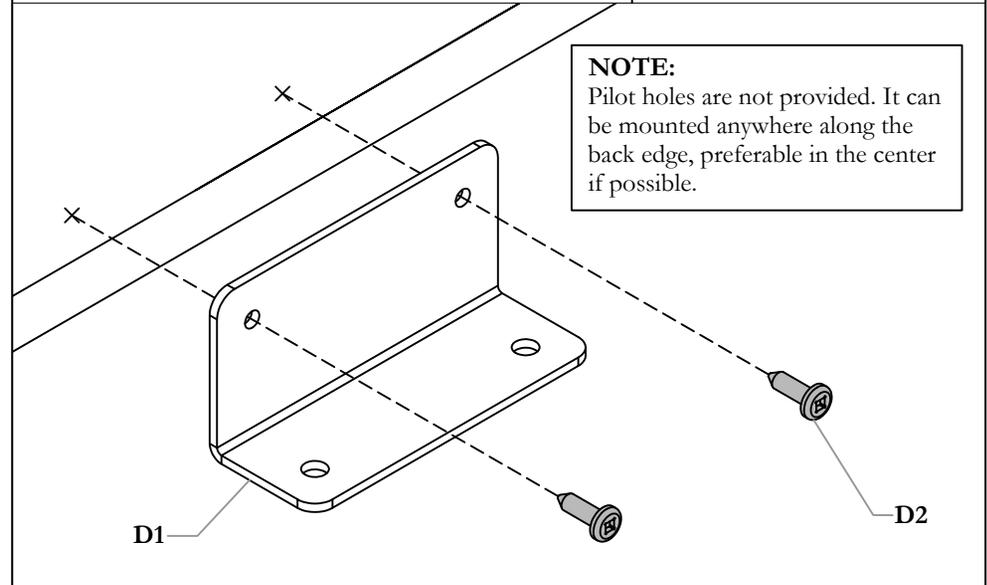


D1

D2


STEP 2: Position Wall Tether Bracket (D1) preferable in the center of the cabinet if possible, make sure the back of the cabinet is flush with the back of the bracket. Fasten it with Wood Screws (D2) provided.

INSTALL BOTTOM SHELF

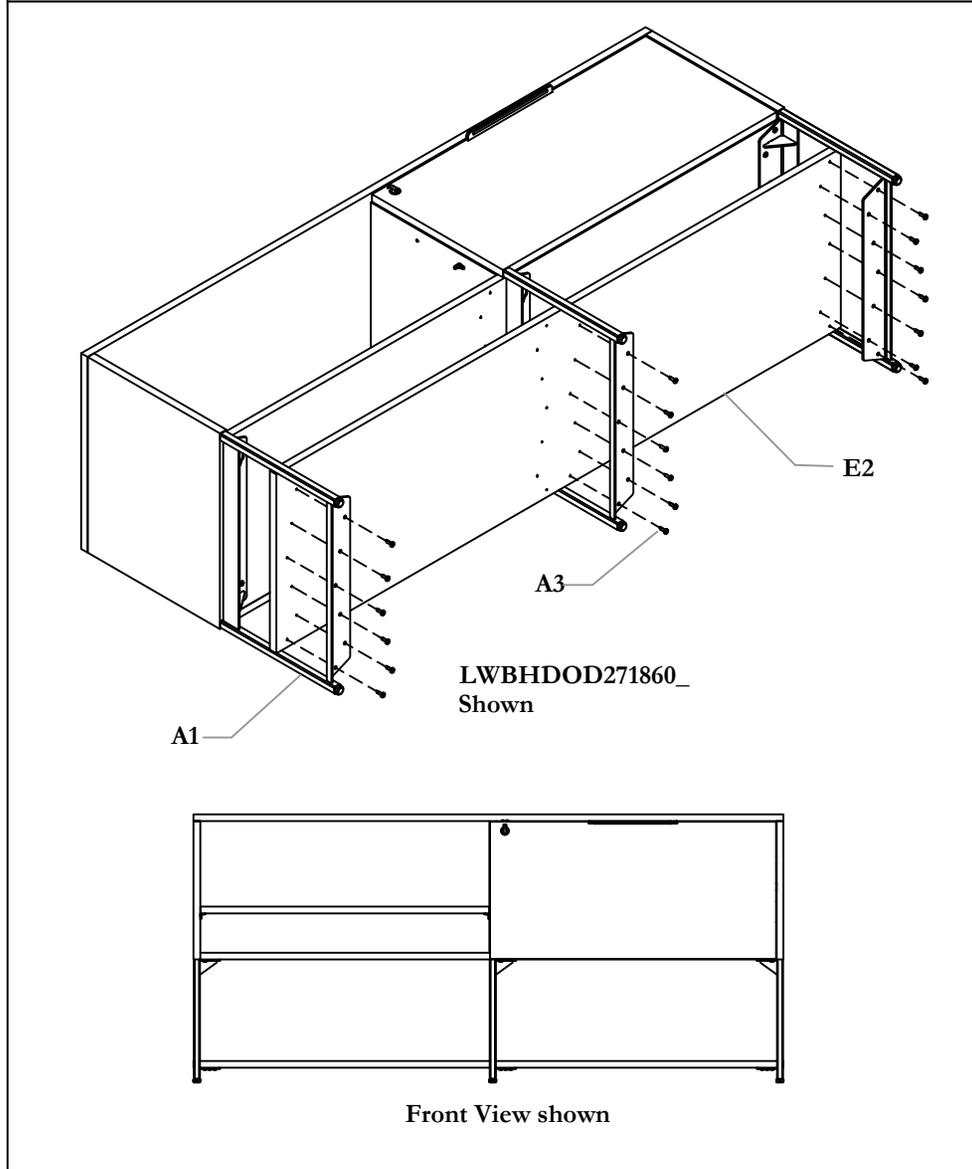


STEP 3: Align the pilot holes of the Bottom Shelf (E2) with Leg Bracket (A1). Fasten it using Wood Screws (A3) provided.

INSTALL BACK LEG KIT FOR LWBOH & LWBOM

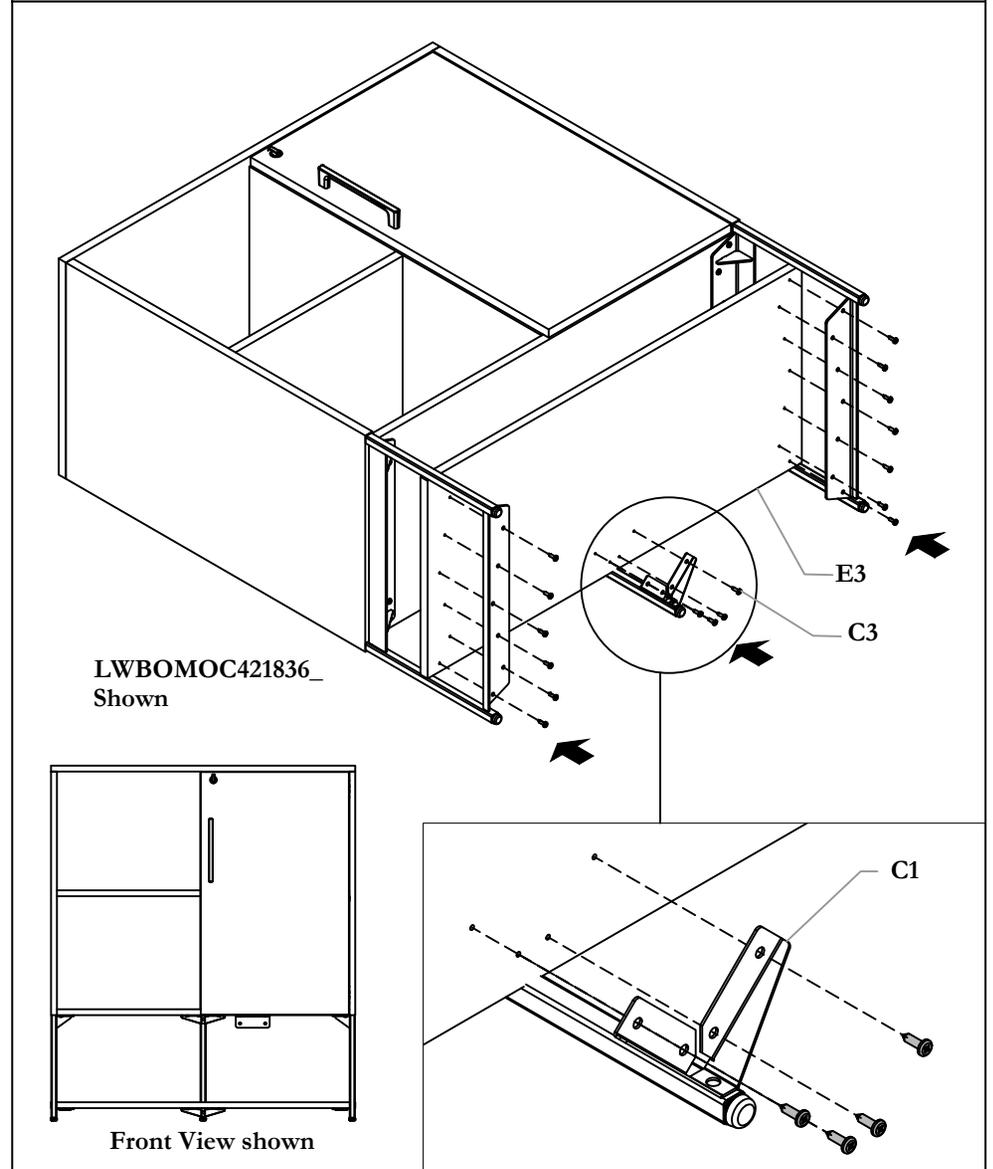


STEP 4: Align the pilot holes of the Bottom Shelf (E3) with Back Leg Bracket (C1). Fasten it using Wood Screws (C3) provided.

INSTALL MIDDLE LEVELER KIT


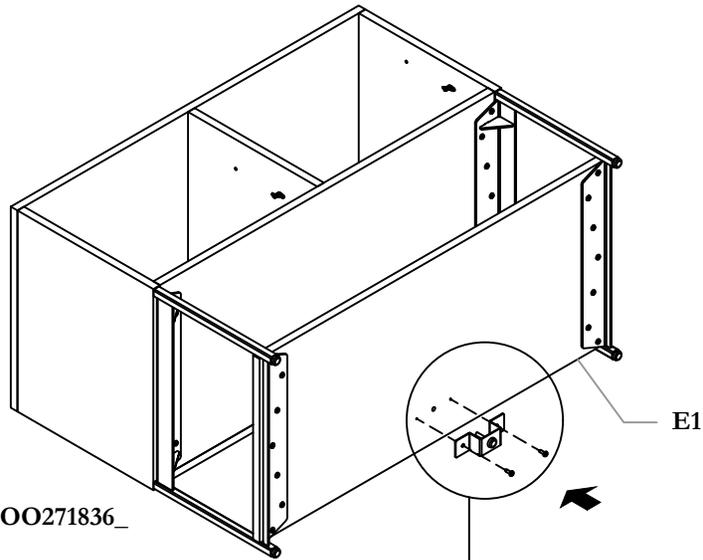


NOTE:
Applicable for :
1. LWBHC & LWBHD, width 36" & 48" only.
2. LWBCT, LWBTH & LWBTM, width 36" & 42" only.

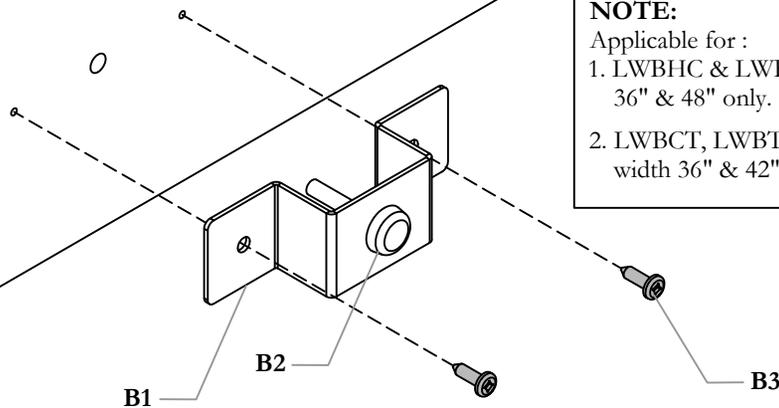

STEP 5: Align the pilot holes of the Bottom Shelf (E1) with Middle Leveler Bracket (B1). Fasten it using Wood Screws (B3) provided.

INSTALL WALL TETHER KIT TO THE WALL

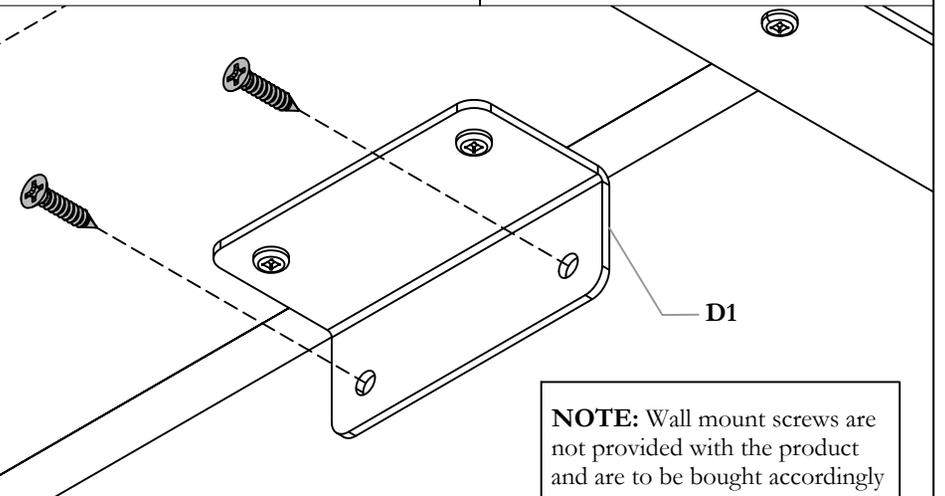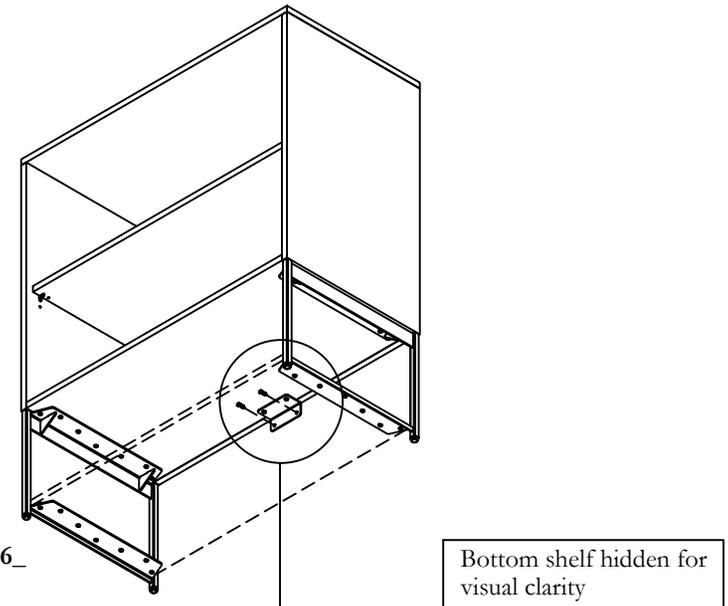

NOTE: Wall mount screws are not provided with the product and are to be bought accordingly

STEP 6: Put the cabinet in an upright position, at least 2 people are recommended for this step to prevent damage. Make sure the cabinet is leveled in the desired position. Adjust all levelers, make sure all have contact with the floor. Secure the Wall Tether Bracket (D1) to the wall using wall mount screws. Put the adjustable shelves back.