

index

By Section

Product Name	Product Code	Guide No.	Last Updated
work tables			
Square Work Table	ATWS	575	Oct. 2006
Circular Work Table	ATWC		
Rectangular Work Table	ATWR	576	Sep. 2017
Oval Work Table	ATWV		
Work Table Modesty Panel	ATMP		
meeting & audience boardroom tables			
Square Meeting Table	ATMS	577	Sep. 2017
Circular Meeting Table	ATMC		
Triangular Meeting Table	ATMT		
Rectangular Meeting Table	ATMR	578	Sep. 2017
Oval Meeting Table	ATMV		
Boat Meeting Table	ATMB		
Audience Square Boardroom Table	ATBS	579	Apr. 2015
Audience Circular Boardroom Table	ATBC		
Audience Rectangular Boardroom Table	ATBR	580	Jan. 2020
Audience Oval Boardroom Table	ATBV		
Audience Boat Boardroom Table	ATBB		
Audience Video Conference Table	ATVC		
Hammock	ATHK	581	May 2016
Media Shelf	ATSH		
Rail Mount Cable Manager	ATRC		
CALA Meeting Table Power	VBEP	700	Jan. 2018

Product Name	Product Code	Guide No.	Last Updated
training			
worksurfaces			
Rectangular Worksurface	CTRT	1186	Jan. 2014
Cockpit Worksurface	CTCK		
Trapeze Angular Worksurface	CTTA		
Half-Moon Worksurface	CTHM		
Mezzanine Worksurface	CTMZ		
Curved Hatchet Worksurface	CTCH		
Quarter-Moon Worksurface	CTQM		
worksurface supports			
C-Leg	CTCL	1187	Feb. 2013
T-Leg	CTTL		
Intermediate Leg	CTST		
Post Leg	CTPL	1200	Aug. 2014
tables			
Rectangular Folding Table	CTFL	1194	July 2021
Lightweight Rectangular Folding Table	CTLF		
Rectangular Flip-Top Table	CTFT	1195	Feb. 2019
Rectangular Height-Adjustable Table	CTHT	1196	Mar. 2015
accessories			
CPU Holder	CTLP	1188	Feb. 2006
Vertical Leg Cover	CTVL	1189	Feb. 2008
Vertical Wire Management Cover	CTWC	1198	Feb. 2006
Cable Tray	CTWT	1205	Jan. 2014
Electrical Tray	CTET	1197	Feb. 2006
Modesty Panel – Laminate	CTLM	1192	Feb. 2015
Modesty Panel – Metal	CTMM		
Modesty Panel for Flip-Top Table – Laminate	CTLMF	1204	June 2021
Modesty Panel for Flip-Top Table – Metal	CTMMF		
Metal Lateral Screen	CTSL	1190, 1191	July 2002
Fabric Table Screen	CTDSF	1191	Oct. 2006
Translucent Table Screen	CTDST		
Metal Table Screen	CTDSM		
Fabric Lateral Screen	CTLSF	1190	Oct. 2006
Translucent Lateral Screen	CTLST		
Metal Lateral Screen	CTLSM		

Product Name	Product Code	Guide No.	Last Updated
Back Table Screen – Fabric	CSTBF	1207	Apr. 2021
Back Table Screen – Glass	CSTBG		
Lateral Table Screen – Fabric	CSTLF		
Metal Lateral Screen – Glass	CSTLG		
accessories (continued)			
Quick Release Linking System	CAQR	1201	Sep. 2010
Mobile Table Trolley	CTMT	1193	Feb. 2006
lighting, electrics & communications			
Under-Worksurface Power Outlet	CLWP	1203	Apr. 2019
Splitter Box	CLBX		
Base Feed	CLBF	1206	Jan. 2014
Pass-Through	CLPH		
Power/Data Center	CLMC	1297	May 2018
Data Box	CLDB	1199	Oct. 2006
Power/Data Sphere	CLPS	1202	Sep. 2009
casual tables			
Square Lounge Table	ATCSL	583	Nov. 2015
Circular Lounge Table	ATCCL		
Oval Lounge Table	ATCVL		
Squre Café Table	ATCSC		
Circular Café Table	ATCCC		
Square Bistro Table	ATCSB		
Circular Bistro Table	ATCCB		
Square Dining Table	ATCSD		
Circular Dining Table	ATCCD		
Rectangular Dining Table	ATCRD		
CLUBtalk			
CLUBtalk Mobile Cart	CUC	600	Apr. 2018
CLUBtalk Square Table	CUS	601	Sep. 2017
CLUBtalk Trapezoid Table	CUZ		
CLUBtalk Rectangular Table	CUR		
CLUBconnect with Mobile Cart	CUT	602a	May 2013
CLUBconnect with Table	CUT	602b	May 2013
CLUBtalk Modular Table	CUFM	603	May 2014
Worksurface Monitor Mount	CUWM	604	Mar. 2018

index

By Section

Product Name	Product Code	Guide No.	Last Updated
storage			
Audience Veneer Credenza with Doors	AFCVA	585, 586, 587	Feb. 2007
Audience Veneer Credenza with Single Drawer	AFCVB		
Audience Veneer Credenza with Doors & Drawers	AFCVC		
Audience Veneer Credenza with Middle Drawers	AFCVD		
Audience Laminate Credenza with Doors	AFLA		
Audience Laminate Credenza with Single Drawer	AFLB		
Audience Laminate Credenza with Doors & Drawers	AFLC		
Audience Laminate Credenza with Middle Drawers	AFLD		
Audience Veneer A.V. Cart	AFTV	586	Oct. 2006
Audience Laminate A.V. Cart	AFTL		
AV Center Top	AFTT		
Audience Veneer Hospitality Cart	AFMV	587	Oct. 2006
Audience Laminate Hospitality Cart	AFML		
work tools			
Focus Wall Frame	AFWF	590	Jan. 2010
Focus Wall Sliding Whiteboard	AFWS	591	Oct. 2006
Focus Wall Marker Tray	AFWM	593	Oct. 2006
Focus Wall Flip Chart Hooks	AFWC		
Focus Wall Folding Doors	AFWD	592	Oct. 2006
Focus Board	AFWB	594	Oct. 2007


Section – **Work Tables**

No. **575**

Square Work Table
Circular Work Table

ATWS
ATWC

Product

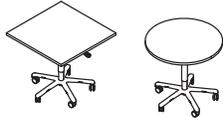

ATWS **ATWC**

Application




ATWS and ATWC - Part / Product Identification and What's Included

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.	Kit No. / Assy. No.
A	OR 	Square Work Table Top	C05-2189	1	ATWS
		Circular Work Table Top	C05-2191	1	
B	OR 	Swivel Pneumatic Table Base Assembly	N09-1042X	1	OR ATWC
		Non-Swivel Pneumatic Table Base Assembly	N09-1041X		
C		1/4 -20 x 5/8" Machine Screw, Quadrex, Truss HD	E01-0098	4	

TOOLS REQUIRED: Cross Drive #3 or Square Drive #3


SMALL WORK TABLE INSTALLATION

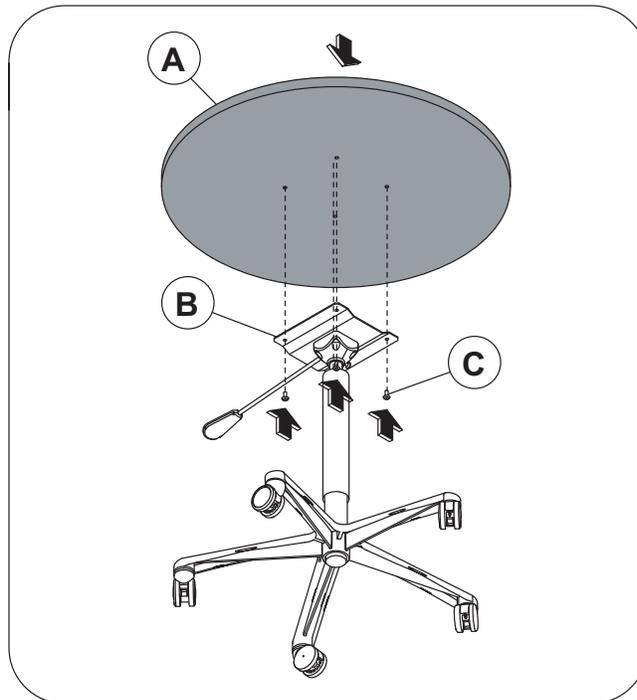

Section – Work Tables

ATWR – Rectangular Work Table
 ATWV – Oval Work Table
 ATMP – Modesty Panel

Product

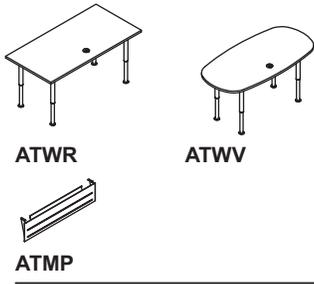

TOOLS REQUIRED:
 Cross or Square Drive #2 and #3
 and Level

ATWR and ATWV - Part / Product Identification and What's Included

Ref.	Illustration	ATWR or ATWV P, H, S	ATWR or ATWV J
		Quantity	
A	Rectangular Work Table Work. C05-1970	1	1
	OR Oval Work Table Work. C05-2064		
B	Fixed Leg with Locking Casters N80-63503+29	2	
	AND Fixed Leg with Casters N80-63505+29	2	
	OR Fixed Leg with Levelers N80-63506+29	4	
	Adjust. Leg with Locking Casters N80-63508	2	
	AND Adjust. Leg with Casters N80-63510	2	
	OR Adjust. Leg with Levelers N80-63511	4	
	Stretch Leg with Locking Casters N09-1180	2	
	AND Stretch Leg with Casters N09-0996	2	
	OR Stretch Leg with Levelers N09-0992	4	
	ie Leg with Casters N80-65113		4
	OR ie Leg with Levelers N80-65114		4
	C	ie Leg Plate N09-0958	

Reference Installation Guides:
 No. 582 Table & Coll. Spaces " Recessed Power/Data Module "

For additional information on this installation contact Teknion | Roy & Breton **Technical Support.**
Issue Date: 2017 September 22


Section – Work Tables

ATWR – Rectangular Work Table
 ATWV – Oval Work Table
 ATMP – Modesty Panel

ATWR and ATWV - Part / Product Identification and What's Included (continued)

Ref.	Illustration	Description	Quantity			
			ATWR or P, H, S	ATWV P, H, S	ATWR or J	ATWV J
D		1/4" – 20 x 0.625" M. Screw, Quadrex, Truss Head, Zinc E01-0098	24	24		
E		#10 x 0.875" LG Wood Screw, Quadrex, Pan Washer Head, Zinc E07-0077	48" w 32	n/a	24	n/a
			54" to 66" w 38	38	30	30
			72" w 42	42	34	34
			84" or 96" w 46	46	38	38
F		10 – 32 Nylon Insert Locknut, Black E03-0288			16	16
G		Reinforcing Bar A15-5891+XX (54" w and more)	1	1	1	1
H		1/4" – 20 x 0.875" M. Screw, Joint Conn. Bolt, Quadrex E01-50818			24	24




ATMP - Part / Product Identification and What's Included

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.	Kit No. / Assy. No.
I		Modesty Panel	As per Order	1	ATMP
J		#10 x 0.875" LG Wood Screw, Quadrex, Pan Washer Head, Zinc	E07-0077	4	

Section – **Work Tables**

ATWR – Rectangular Work Table
ATWV – Oval Work Table
ATMP – Modesty Panel

**RECTANGULAR OR OVAL WORK TABLE WITH
FIXED, ADJUSTABLE OR STRETCH LEGS INSTALLATION**

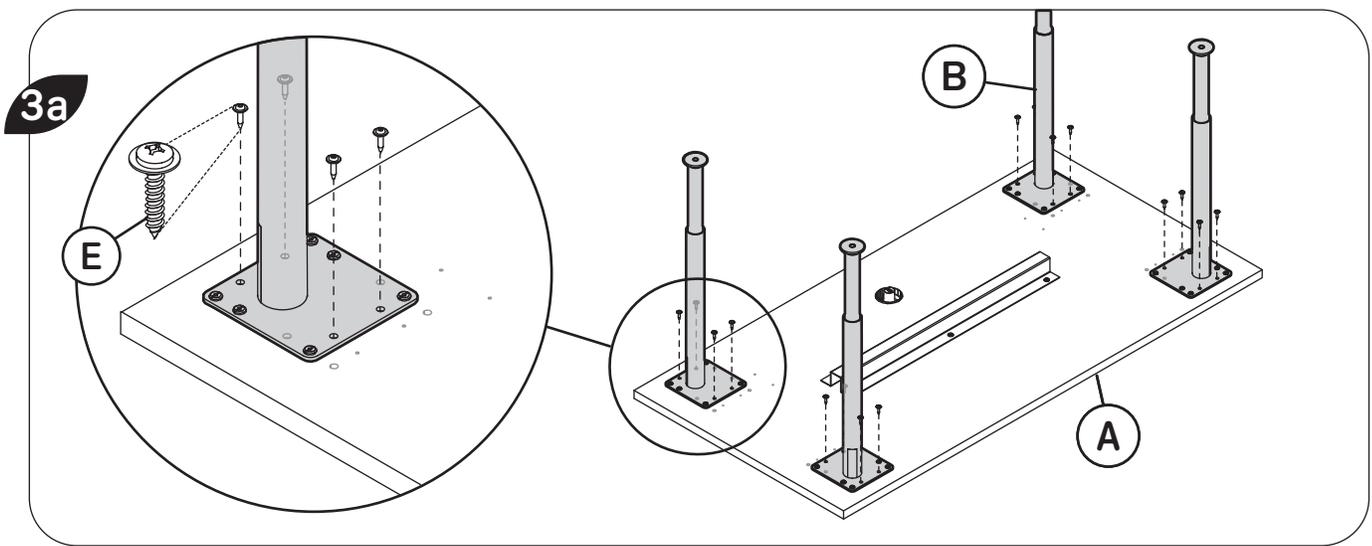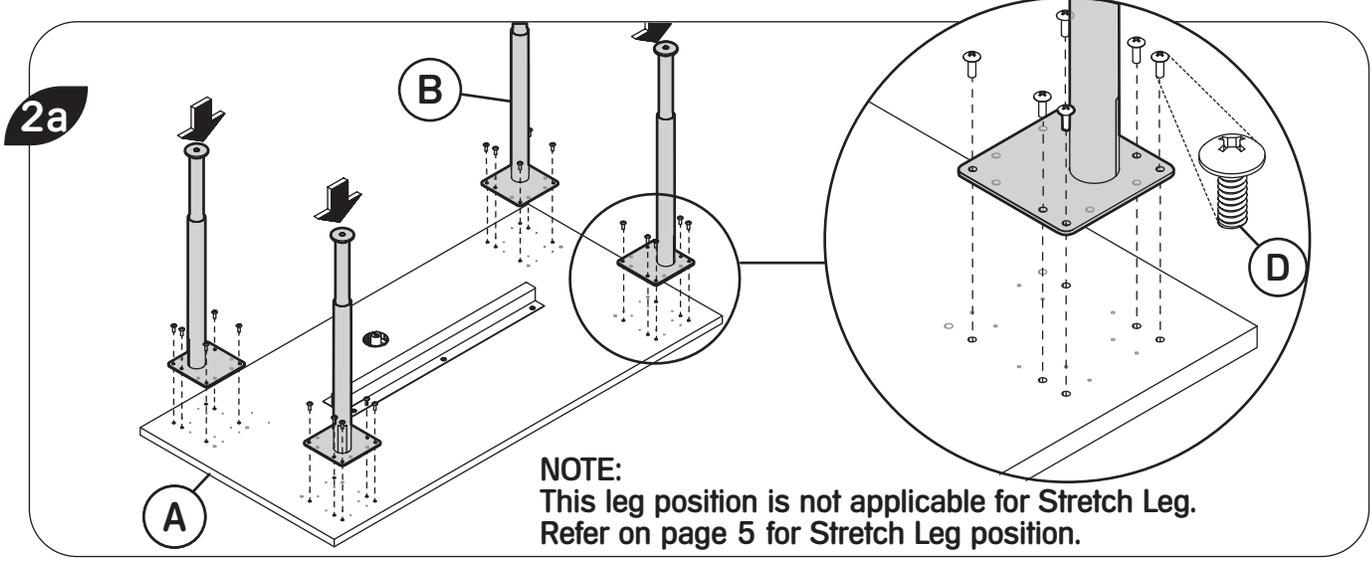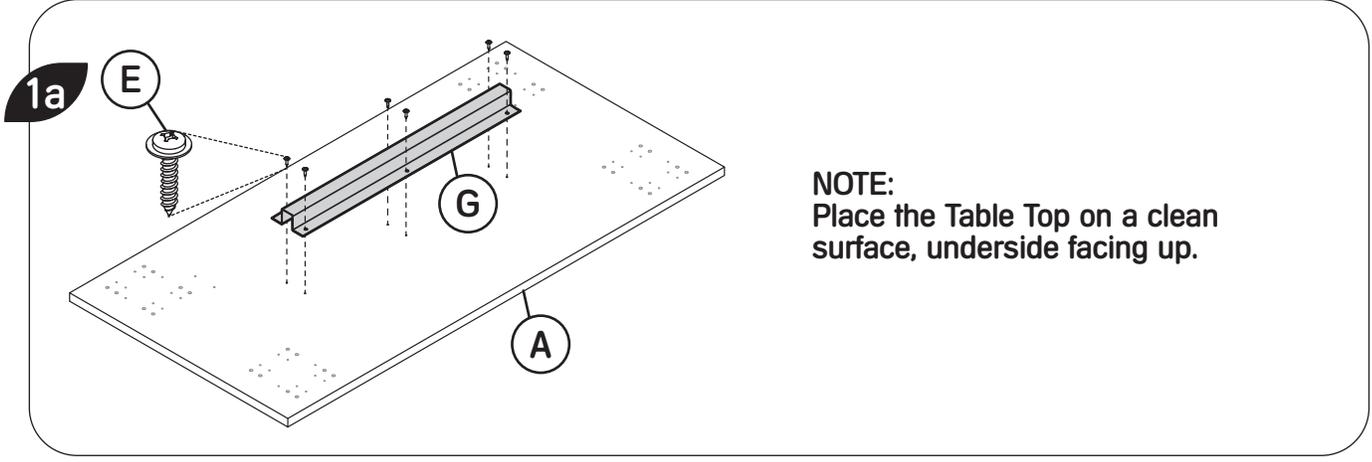

Section – Work Tables

ATWR – Rectangular Work Table

ATWV – Oval Work Table


ATMP – Modesty Panel

RECTANGULAR OR OVAL WORK TABLE WITH IE LEGS INSTALLATION


1b

Reinforcing Bar Installation.
Repeat step 1a on the previous page.


2b

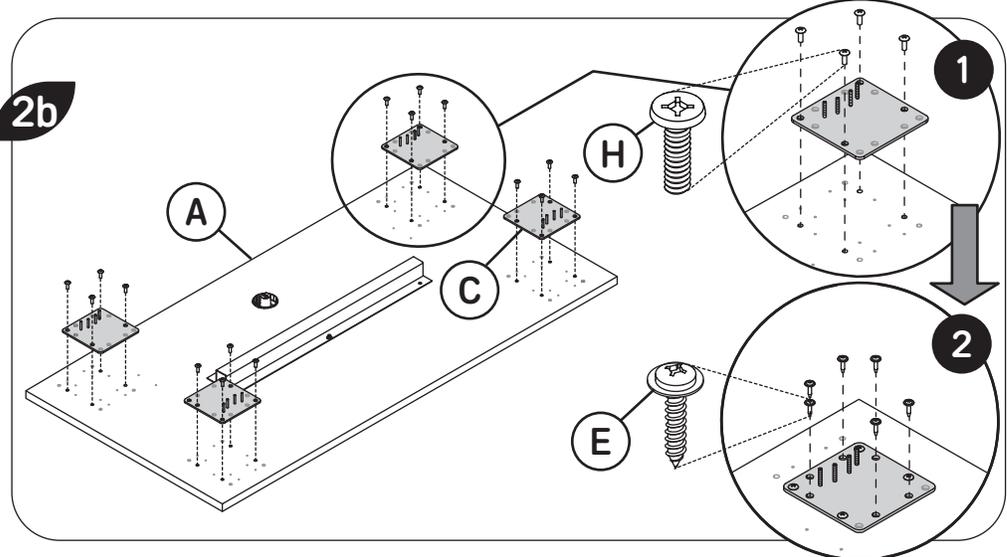

3b

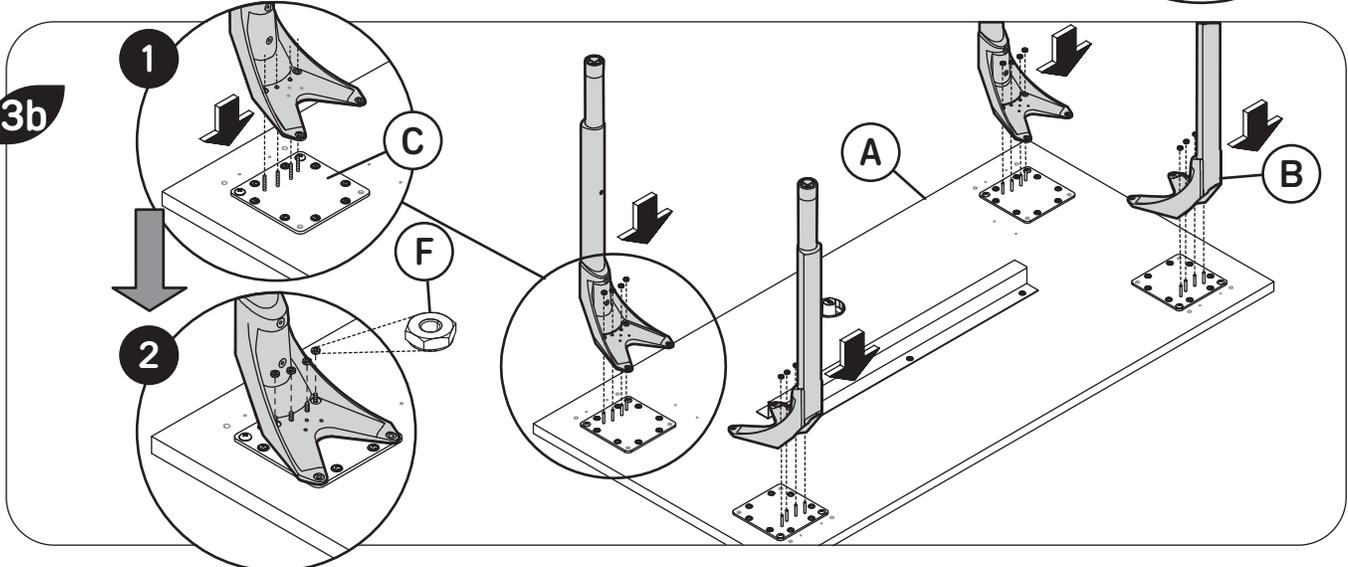


4b

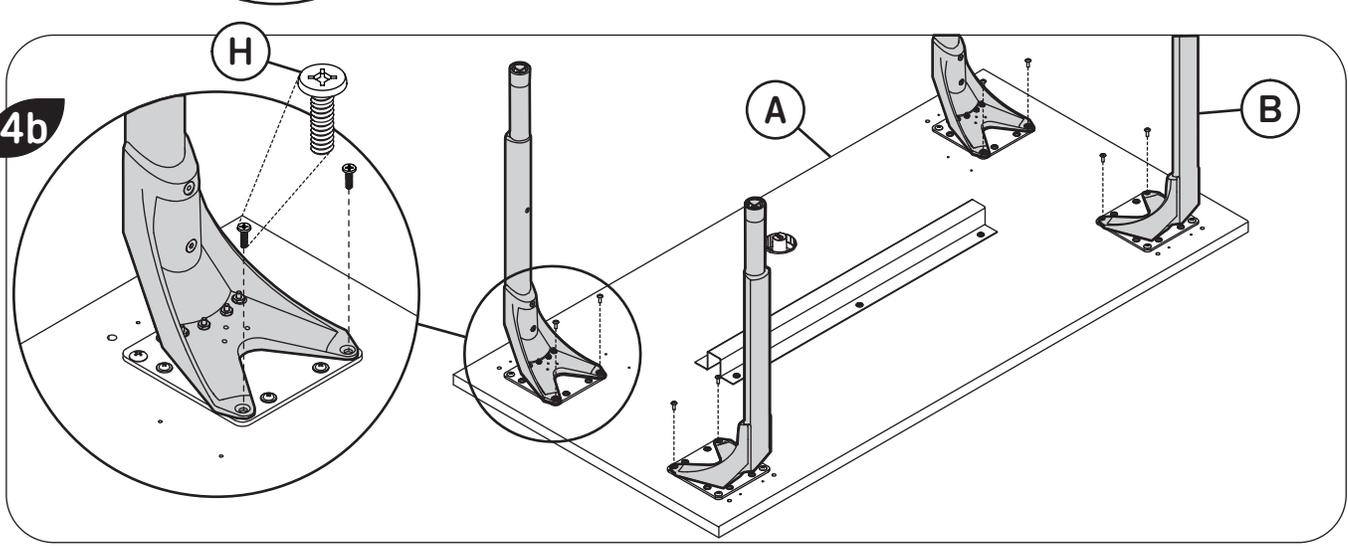


Section – **Work Tables**

ATWR – Rectangular Work Table
 ATWV – Oval Work Table
 ATMP – Modesty Panel

LEG OPTIONS

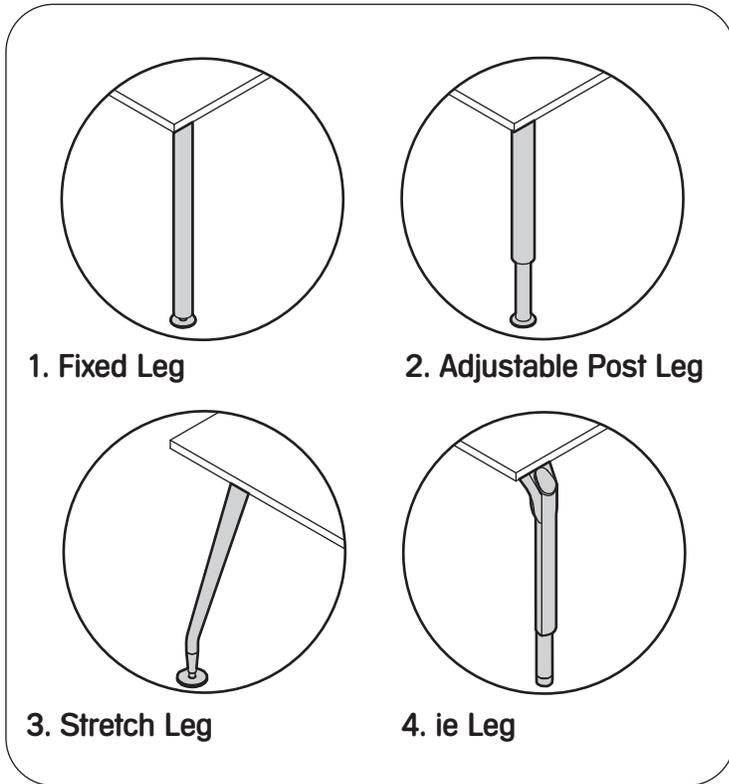


LEG POSITIONING

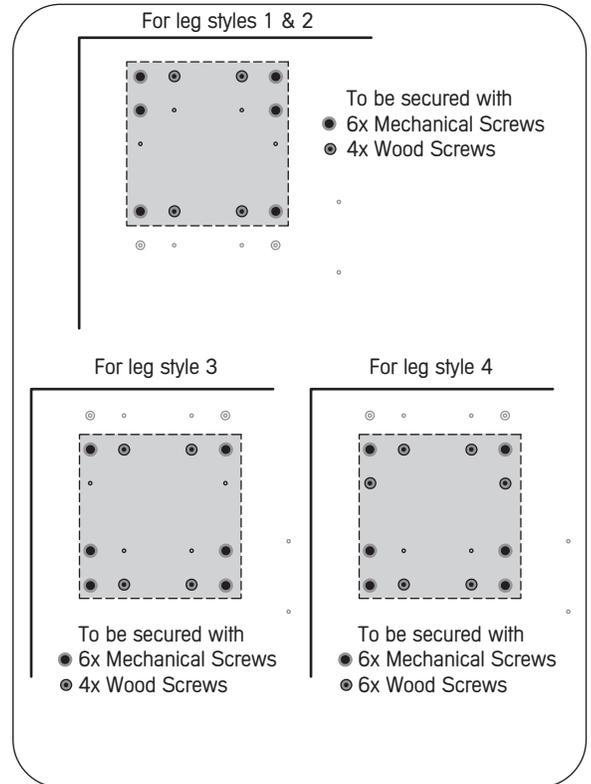

NOTE:
 For installation of Recessed Power/Data Module,
 Pop-Up Power/Data Module and Grommet
 see installation guide number #582


MODESTY PANEL INSTALLATION

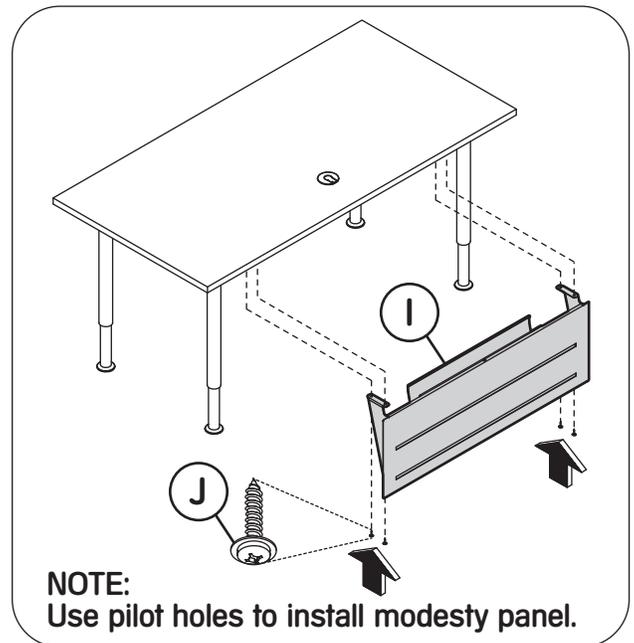

Section – Meeting & Audience Boardroom Tables

ATMS – Square Meeting Table
 ATMC – Circular Meeting Table
 ATMT – Triangular Meeting Table

Product

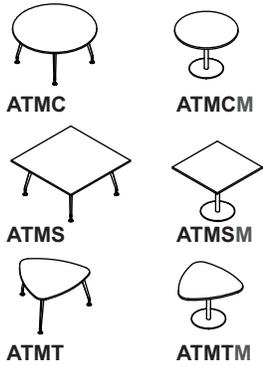

TOOLS REQUIRED:
 Cross or Square Drive #2 and #3
 and Level

ATMC, ATMS & ATMT - Part / Product Identification and What's Included

Ref.	Illustration	ATMC or ATMS	ATMT
		P, H, S	P, H, S
A	 Circular Meeting Worksurface C05-2339 (< 54" w) or C05-2066 (>= 54" w) OR  Square Meeting Worksurface C05-2089 (< 54" w) or C05-2065 (>= 54" w) OR  Triangular Meeting Worksurface C05-1981 (< 54" w) or C05-2092 (>= 54" w)	1	1
	 AND  OR  Fixed Leg with Locking Casters N80-63503+29 Fixed Leg with Casters N80-63505+29 Fixed Leg with Levelers N80-63506+29	2	
	 AND  OR  Adjust. Leg with Locking Casters N80-63508 Adjust. Leg with Casters N80-63510 Adjust. Leg with Levelers N80-63511	2 2 4	
B	 AND  OR  Stretch Leg with Locking Casters N09-1180 Stretch Leg with Casters N09-0996 Stretch Leg with Levelers N09-0992	2	2
	 1/4" – 20 x 0.625" M. Screw, Quadrex, Truss Head, Zinc E01-0098	24	24
	 #10 x 0.875" LG Wood Screw, Quadrex, Pan Washer Head, Zinc E07-0077	42" or 48" w 32 54" or 60" w 56	42" or 48" w 24 54" w 42
E	 Reinforcing Bar A15-5891C+XX (54" or 60" w) or A15-5891T+XX (54" w)	4	3


Reference Installation Guides:
 No. 582 Table & Coll. Spaces " Recessed Power/Data Module "

For additional information on this installation contact Teknion | Roy & Breton **Technical Support.**
Issue Date: 2017 September 22

Section – Meeting & Audience Boardroom Tables

ATMS – Square Meeting Table
 ATMC – Circular Meeting Table
 ATMT – Triangular Meeting Table


ATMCM, ATMSM & ATMTM - Part / Product Identification and What's Included

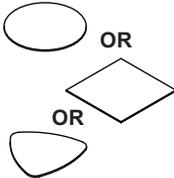Ref.	Illustration	Description	Part No. / Prod. Code	Qty.	Kit No. / Assy. No.
F		Circular Meeting Worksurface	C05-2090	1	
		Square Meeting Worksurface	C05-2089		
		Triangular Meeting Worksurface	C05-1981		
G		Disk Base Upper Weldment	N09-2637+29	1	N09-2639\24\29
H		Casual Table Shell	N80-63607+24	1	
I		Casual Table Base Assembly	A15-8719\24	1	
J		1/4" – 20 x 0.625" M. Screw, Quadrex, Truss Head, Zinc	E01-0098	12	
K		3/8" – 16 x 1.500" Hex Socket Cap Screw, Flat Head, Zinc	E01-50038	5	


Section – Meeting & Audience Boardroom Tables

ATMS – Square Meeting Table
ATMC – Circular Meeting Table
ATMT – Triangular Meeting Table

MEETING TABLE INSTALLATION

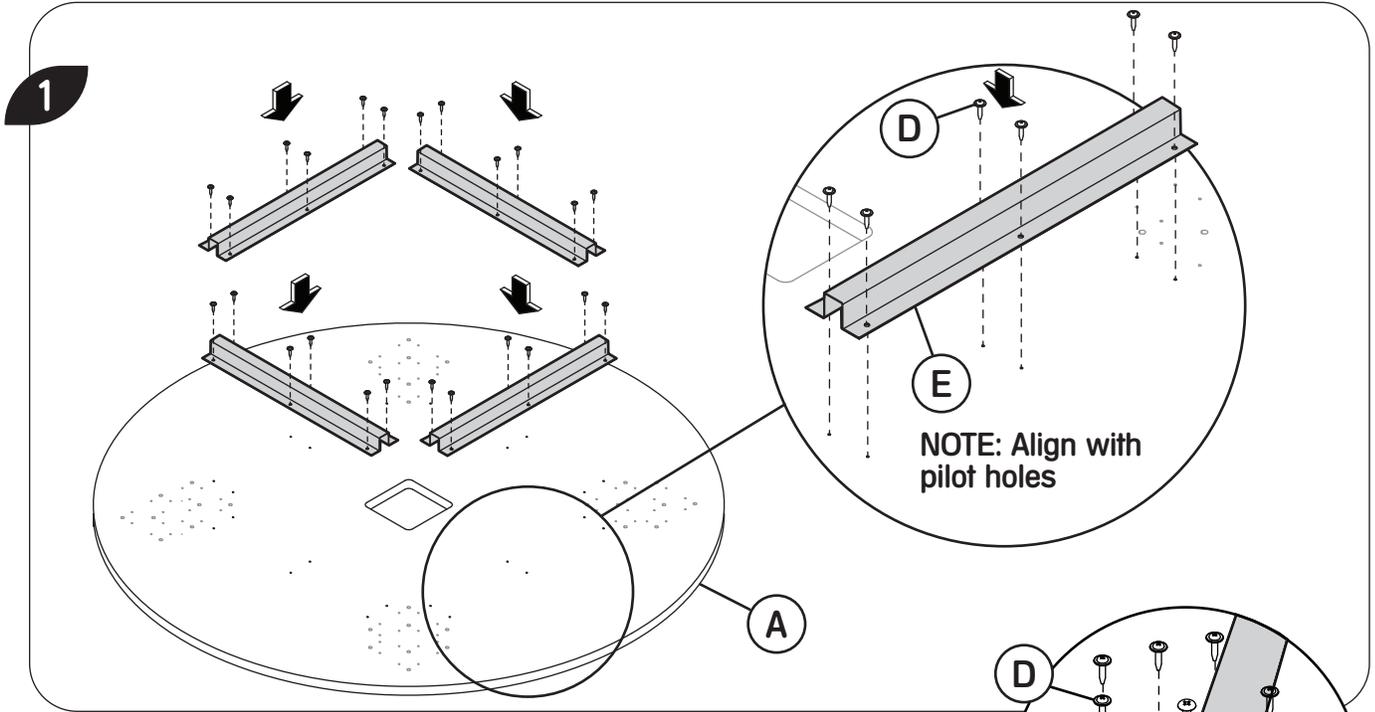


NOTE: Place the Table Top on a clean surface, underside facing up.

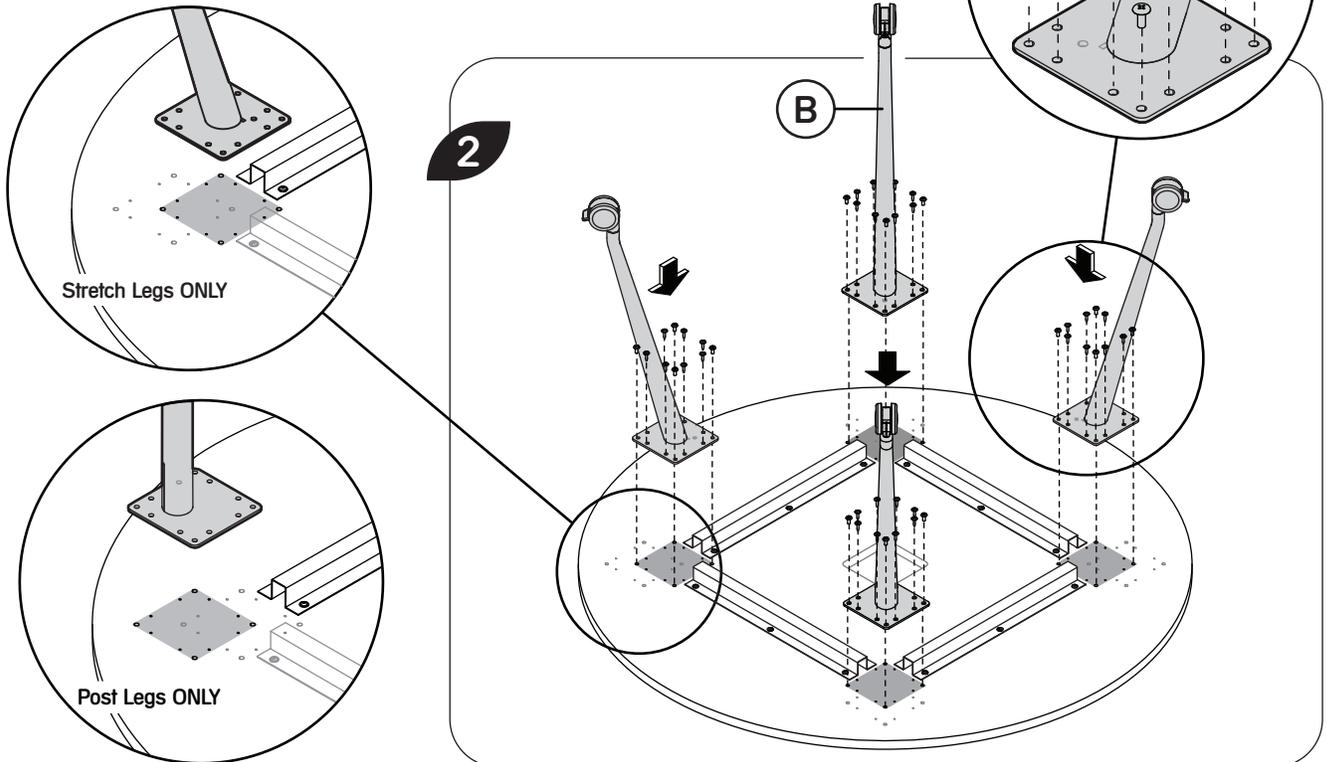

MONO-POD BASE INSTALLATION


1

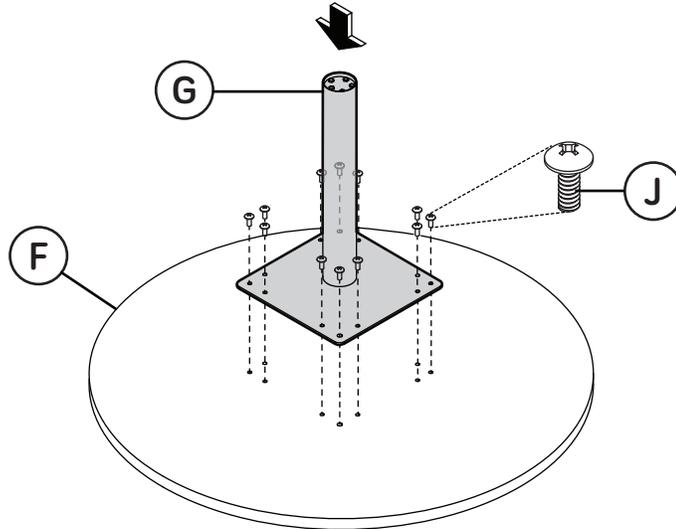

NOTE: Place the Table Top on a clean surface, underside facing up.





2

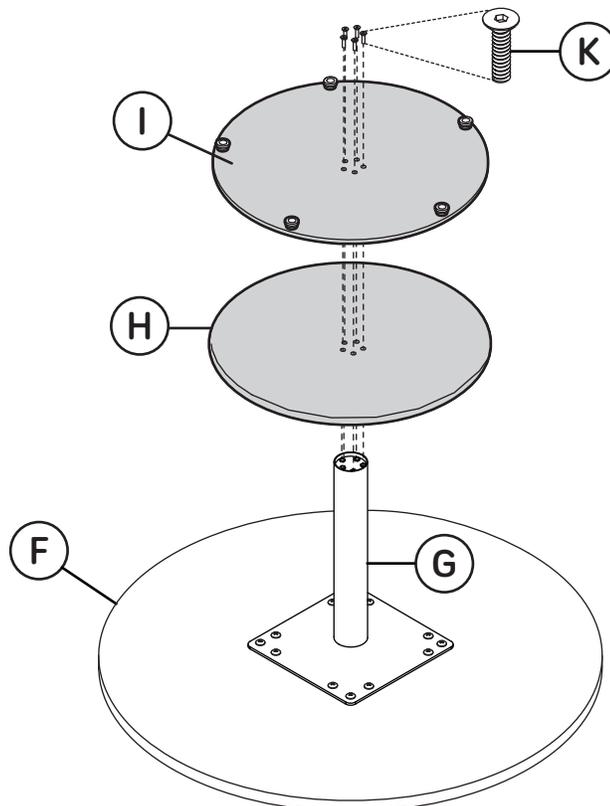

Section – Meeting & Audience Boardroom Tables

ATMR – Rectangular Meeting Table
 ATMB – Boat Meeting Table
 ATMV – Oval Meeting Table

Product

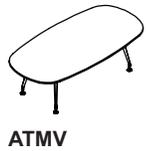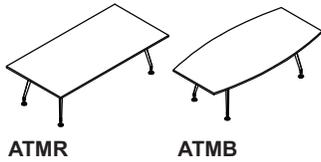

TOOLS REQUIRED:
 Cross or Square Drive #2 and #3
 and Level


ATMR, ATMB & ATMV - Part / Product Identification and What's Included

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.
A		Rectangular Meeting Worksurface	C05-1962	1
	OR 	Boat Meeting Worksurface	C05-2093	
	OR 	Oval Meeting Worksurface	C05-2067	
B		Fixed Leg with Levelers	N80-63506 +29	4
	OR 	Stretch Leg with Levelers	N09-0992	
C		1/4" – 20 x 0.625" M. Screw, Quadrex, Truss Head, Zinc	E01-0098	24
D		#10 x 0.875" LG Wood Screw, Quadrex, Pan Washer Head, Zinc	E07-0077	66" w = 44 72" or 78" w = 52 84" or 96" w = 60 (for ATMR only) or 66" or 72" w = 44 78" to 96" w = 52 (for ATMB or ATMV)
E		Reinforcing Bar	A15-5891+XX (for ATMR only) or A15-5891E+XX (for ATMB or ATMV)	4




Reference Installation Guides:
 No. 582 Table & Coll. Spaces " Recessed Power/Data Module "

For additional information on this installation contact Teknion | Roy & Breton **Technical Support.**
Issue Date: 2017 September 22

MEETING TABLE INSTALLATION

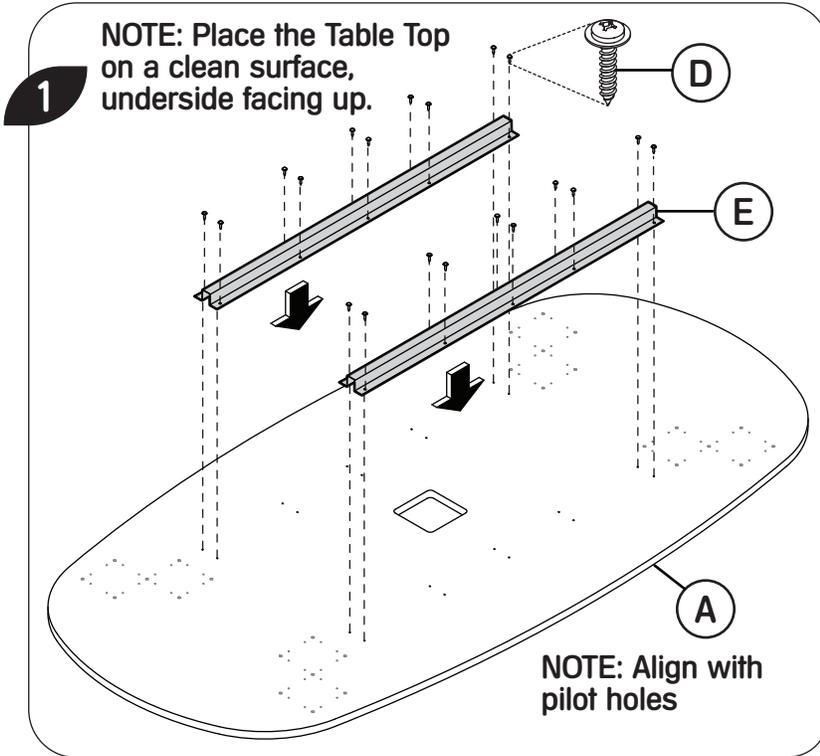

LEG POSITIONING

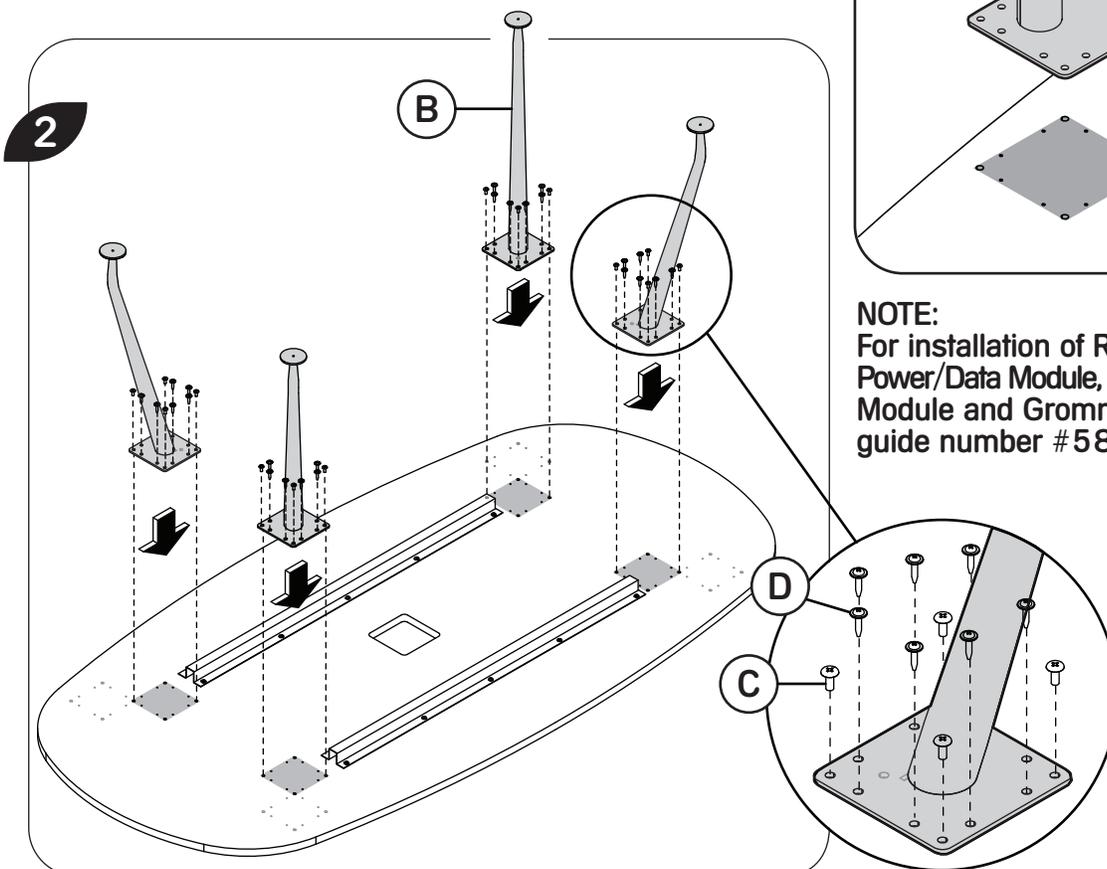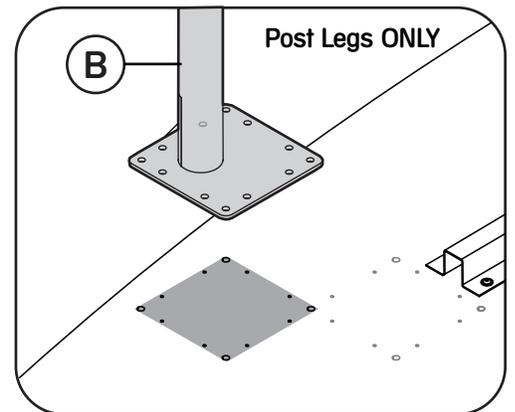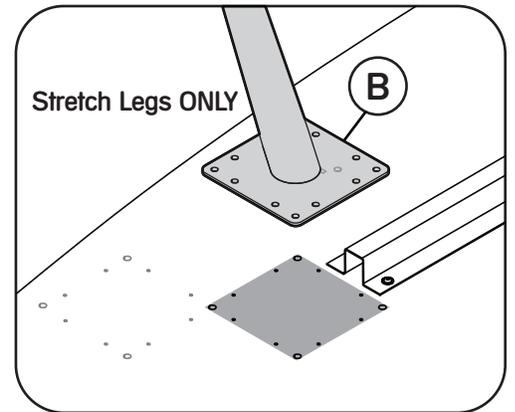


Section – **Meeting & Audience Boardroom Tables**

No. **579**

Audience Square Boardroom Table
Audience Round Boardroom Table

ATBS
ATBC

Product

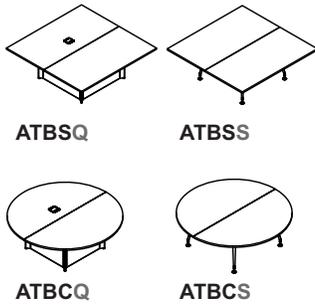

TOOLS REQUIRED:
Cross or Square Drive #3 and Wrench


Audience Boardroom Tables - Part / Product Identification and What's Included

		ATBSQ	ATBSS	ATBCQ	ATBCS		
Ref.	Illustration	Quantity				Kit No. / Assy. No.	
A	Round Work. N09-1209X-X			1	1		
	OR Square Work. N09-1211X-X	1	1				
B	Support Beam A23-63069+XX or A23-63070+XX or A23-63079+XX or A23-63080+XX		4			N80-63606+XX (for ATBSQ) or N09-1134-X (for ATBSS) or N80-63608+XX (for ATBCQ) or N09-1135-X (for ATBCS)	
		4			4		
				4			
C	Corner Casting A25-0229		4		4		
D	Corner Bracket A15-63440	4					
E	Quad Pedestal Leg N/A	1		1		4x N09-1128	
	OR Stretch Leg N/A		1		1	or 4x N09-0991	
F	1/4" – 20 x 0.625 Quadrex Pan Hd. M. Screw, Zinc E01-50403	52x (66" to 78" w) or 68x (84" to 96" w)	36x (66" to 78" w) or 52x (84" to 96" w)	52x (66" to 78" w) or 68x (84" to 96" w)	36x (66" to 78" w) or 52x (84" to 96" w)		
G	Attachment Plate A15-6721	4x (66" to 78" w) or		12x (84" to 96" w)			

Reference Installation Guides:
No. 582 Tables "Power/Data Modules"

Audience Boardroom Tables

Audience Boardroom Tables - Part / Product Identification and What's Included



		ATBSQ	ATBSS	ATBCQ	ATBCS	
Ref.	Illustration	Quantity				Kit No. / Assy. No.
H	 <p>Access Base Panel C05-7102-X (Lam.) or N09-4074-X (Metal) AND Base Panel C05-2282-X (Lam.) or N09-1173-X (Metal) OR Access Base Panel C05-7101-X (Lam.) or N09-4075-X (Metal) AND Base Panel C05-2281-X (Lam.) or N09-1172-X (Metal)</p>	1				
		3				
				1		
				3		
I	 <p>Counter Screw D05-0036</p>	4				X05-0134 (If Natural Veneer Work.)
J	 <p>8 x 30 mm Wood Dowel D05-0037</p>	9				
K	 <p>Counter Screw D05-0036</p>	4				OR X05-0152 (If Laminate or Flintwood Work.)
L	 <p>Alignment Spline B03-2232</p>	4				

Audience Boardroom Tables

ROUND OR SQUARE BOARDROOM TABLE INSTALLATION

FRAME INSTALLATION FOR QUAD PEDESTAL BASE



1a

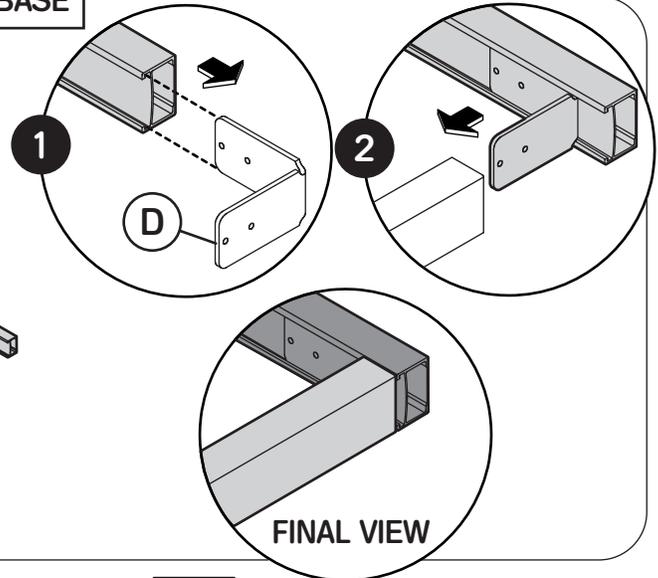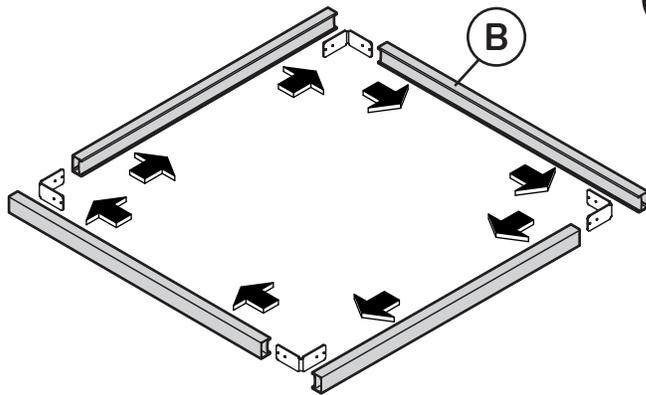

OR

FRAME INSTALLATION FOR STRETCH LEGS






1b

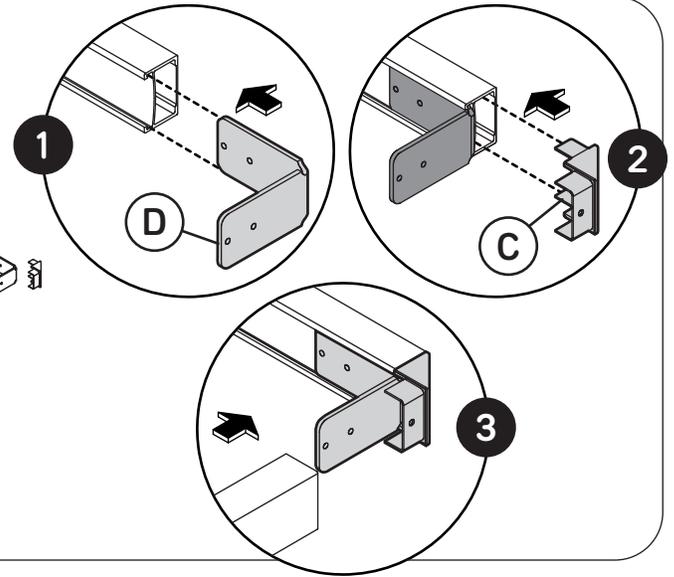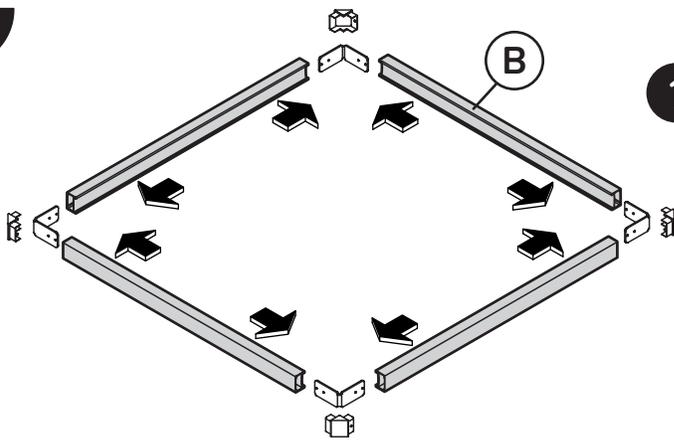

Section – Meeting & Audience Boardroom Tables


No. 579

Audience Boardroom Tables

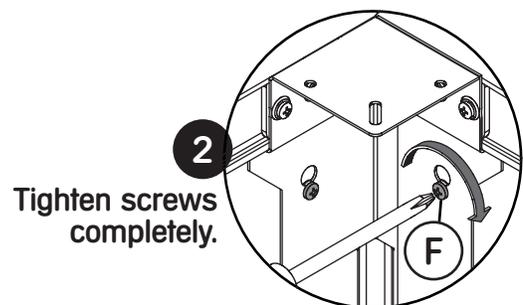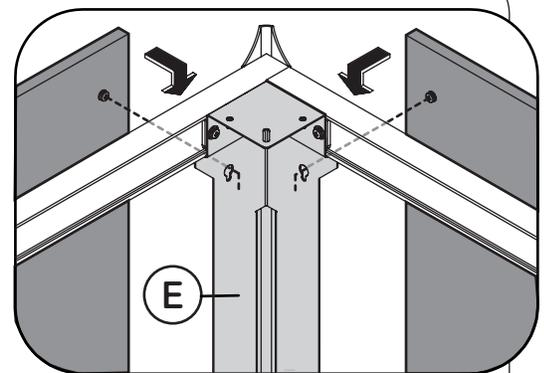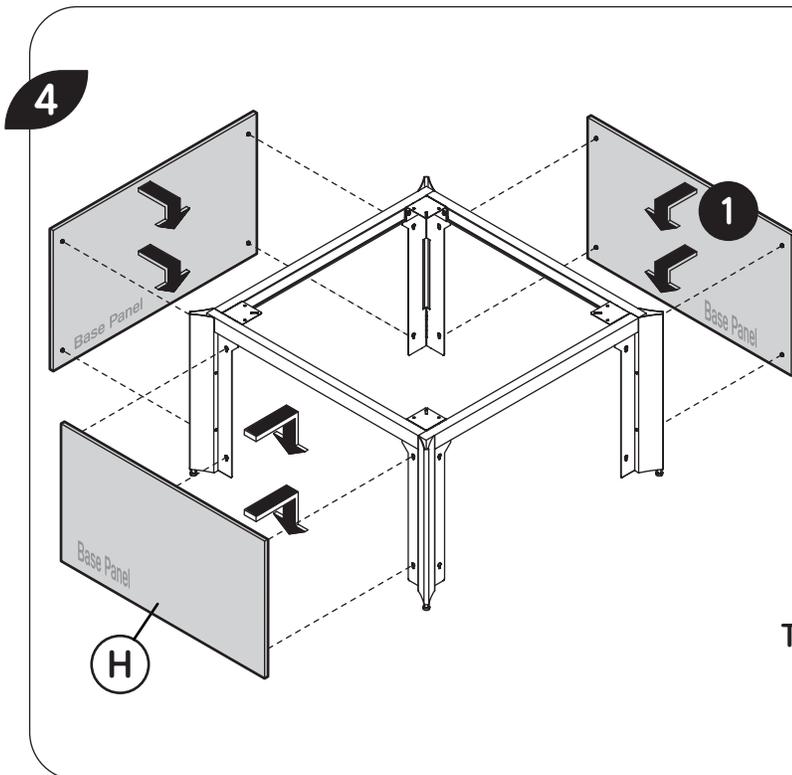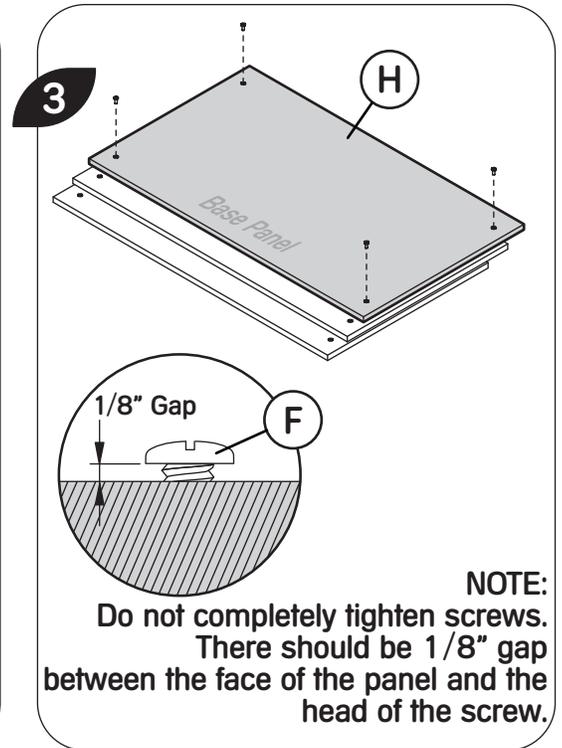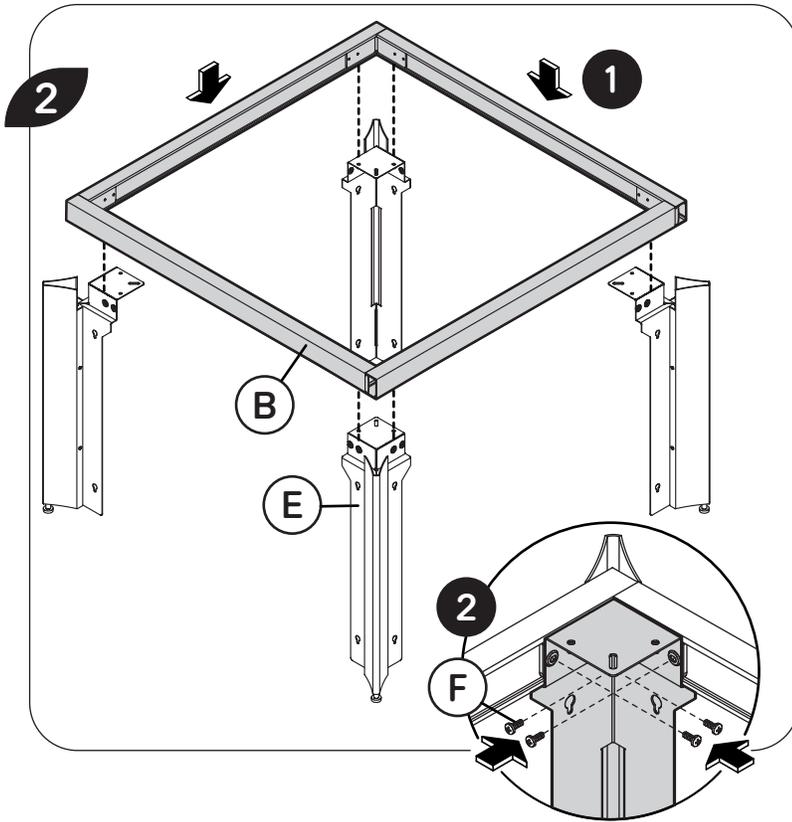


Audience Boardroom Tables

5

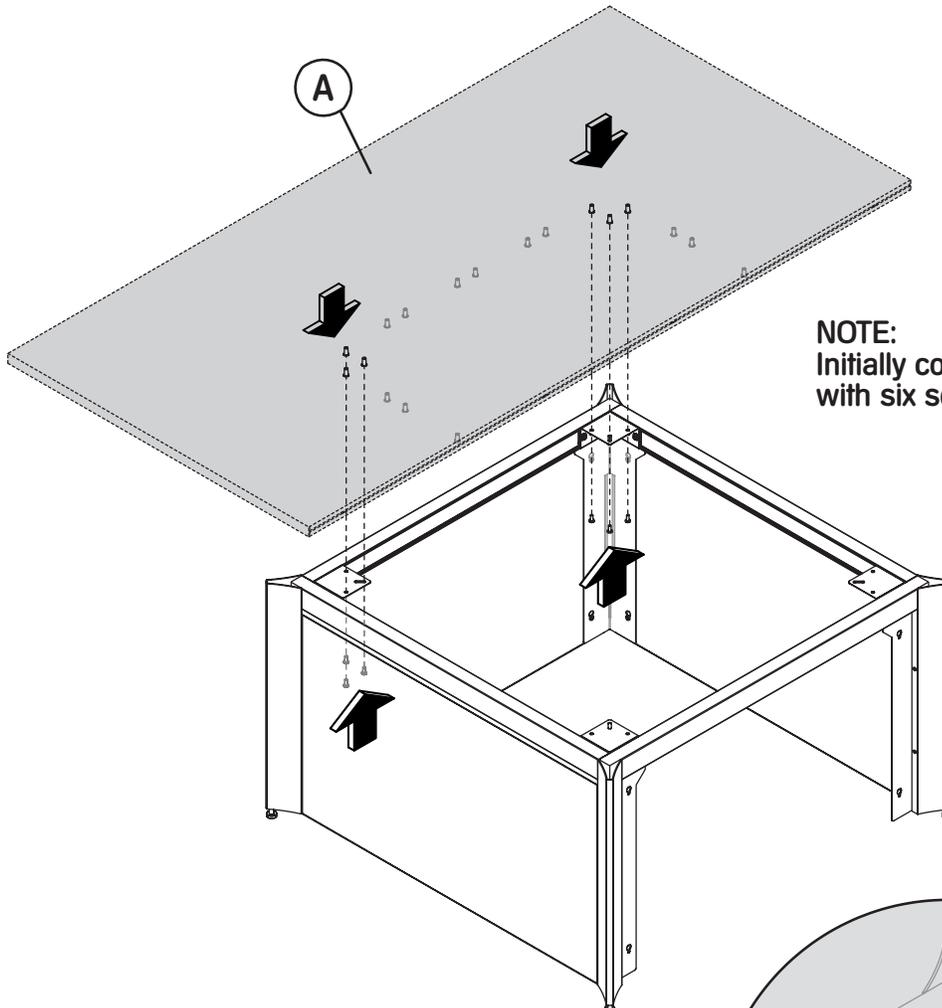


NOTE:
Initially connect work surface
with six screws as shown.


NOTE:
For installation of Recessed Power/Data
Module, Pop-Up Power/Data Module or
Grommet, see installation
guide number #582.

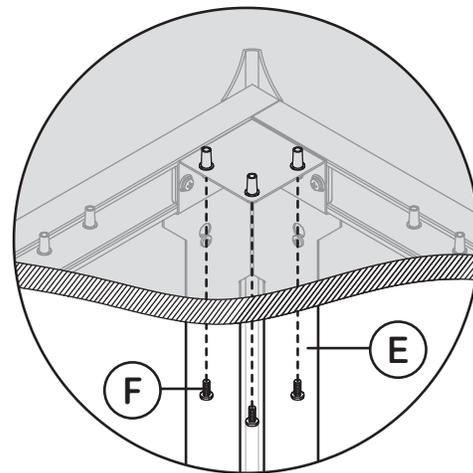



Audience Boardroom Tables

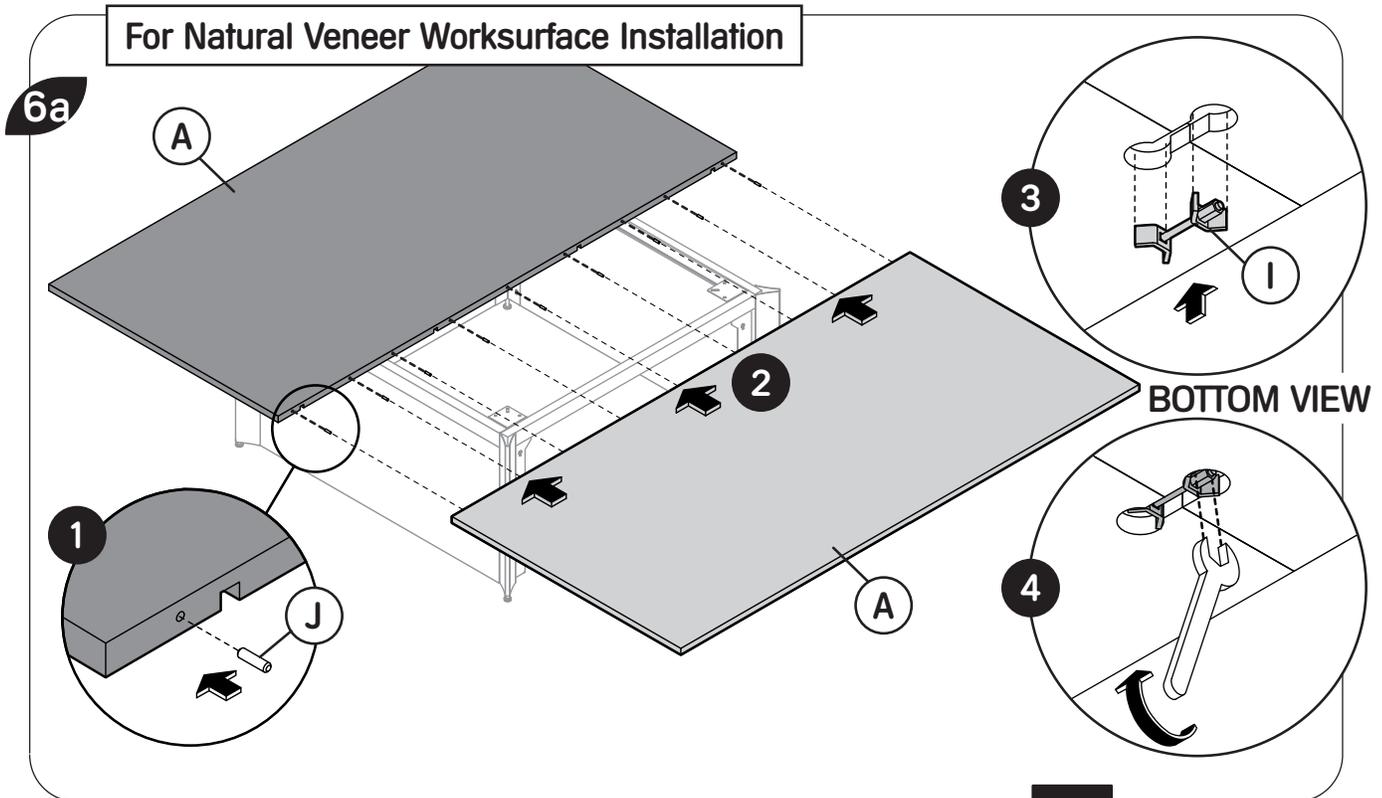


OR

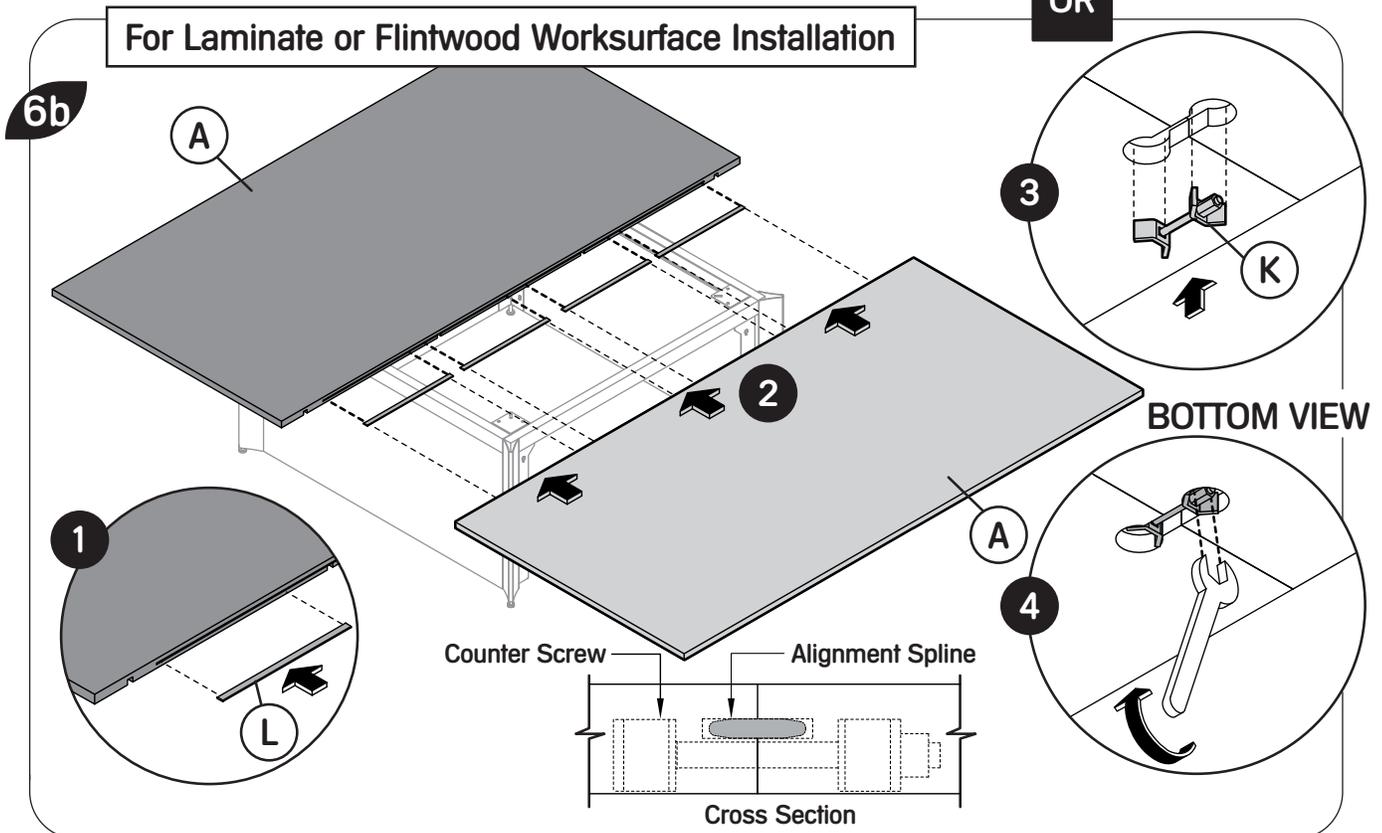


Audience Boardroom Tables

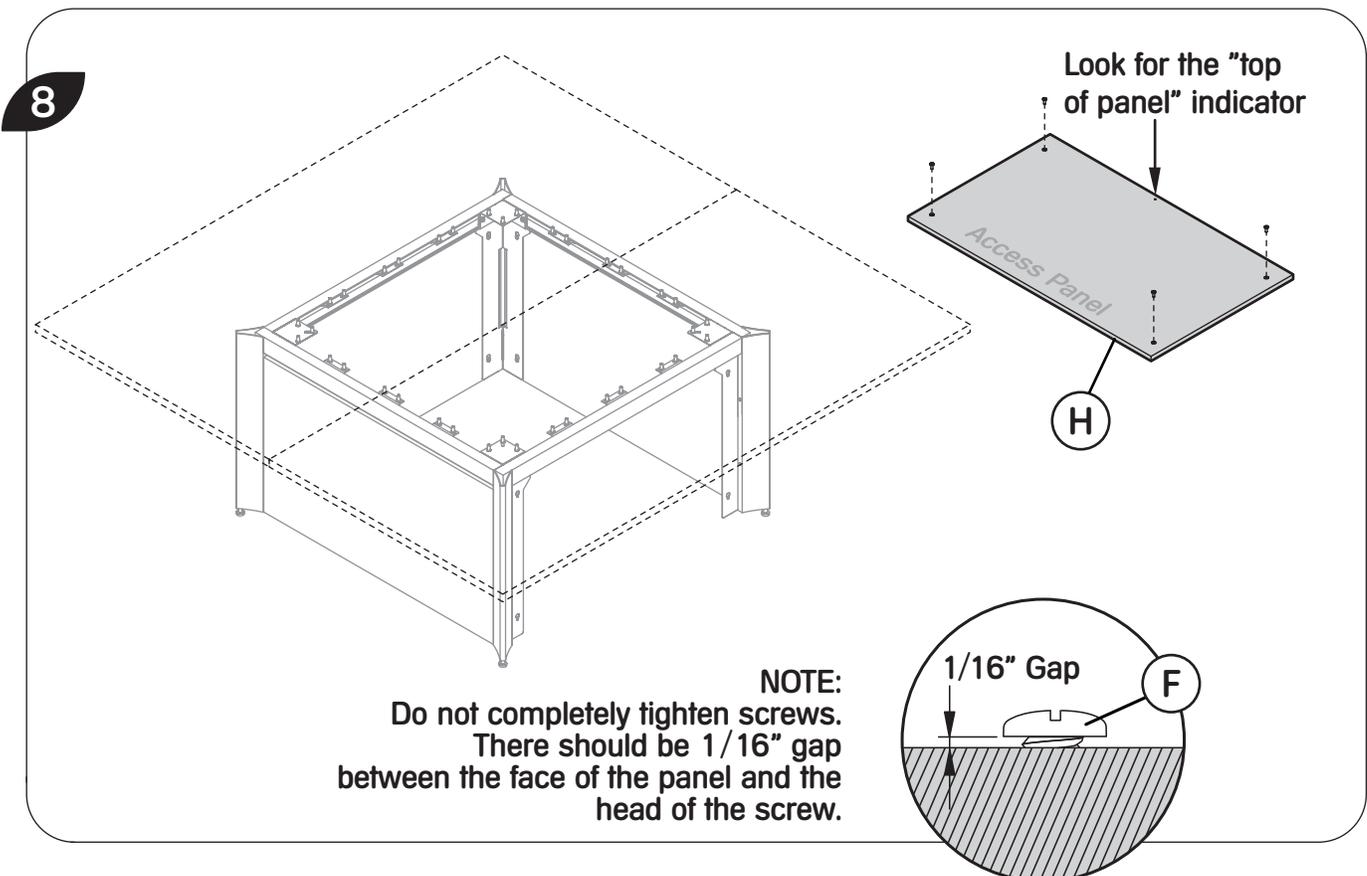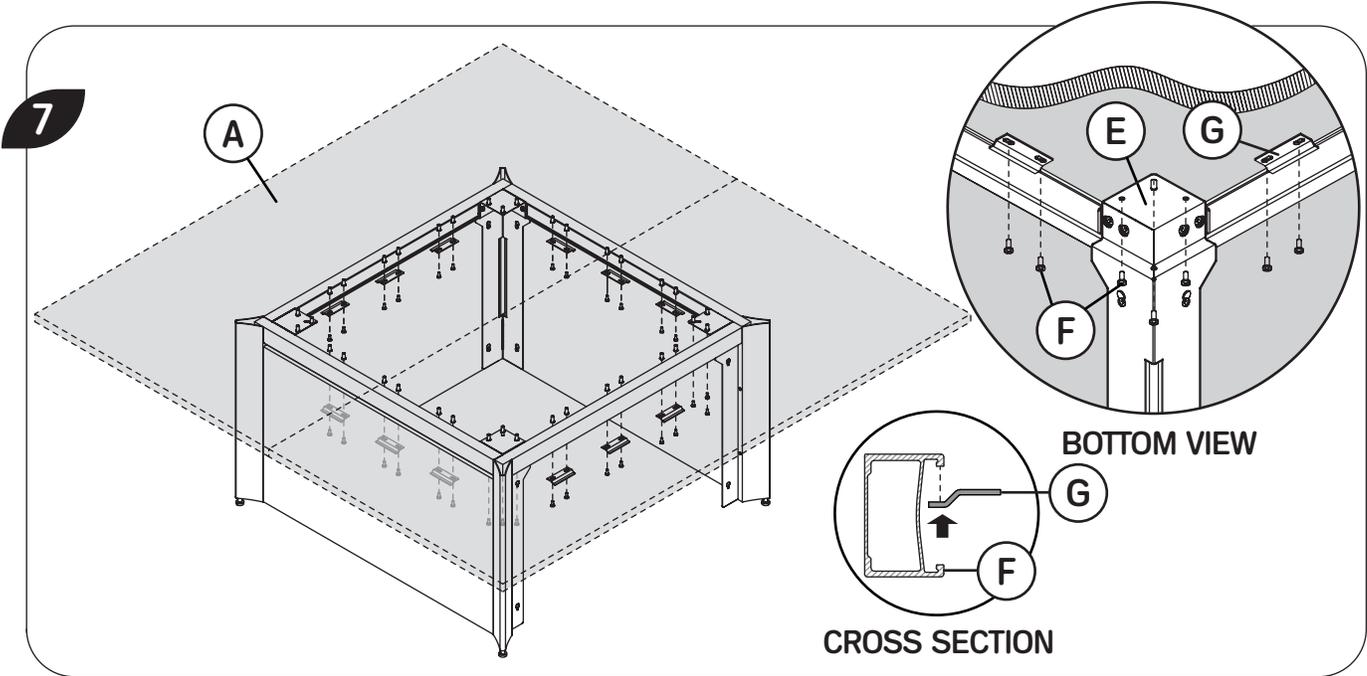

Audience Boardroom Tables

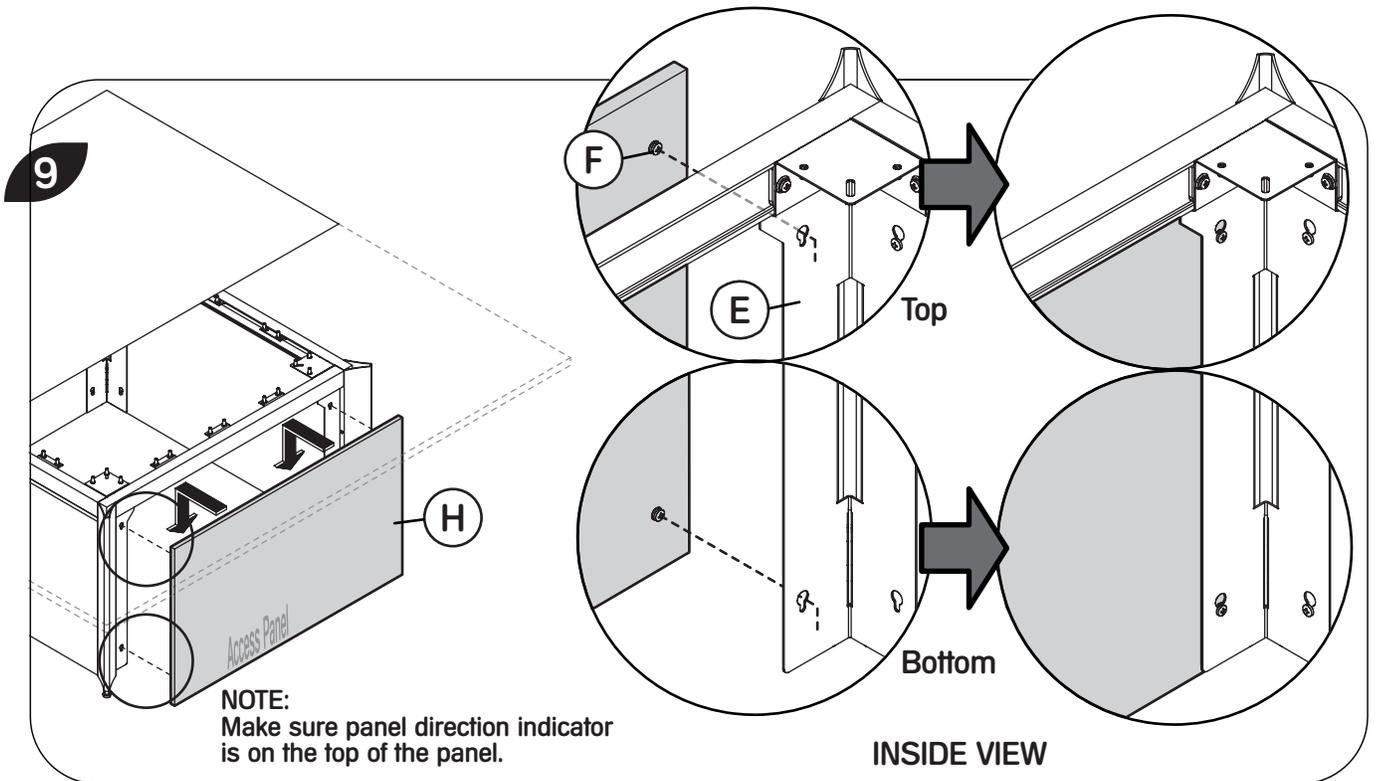

STRETCH LEGS INSTALLATION

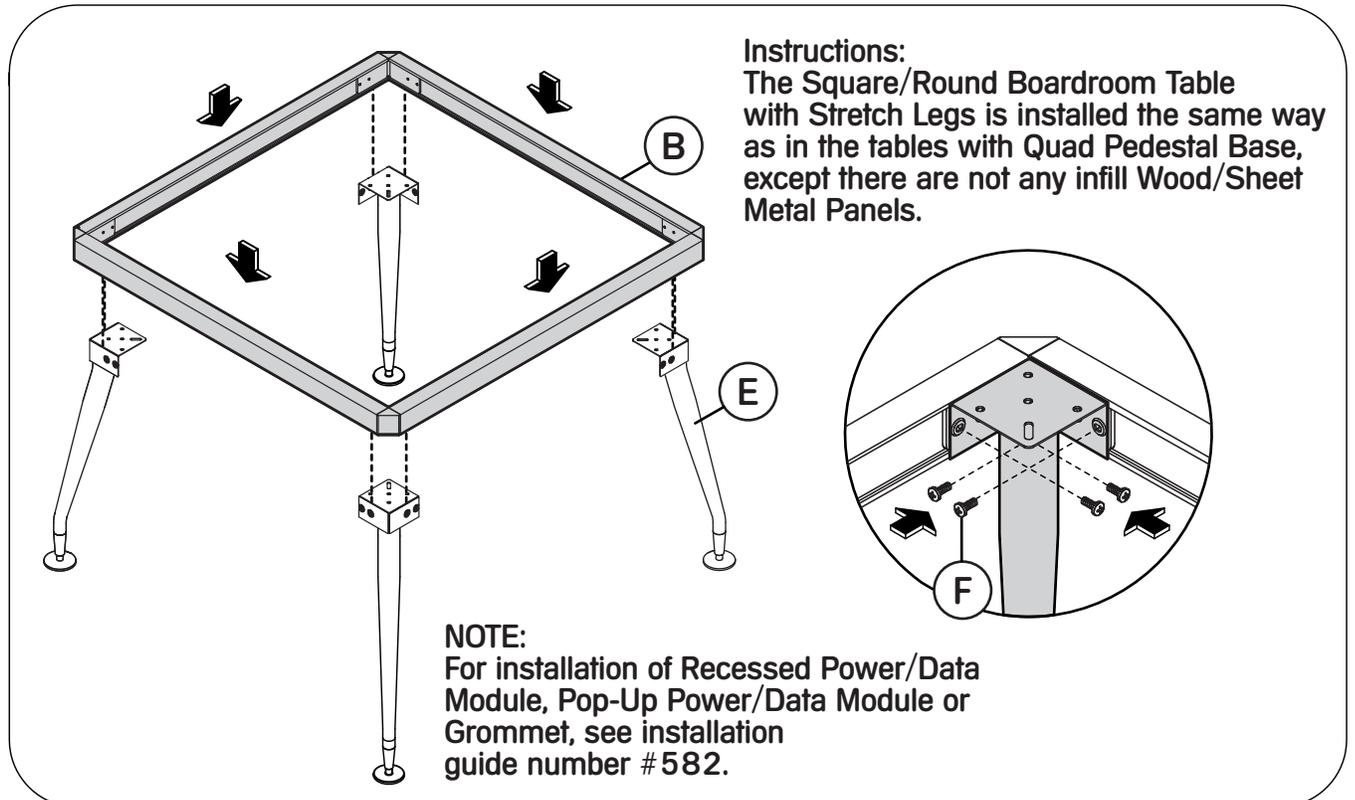


Section – **Meeting & Audience Boardroom Tables**

No. **580**

Audience Rectangular Boardroom Table
 Audience Oval Boardroom Table
 Audience Boat Boardroom Table
 Audience Videoconference Table

ATBR
ATBV
ATBB
ATVC

Product

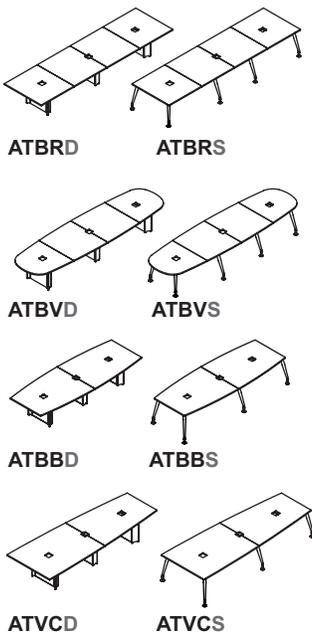

TOOLS REQUIRED:
 Cross or Square Drive #3 and Wrench

BOARDROOM TABLES - Part / Product Identification and What's Included

Ref.	Illustration	ATBRS	ATBRD	ATBVS	ATBVD	ATBBS	ATBBD	ATVCS	ATVCD	Kit No. / Assy. No.	
		Quantity									
A	Rectangular Worksurface N09-1214X-X	1	1								
	OR Oval Worksurface N09-1216X-X			1	1						
	OR Boat Worksurface N09-1215X-X					1	1				
	OR Video Worksurface N09-1217X-X							1	1		
B	End Support Beam A23-63066+YY or A23-63081+XX	2		2		2		2			
			2		2		2		2		
C	Support Beam (Long) A23-63067+XX and Central Support Beam A23-63068 (If Applicable)			2 or 4						N09-1125+XX+YY (for ATBRS, ATBVS, ATBSS or ATVCS)	
				2							
D	Corner Casting A25-0229	4		4		4		4		or	
E	Corner Bracket A15-63440	4									N80-63609+XX+YY (for ATBRD, ATBVD, ATBSS or ATVCD)
F	1/4" - 20 x 0,500 Square Truss Hd. M. Screw Zinc E01-2001 (If Applicable)	4 or 8									
G	Central Leg Attach. Bracket A15-63439 (If Applicable)	2 or 4									
H	Quad Pedestal Leg N09-1126L & R OR Stretch Leg N09-0991		4		4		4		4		
		4		4		4		4			

Reference Installation Guides:
 No. 581 Tables "Electrical Accessories"
 No. 582 Tables "Power/Data Module"

For additional information on this installation contact Roy & Breton **Technical Support**.




Issue Date: 2020 January 8

Section – **Meeting & Audience Boardroom Tables**

No. **580**

Audience Boardroom Tables

BOARDROOM TABLES - Part / Product Identification and What's Included (Continued)


Ref.	Illustration	Quantity								Kit No. / Assy. No.
		ATBR/S	ATBR/D	ATBV/S	ATBV/D	ATBB/S	ATBB/D	ATVC/S	ATVC/D	
I	 Central Quad Pedestal Leg N09-1127		2 or 4		2 or 4		2 or 4		2 or 4	
	OR  Central Stretch Leg N09-1028	2 or 4		2 or 4		2 or 4		2 or 4		
J	 1/4" – 20 x 0.625 Quadrex Pan Hd. M. Screw, Zinc E01-50403	As per Order								
K	 Attachment Plate A15-5927 and	As per Order								
	 Attachment Plate A15-5930	0 or 4						4		
L	 Counter Screw D05-0036	4								As per Order X05-0133 (If Natural Veneer Work.)
M	 8 x 30 mm Wood Dowel D05-0037	5								
N	 Counter Screw D05-0036	4								OR As per Order X05-0151 (If Laminated or Flintwood Work.)
O	 Aligment Spline B03-2232	2								
P	 End Base Panel (Long) C05-2279-X (Lam.) or N09-1149-X (Metal)		2		2		2		2	
Q	AND  Inside Base Panel (Court) C05-2280-X (Lam.) or N09-1150-X (Metal)		As per Order							

Audience Boardroom Tables


BOARDROOM TABLES INSTALLATION

FRAME INSTALLATION FOR QUAD PEDESTAL BASE



1a

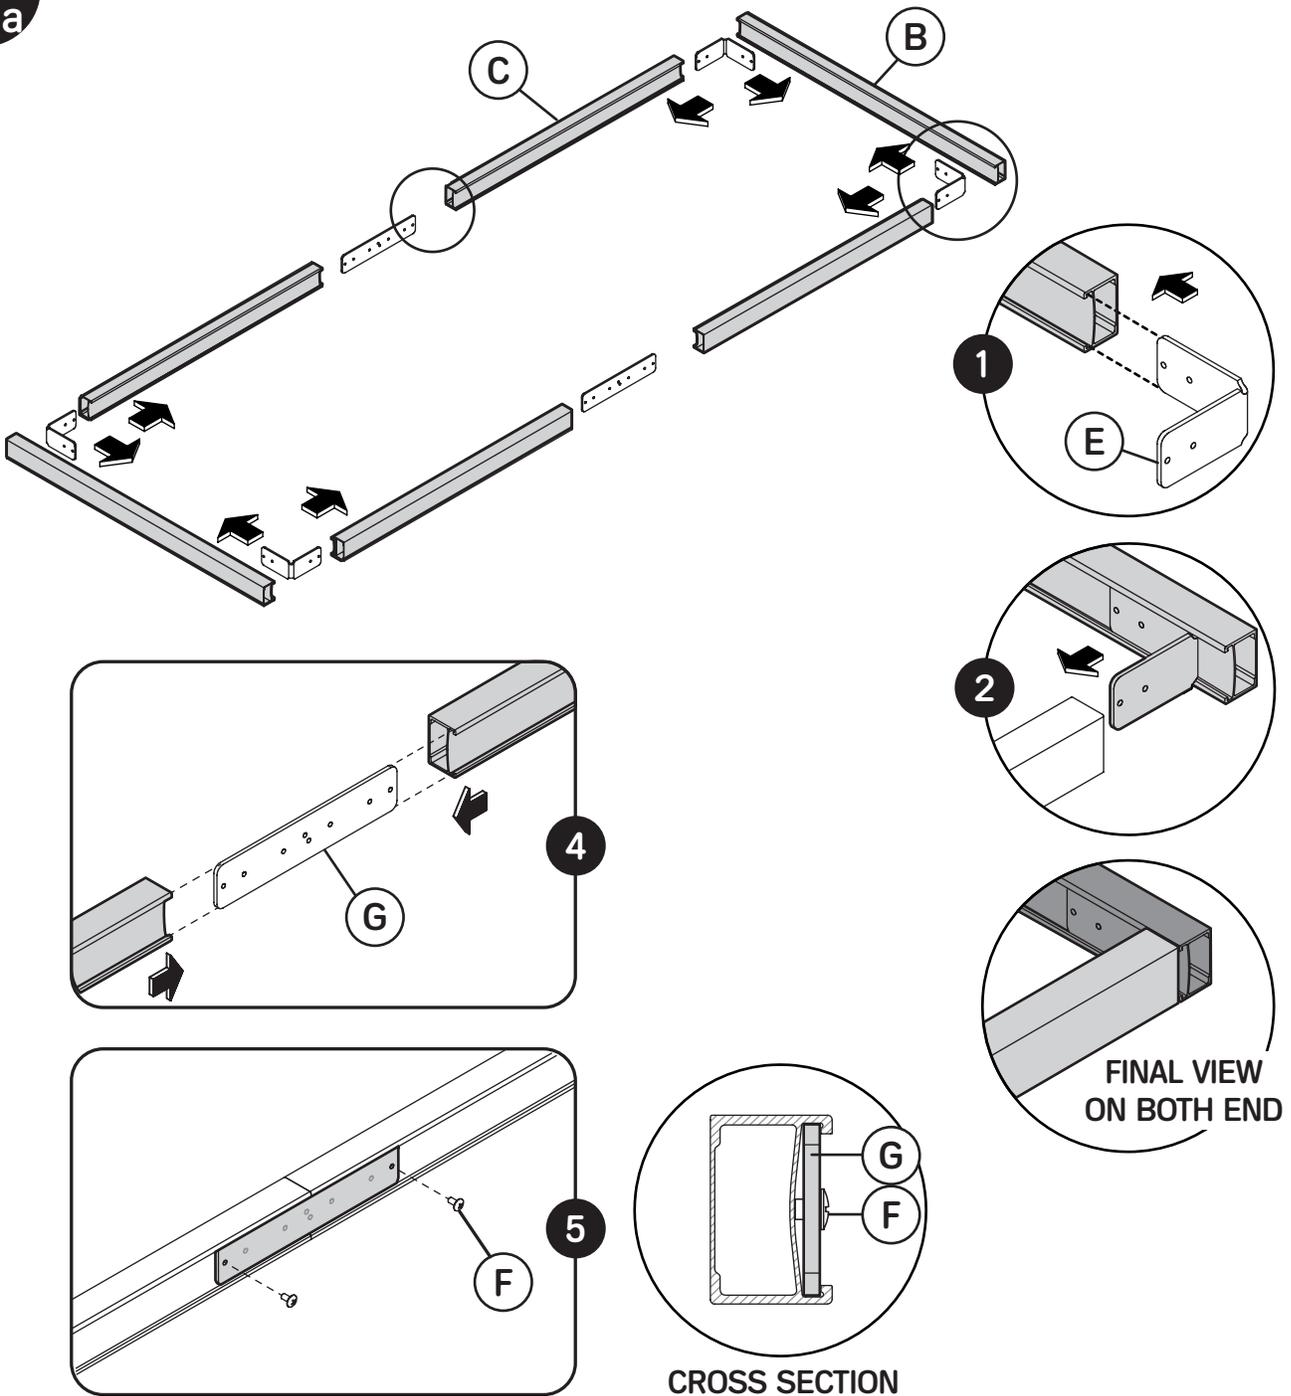


Audience Boardroom Tables

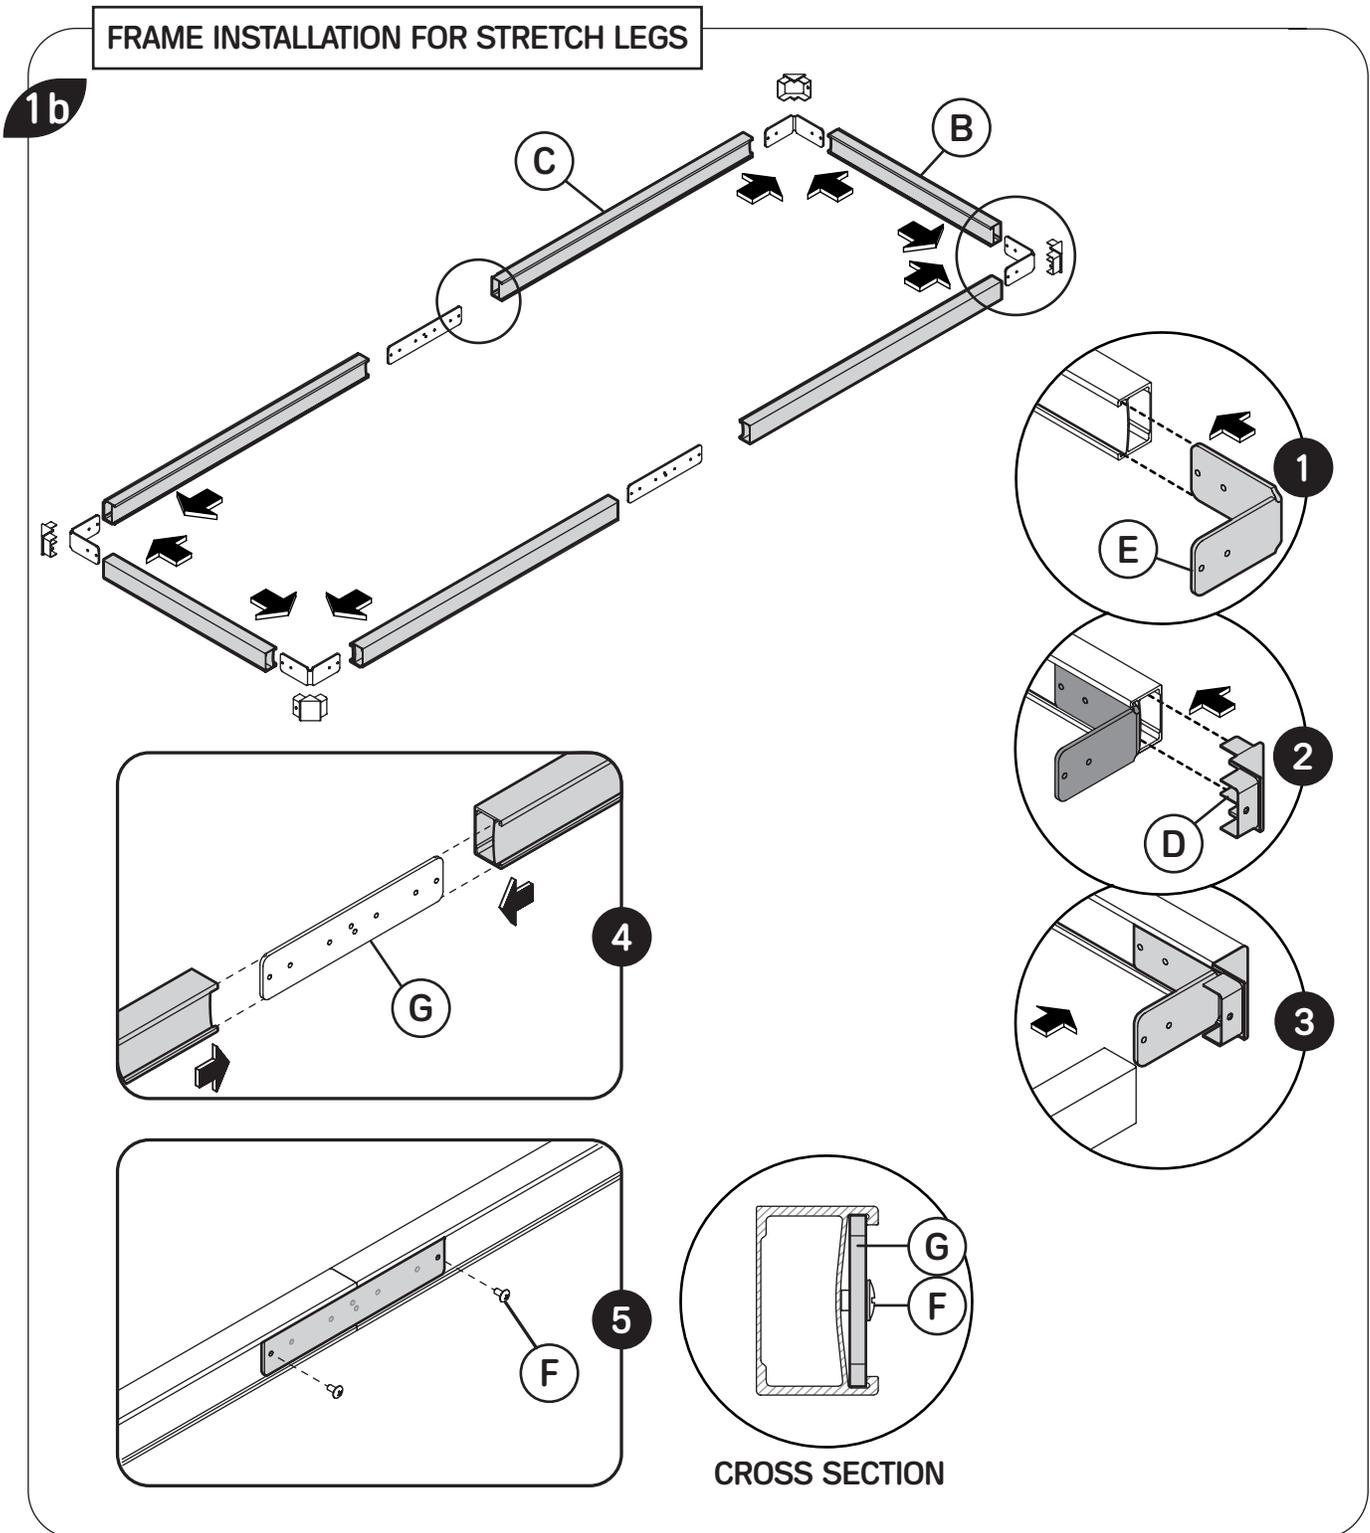


Audience Boardroom Tables

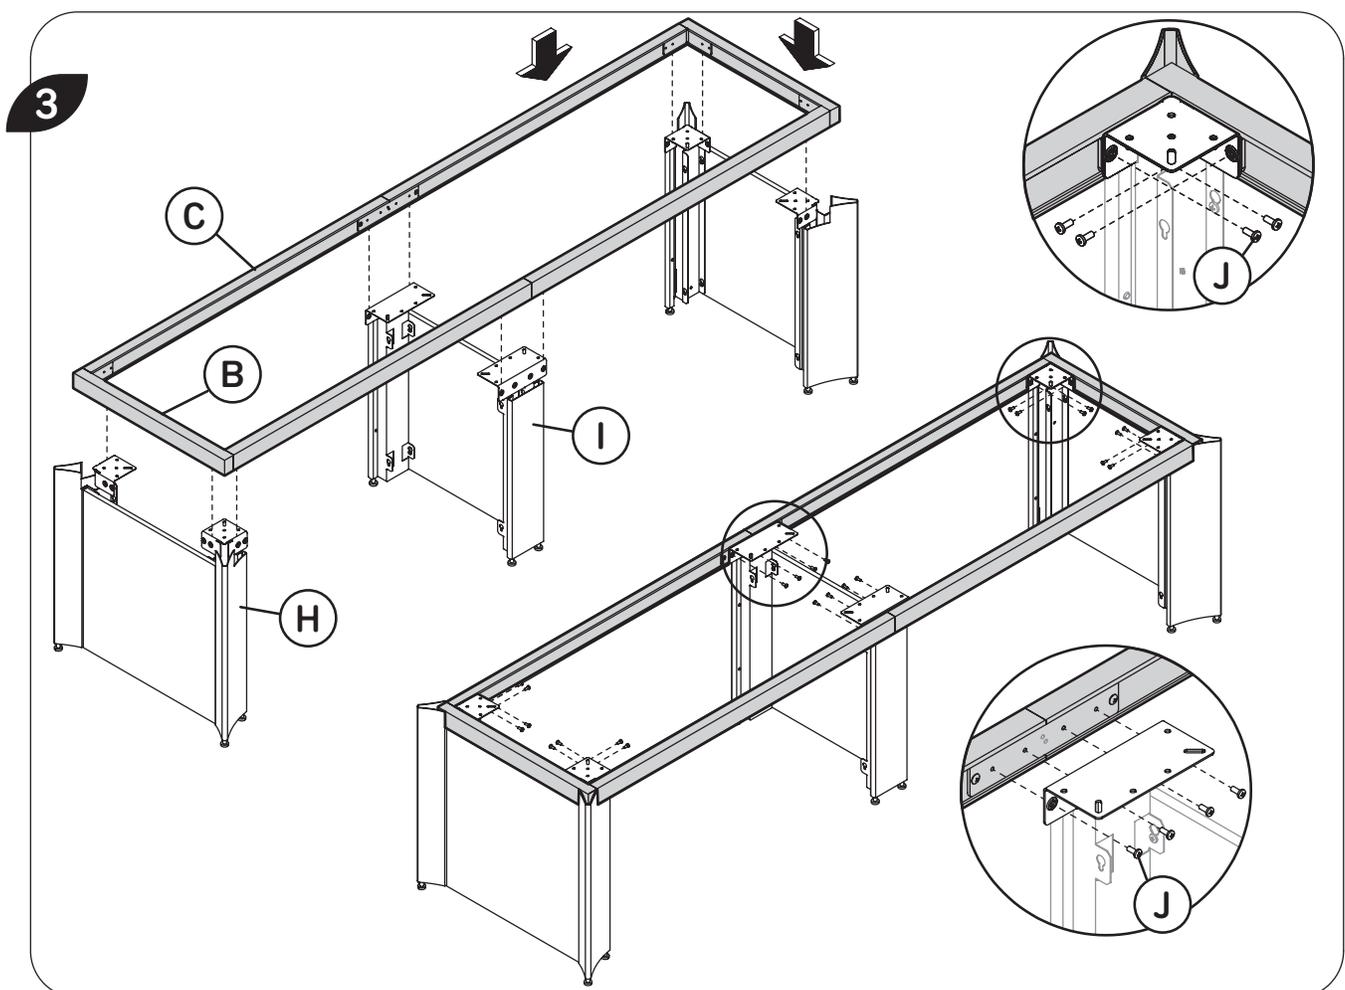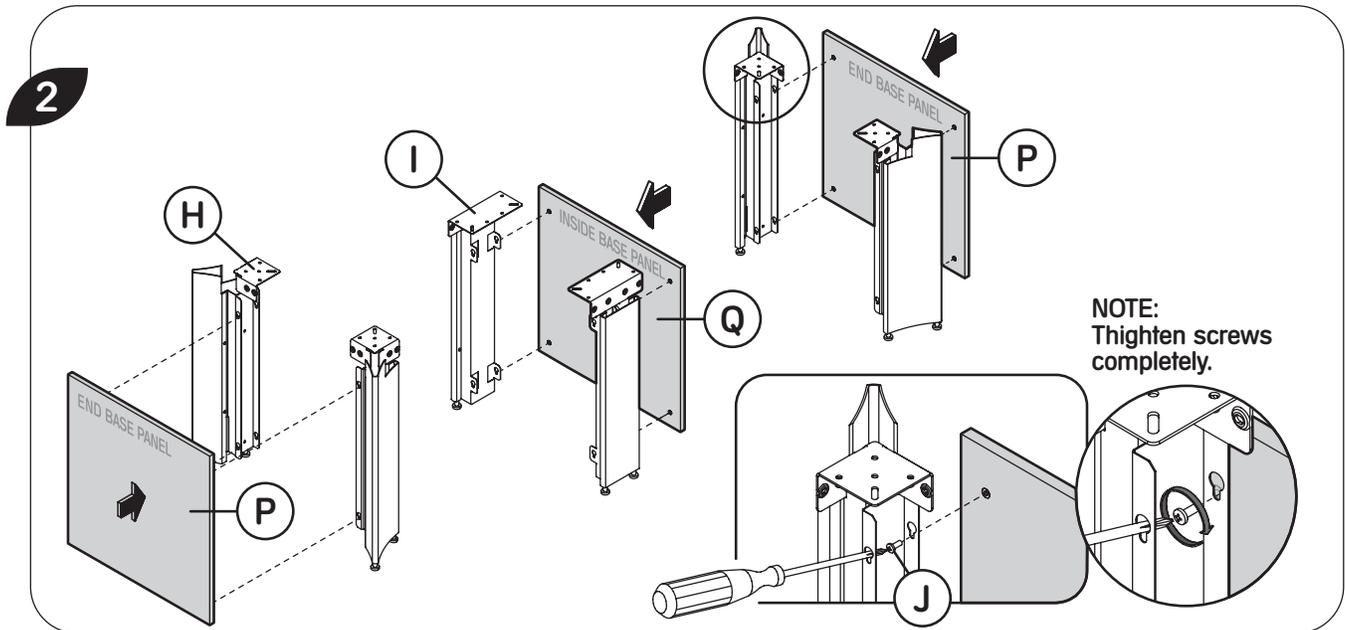



Audience Boardroom Tables

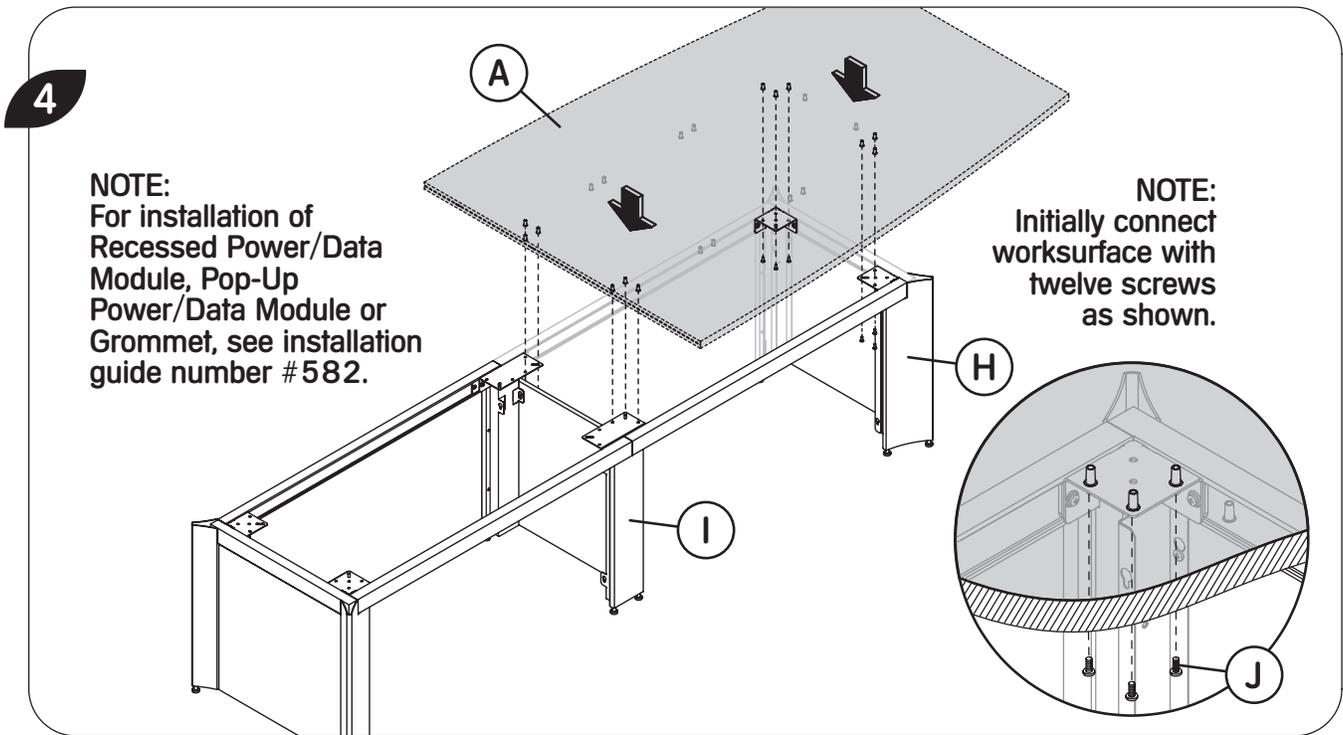

For Natural Veneer Worksurface Installation

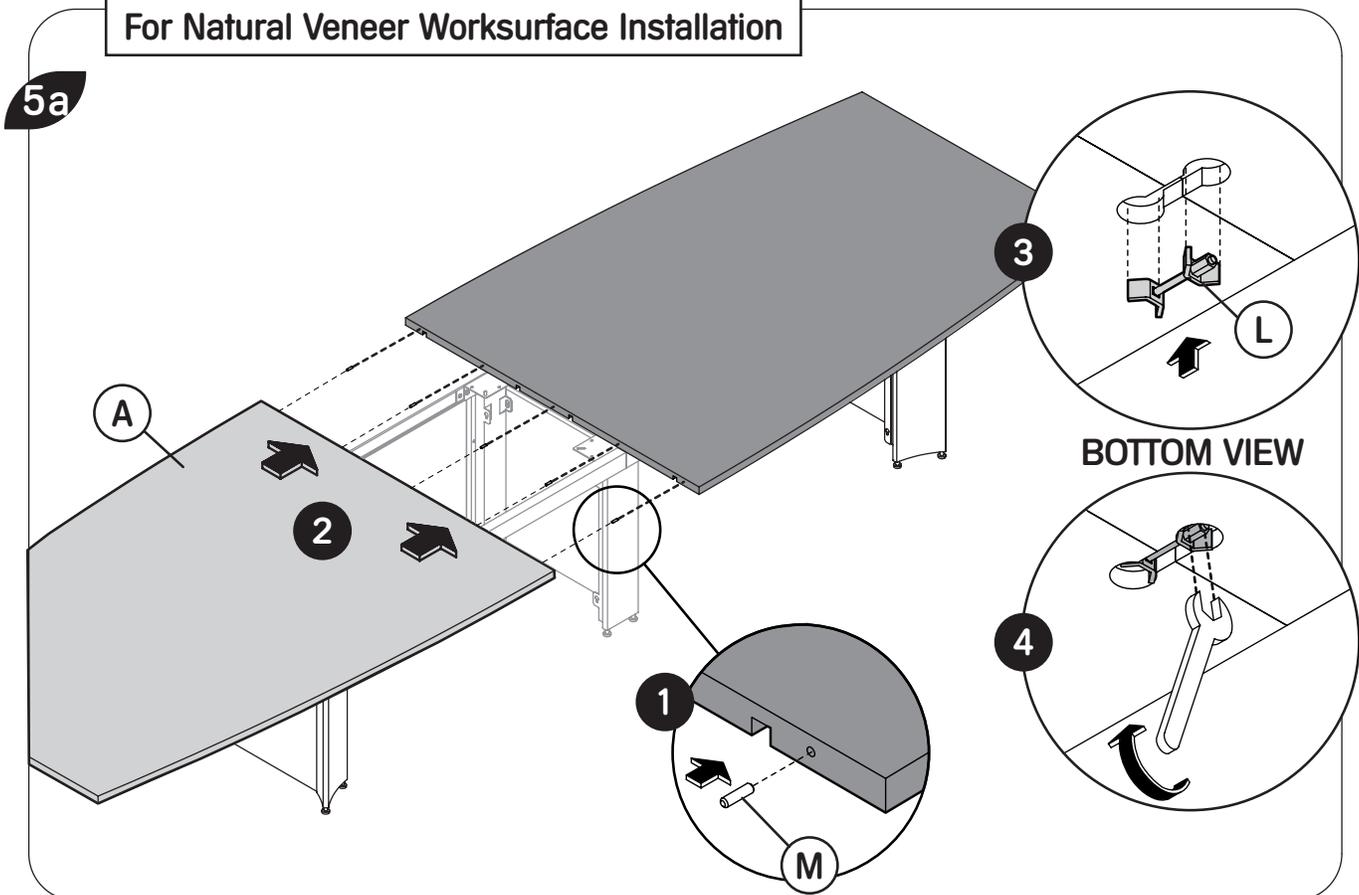



Audience Boardroom Tables

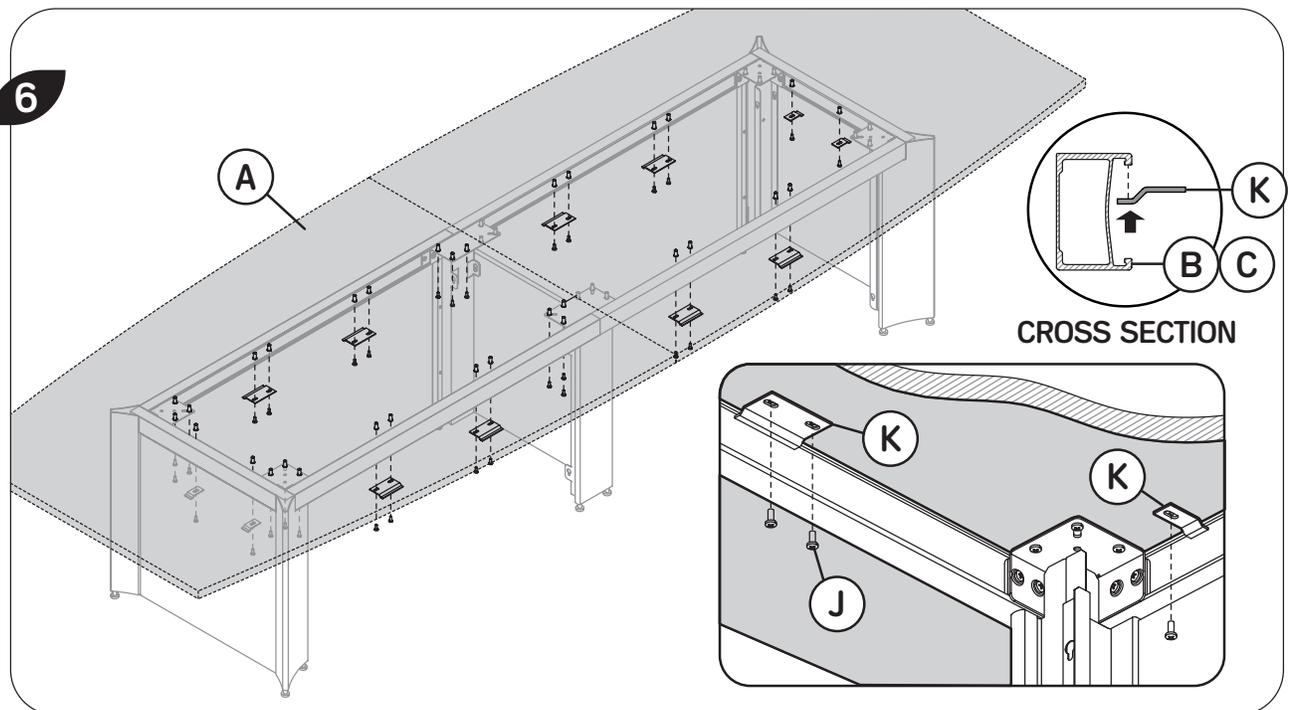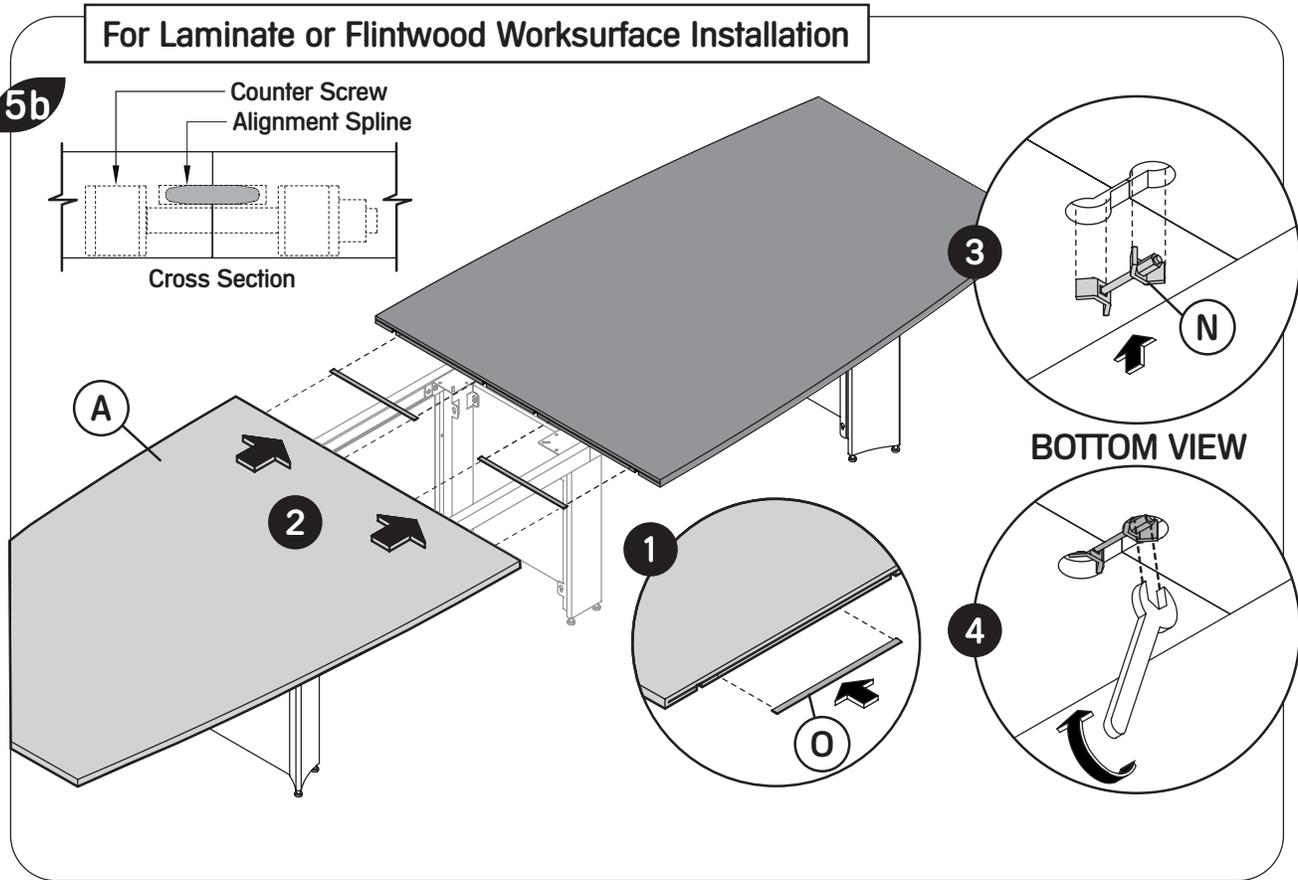

Section – **Meeting & Audience Boardroom Tables**

No. **580**


Audience Boardroom Tables

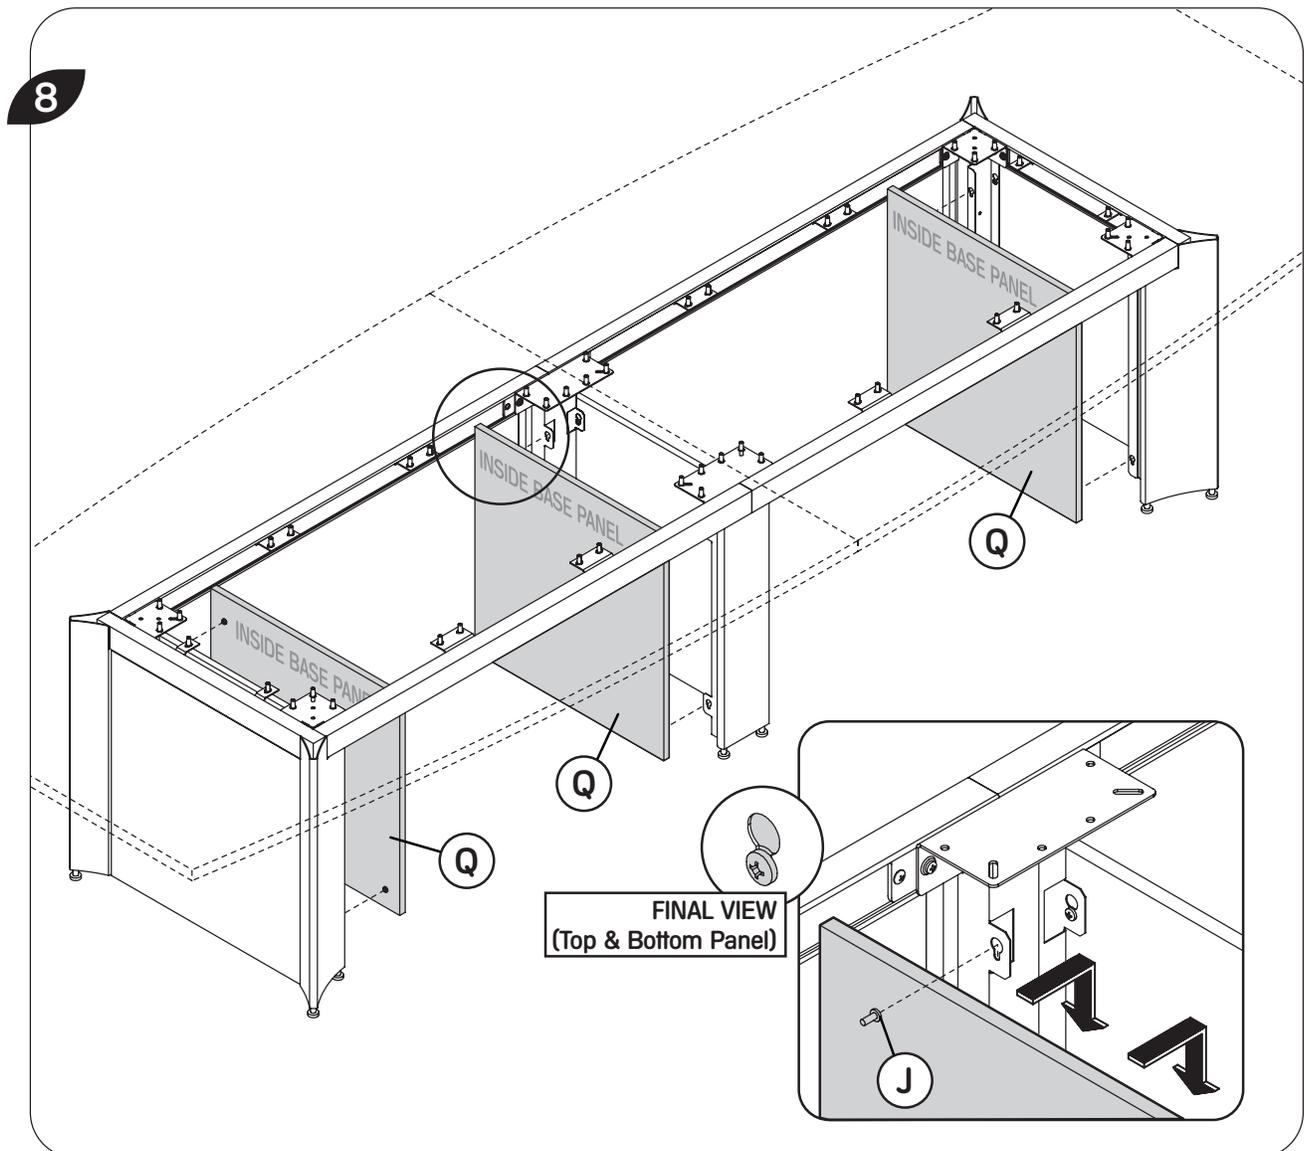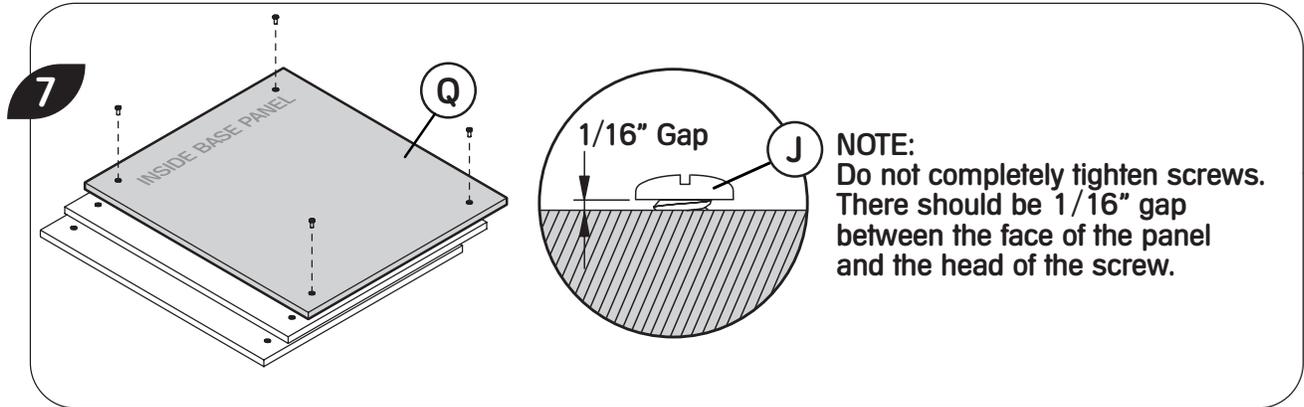

Audience Boardroom Tables

STRETCH LEGS INSTALLATION

Instructions:
The Rectangular/Oval/Boat/Videoconference Boardroom Table with Stretch Legs is installed the same way as in the tables with Quad Pedestal Base, except there are not any infill Wood/Sheet Metal Panels.

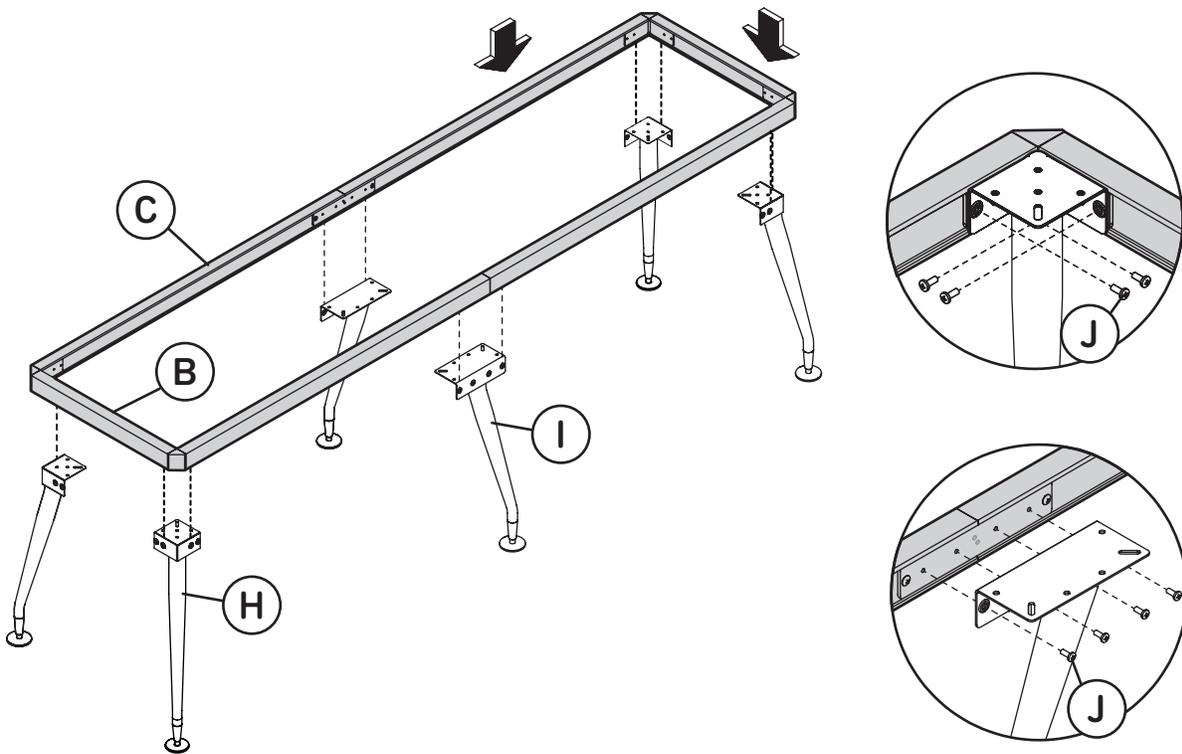

NOTE:
For installation of Recessed Power/Data Module, Pop-Up Power/Data Module or Grommet, see installation guide number #582.


Section – Meeting and Audience Boardroom Tables

No. 582

Recessed Power/Data Module
Pop-Up Power/Data Module
Table Grommet

RTM101
PTM
GTM100

Power/Data Options

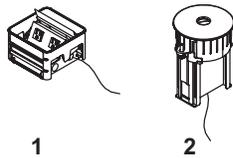

1

2

Grommet Option




3

POWER/DATA OPTIONS - Part / Product Identification and What's Included

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.	Kit No. / Assy. No.
1		Recessed Pwr/Data Module (Power Cord)			
		a) Recessed Power/Data Module Frame	SA-RTM101-FRAME	1	RTM101
		b) Recessed Power/Data Box	SA-RTM101-BOX	1	
c) Mounting Brackets with 2 Set Screws - 1/4-20 x 2"	MPA15-E216	2			
2		Pop-Up Power/Data Module (Power Cord)			
		a) Pop-Up Power/Data Module w/Grommet	PTM101	1	PTM
		b) Pop-Up Power/Data Mounting Brackets	PB02-E065 (left) PB02-E066 (right)	1 1	
c) Mounting Screws	FS4 X 1/2 RPA	4			

Application

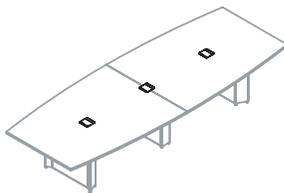

GROMMET OPTION - Part / Product Identification and What's Included

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.	Kit No. / Assy. No.
3		a) Casting Top	MPA25 EG27	1	GTM100
		b) Plastic Grommet	TB02-0203	1	
<p>NOTE: To install the Grommet, push in place, and rotate the top to desired position.</p>					

TOOLS REQUIRED: Cross/Square Drive #3 - 7/64" Allen Key


IMPORTANT: HARDWARE RECESSED POWER/DATA MODULE (RTM102) HAS TO BE INSTALLED BY A PROFESSIONAL ELECTRICIAN.

Reference Installation Guides:
No. 577 Tables "Meeting Tables"
No. 578 Tables "Meeting Tables"
No. 579 Tables "Boardroom Tables"
No. 580 Tables "Boardroom Tables"


For additional information on this installation contact Teknion **Technical Support**.

Issue Date: 2006 October 16

RECESSED POWER/DATA MODULE INSTALLATION

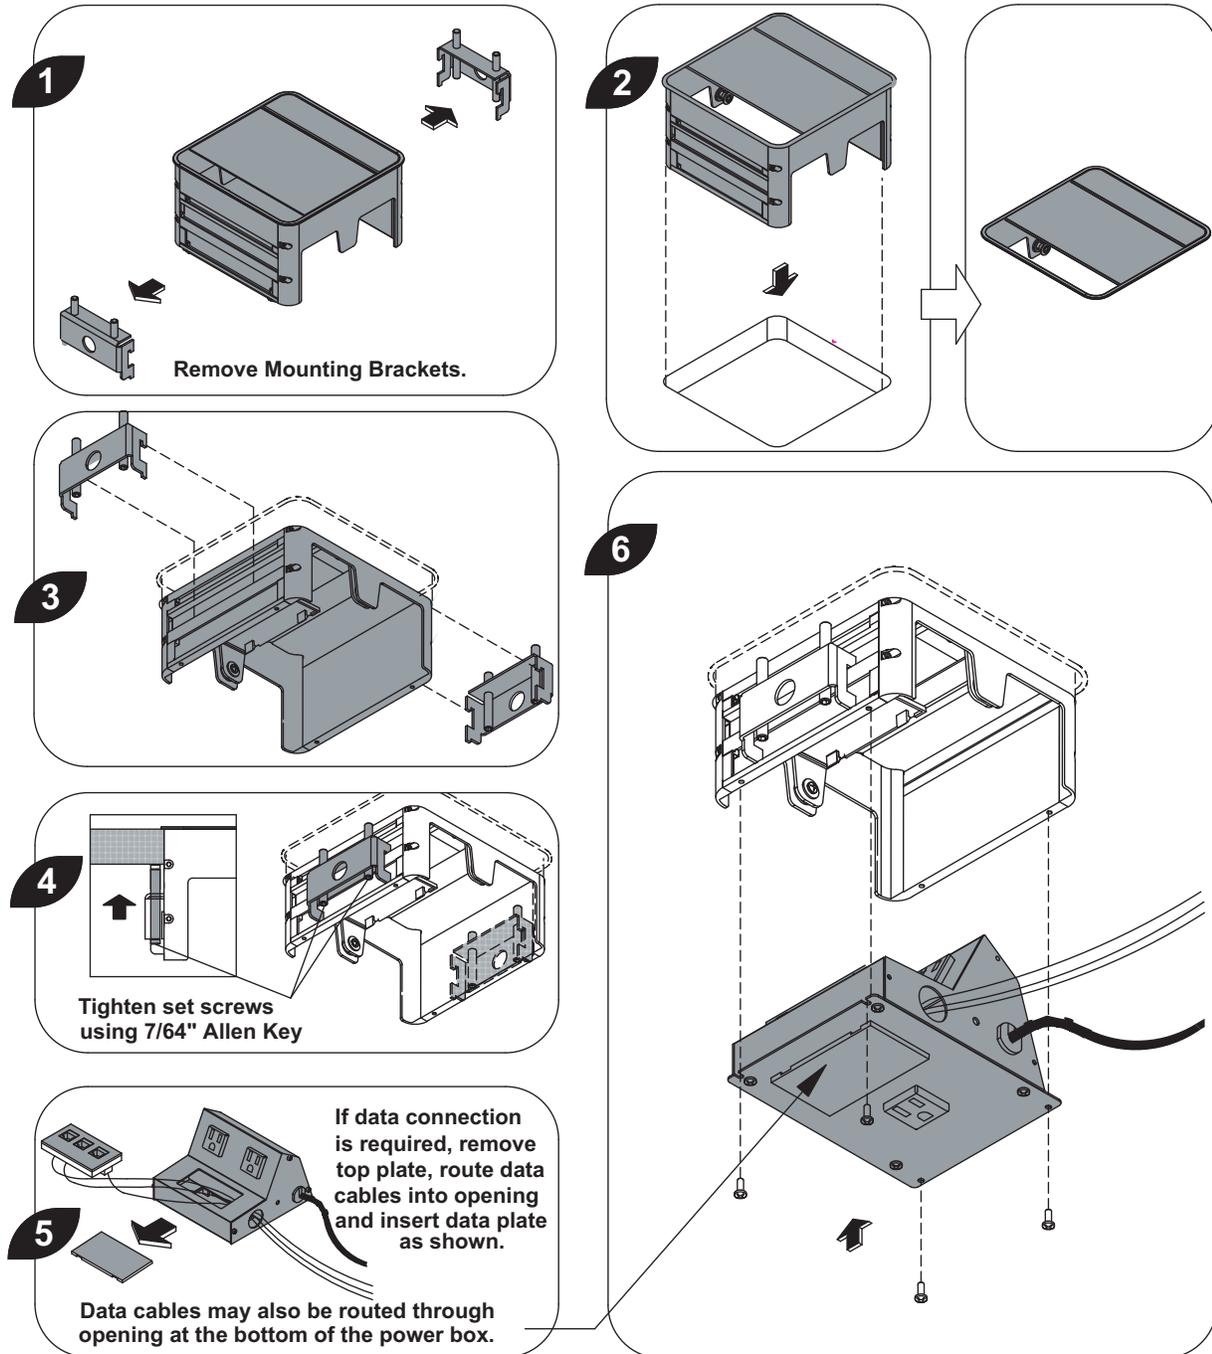

POP-UP POWER/DATA MODULE INSTALLATION

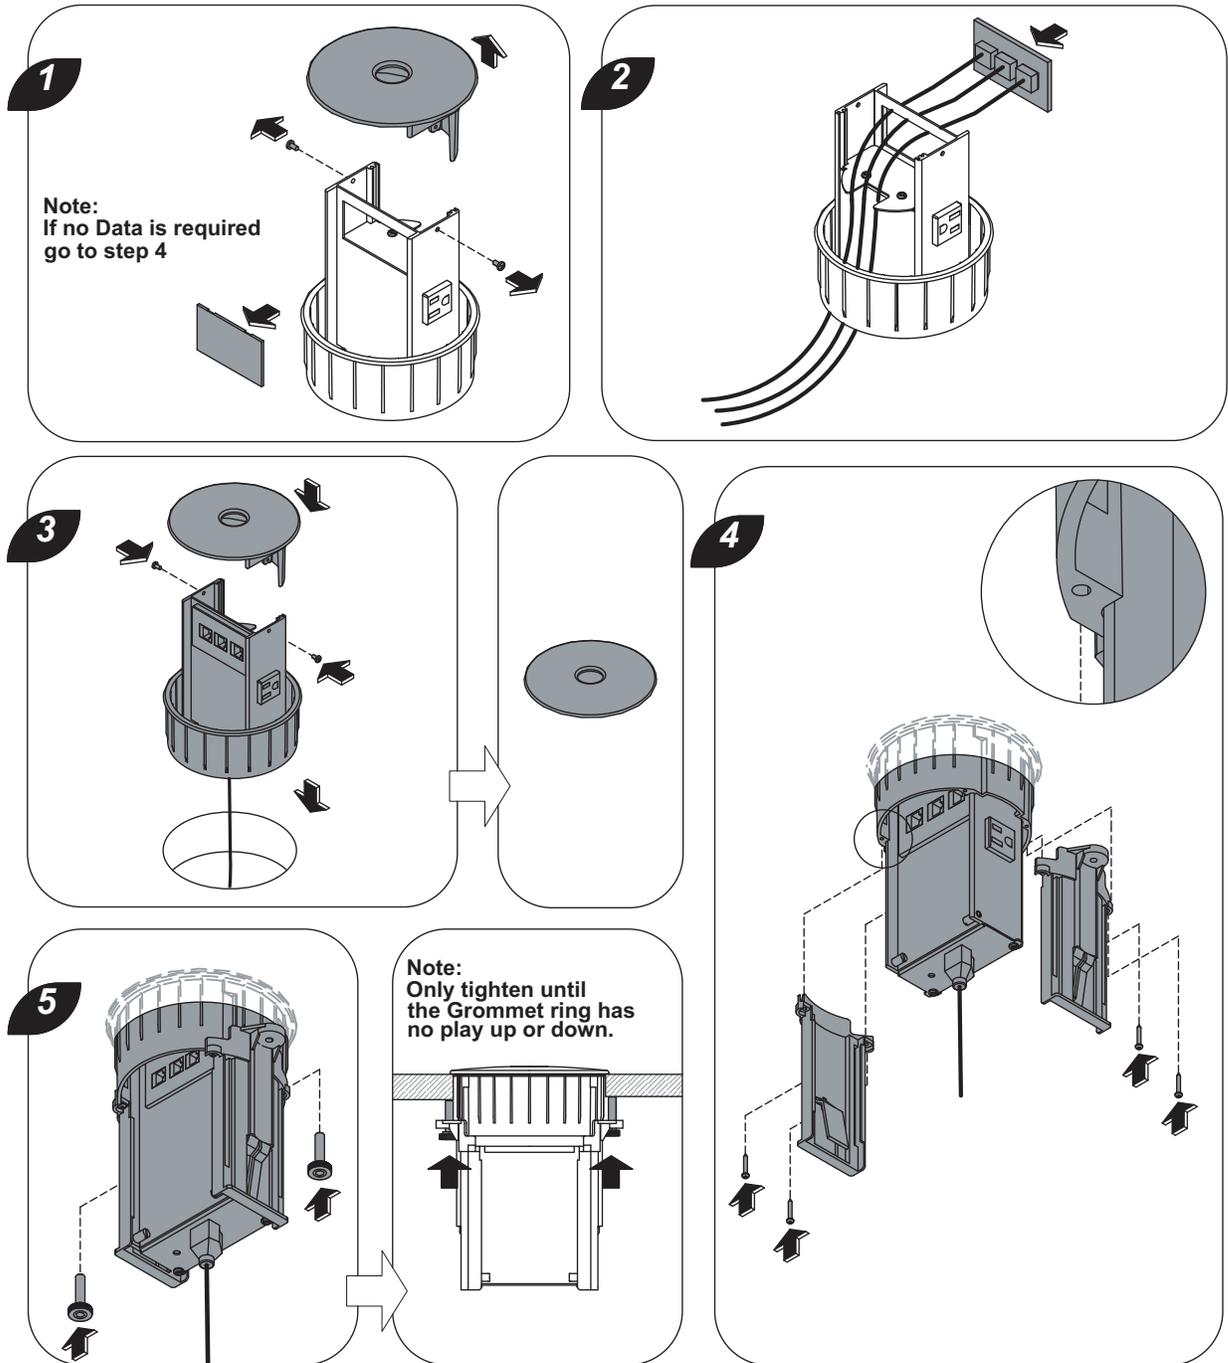

Section – **Meeting and Audience Boardroom Tables**

No. **581**

Hammock
Media Shelf
Rail Mount Cable Manager

ATHK
ATSH
ATRC

Product



ATHK

ATSH



ATRC

TOOLS REQUIRED:
Cross or Square Drive

ATHK - Part / Product Identification and What's Included

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.
A		Hammock	N15-0157-X	1
B		Beam Clip	B11-63018	4

ATSH - Part / Product Identification and What's Included

C		Under Surface Component Media Shelf – Part One and Under Surface Component Media Shelf – Part Two	A15-6440 A15-6441	1
----------	--	---	----------------------	---

ATRC - Part / Product Identification and What's Included

D		Rail Mount Cable Manager	B11-63018	As per Order
----------	--	--------------------------	-----------	--------------

Reference Installation Guides:
No. 580 Tables "Boardroom Tables"


Section – Meeting and *Audience* Boardroom Tables

No. 581


Hammock
Media Shelf
Rail Mount Cable Manager

ATHK
ATSH
ATRC

HAMMOCK INSTALLATION

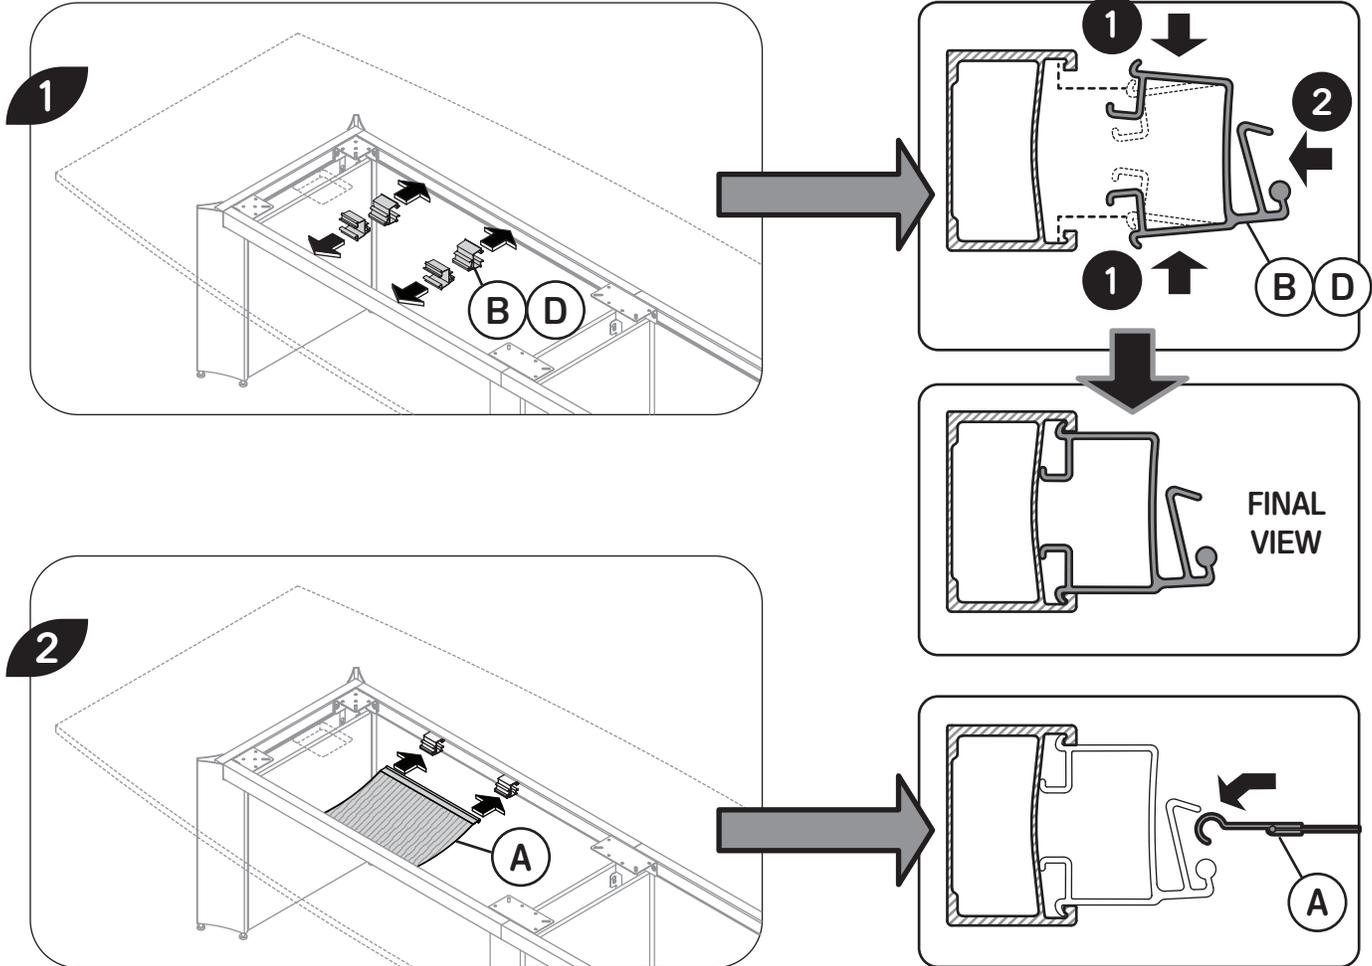


MEDIA SHELF INSTALLATION

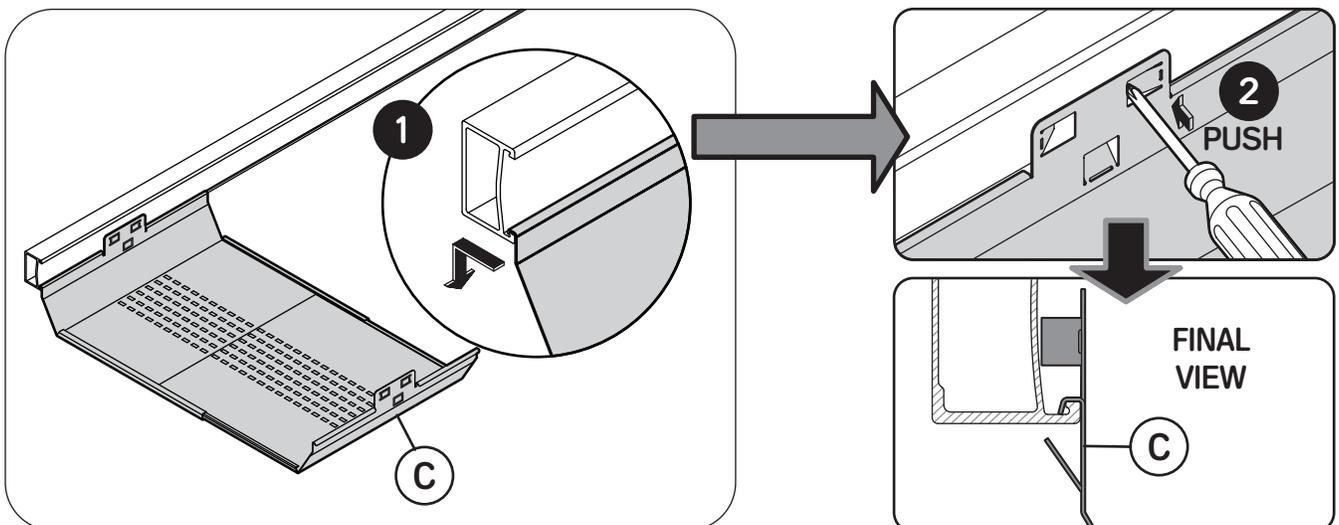

Meeting Table Power



VBEP

Product

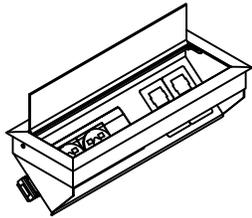




Meeting Table Power

VBEP - Part / Product Identification and What's Included

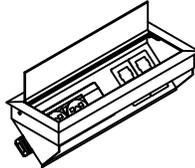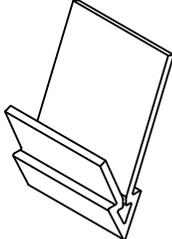Ref.	Illustration	Description	Part No. / Prod. Code	Qty.
A		Meeting Table Power	VBEP	1
B		Clips		2

Application

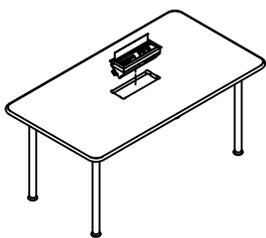

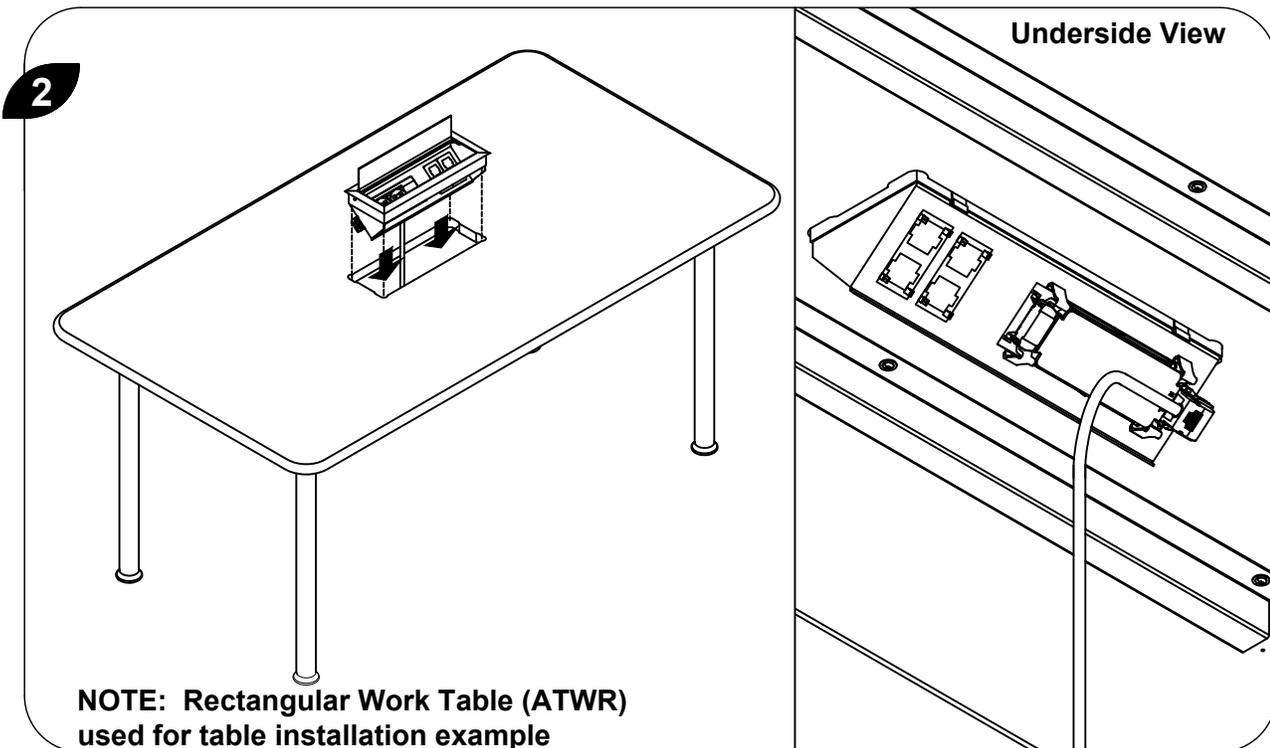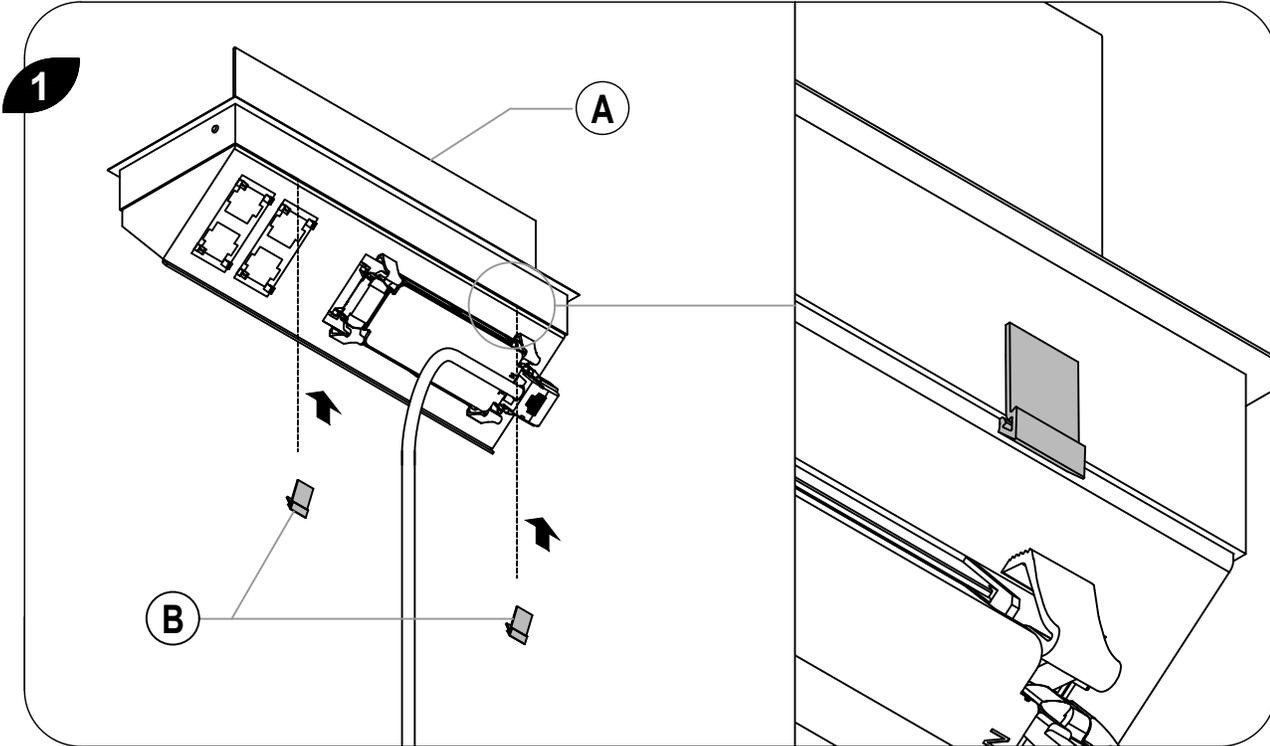


Rectangular Worksurface
 Cockpit Worksurface
 Trapeze Angular Worksurface
 Half-Moon Worksurface

CTRT
CTCK
CTTA
CTHM

Mezzanine Worksurface
 Curved Hatchet Worksurface
 Quarter-Moon Worksurface

CTMZ
CTCH
CTQM

Product

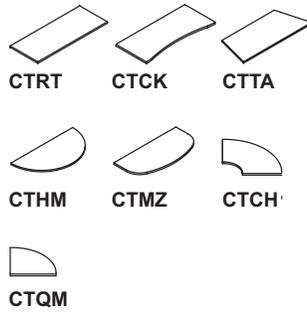

Worksurfaces - Part / Product Identification and What's Included

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.	Kit No. / Assy. No.
A		Worksurface	As per Order	1	
		Reinforcing Bar for 60" to 78" Wide Worksurfaces or Reinforcing Bar for 84" Wide Worksurfaces	A15-50501 +XX	1 or 2	X80-63005 +XX
		#8 x 1" Pan Recex Head Wood Screw	402102	14	
B		Grommet	CTGM	As per Order	
C		Power/Data Center	CLMP	As per Order	

Not Included

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.	Kit No. / Assy. No.
D		C-Leg or T-Leg	As per Order	N/A	
E		Intermediate Leg	As per Order	N/A	
F		#1/4 - 20 x 5/8" Cross/Square Comb. Round Head M. Screw	E01-50403	N/A	
G		Post Leg	As per Order	N/A	

Application



TOOLS REQUIRED: Cross Drive #2 and #3 or Square Drive #2 and #3

Reference Installation Guides:

- No. 1187 Tables & Collaborative Spaces "Legs CTCL, CTTL, CTST"
- No. 1190 Tables & Collaborative Spaces "Lateral Screens CTLSF, CTLST, CTLSM"
- No. 1191 Tables & Collaborative Spaces "Table Screens CTDSF, CTDST, CTDSM"
- No. 1192 Tables & Collaborative Spaces "Modesty Panels CTLM, CTMM"
- No. 1197 Tables & Collaborative Spaces "Electrical Tray CTET"
- No. 1200 Tables & Collaborative Spaces "Post Leg CTPL"
- No. 1201 Tables & Collaborative Spaces "Quick Release Linking System CAQR"
- No. 1297 Expansion Desking, Casegoods, Tables & Collaborative Spaces "Power/Data Center CLMP"


For additional information on this installation contact Teknion I Roy & Breton **Technical Support**.

Issue Date: 2014 January 27

WORKSURFACE INSTALLATION – BASE LEG OPTION


FOR CTRT, CTCK, CTTA, CTHM, CTMZ, CTCH AND CTQM ONLY

1

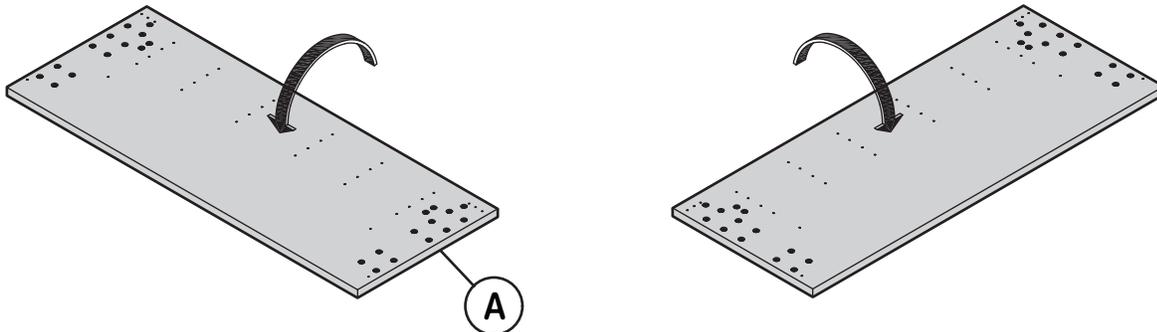



NOTE: If applicable, for reinforcing bar installation, refer to the installation guide L04-63009.

2

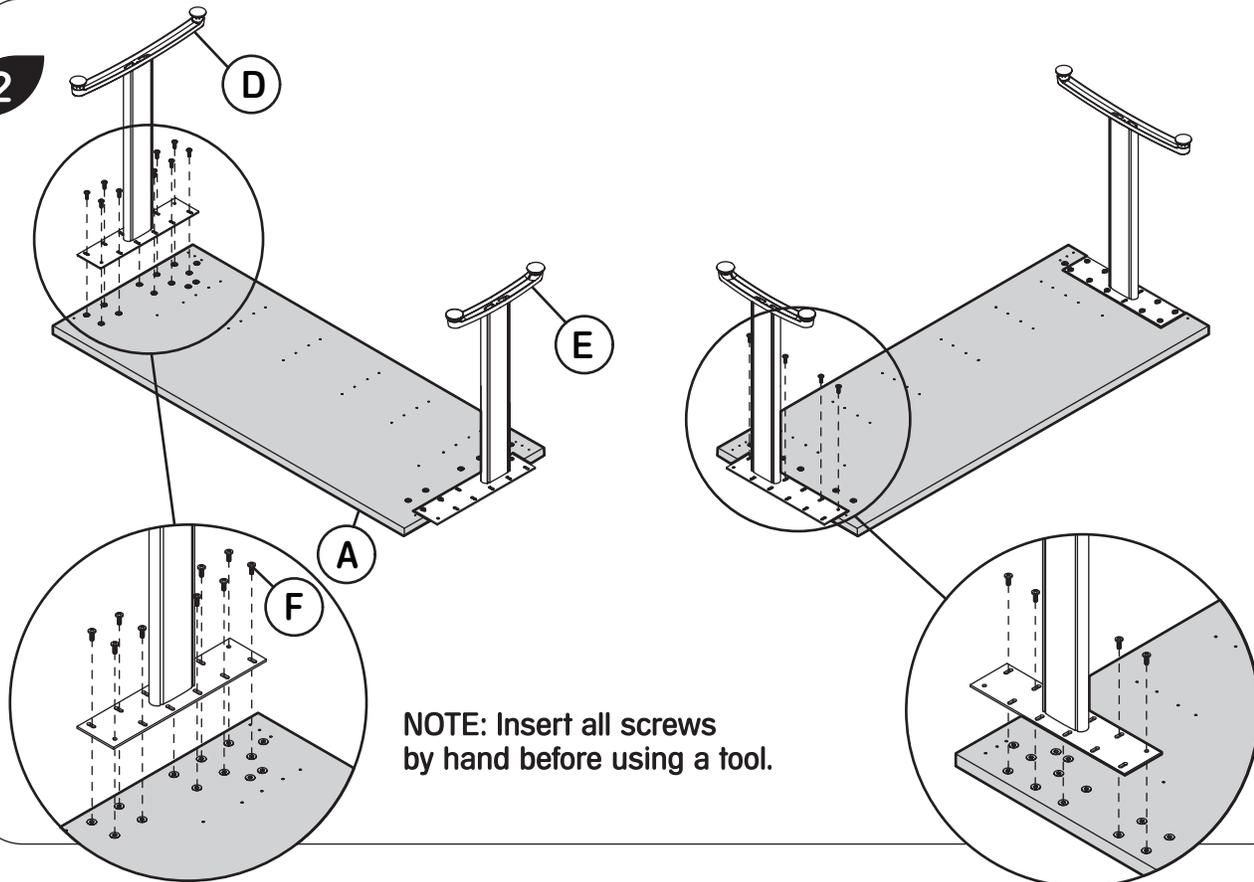

NOTE: Insert all screws by hand before using a tool.


Worksurfaces

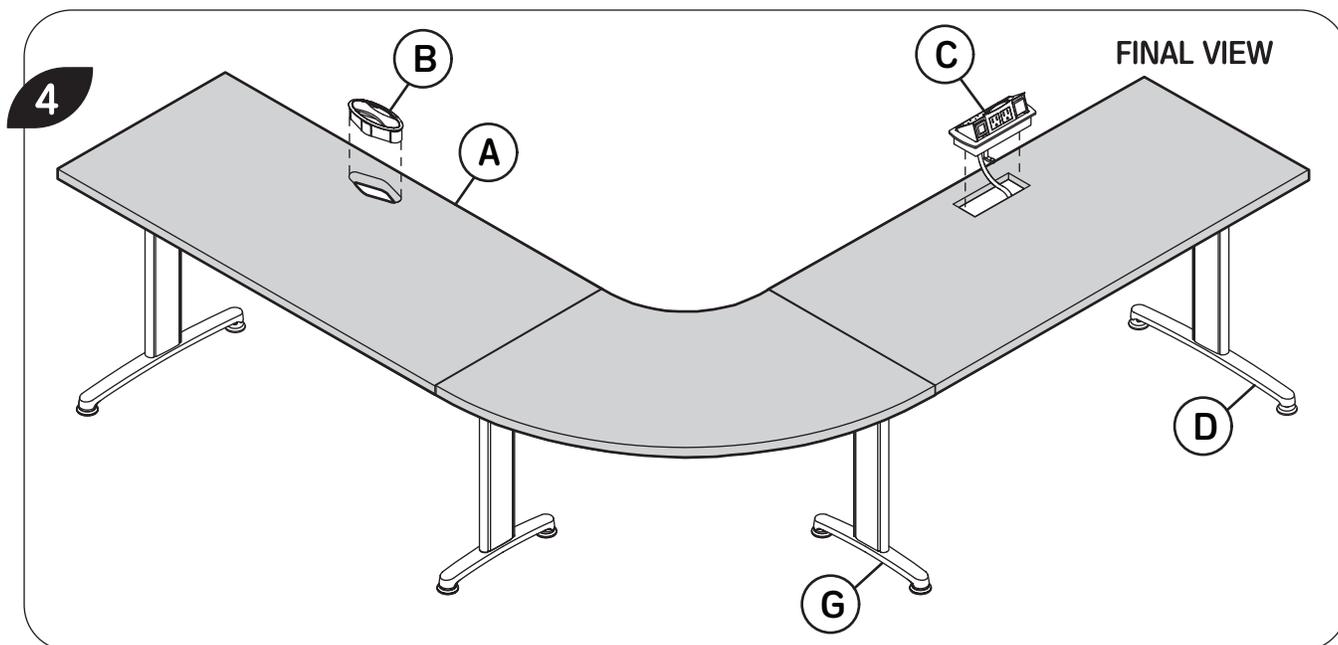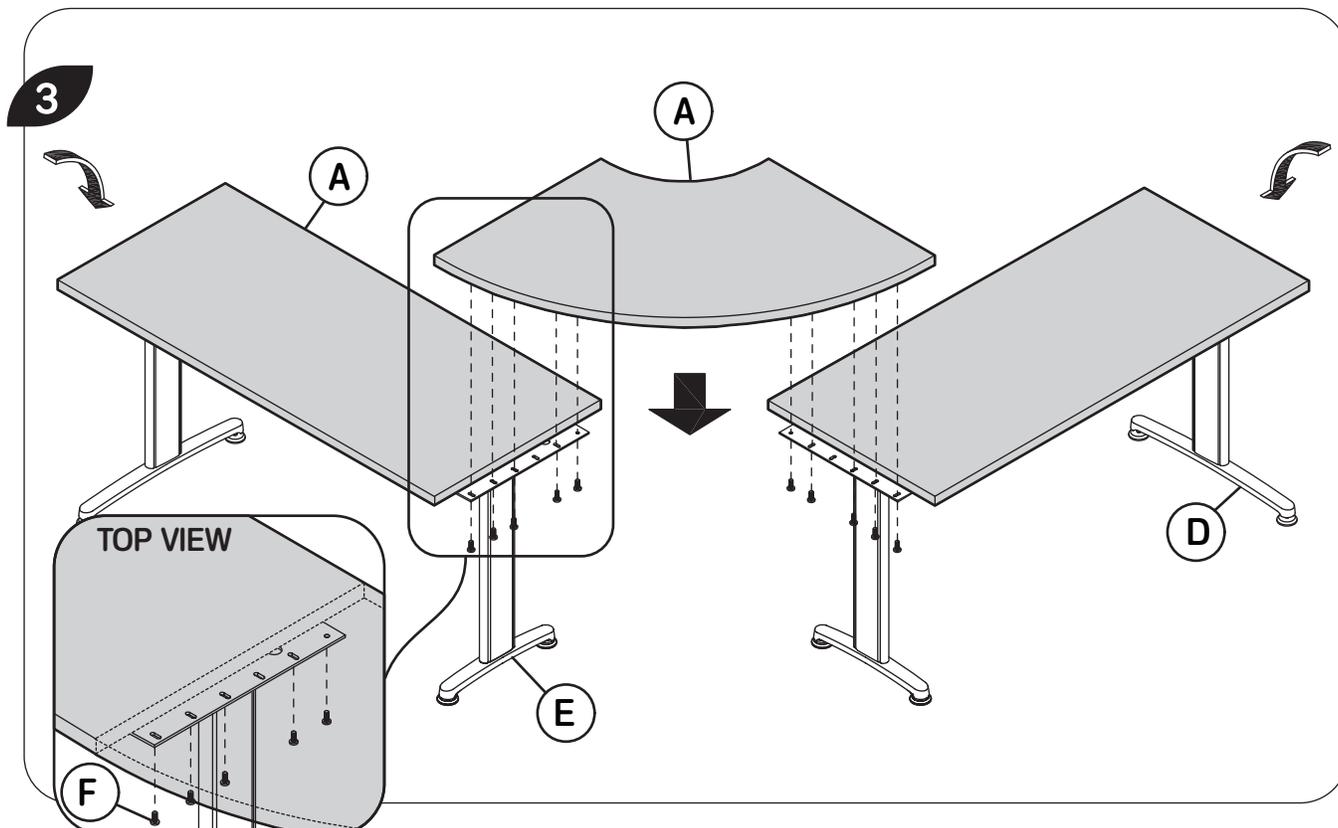

WORKSURFACE INSTALLATION – POST LEG OPTION


FOR ALL WORKSURFACES

1

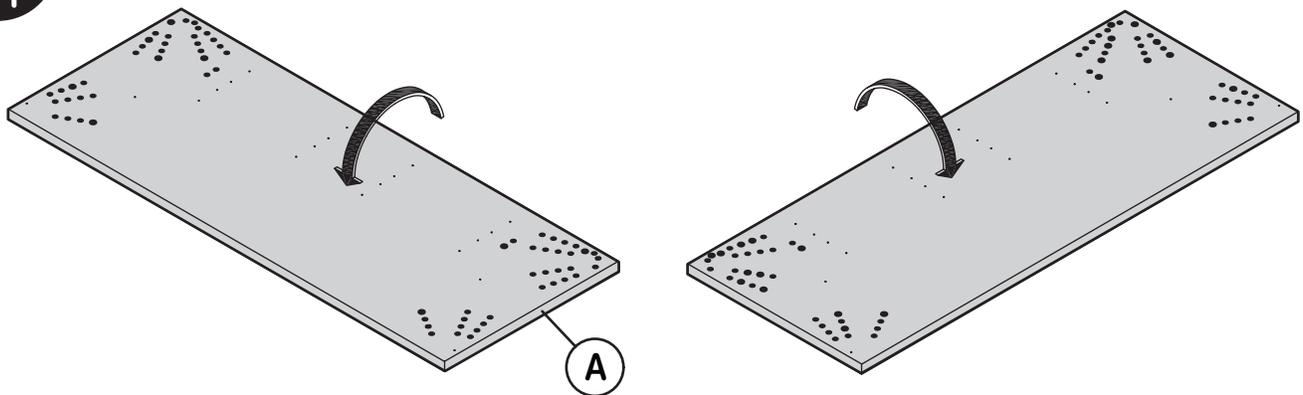



NOTE: If applicable, for reinforcing bar installation, refer to the installation guide L04-63009.

2

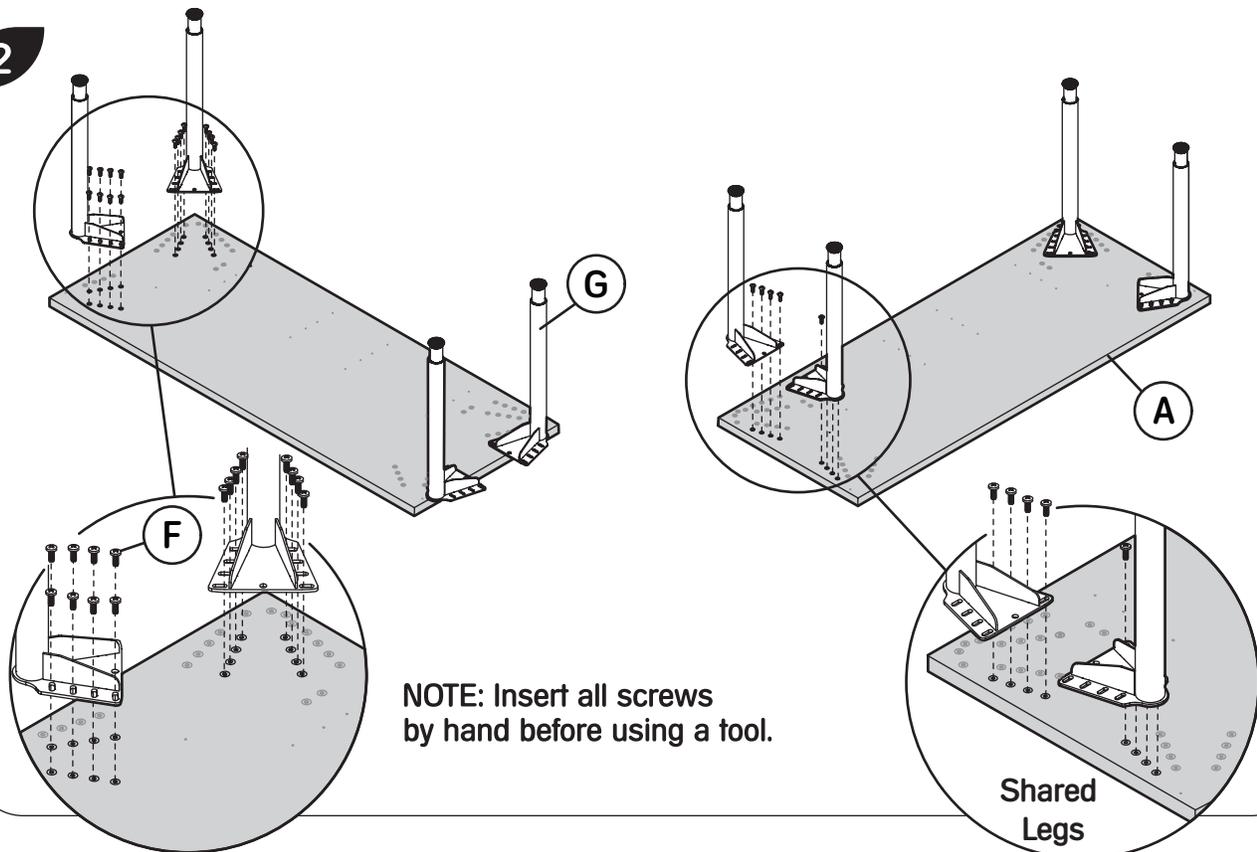

NOTE: Insert all screws by hand before using a tool.


Worksurfaces

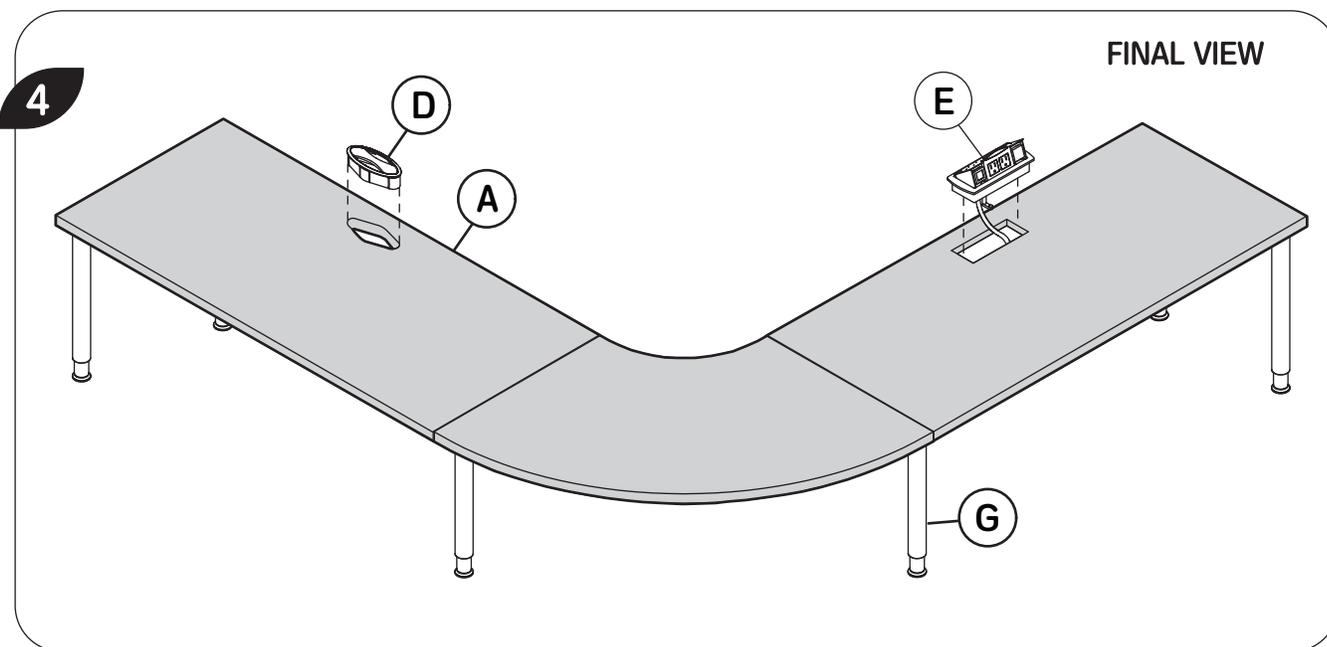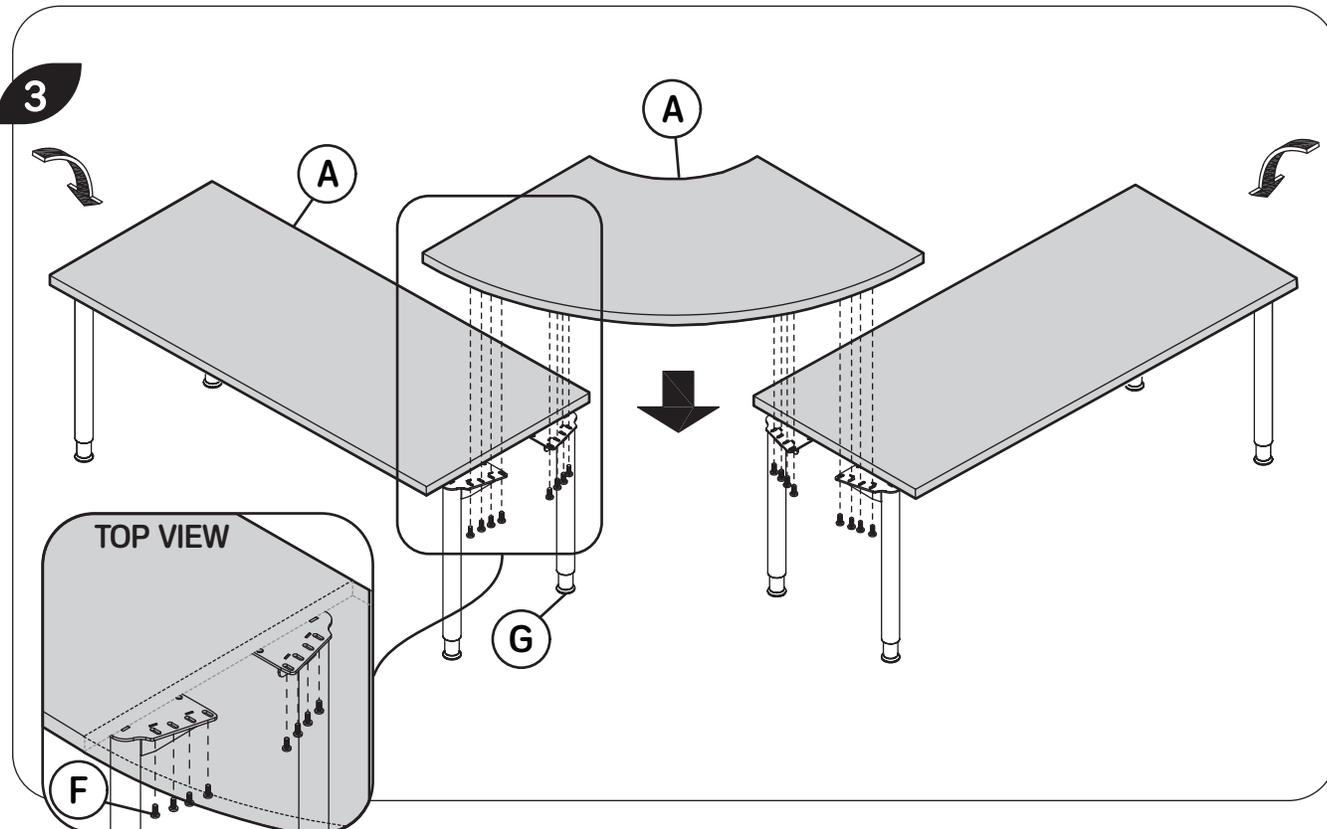

Section – **Worksurface Supports**

CTCL – C-Leg
 CTTL – T-Leg
 CTST – Intermediate Leg

Product

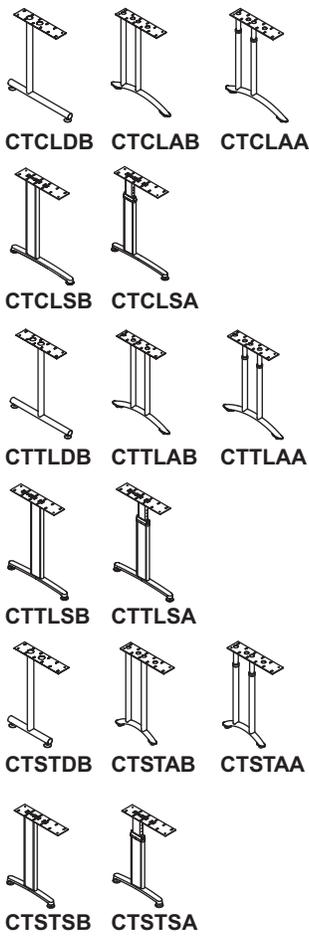

Legs - Part / Product Identification and What's Included

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.	Kit No. / Assy. No.
A		Legs	As per Order	1	
B	OR		E01-50403	4	2x (18" d) or 3x (24" d) X80-61011 (except CTCLAA, CTTLAA, CTSTAA)
			E01-50403	10	X80-61015 (Only for CTCLAA, CTTLAA, CTSTAA)
C		1/4" –20 x 5/8" Button Head Hex Socket Cap Screw, Black (Included with Legs)	E01-50658	1	

Part / Product Identification and NOT Included

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.	Kit No. / Assy. No.
D		Worksurface	As per Order	N/A	

TOOLS REQUIRED:

Cross or Square Drive #3,
 3/32" and 5/32" Hexagonal
 Socket Keys


Reference Installation Guides:
 No. 1186 Tables & Coll. Spaces – Training " Worksurfaces CTRT, CTCK, CTTA, CTHM, CTMZ, CTCH, CTQM "
 No. 1188 Tables & Coll. Spaces – Training " CPU Holder CTLP "
 No. 1189 Tables & Coll. Spaces – Training " Vertical Leg Cover CTVL "
 No. 1198 Tables & Coll. Spaces – Training " Vertical Wire Management Cover CTWC "

Section – **Worksurface Supports**

CTCL – C-Leg
 CTTL – T-Leg
 CTST – Intermediate Leg


No. **1187**

HEIGHT ADJUSTMENT

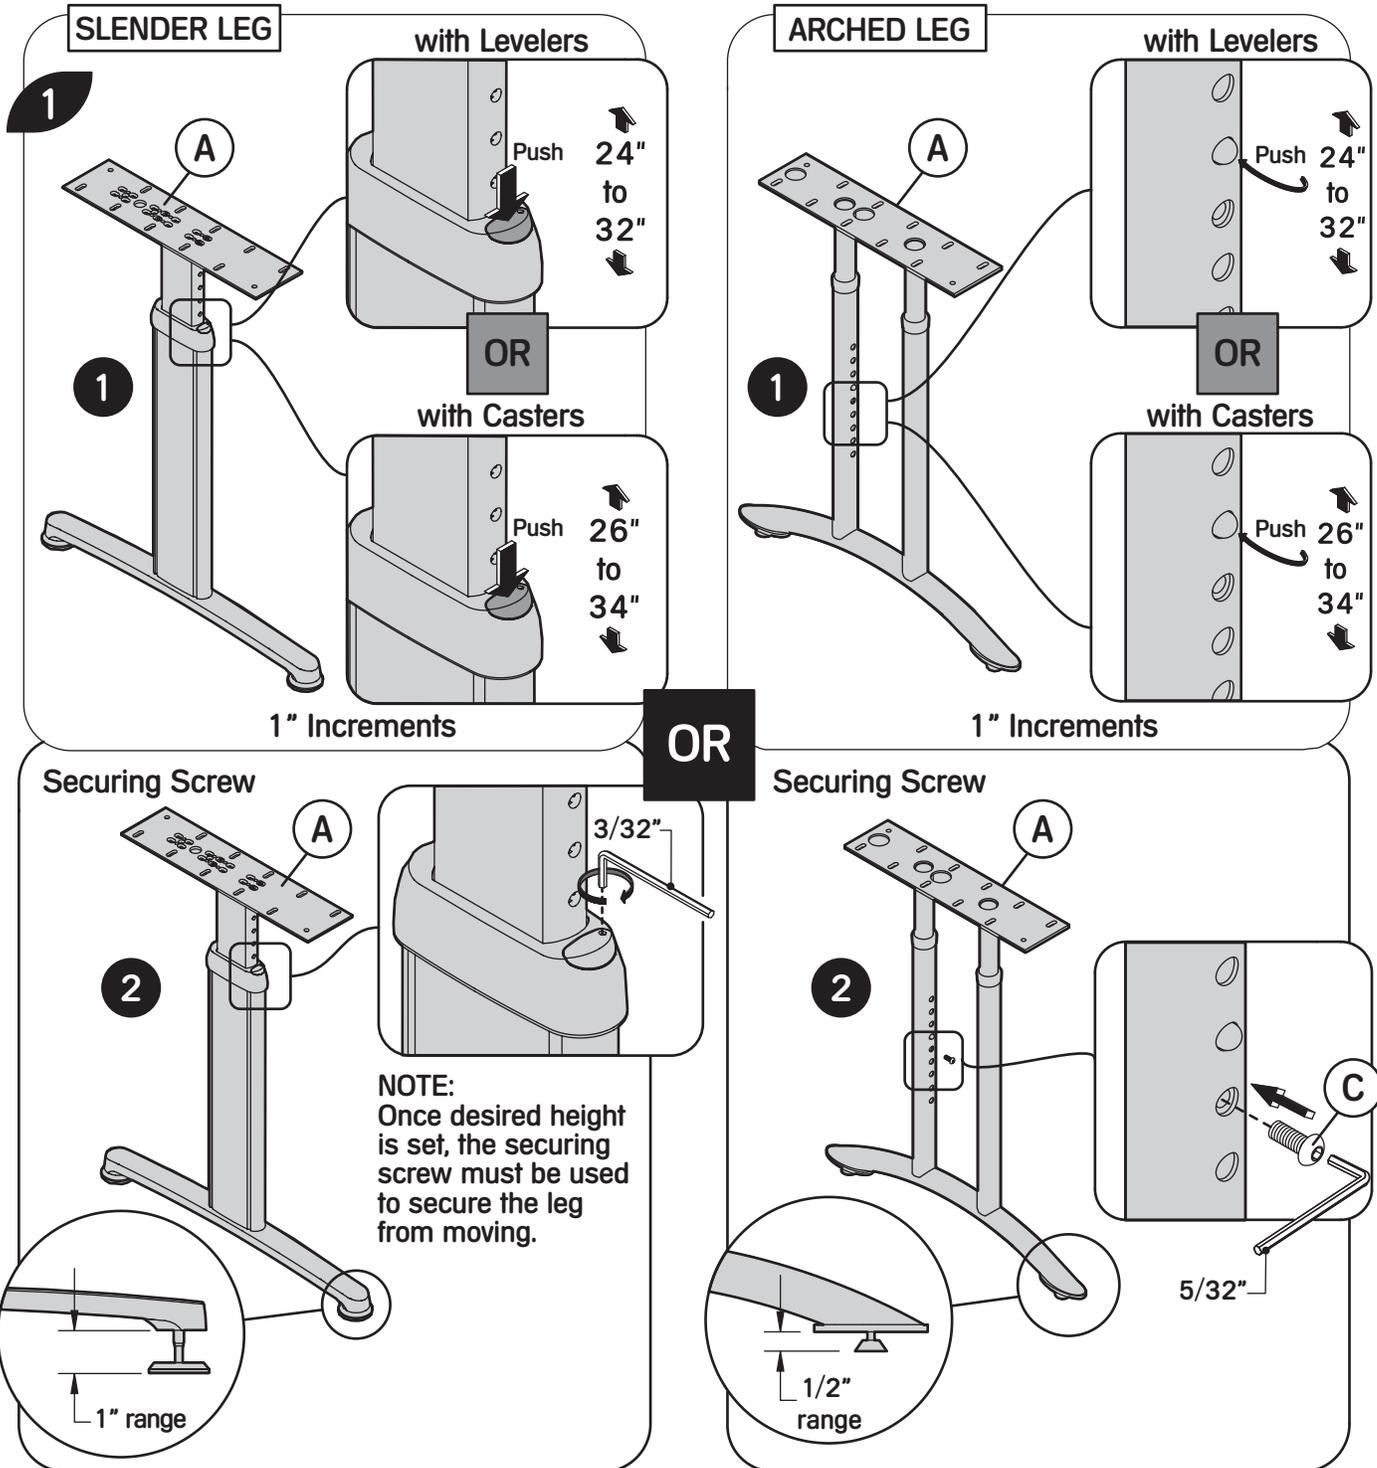


Section – **Worksurface Supports**



CTCL – C-Leg
 CTTL – T-Leg
 CTST – Intermediate Leg

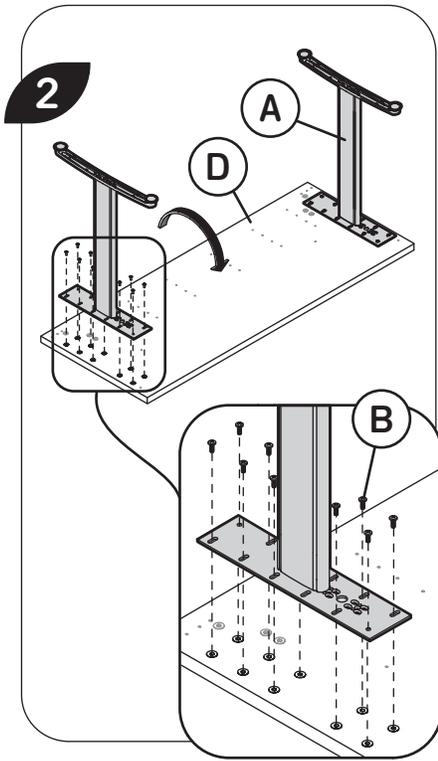


LEG POSITION FOR 18" DEEP WORKSURFACE

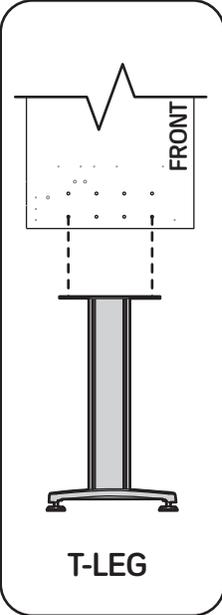


LEG POSITION FOR 24" DEEP WORKSURFACE

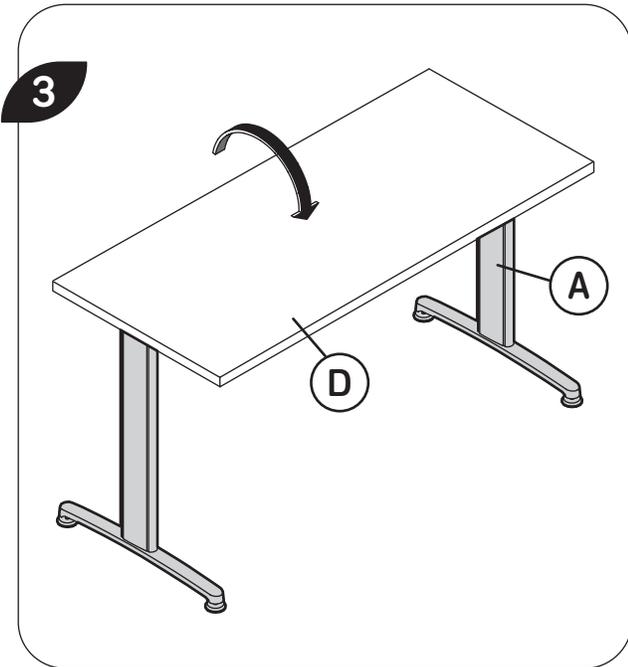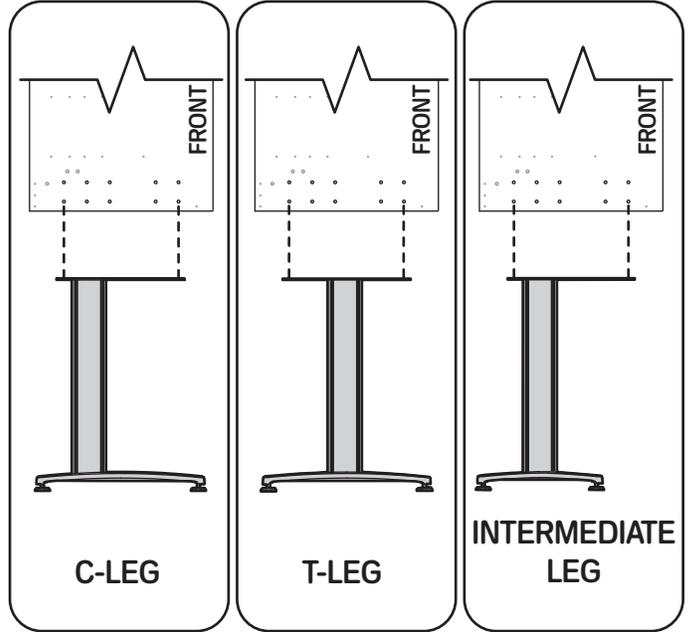

LEG POSITION FOR 30" DEEP WORKSURFACE

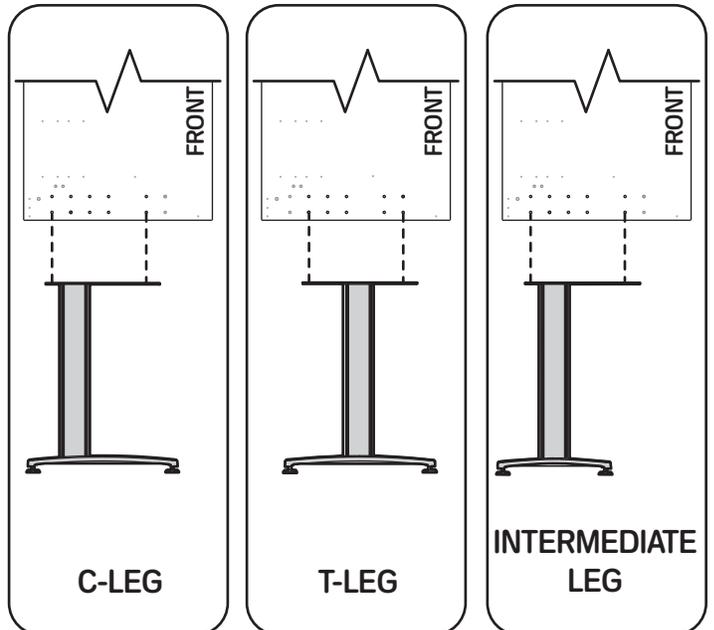

Product

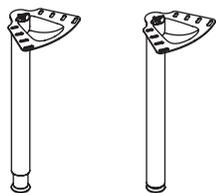

CTPLA

CTPLB



TOOLS REQUIRED:

Cross Drive #3 or Square Drive #3


POST LEG - Part / Product Identification and What's Included

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.	Kit No. / Assy. No.
A		Post Leg	As per Order	1	
B		1/4" – 20 x 5/8" Quadrex Pan Head, M. Screw, Black	E01-50403	4	2x X80-61011



POST LEG INSTALLATION

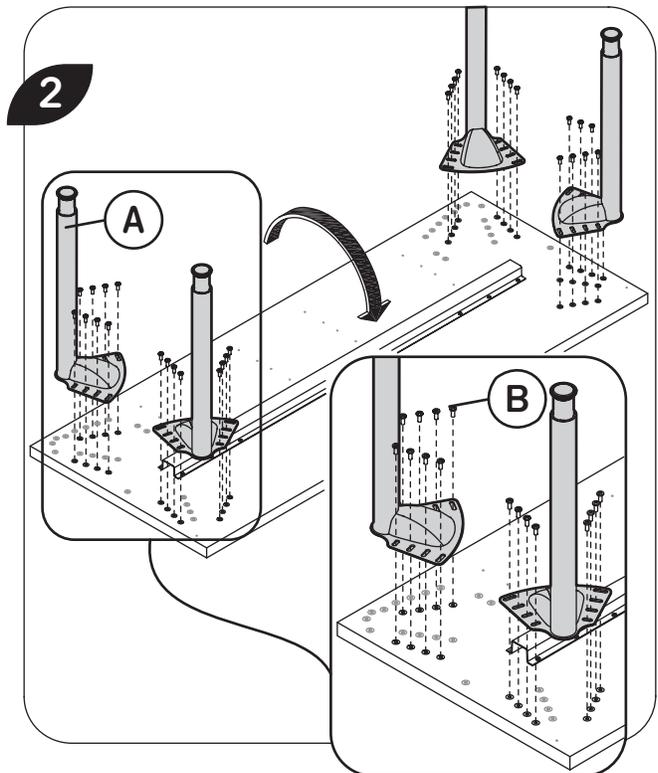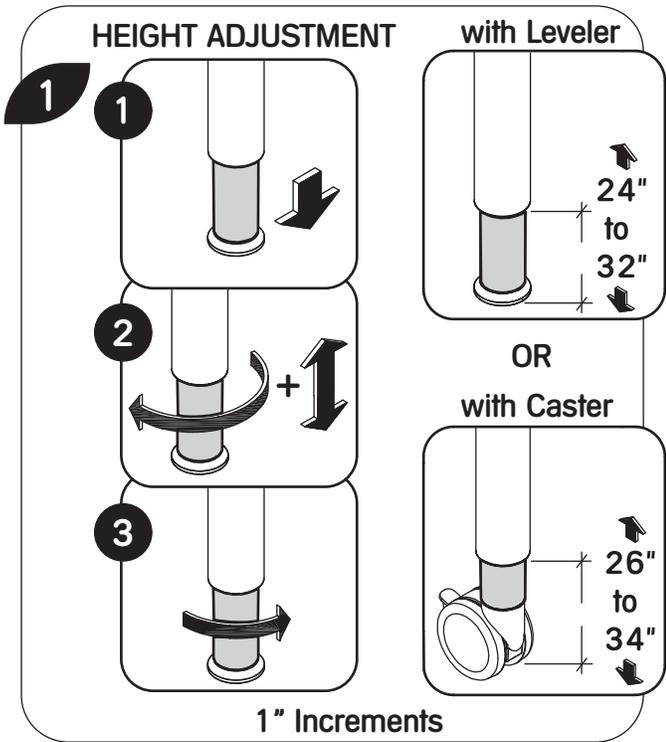


STANDARD POSITION

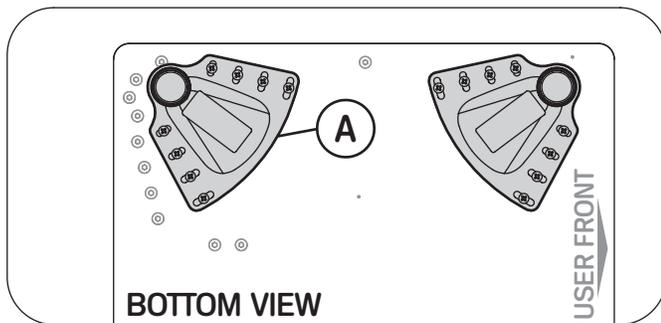




SHARED POSITION

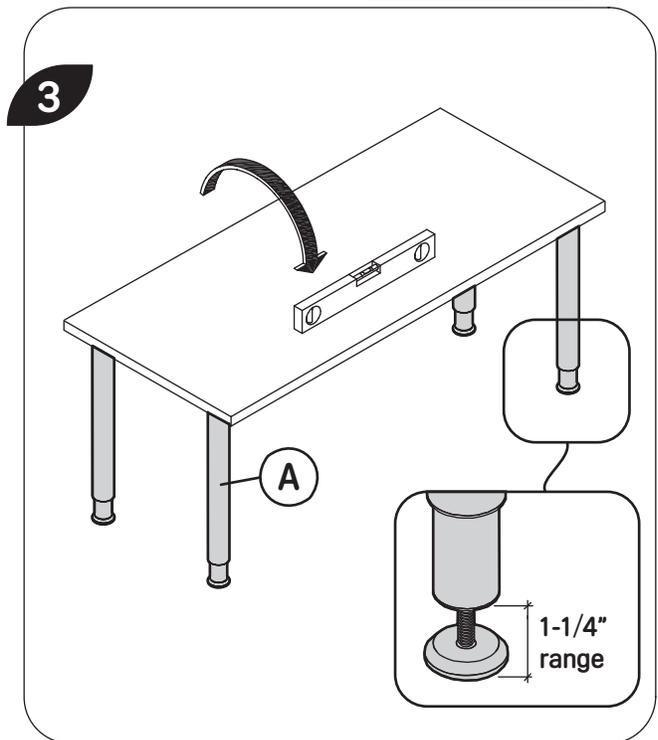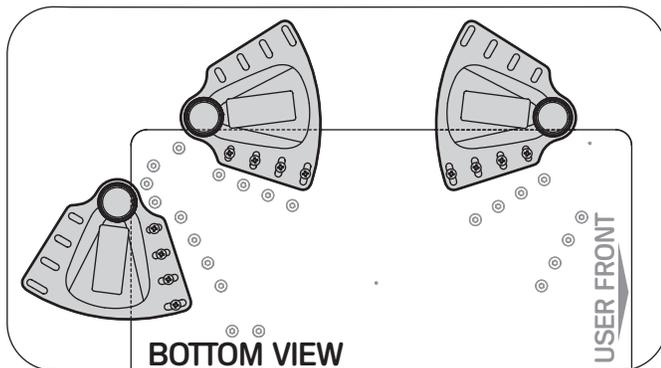

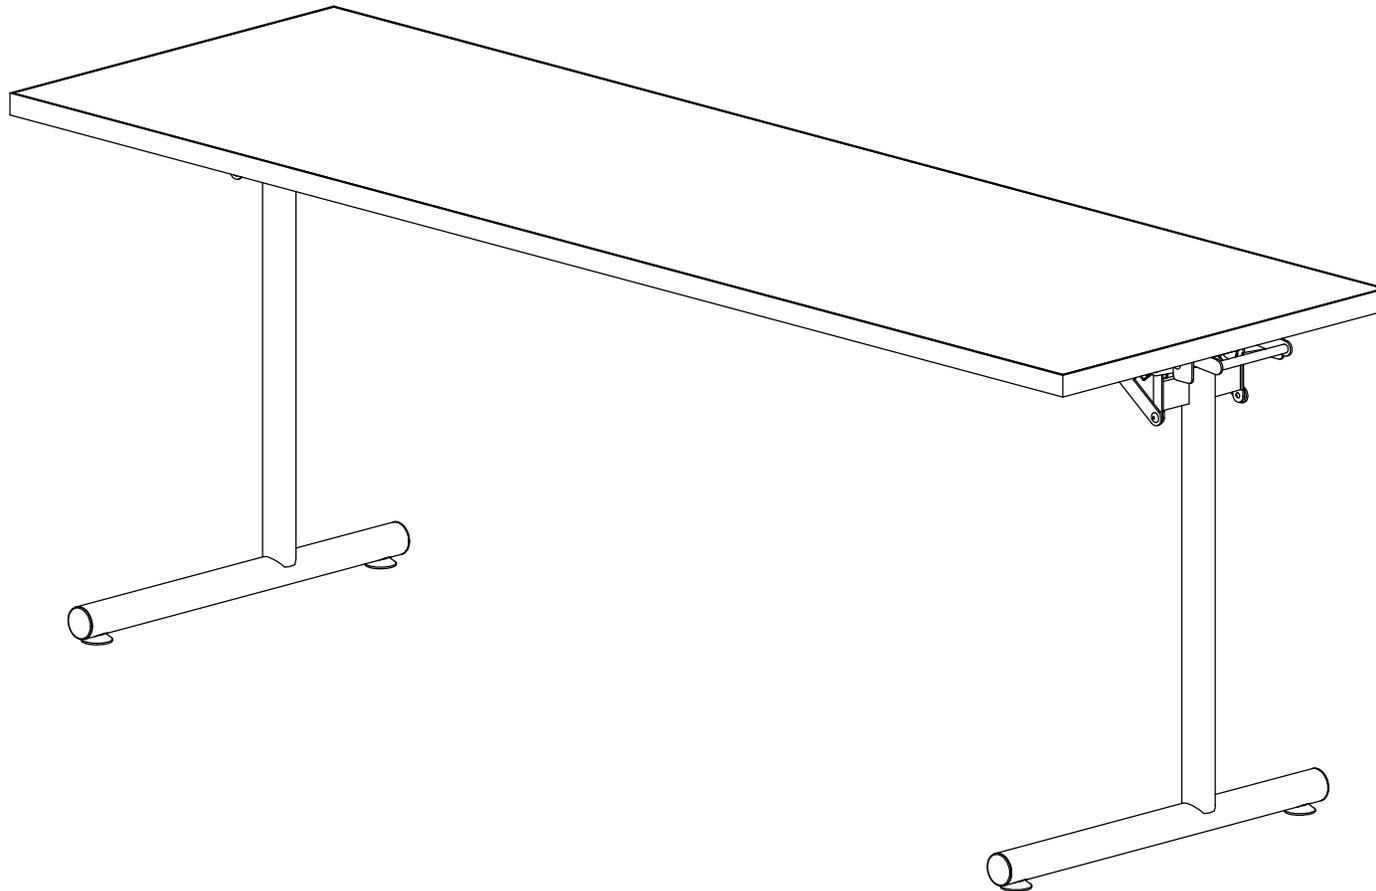



CTLF, CTFL - Lightweight Rectangular Folding Table, Rectangular Folding Table

1

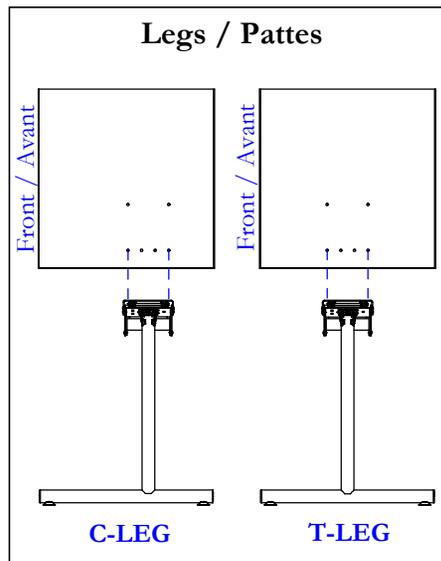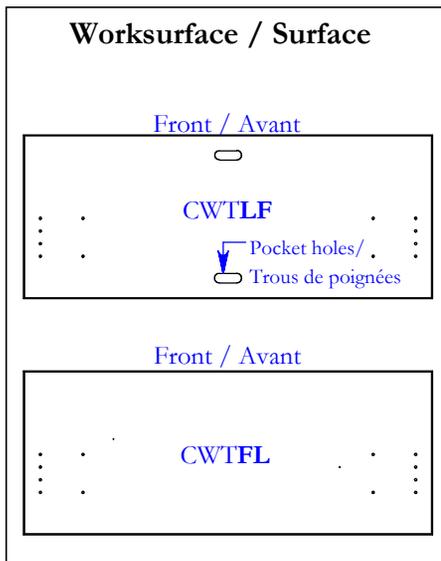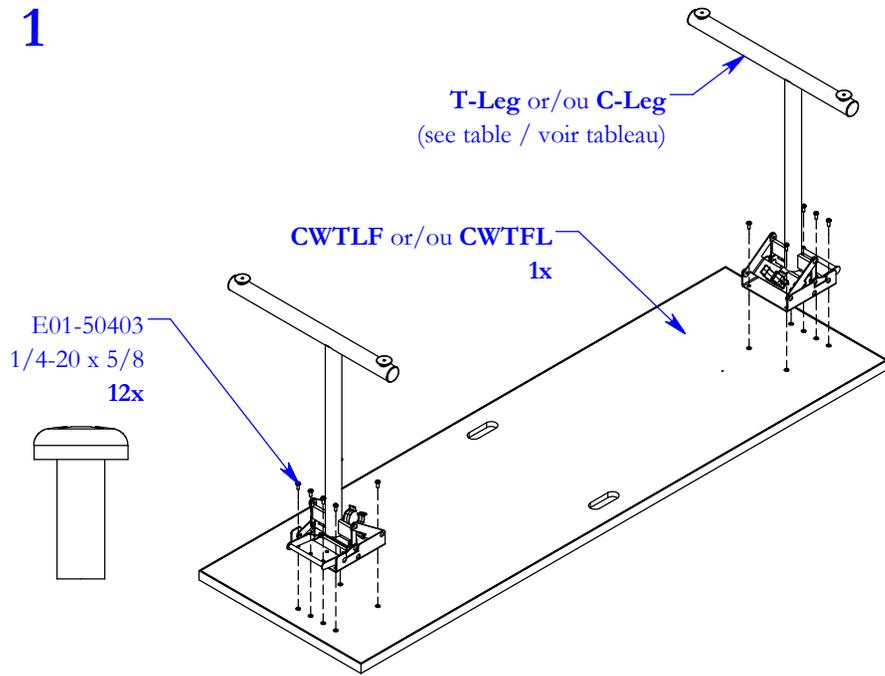


		Depth / Profondeur	
		18" worksurface / surface 18"	24" worksurface / surface 24" or/ou 30"
T-LEG		2 levelers / niveleurs	2x N80-63383+29
		2 casters / roulettes	1x N80-63394+29L 1x N80-63394+29R
		2 levelers / niveleurs	2x N80-63390+29
		1 leveler / niveleur 1 caster / roulette	1x N80-63393+29L 1x N80-63393+29R
		2 casters / roulettes	1x N80-63397+29L 1x N80-63397+29R
		2 levelers / niveleurs	2x N80-63387+29
2 casters / roulettes		1x N80-63400+29L 1x N80-63400+29R	
C-LEG		2 levelers / niveleurs	1x N80-63385+29L 1x N80-63385+29R
		2 casters / roulettes	1x N80-63396+29L 1x N80-63396+29R
		2 levelers / niveleurs	1x N80-63389+29L 1x N80-63389+29R
		1 leveler / 1 niveleur 1 caster / roulette	1x N80-63392+29L 1x N80-63392+29R
		2 casters / roulettes	1x N80-63399+29L 1x N80-63399+29R
		2 levelers / niveleurs	1x N80-63386+29L 1x N80-63386+29R
		2 casters / roulettes	1x N80-63402+29L 1x N80-63402+29R

2a

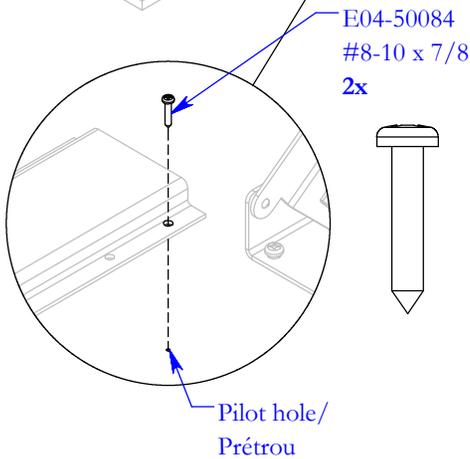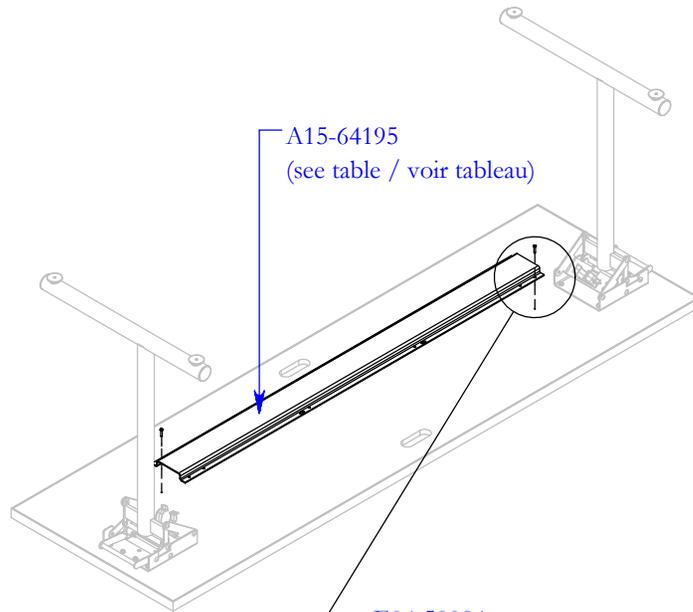


2b

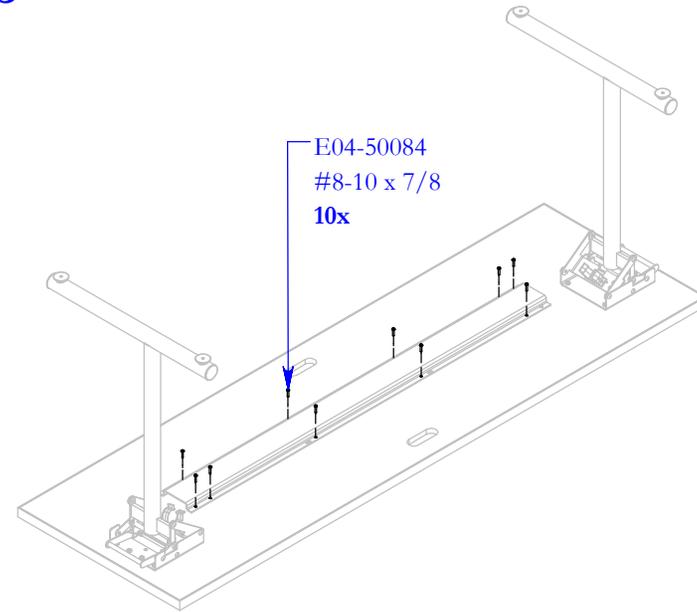


Reinforcing Bar Quantity / Quantité de renforts	
	CTFL

3 CTLF only / seulement

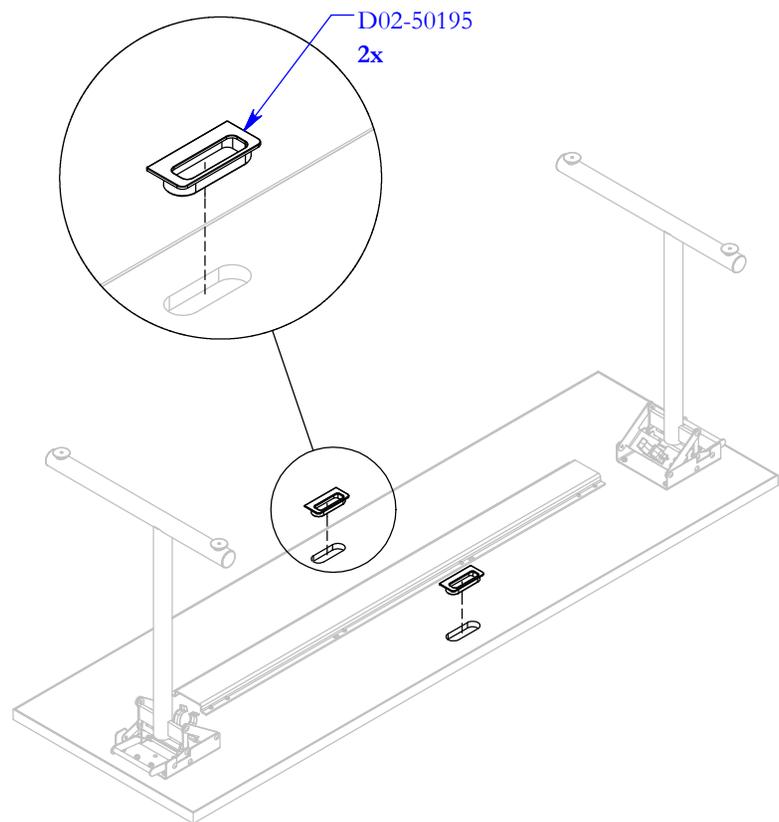

4

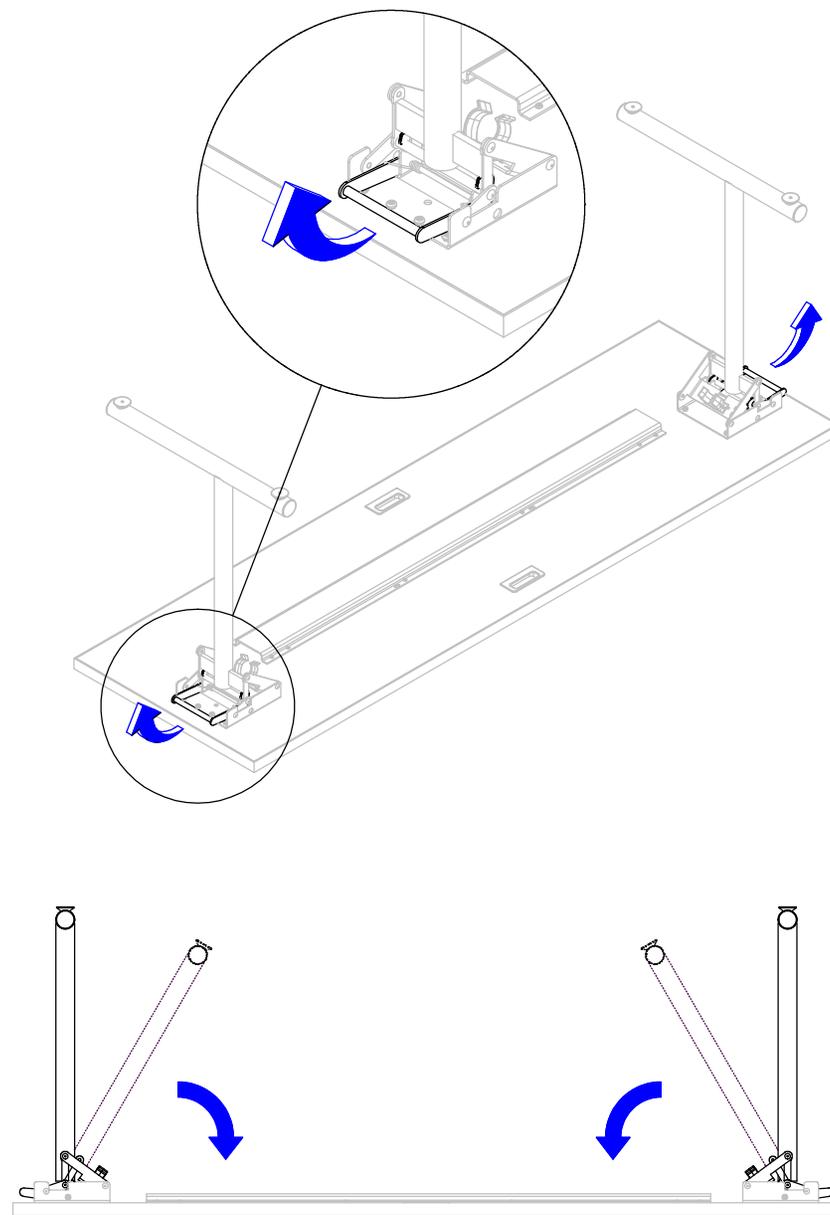

Section – **Tables**

CTFT – Rectangular Flip-Top Tables

No. **1195**

Product



CTFT

TOOLS REQUIRED:
Cross or Square Drive #2 and #3

CTFT - Part / Product Identification and What's Included

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.	Kit No. / Assy. No.
A		Rectangular Flip-Top Worksurface	CWTFTC_	1	
B		Activation Handle	A23-63035 +XX	1	
C		Left Handle Support	N80-63435L	1	X80-63058 +XX
		Right Handle Support	N80-63435R	1	
D		1/4" – 20 x 1" Quadrex Flat Head, M. Screw, Zinc	E01-0008	4	
E		1/4" – 20 x 5/8" 23 Zinc Quadrex Flat Head, Self-Tapping Screw	E04-50066	4	
F		Bumper	501104	1	
G		Standard C-Leg with Casters (Screws (E01-50412) are included)	N80-63439	2	X80-63053
		Standard T-Leg with Casters (Screws (E01-50412) are included)	N80-63446	2	X80-63056
		Arched C-Leg with Casters (Screws (E01-50412) are included)	N80-63441	2	X80-63054
		Slender C-Leg with Casters (Screws (E01-50412) are included)	N80-63443	2	X80-63055
		Slender T-Leg with Casters (Screws (E01-50412) are included)	N80-63448	2	X80-63057
H		1/4" – 20 x 1 1/2" Quadrex Pan Head, M. Screw, Zinc	E01-50412	16	
I		Reinforcing Bar (for 60" to 78" w. worksurfaces) or Reinforcing Bar (for 84" w. worksurface)	A15-50501 +XX	1 or 2	
J		#8 – 10 x 0.875 Quadrex Pan Head, Wood Screw	E04-50084	14 (60" to 78" w) or 28 (84" w)	
K		Flip-Top Worksurface Sticker	L07-63001	1	

Reference Installation Guides:

- No. 1188 Tables & Collaborative Spaces – Training “ CPU Holder CTLP “
- No. 1189 Tables & Collaborative Spaces – Training “ Vertical Leg Cover CTVL “
- No. 1198 Tables & Collaborative Spaces – Training “ Vertical Wire Management Cover CTWC “
- No. 1204 Tables & Collaborative Spaces – Training “ Modesty Panels for Flip-Top Table CTLMF, CTMMF “
- No. 1297 Expansion Desking, Expansion Caseworks, Tables & Coll. Spaces – Training “ Power/Data Center RLDMP, BLMP “

For additional information on this installation contact Teknion | Roy & Breton **Technical Support**.

Issue Date: 2019 February 21




(L04-63116_R05)

Section – **Tables**





CTFT – Rectangular Flip-Top Tables

No. **1195**

RECTANGULAR FLIP-TOP TABLE INSTALLATION

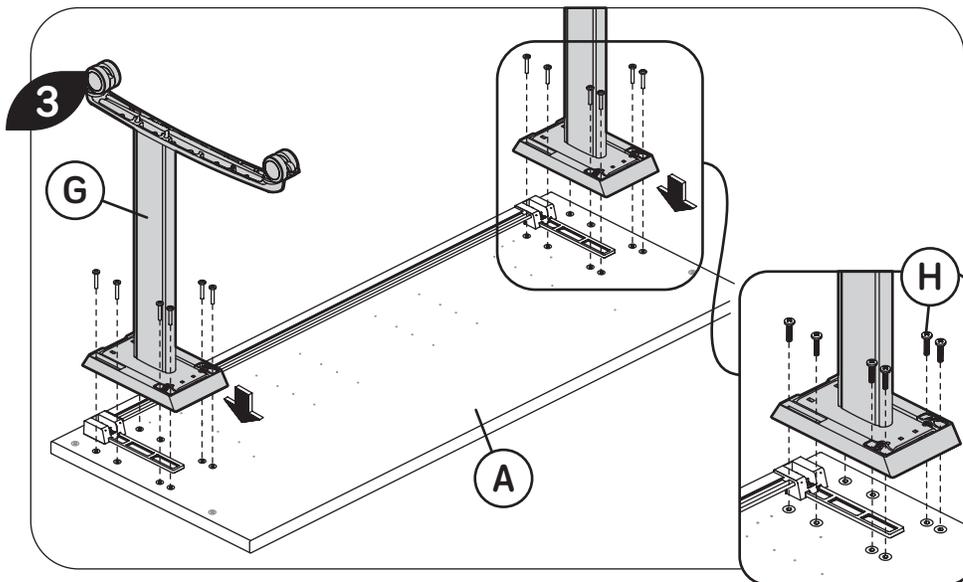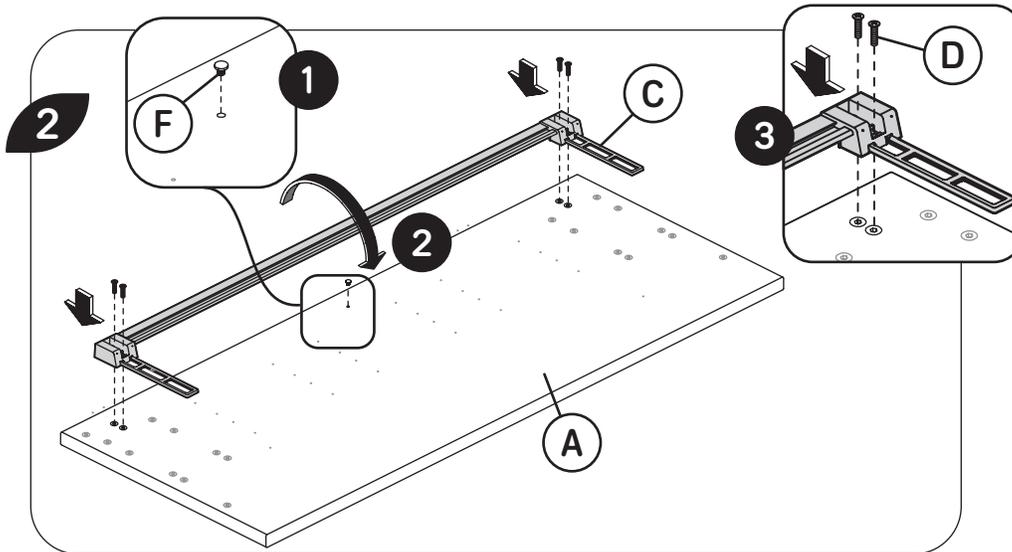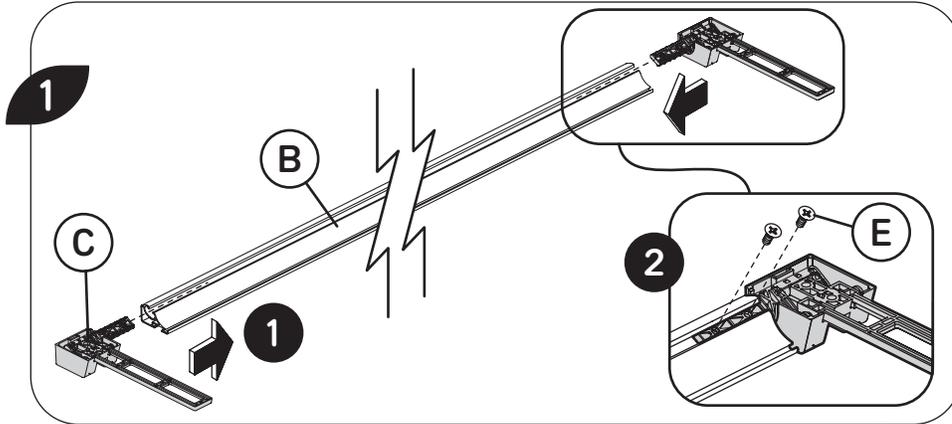

Leg and Handle Support Positions

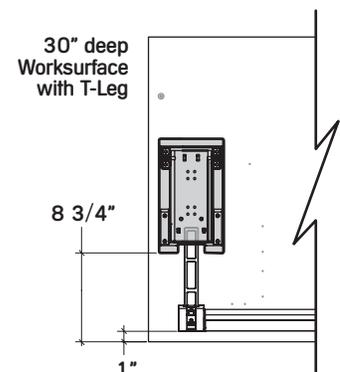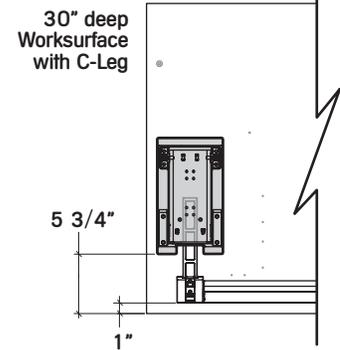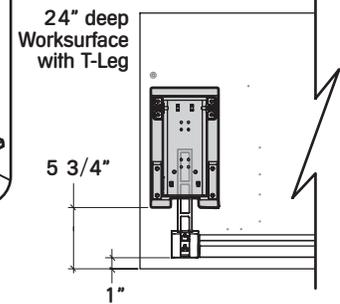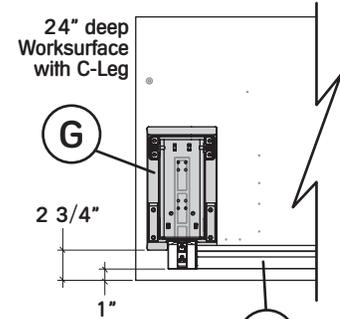

Section – Tables

CTHT – Rectangular Height-Adjustable Table

Product



CTHT

TOOLS REQUIRED:
Cross or Square Drive #1, #2 and #3, and 1/8" Hexagonal Key

CTHT - Part / Product Identification and What's Included

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.	Kit No. / Assy. No.
A		Rectangular Worksurface	CWTHT_	1	
B		M. Screws (E04-50403) are included with Legs		1 pr.	X80-63024
		Arched C-Leg with One Leveler/One Caster or Arched C-Leg with Two Levelers	N80-63303 L and R		
		Slender C-Leg with Two Levelers	N80-63301 L and R	1 pr.	X80-63025
C		Chain Cover	B11-63005 +XX	1	X80-63014 +XX
D		Chain	E03-63020 +XX	1	
E		1/4" - 20 x 1/2" Quadrex Flat Head Undercut Screw, Stainless Steel	E01-50778	2	X80-63013 (This kit is included with leg kits)
F		Clip for Handle	D05-63005	1	
G		#7 x 3/4" Square Flat Head Wood Screw, Zinc	400316	1	
H		Worksurface Grommet	D05-63001	2	
I		Handle	D05-63004	1	
J		Handle Axle	B02-50090	1	

Reference Installation Guides:


- No. 1188 Tables & Collaborative Spaces "CPU Holder CTLP"
- No. 1189 Tables & Collaborative Spaces "Vertical Leg Cover CTVL"
- No. 1192 Tables & Collaborative Spaces "Modesty Panels CTLM, CTMM"
- No. 1197 Tables & Collaborative Spaces "Electrical Tray CTET"
- No. 1198 Tables & Collaborative Spaces "Vertical Wire Management Cover CTWC"
- No. 1297 Expansion Desking, Casegoods, Tables & Collaborative Spaces "Power and /Data Center RLDMP, BLMP"

For additional information on this installation contact Teknion | Roy & Breton **Technical Support**.



Issue Date: 2015 March 17

(L04-63107_R04)

CTHT - Part / Product Identification and What's Included




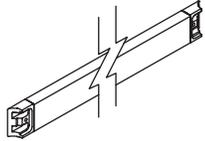
Ref.	Illustration	Description	Part No. / Prod. Code	Qty.
K		Reinforcing Bar for Arched Legs	N80-63299 +XX	1
		Reinforcing Bar for Slender Legs	N80-63300 +XX	
L		Reinforcing Bar	A15-50501 +XX	1 (60" to 78" w) or 2 (84" w)
M		#8 – 10 x 0.875 Quadrex Pan Head Wood Screw	E04-50084	14 (60" to 78" w) or 28 (84" w)

RECTANGULAR HEIGHT-ADJUSTABLE TABLE INSTALLATION

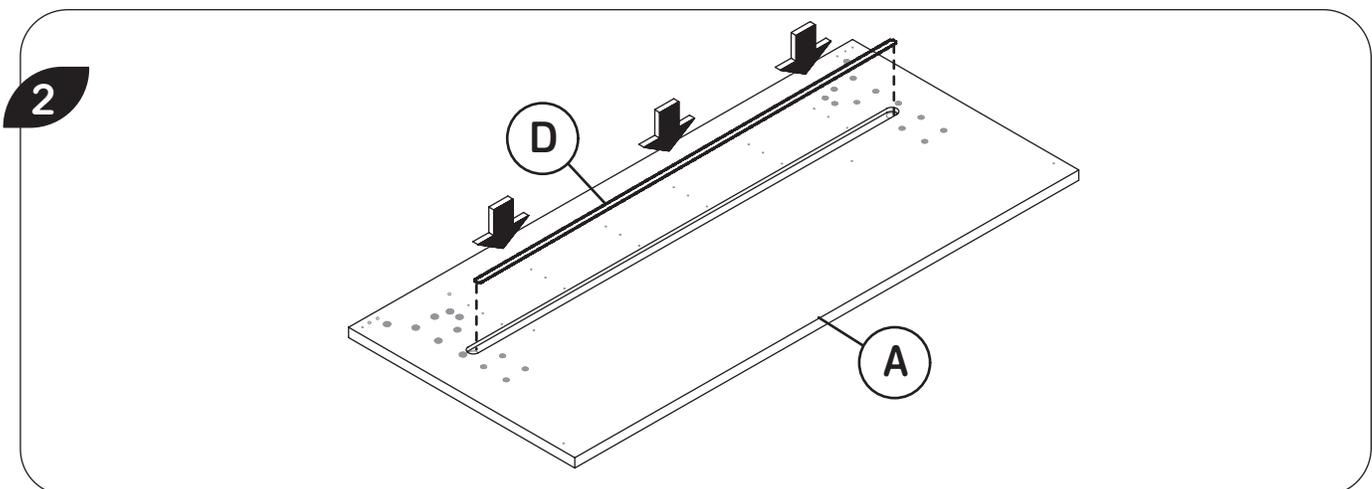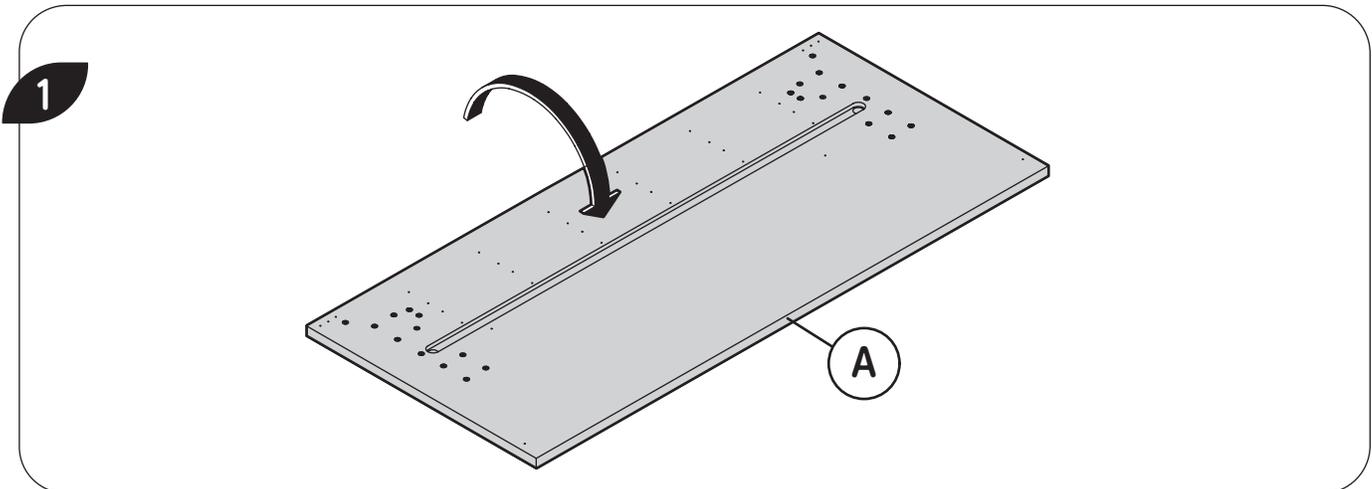

Section – Tables




CTHT – Rectangular Height Adjustable Table

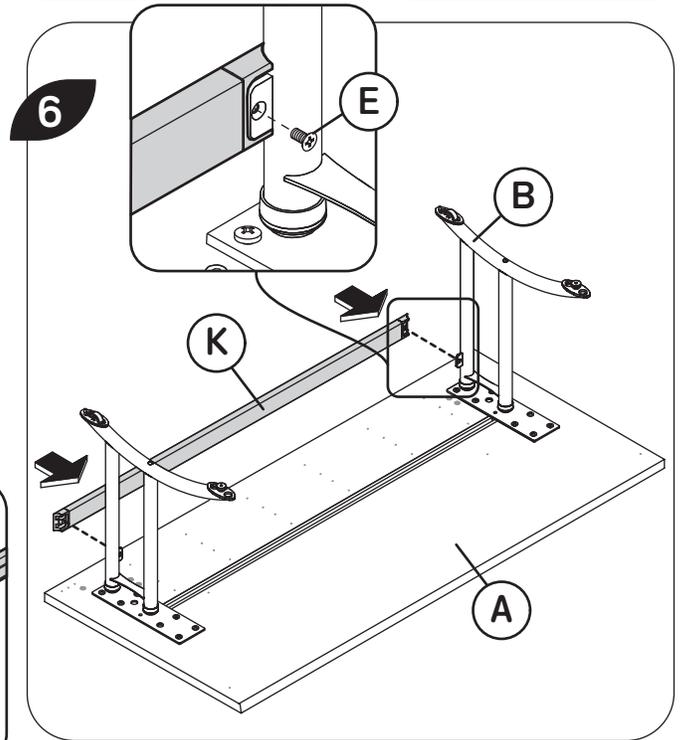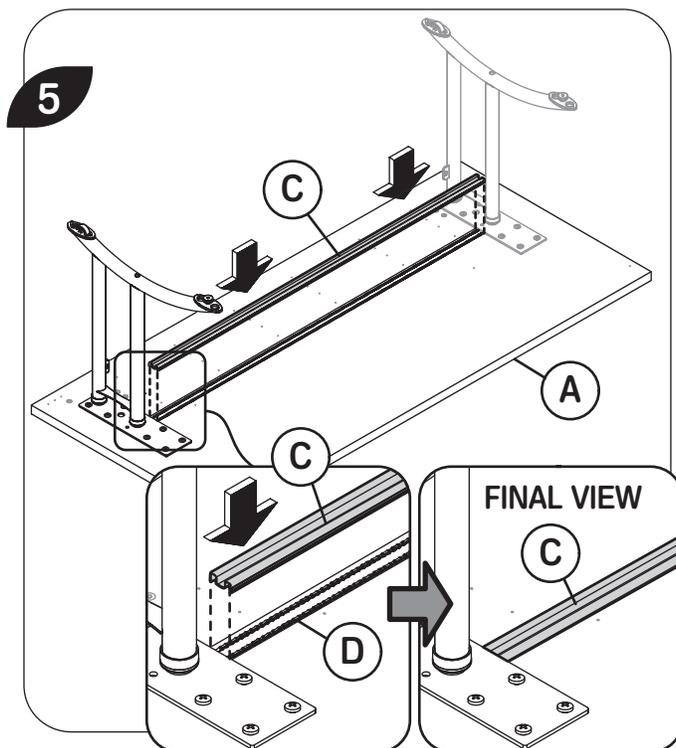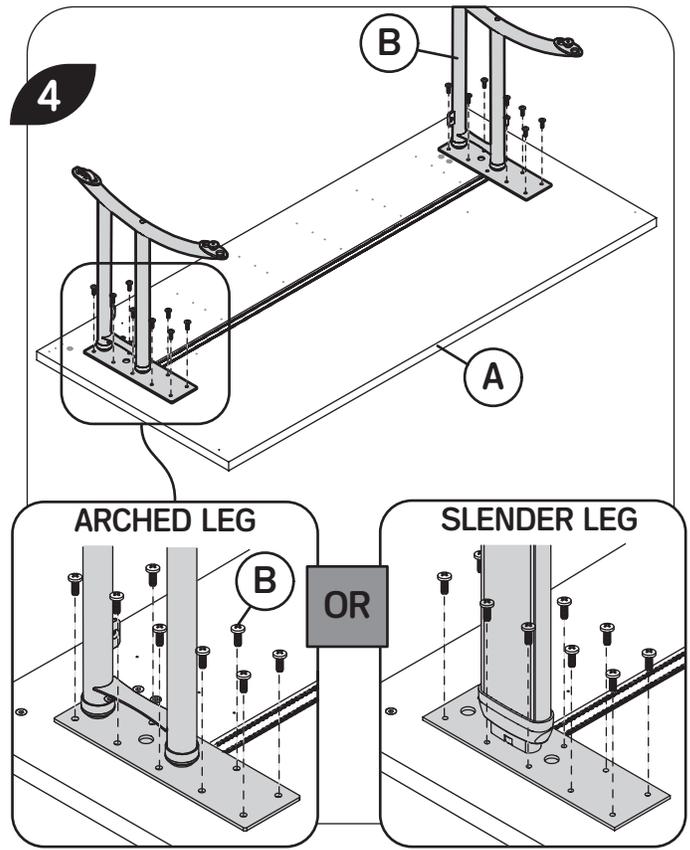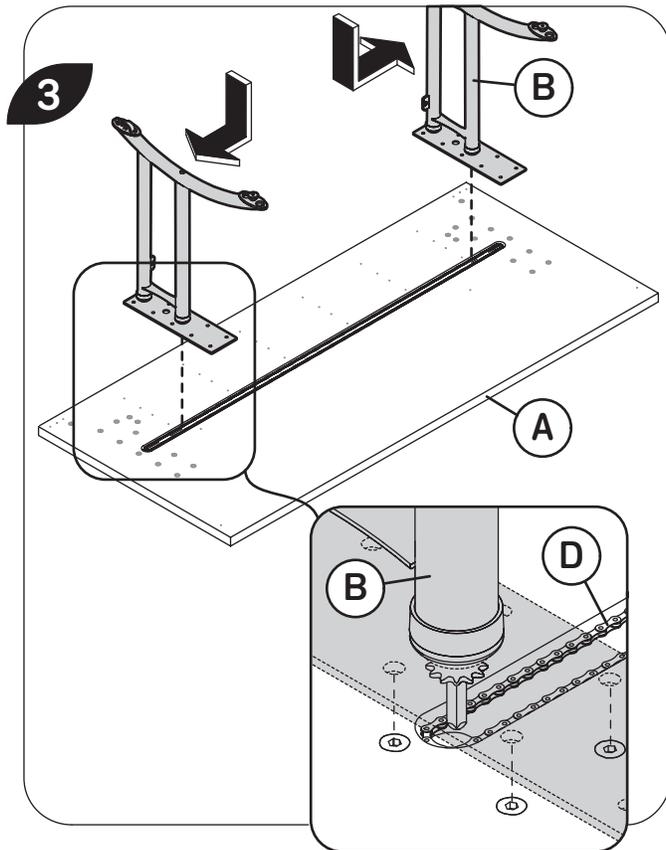

Section – Tables

CTHT – Rectangular Height Adjustable Table

No. 1196

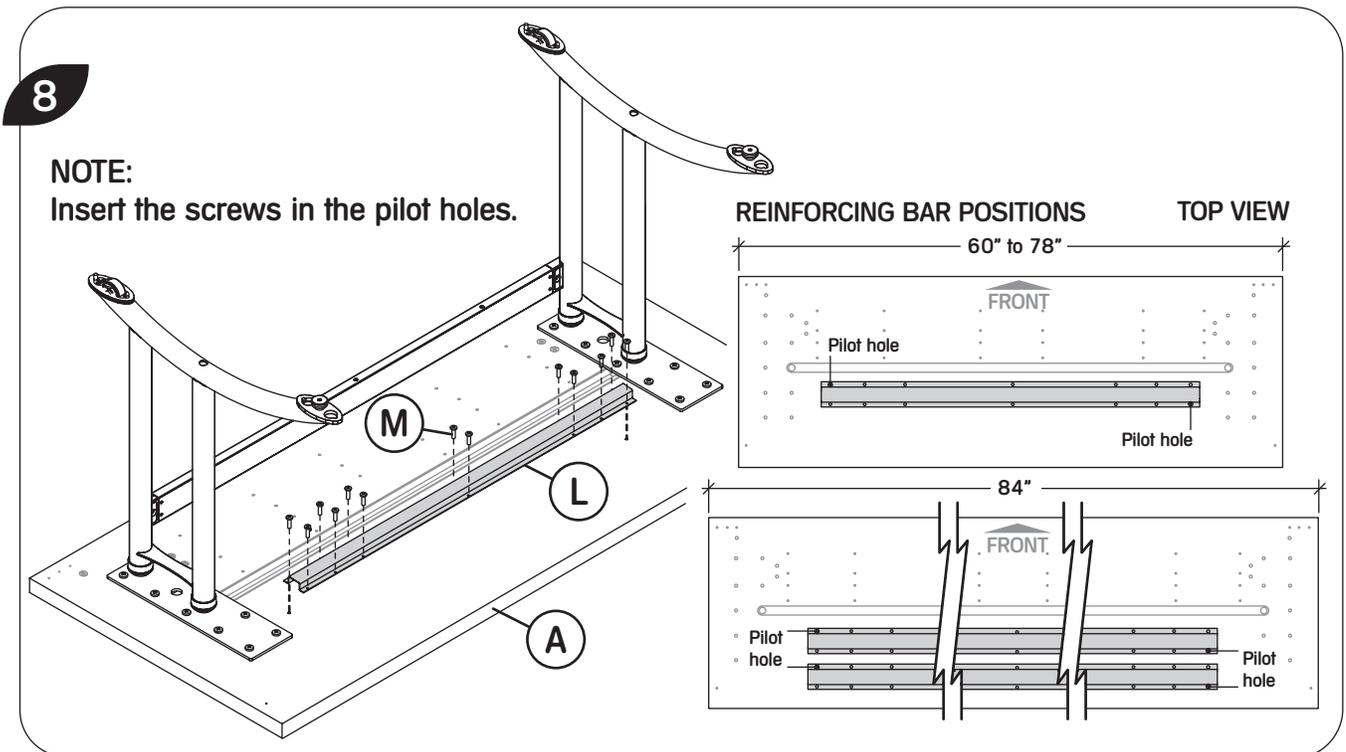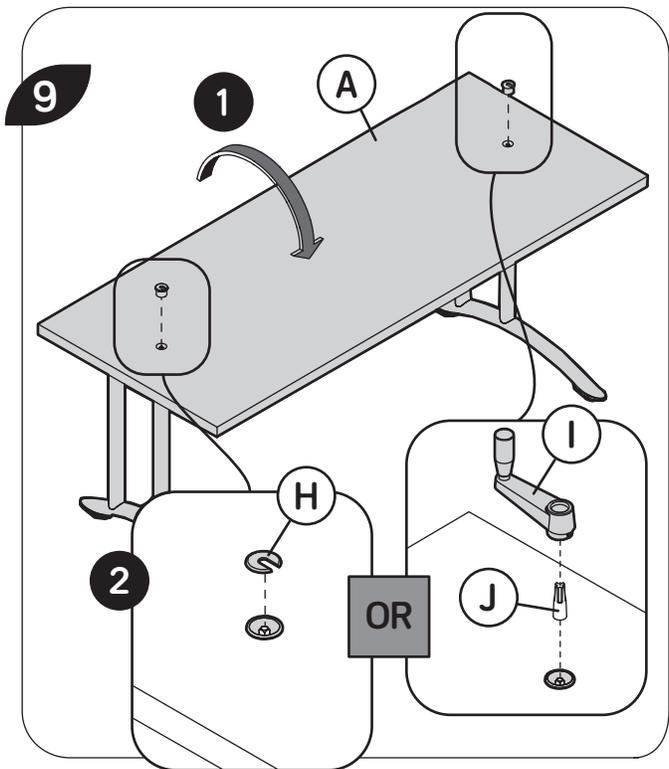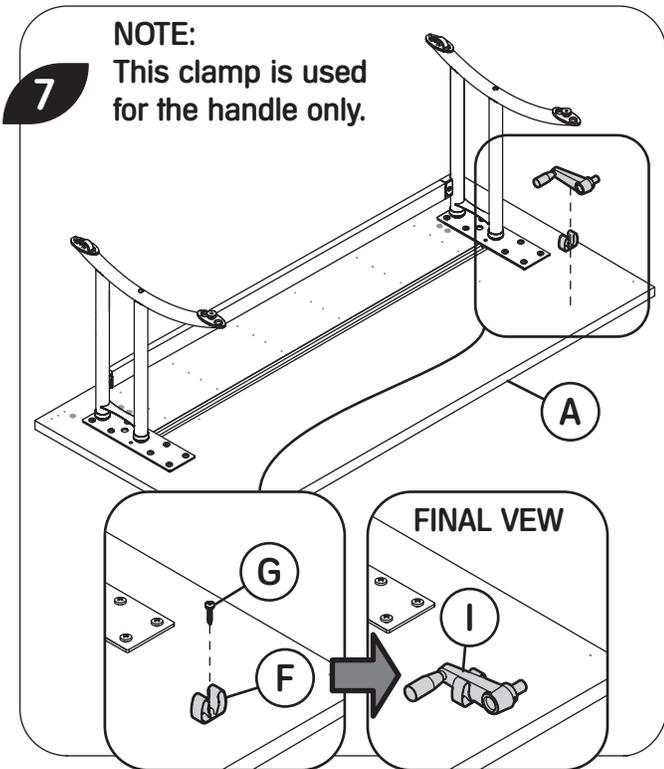

tables & collaboratives spaces (training, thesis), expansion desking, expansion casegoods, expansion wood, and ie *Installation Guides*

Tables & Collaborative Spaces (Training) Section – **Worksurfaces and Tables**

Tables & Collaborative Spaces (Thesis) Section – **Learning Tables**

Expansion Desking Section – **Modular Desks**



Expansion Casegoods Section – **Multi-Level Workstations**

Expansion Wood Section – **Desks & Desk Accessories**


ie Section – **Worksurfaces & Connectors, and Tables**

Reinforcing Bar Kit

REINFORCING BAR INSTALLATION ON TRAINING PRODUCTS

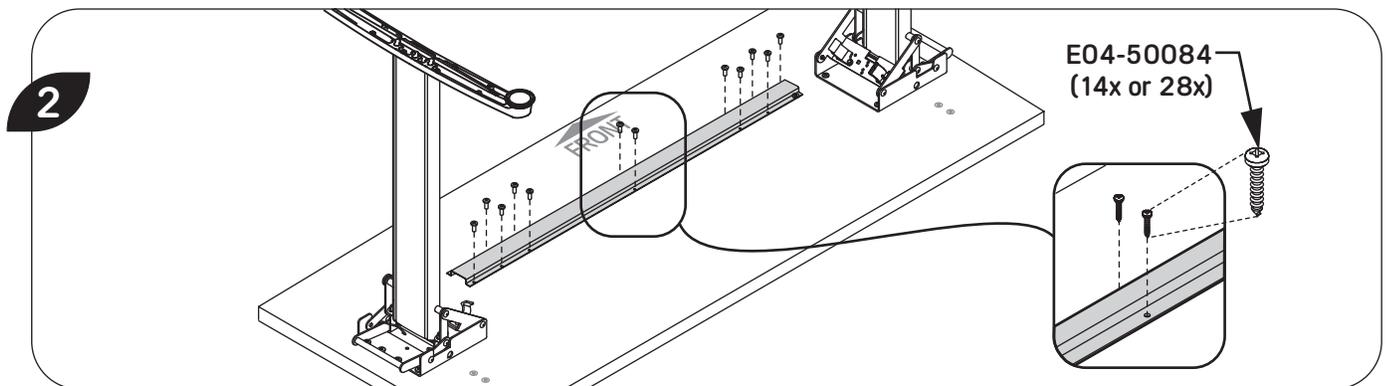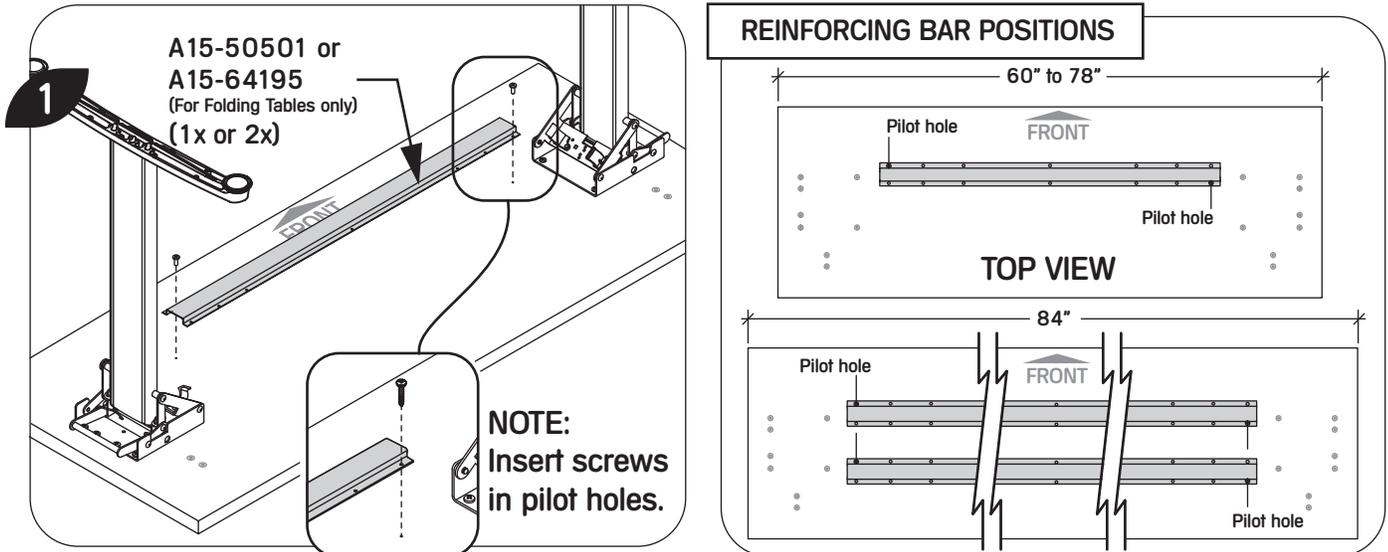

REINFORCING BAR INSTALLATION ON ie PRODUCTS

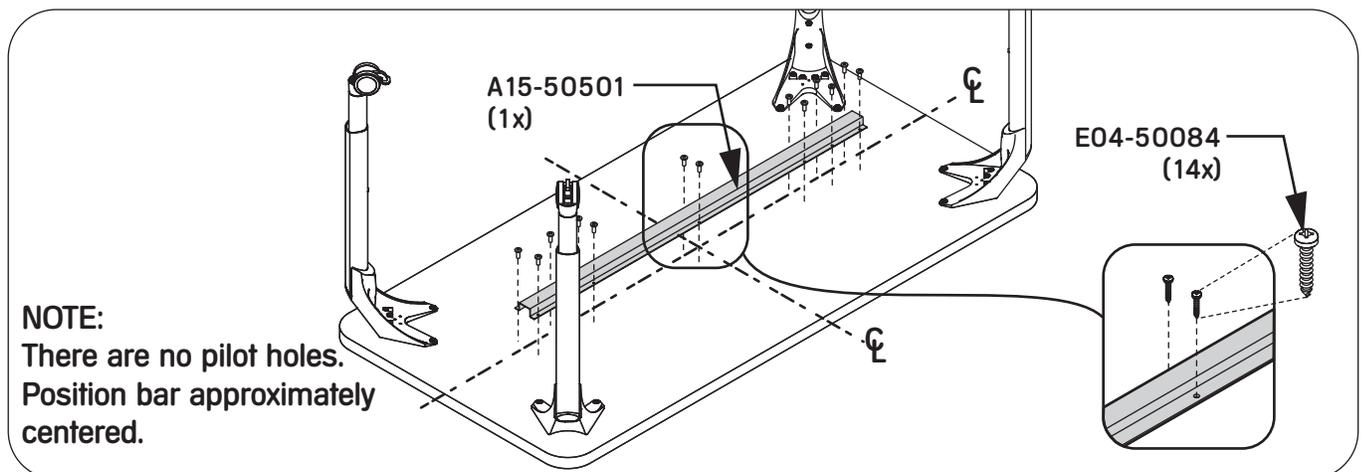

For additional information on this installation contact Teknion | Roy & Breton **Technical Support**.

Issue Date: 2015 March 17


(L04-63009_R06)

Page 1 of 1

CPU Holder

CTLP

Product

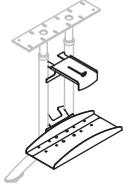

CTLP


CTLP- Part / Product Identification and What's Included

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.
A		CPU Holder Moving Part	A15-63106	1
B		CPU Holder Fixed Part	A15-63105	1
C		CPU Holder Supporting Part for Leg	A15-63104	1
D		CPU Holder Sliding Arm	A15-63103	1
E		CPU Holder Fixing Arm	N80-63069	1
F		#3/4" x 10 - 24 Round Head, Square Neck Carriage Bolt	E01-50657	4
G		Nylon Insert Wing Locknut #10 - 24 UNC	E03-50908	5

Not Included

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.
H		Training Worksurface	As per Order	N/A
I		Arched Leg	As per Order	N/A
J		CPU	N/A	N/A

Application


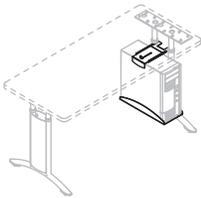



Reference Installation Guides:
No. 1187 Tables & Collaborative Spaces "Legs CTCL, CTTL, CTST"



For additional information on this installation contact Teknion I Roy & Breton **Technical Support**.

Issue Date: 2006 February 20

CPU HOLDER INSTALLATION

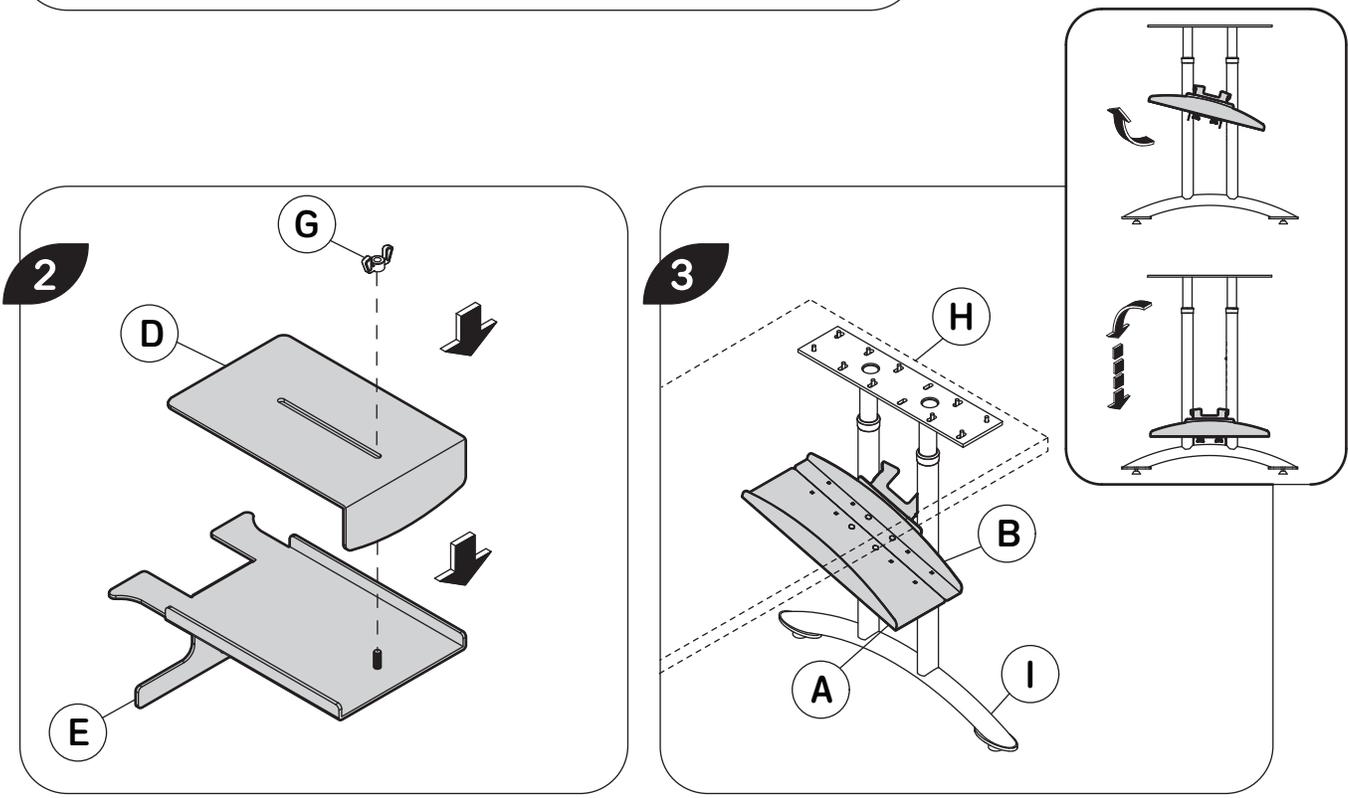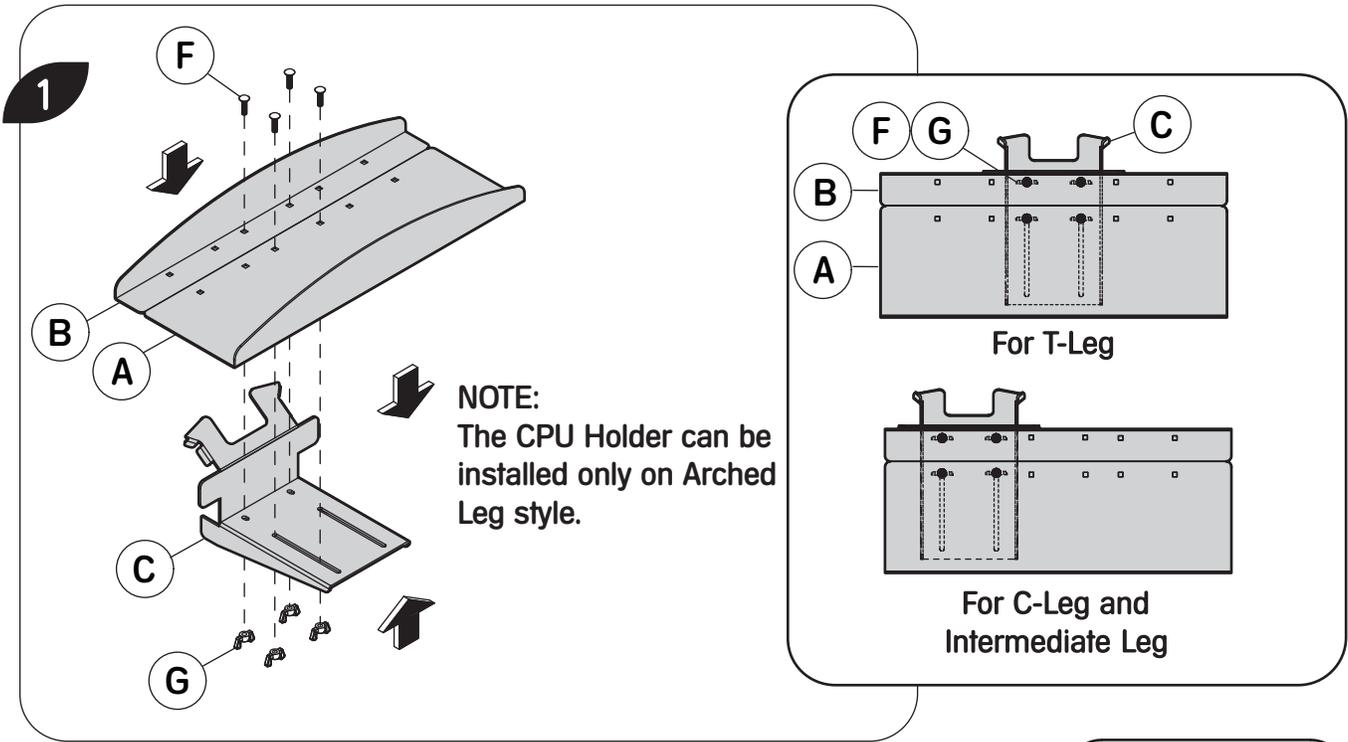

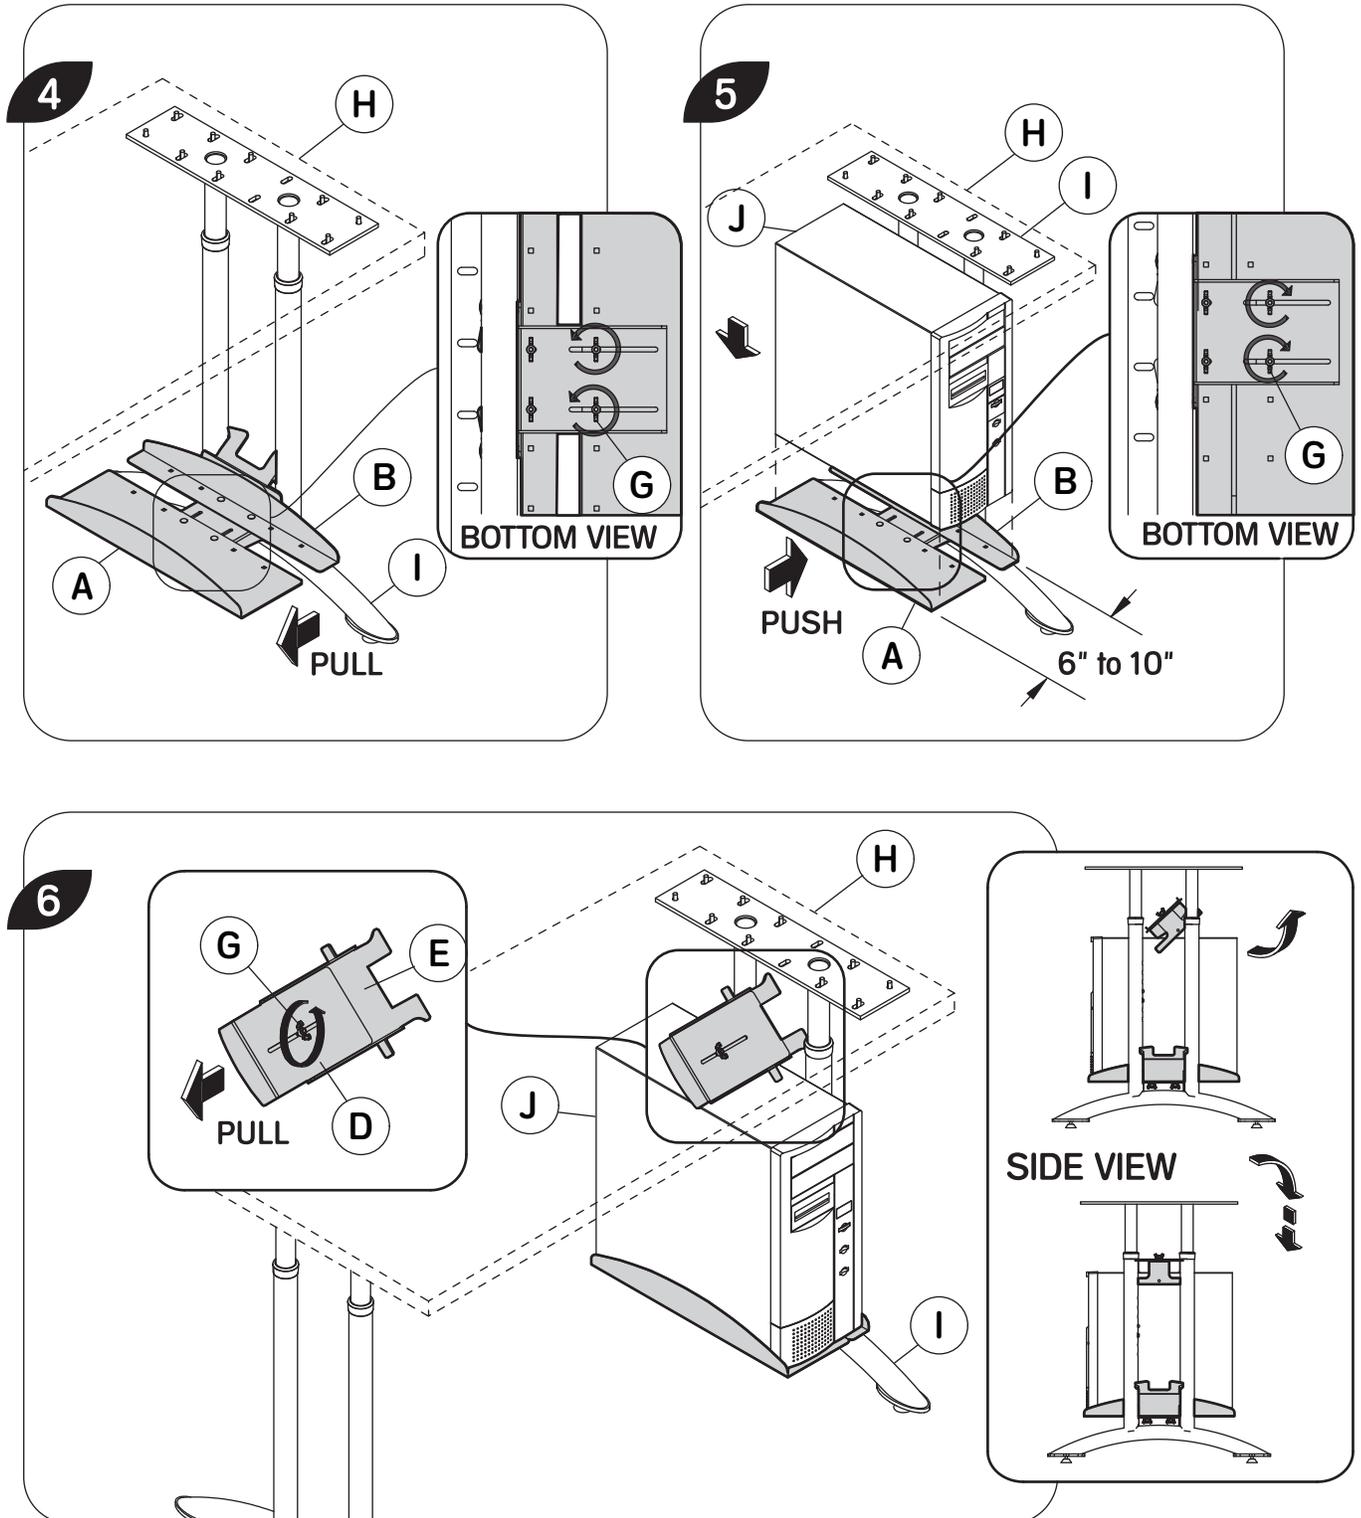

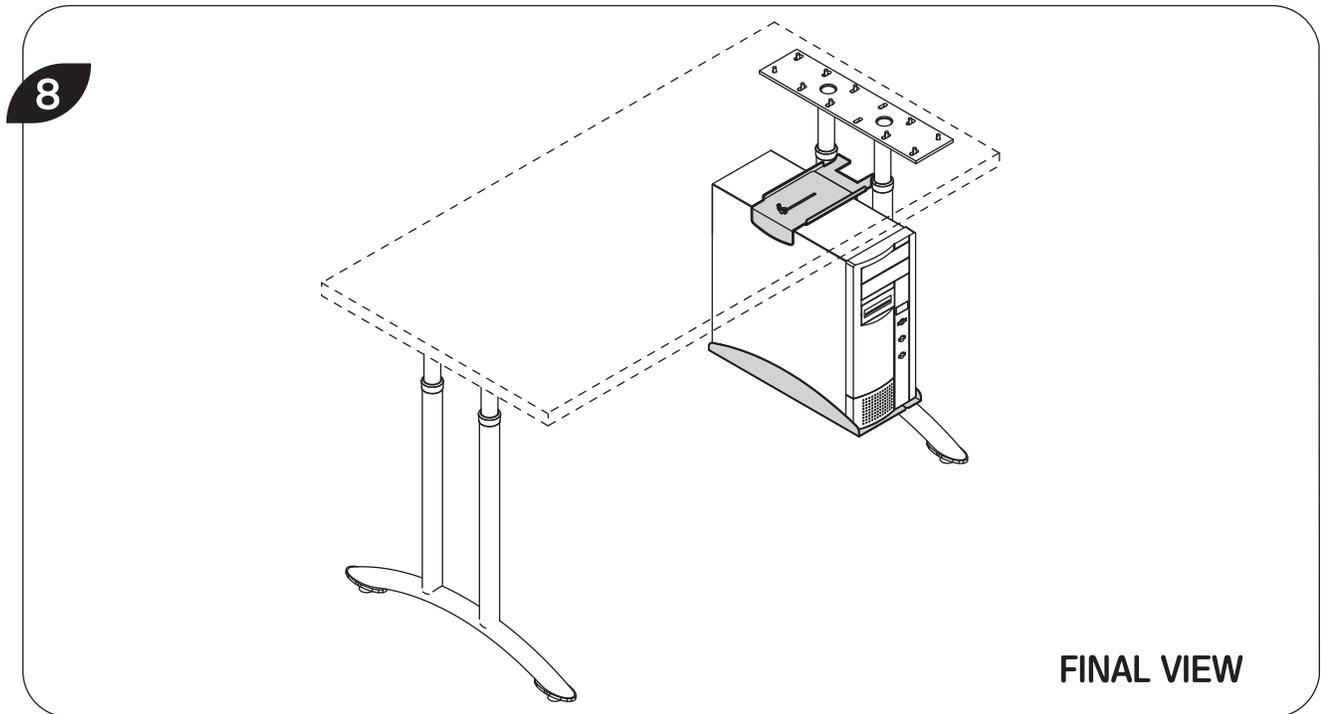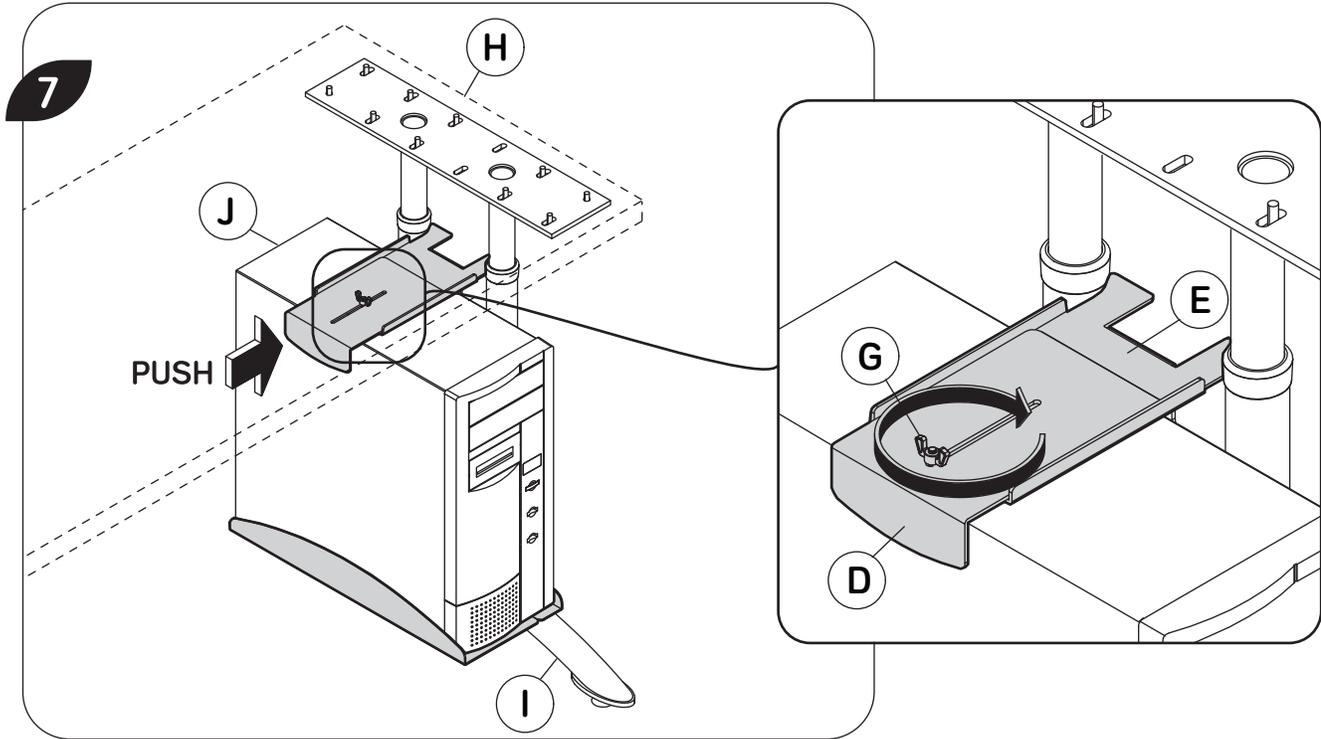

Vertical Leg Cover


CTVL

Product





CTVL

CTVL - Part / Product Identification and What's Included

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.
A		Vertical Leg Cover	CTVL_	2

Not Included

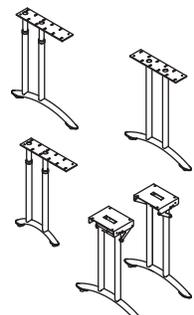Ref.	Illustration	Description	Part No. / Prod. Code	Qty.
B		Training Worksurface	As per Order	N/A
C		Arched Leg	As per Order	N/A

Application




Reference Installation Guides:
No. 1187 Tables & Collaborative Spaces "Legs CTCL, CTTL, CTST"

For additional information on this installation contact Teknion | Roy & Breton **Technical Support**.
Issue Date: 2008 February 11

Cover

VERTICAL LEG COVER INSTALLATION

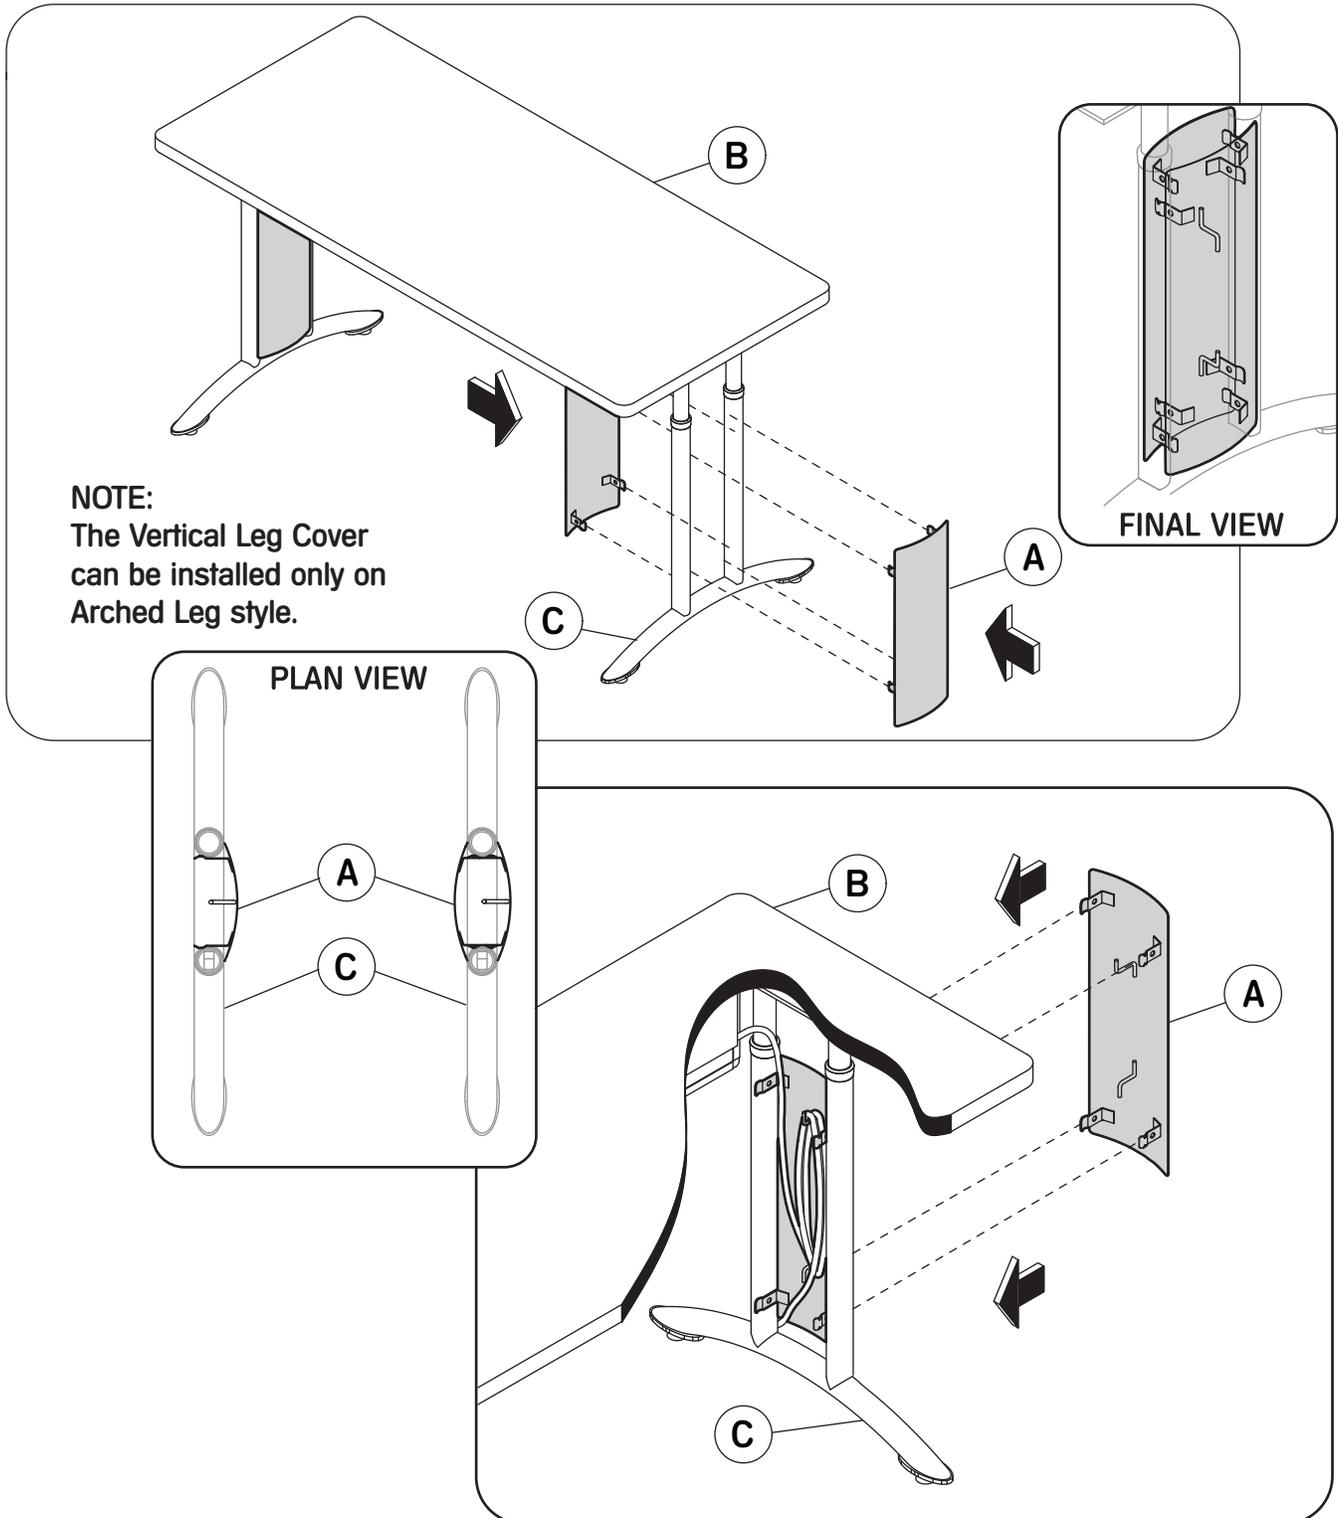

Vertical Wire Management Cover


CTWC

Product




CTWC

CTWC - Part / Product Identification and What's Included

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.
A		Vertical Wire Management Cover	A23-63024 +29	1

Application

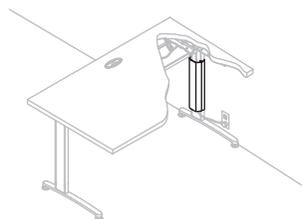

Not Included




Ref.	Illustration	Description	Part No. / Prod. Code	Qty.
B		Table with Slender Legs	N/A	1

Reference Installation Guides:
No. 1187 Tables & Collaborative Spaces "Legs CTCL, CTTL, CTST"

For additional information on this installation contact Teknion | Roy & Breton **Technical Support**.
Issue Date: 2006 February 20

Cover

VERTICAL WIRE MANAGEMENT COVER INSTALLATION

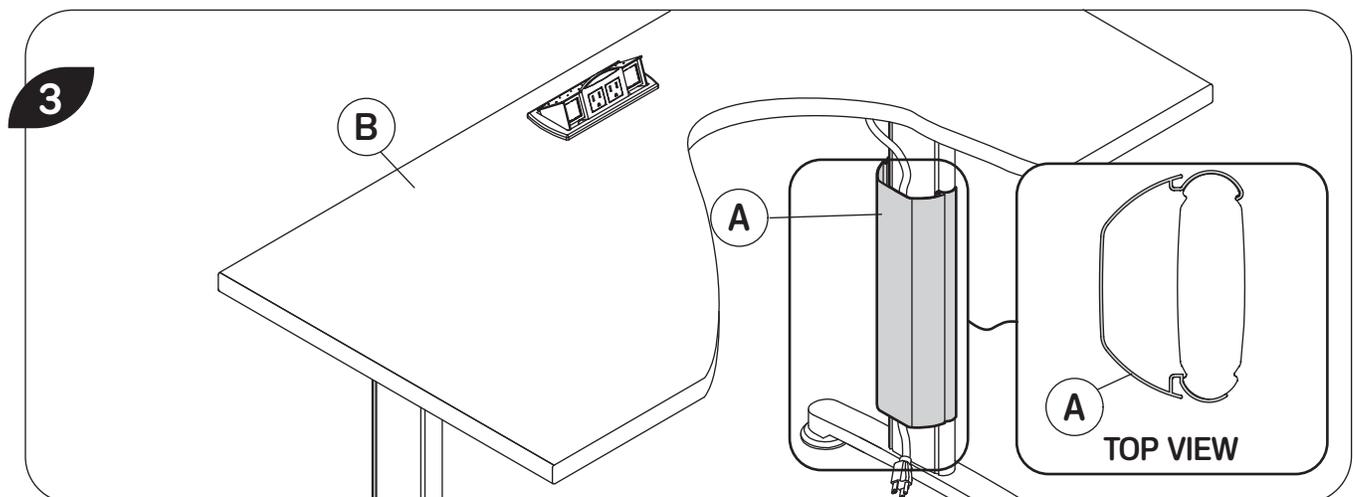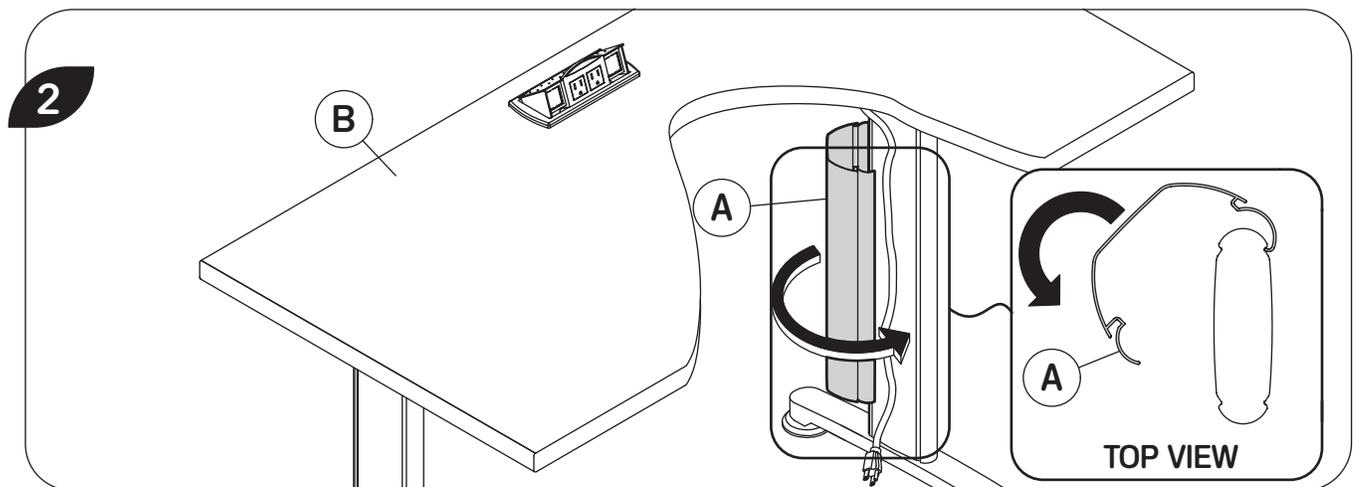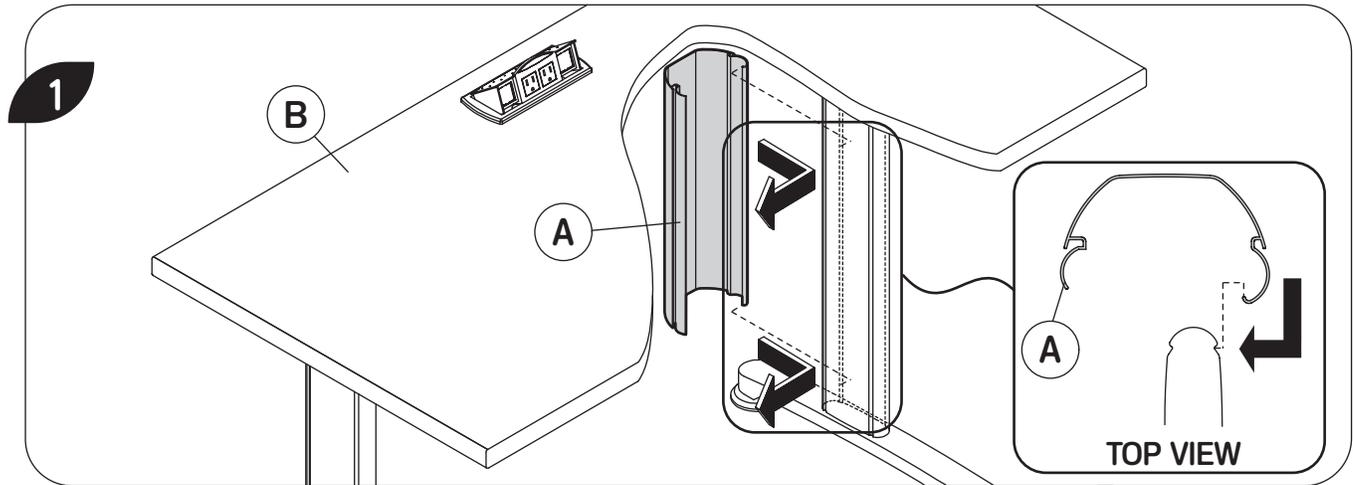

Training Section – Accessories

Expansion Desking, Expansion Casegoods, Expansion Wood & Thesis Section – Lighting, Electrics & Communications

W/R/S Section – Electrics

No. 1205

CTWT – Cable Tray (Training)

BLCT – Cable Tray (Expansion Casegoods)

ZELCT – Cable Tray (Expansion Wood)

RLWT – Cable Tray (Expansion Desking)

CVLT – Wire Tray (W/R/S)

THEMW – Cable Tray (Thesis)

Product



CTWT, RLWT, BLCT, ZELCT, CVLT and THEMW


TOOLS REQUIRED:

Cross or Square Drive #3

CABLE TRAY - Part / Product Identification and What's Included

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.	Kit No. / Assy. No.
A		Cable Tray	B02-50125	1	N80-50017
B		#12 x 3/4" Quadrex Pan Head, Wood Screw, Zinc (preinstalled on cable tray)	E04-50017	3	


CABLE TRAY INSTALLATION

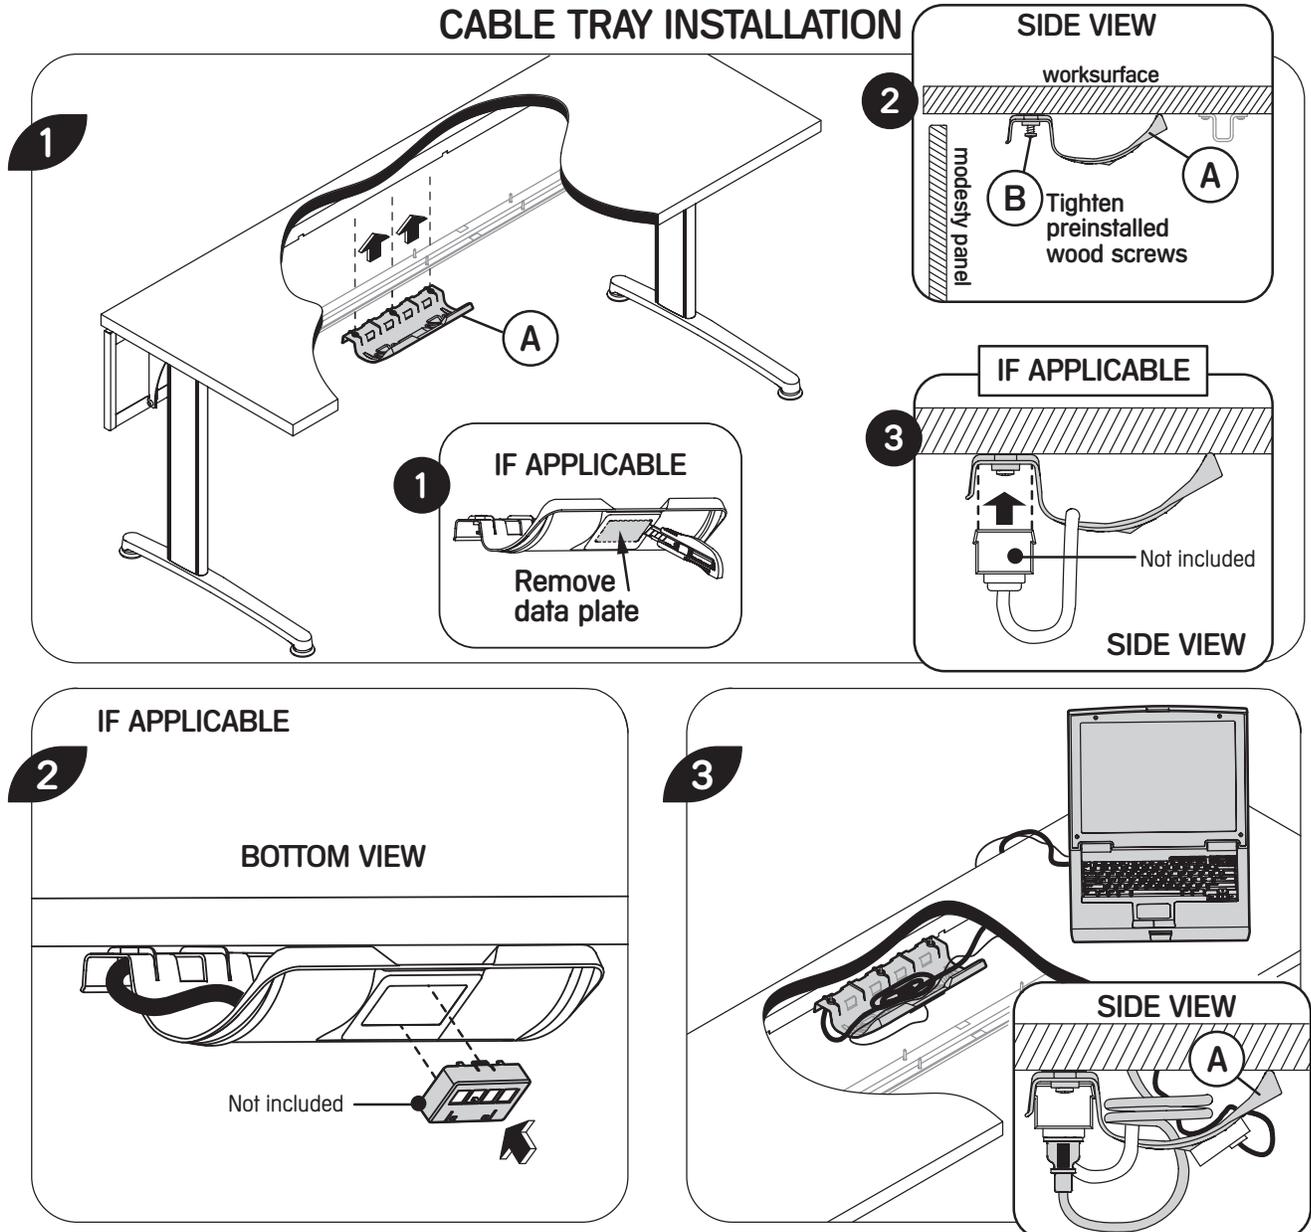

Electrical Tray


CTET

Product

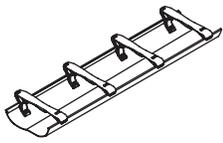


CTET

CTET - Part / Product Identification and What's Included

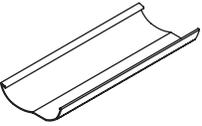Ref.	Illustration	Description	Part No. / Prod. Code	Qty.
A		Electrical Clip	B02-50091	As per Order
B		Tray Cover or Tray Cover for Rectangular Height-Adjustable Table	A23-63011 +XX A23-63012 +XX	1
C		#12 x 3/4", Zinc, Quadrex Pan Head Wood Screw	E04-50017	As per Order

Application

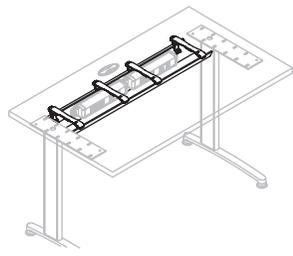

Not Included

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.
D		Table	As per Order	N/A

TOOLS REQUIRED: Cross Drive #3 or Square Drive #3

Reference Installation Guides:

No. 1038 Tables & Collaborative Spaces "Base Feed, Pass-Through RLBF, CLBF, RLPT, CLPH"



No. 1203 Tables & Collaborative Spaces "Power Bars RLPP, RLWP, CLWP, RLBX, CLBX"

No. 1199 Tables & Collaborative Spaces "Data Box CLDB"

For additional information on this installation contact Teknion | Roy & Breton **Technical Support**.

Issue Date: 2006 February 20

ELECTRICAL TRAY INSTALLATION

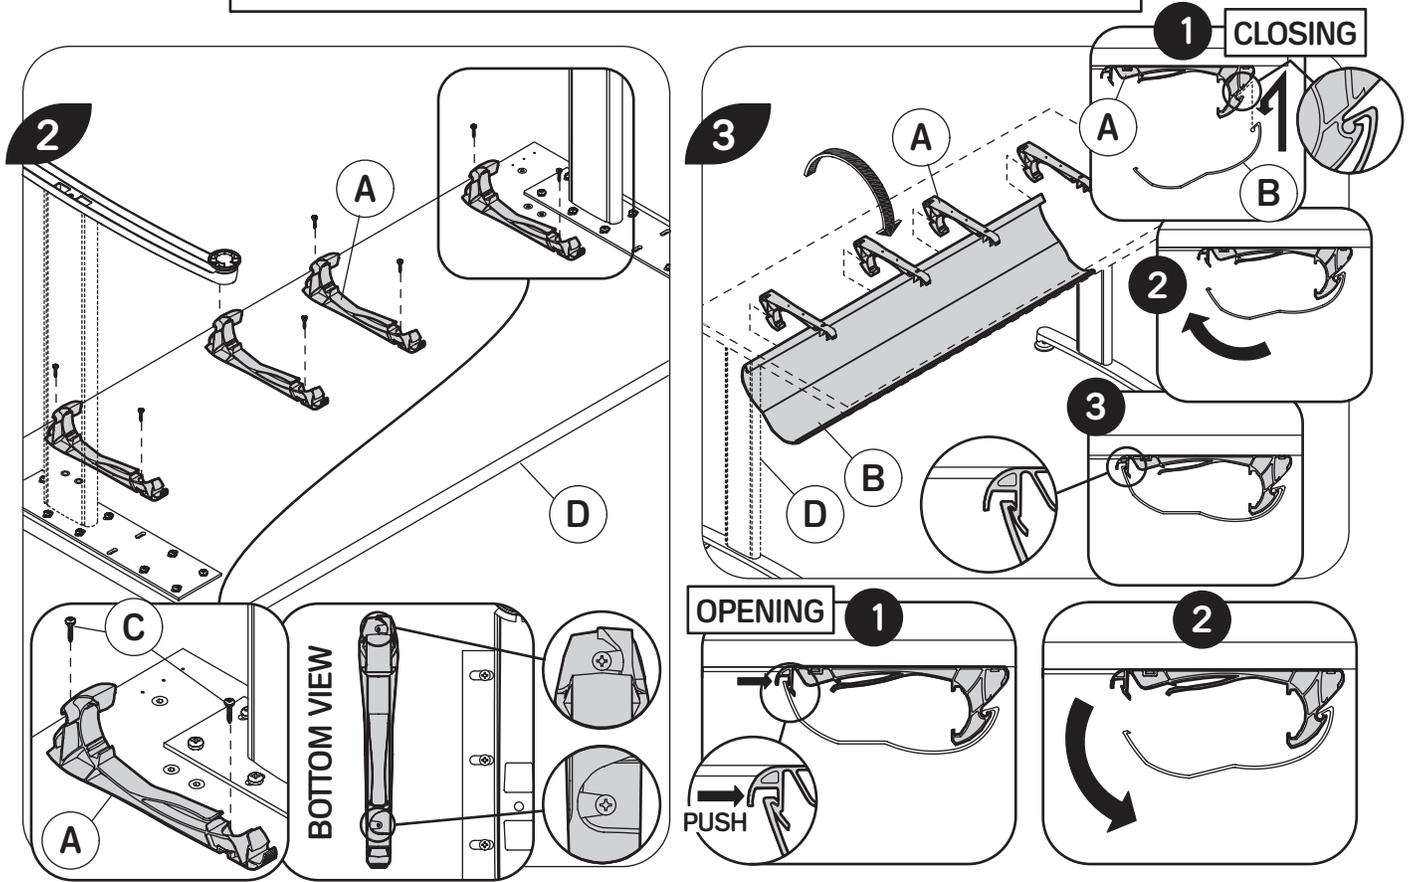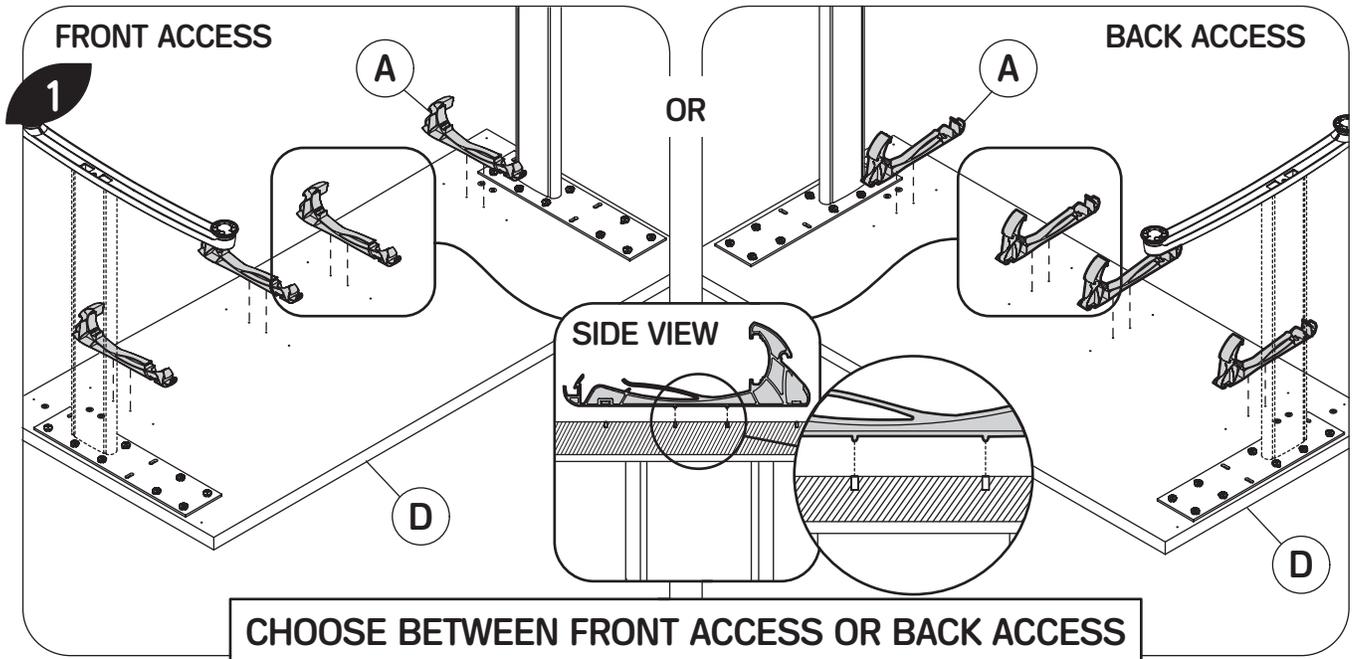


Section – **Accessories (Expansion Training)**

CTLM – Modesty Panel – Laminate


CTMM – Modesty Panel – Metal

Product

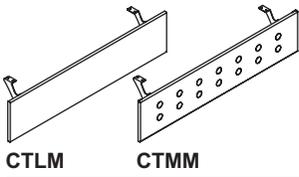

TOOLS REQUIRED:
Cross or Square Drive #1, #2 and #3



CTLM - Part / Product Identification and What's Included

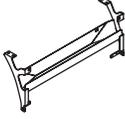		X80-63015 (CTLMS1, CTLMH1, and CTLMP1)	X80-63017 +XX (CTLMS2)	X80-63016 +XX (CTLMH2)	X80-63049 +XX (CTLMP2)
Ref.	Illustration	Quantity			
A	 Ø15 x 7 mm Circular Magnet E03-50030	2			
B	 #6 x 0,750" Quadex Flat Head Self-Drilling Screw E04-50024	2			
C	 #8 x 5/8" Recex Pan Head Wood Screw, Black E04-50002	4			
D	 #8 x 3/4" Square Pan Head Wood Screw, Zinc 401416	2			
E	 #1/4 - 20 x 5/8" Quadrex Pan Head Mechanical Screw E01-50403	4			
F	 Modesty Brackets N80-63407L and N80-63407R	1			
		1			
G	 Cable Tray for Standard Table N80-63350+XX or for Height- Adjustable Table N80-63307+XX or for Table with Post Legs N80-63377+XX		1		
				1	
					1
H	 Modesty Panel – Laminate CZTLM_ (This product is not included with the kits)	1			

Section – **Accessories (Expansion Training)**

CTLM – Modesty Panel – Laminate
 CTMM – Modesty Panel – Metal





CTMM - Part / Product Identification and What's Included

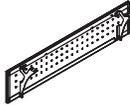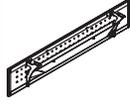		CTMMS1, CTMMH1, and CTMMP1	CTMMS2	CTMMH2	CTMMP2
Ref.	Illustration	Quantity			
I	 <p>#1/4 - 20 x 5/8" Quadrex Pan Head Mechanical Screw E01-50403</p>	6			
J	 <p>Modesty Panel – Metal for Standard Table N80-63310+XX+11 or for Height- Adjustable Table N80-63311+XX+11 or for Table with Post Legs N80-63375+XX+11</p> <p>OR</p>	1 (for CTMMS1 only)			
		1 (for CTMMH1 only)			
		1 (for CTMMP1 only)			
	 <p>Modesty Panel – Metal with Cable Tray for Standard Table N80-63352+XX+11 or for Height- Adjustable Table N80-63351+XX+11 or for Table with Post Legs N80-63376+XX+11</p>		1		
				1	
					1

Section – **Accessories (Expansion Training)**

CTLM – Modesty Panel – Laminate
CTMM – Modesty Panel – Metal

LAMINATE MODESTY PANEL – INSTALLATION

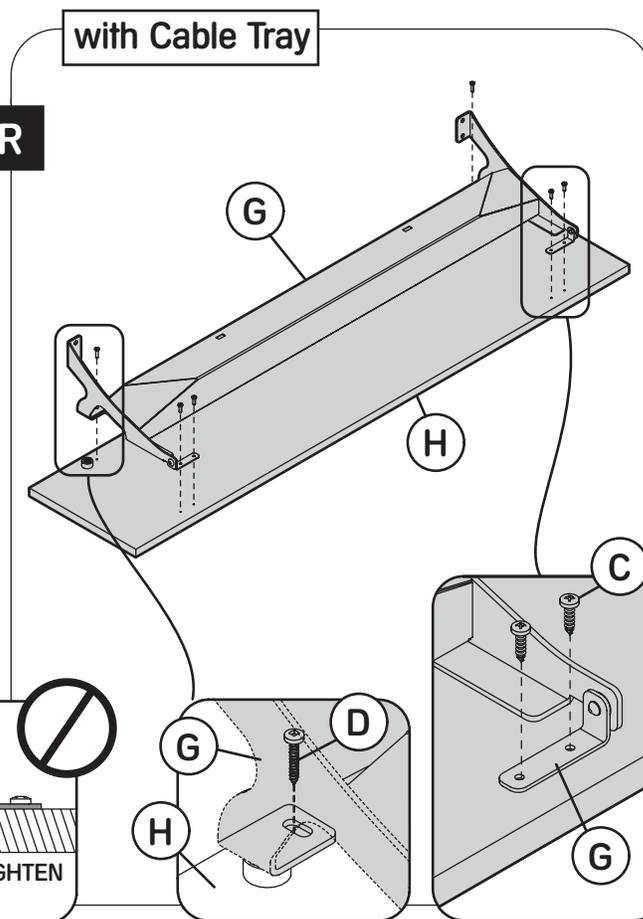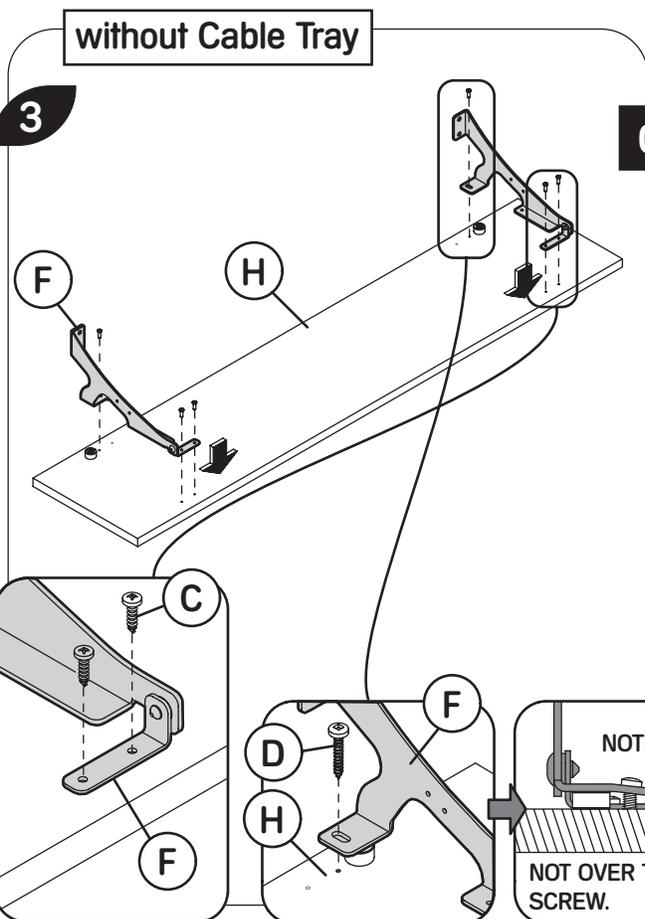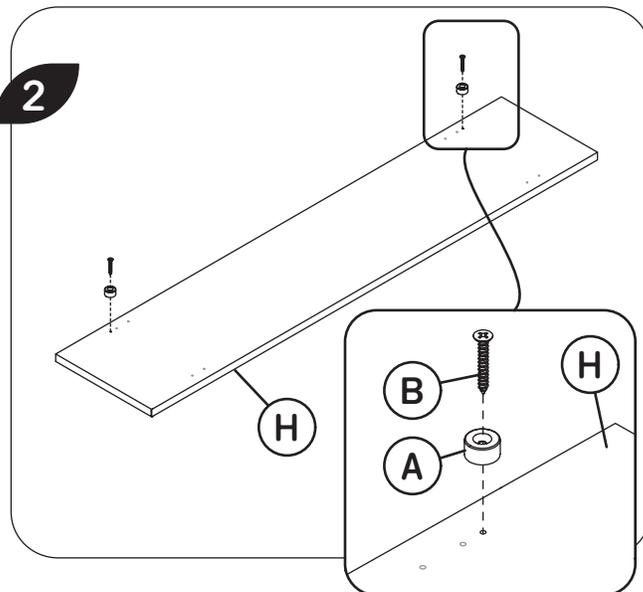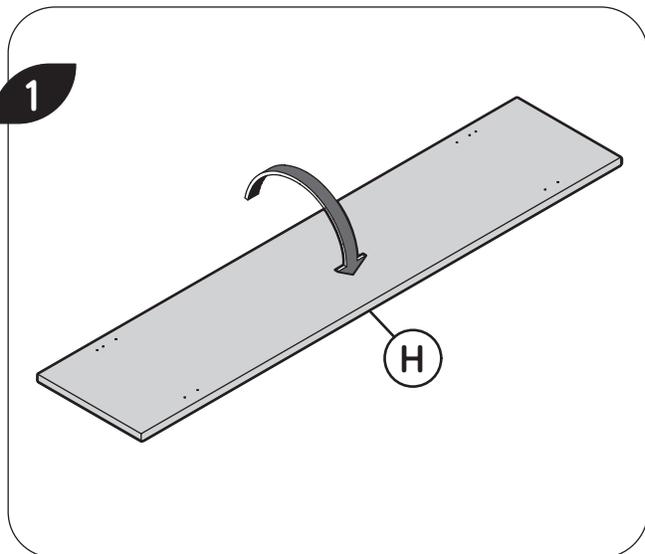

NOTE




NOT OVER TIGHTEN SCREW.


A note box with a diagonal slash through a circle, indicating a warning or prohibition. The text reads "NOTE NOT OVER TIGHTEN SCREW." with an arrow pointing to the screw in the previous diagram.

Section – **Accessories (Expansion Training)**

CTLM – Modesty Panel – Laminate
CTMM – Modesty Panel – Metal

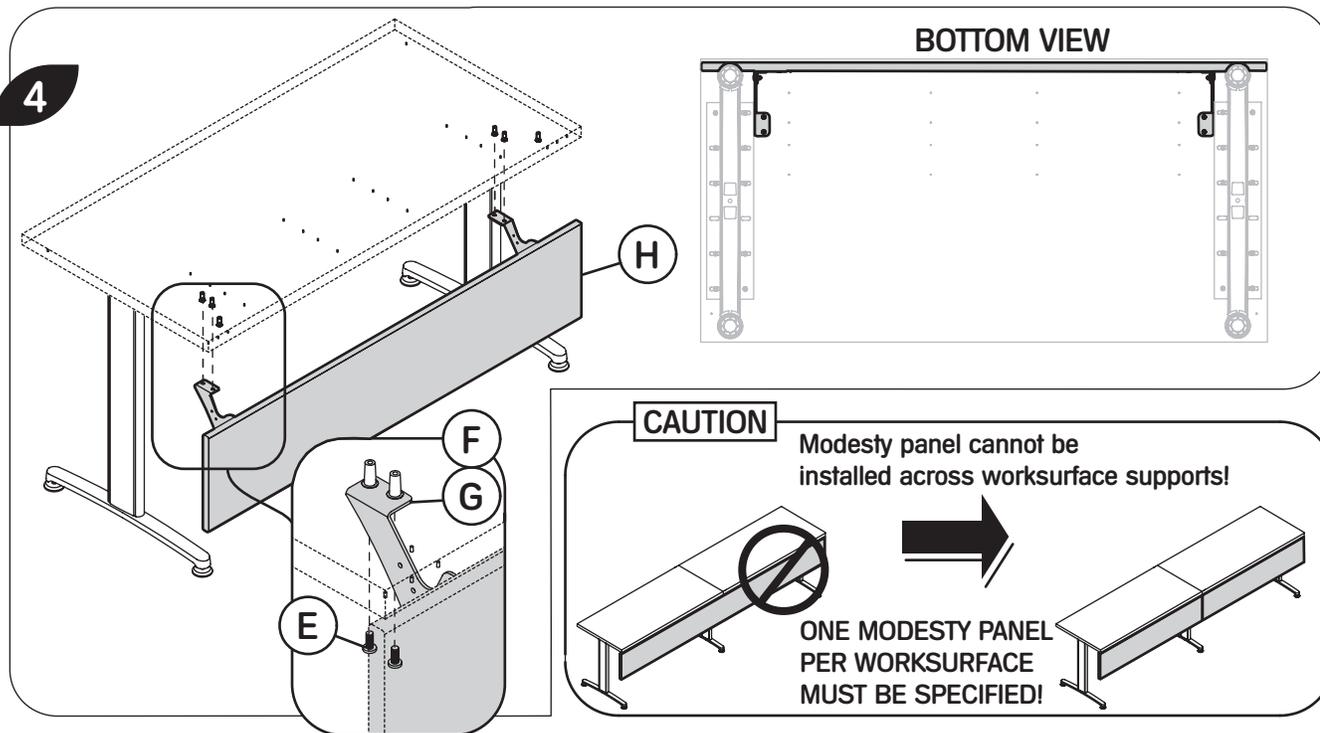


LAMINATE MODESTY PANEL – OPENING

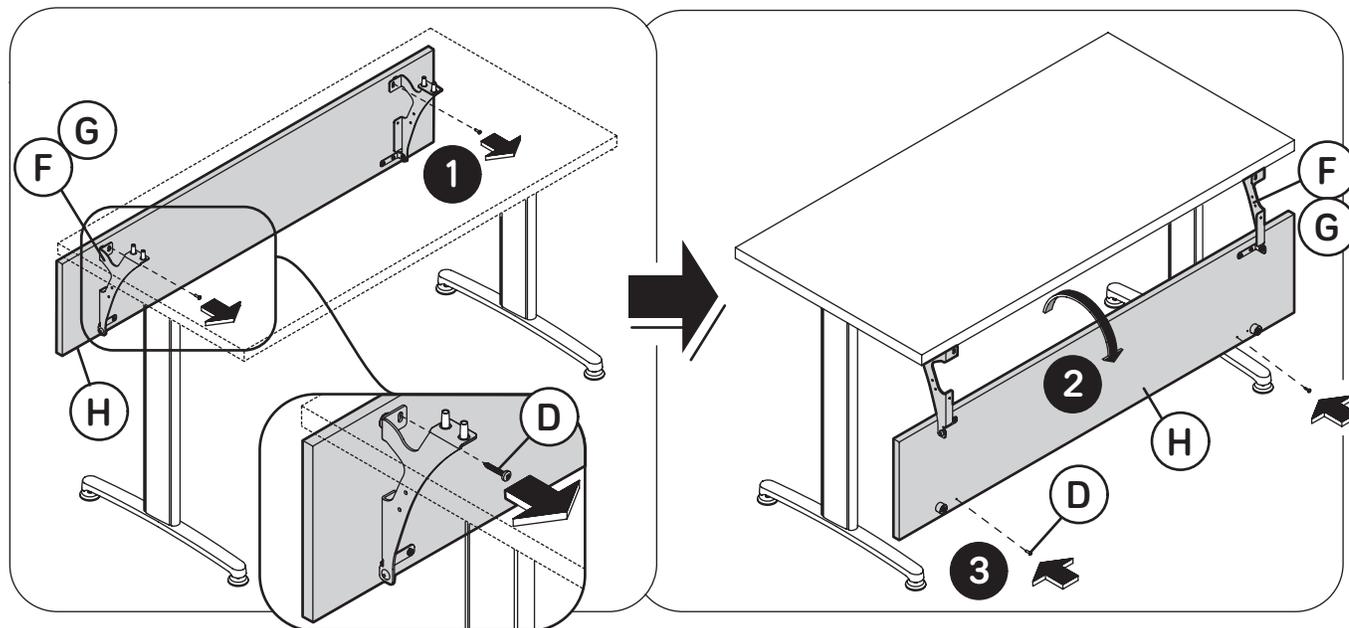


Section – **Accessories (Expansion Training)**

CTLM – Modesty Panel – Laminate
CTMM – Modesty Panel – Metal

METAL MODESTY PANEL – INSTALLATION

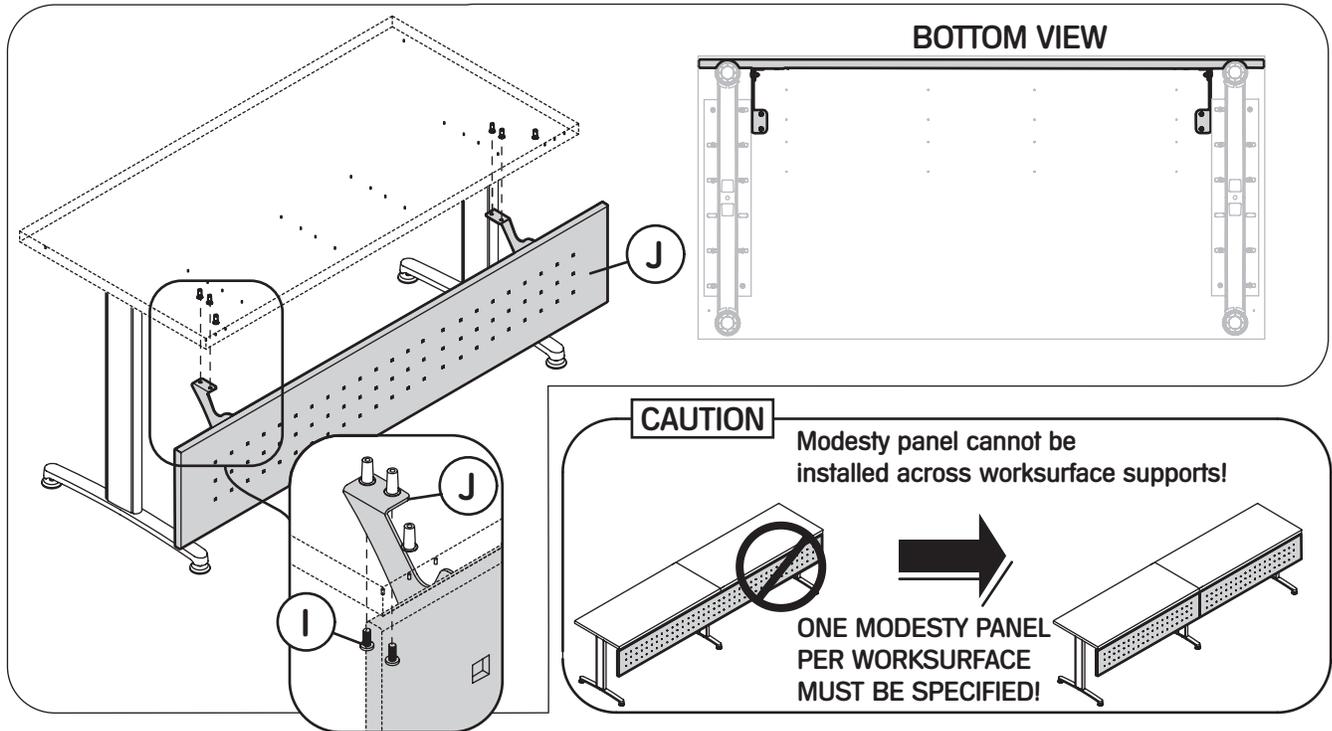

METAL MODESTY PANEL – OPENING

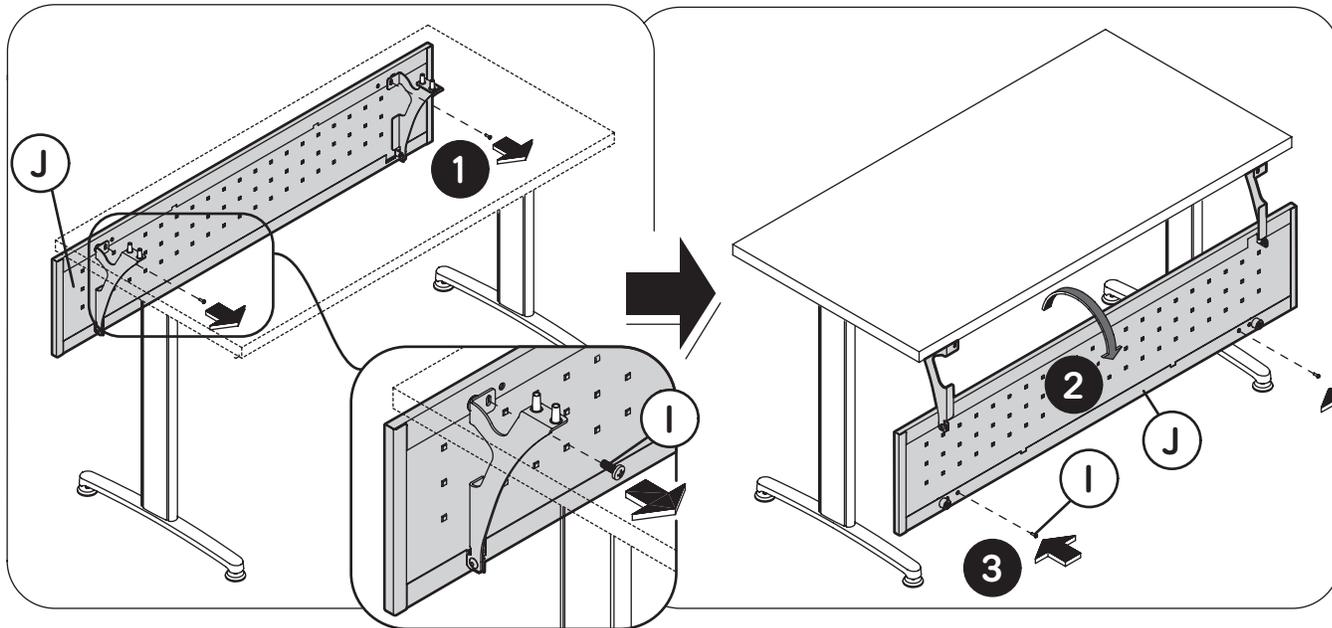

Tables & Collaborative Spaces – Training Section – **Accessories**

Thesis Section – **Supports & Accessories**

CTLMF – Modesty Panel for Flip-Top Table – Laminate

CTMMF – Modesty Panel for Flip-Top Table – Metal

THCFS – Modesty Panel for Flip-Top Table – Solid

THCFM – Modesty Panel for Flip-Top Table – Metal

No. **1204**

Product



CTLMF
THCFS


CTMMF
THCFM

TOOLS REQUIRED:
Cross or Square Drive #3
and Level

CTLMF, CTMMF, THCFS and THCFM - Part / Product Identification and What's Included

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.	Kit No. / Assy. No.
A		Laminate Modesty Panel (Training)	C83-63001+XX+11	1	
		Solid Modesty Panel (Thesis)	THMCFSCXX		
		Metal Modesty Panel (Training)	A15-63100+XX+11		
		Metal Modesty Panel (Thesis)	A15-63442+XX+12C		
B		Modesty Panel Bracket	N80-63579	2	X80-63085
C		1/4" – 20 x 5/8" Quadrex Pan Head, M. Screw, Black	E01-50403	4	
D		Modesty Panel Lock	A15-63066	2	
E		1/4" – 20 Round Knob	E03-50075	4	
F		#12 x 3/4" Quadrex Pan Head, W. Screw, Zinc	E04-50017	4	
G		1/4" – 20 Nut (Insert)	A15-63349	2	
H		1/4" – 20 x 0.500" Square Truss Head, M. Screw, Zinc	E01-2001	2	

MODESTY PANEL FOR FLIP-TOP TABLE INSTALLATION

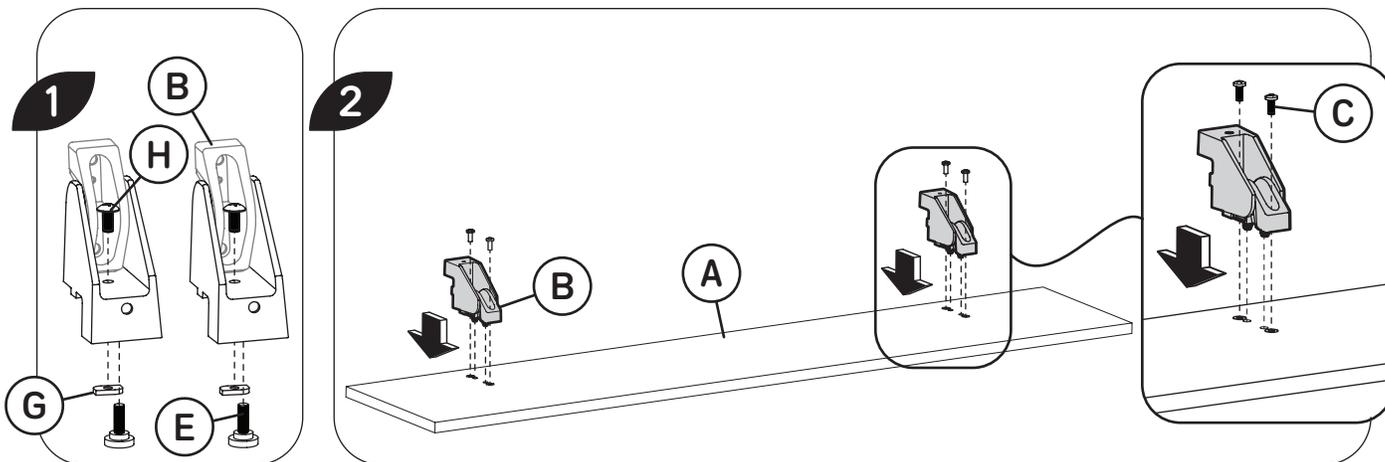

Reference Installation Guides:




No. 1195 Tables & Coll. Spaces (Training) "Rectangular Flip-Top Table (CTFT)"


No. THE_27 Thesis "Rectangular Flip-Top Tables (THFRS, THFRG)"

For additional information on this installation contact Teknion I Roy & Breton **Technical Support**.



Issue Date: 2021 June 18

L04-63114_R08

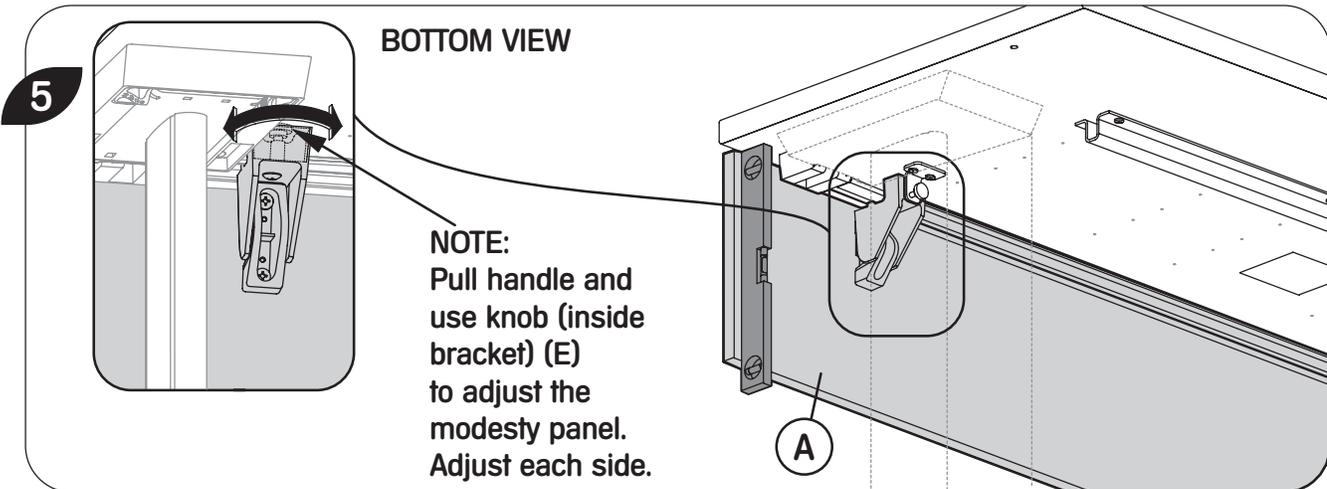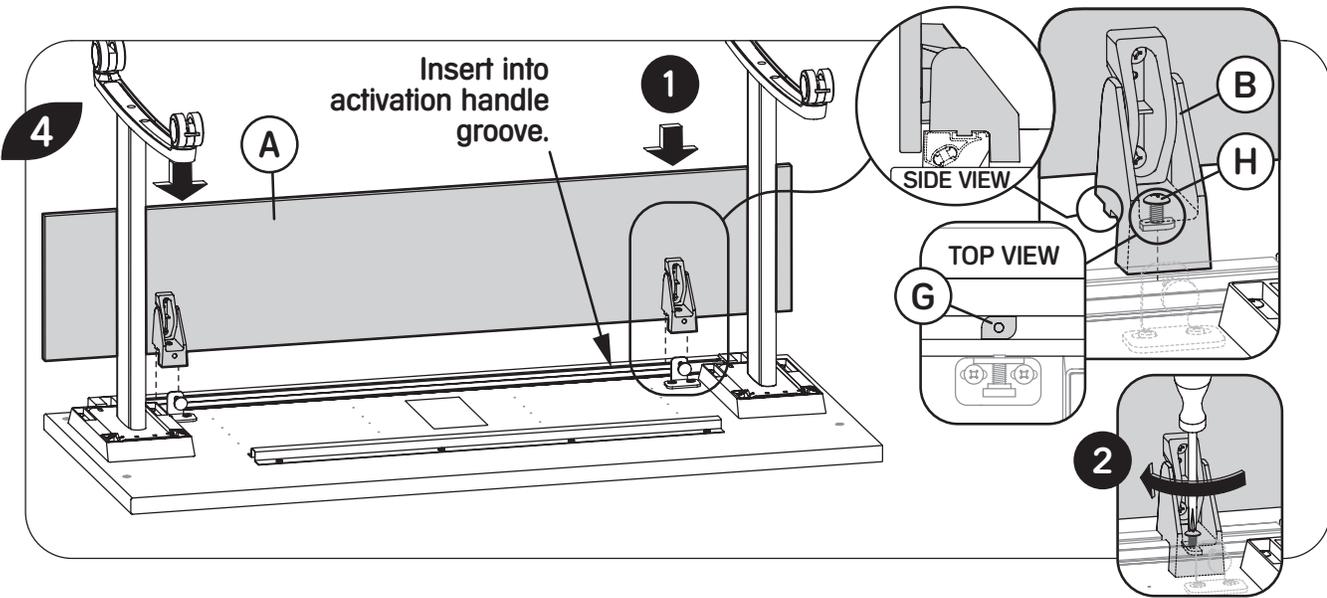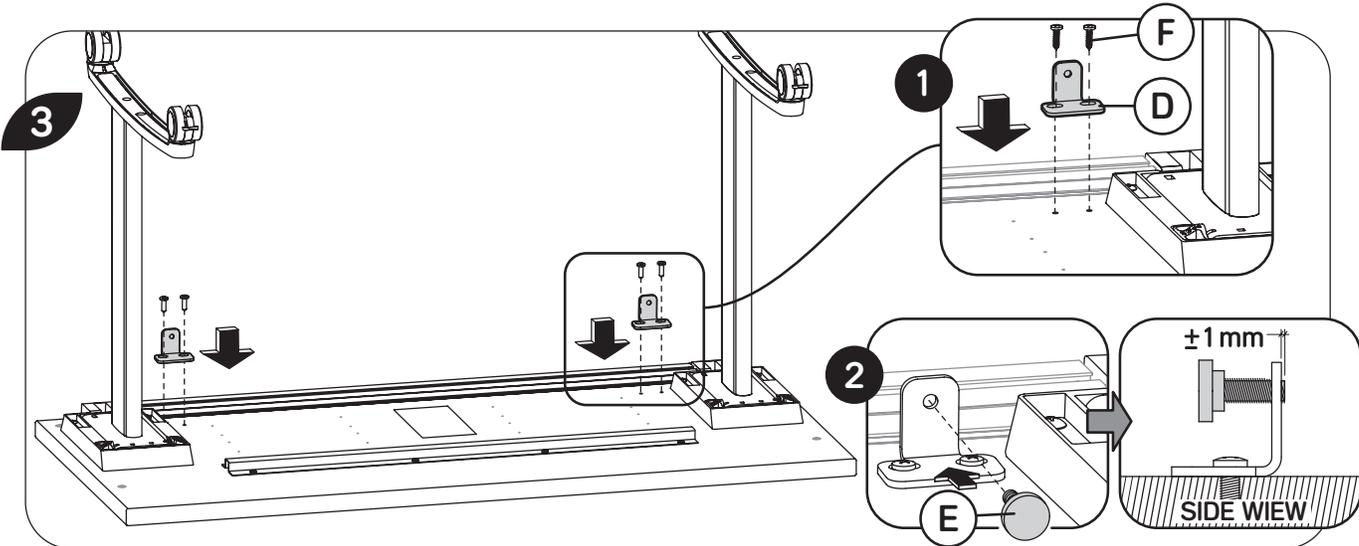


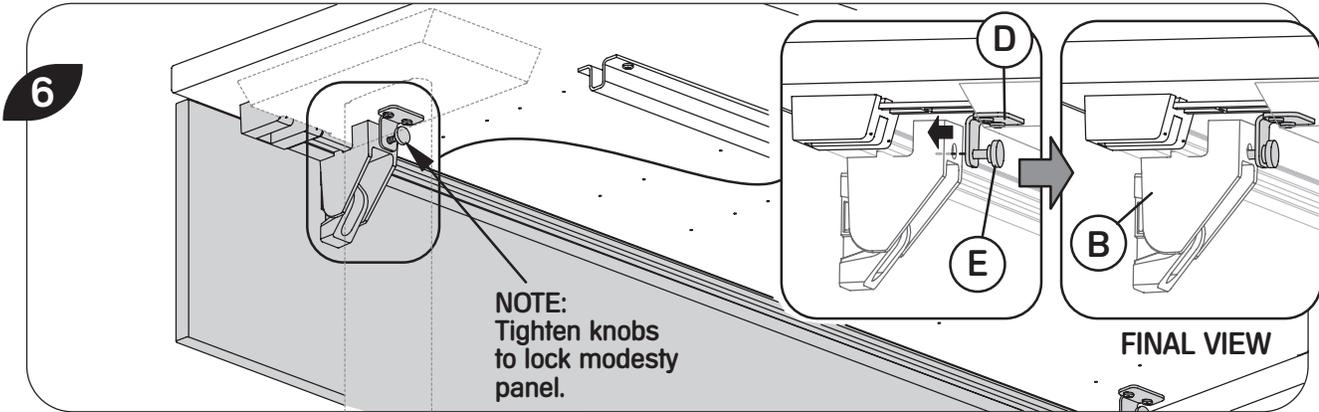


NESTING CONFIGURATION

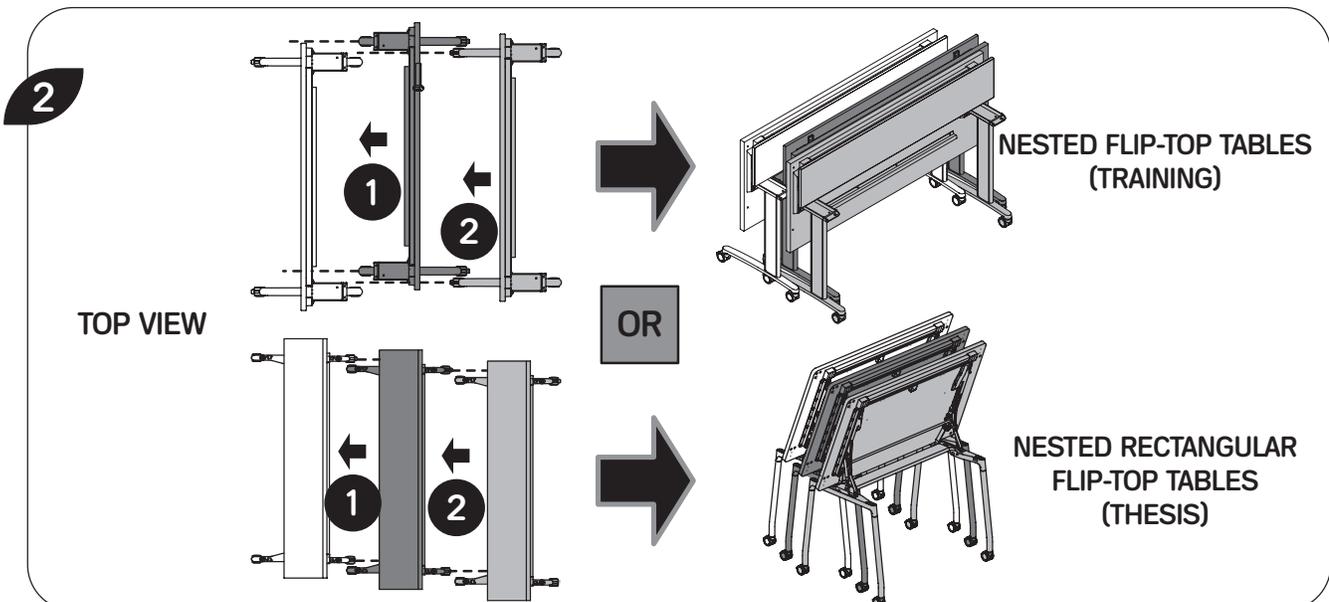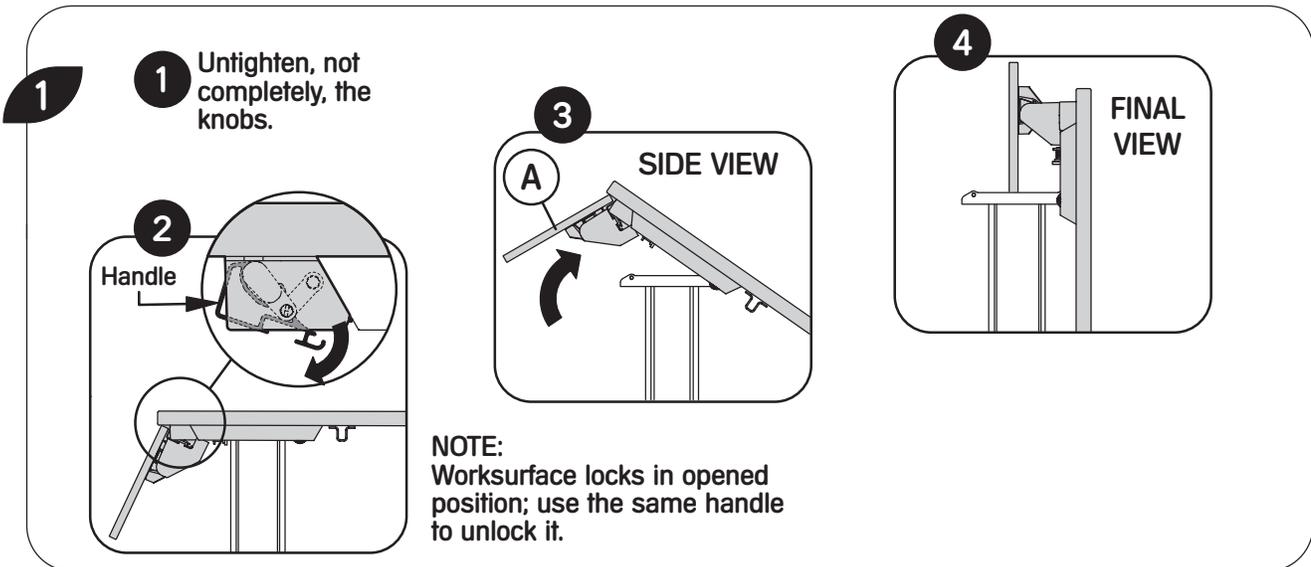



INSTALLATION

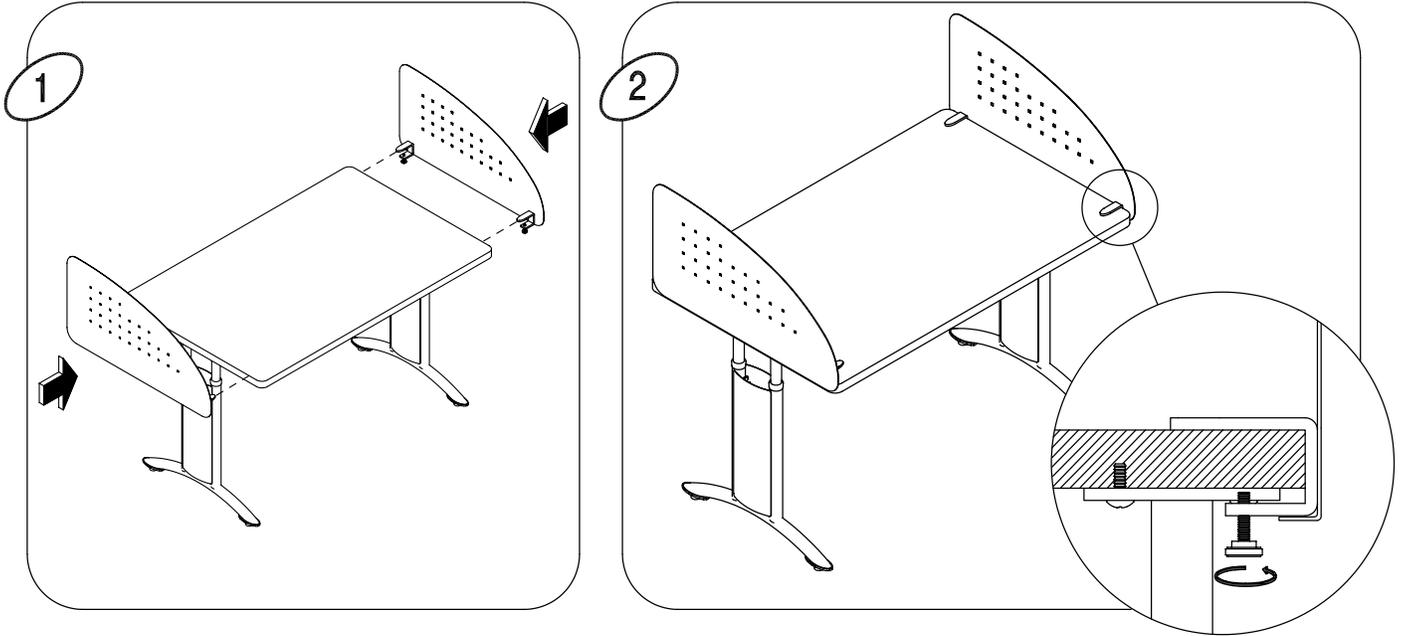


REAR EDGE INSTALLATION

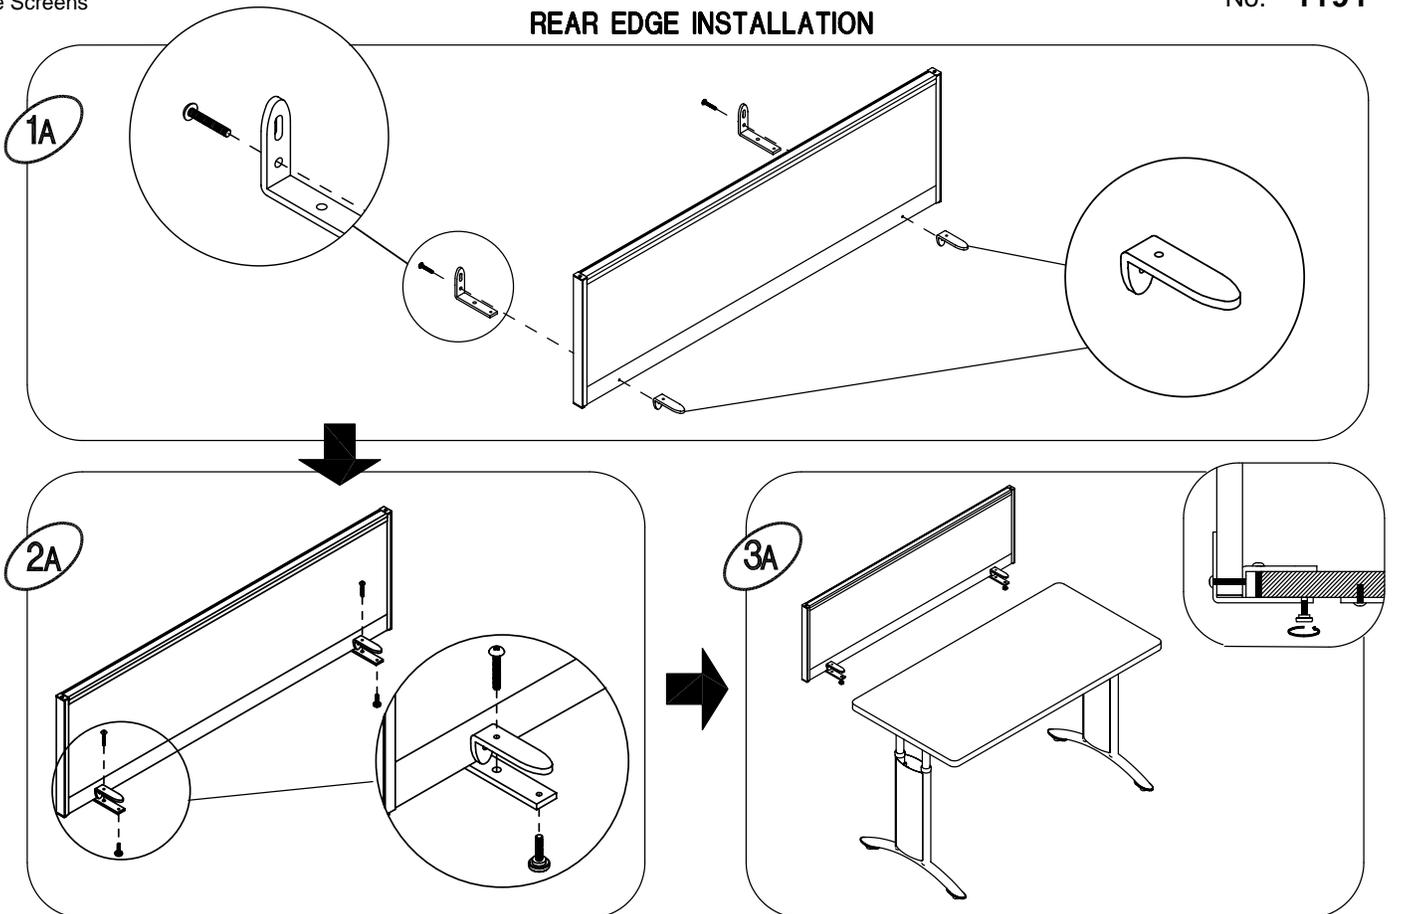

ON THE WORKSURFACE INSTALLATION

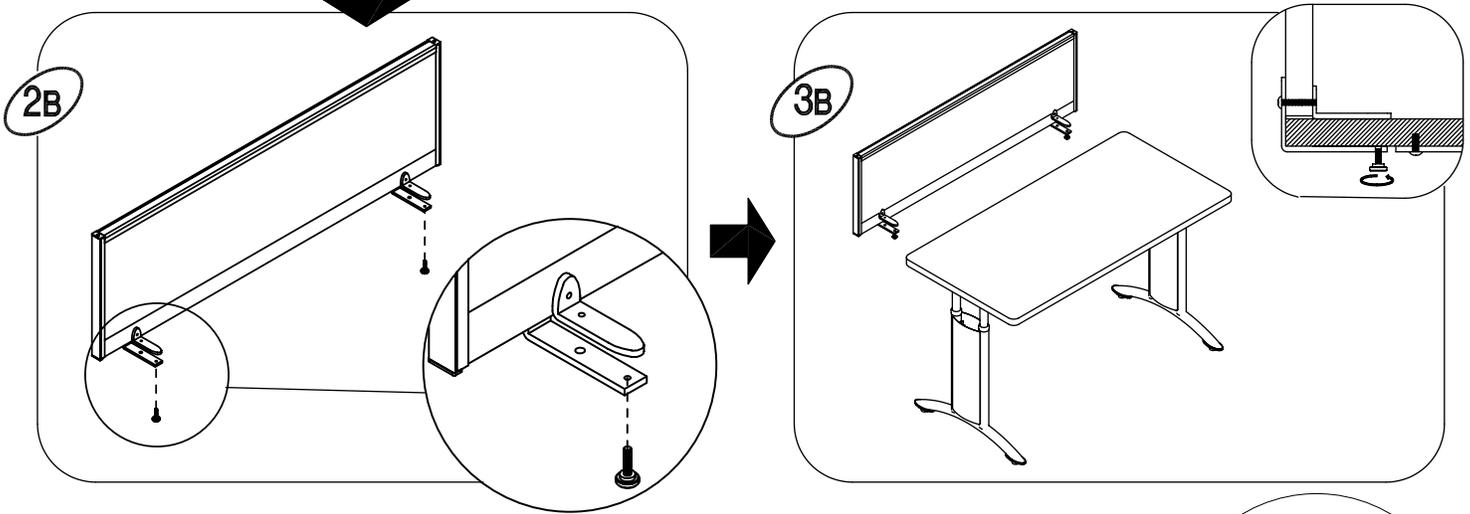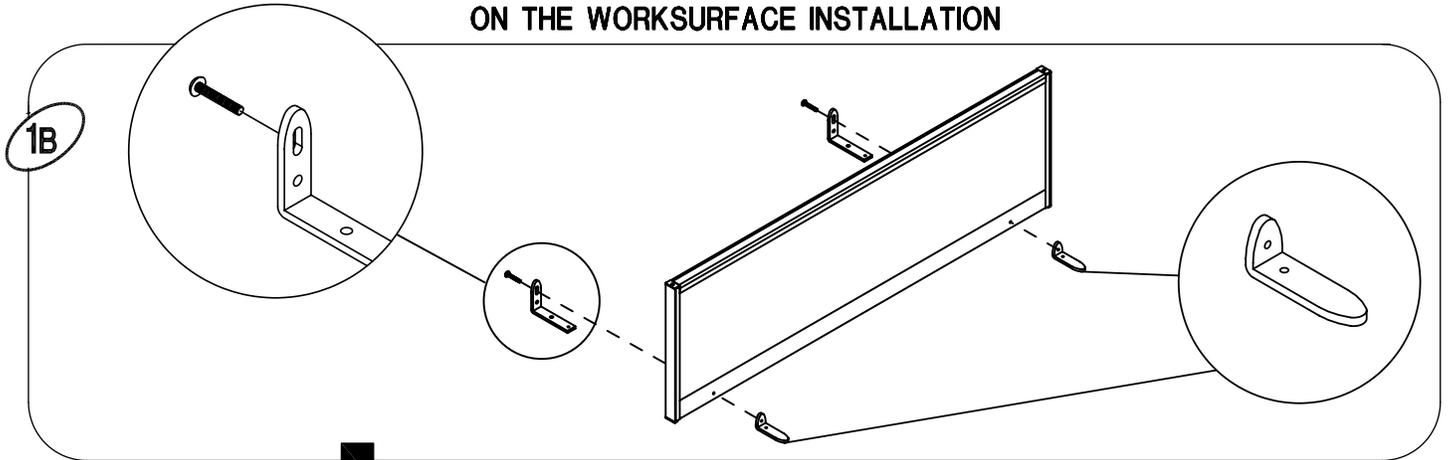

PAX INSTALLATION

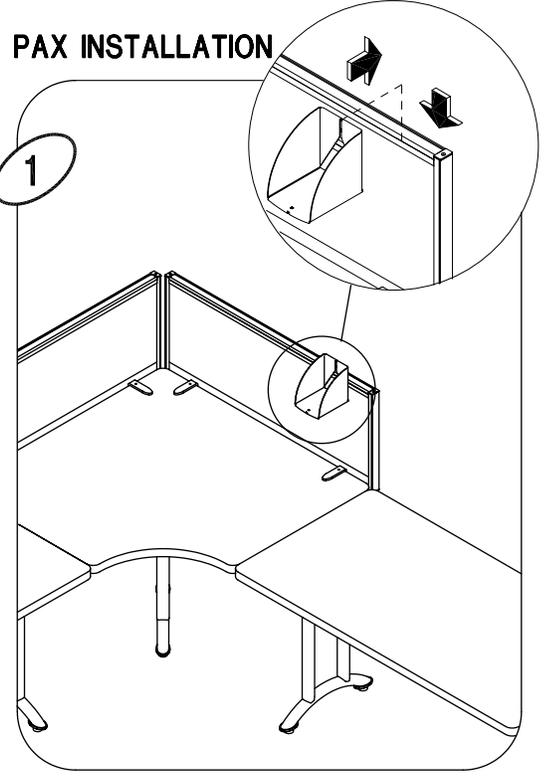

CAUTION

NOTE: Two table screens cannot be used on the worksurface in 90° configuration.

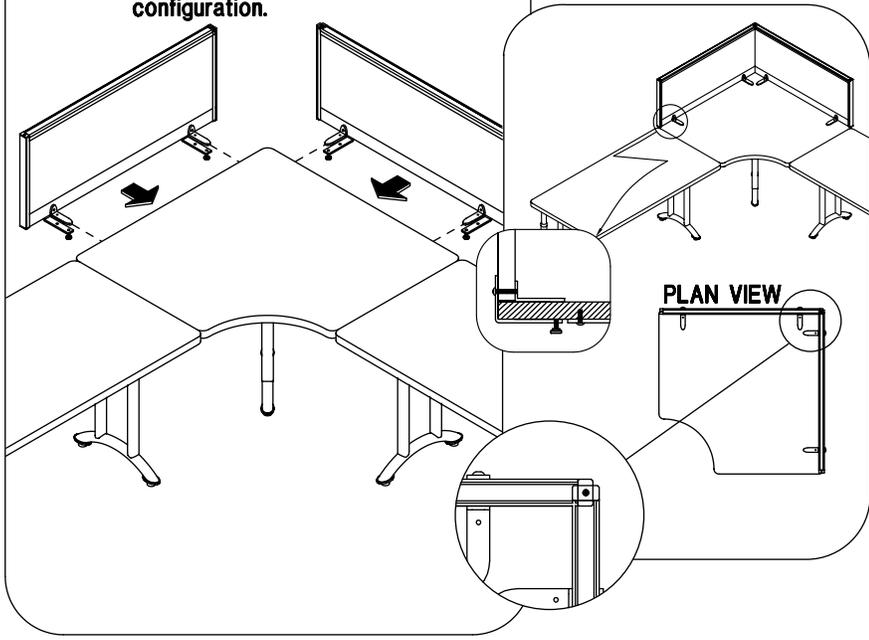
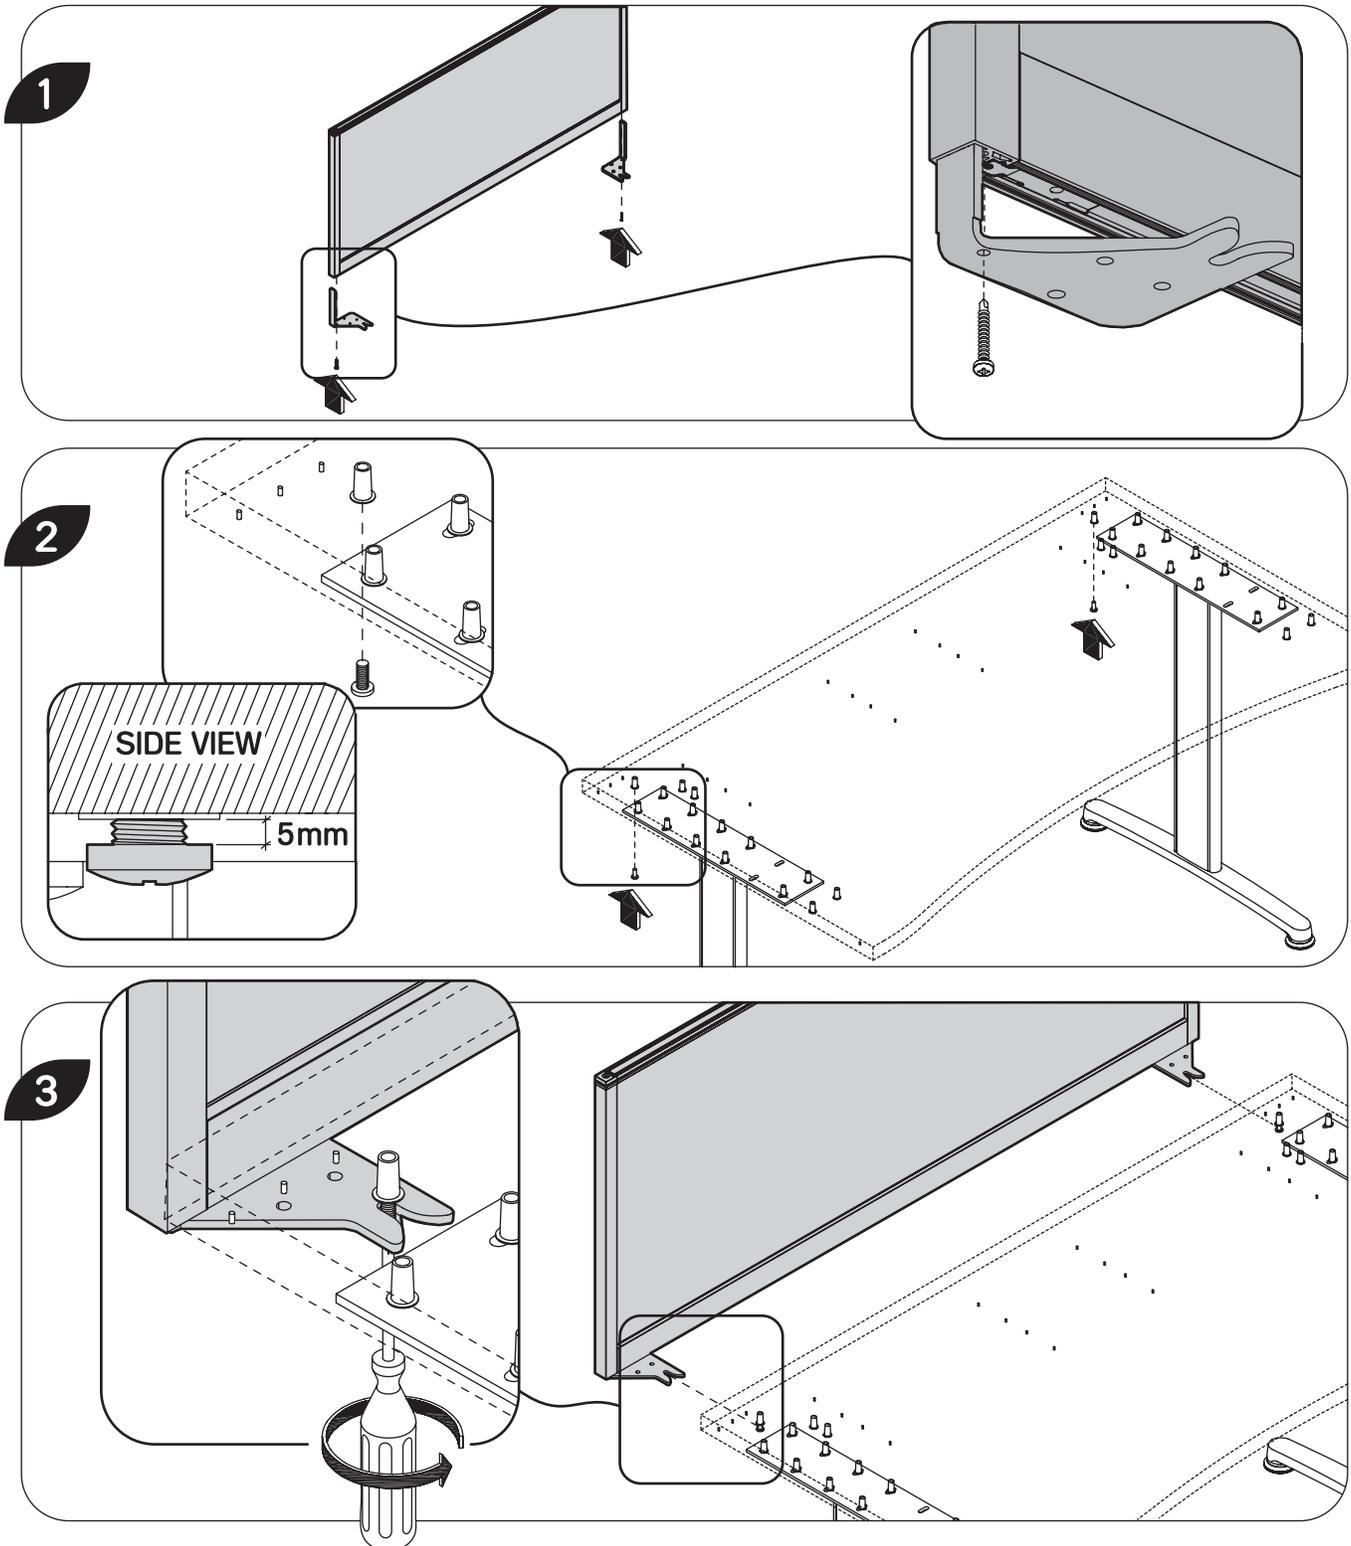


TABLE SCREEN INSTALLATION




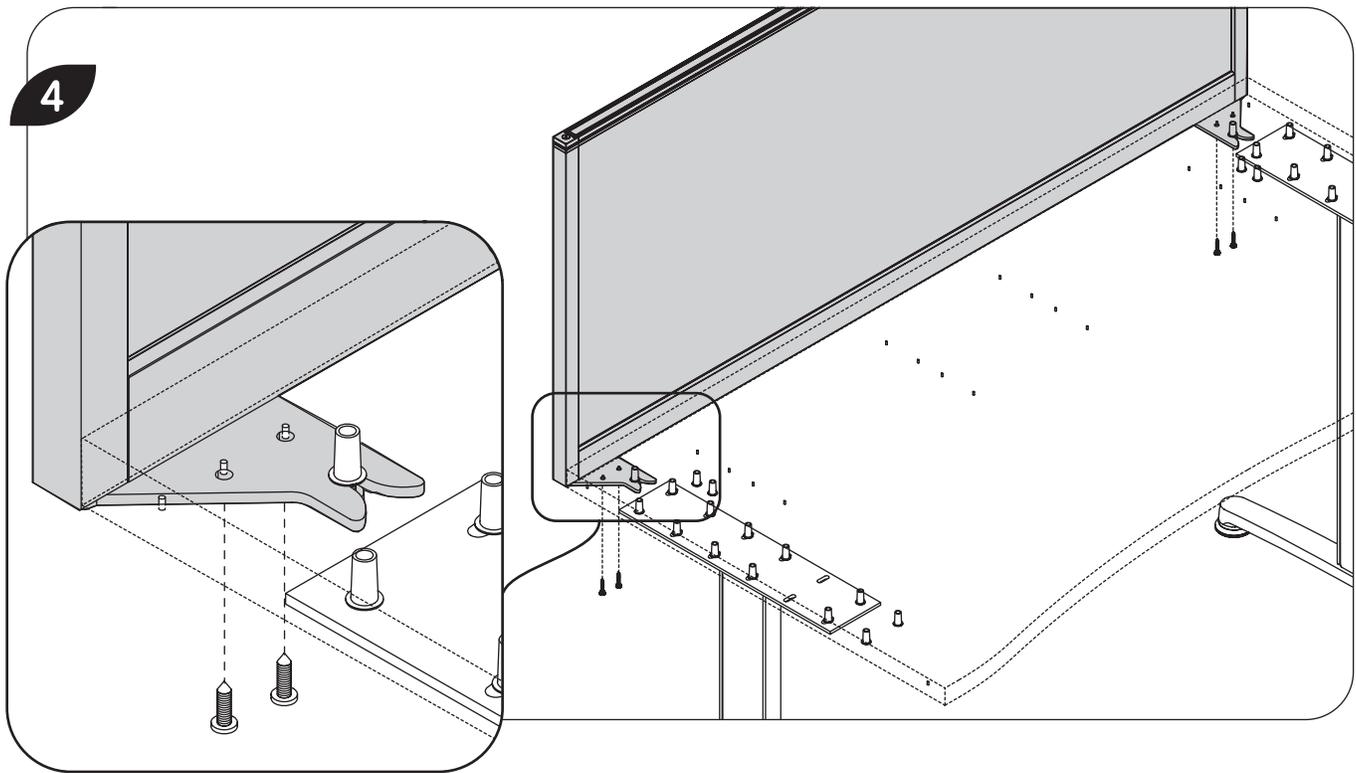



TABLE SCREEN INSTALLATION – POST LEG OPTION

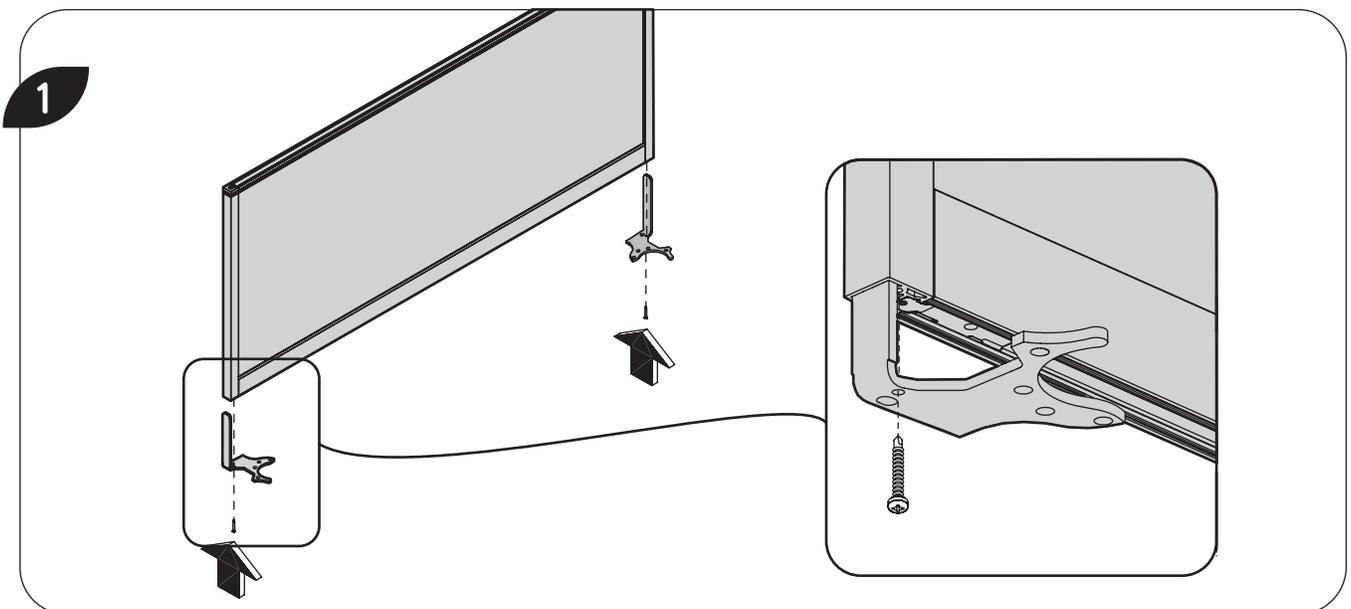

Fabric Lateral Screen
 Translucent Lateral Screen
 Metal Lateral Screen

CTLSF
CTLST
CTLSM

Product

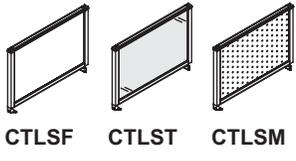

Lateral Screens - Part / Product Identification and What's Included


Ref.	Illustration	Description	Part No. / Prod. Code	Qty.	Kit No. / Assy. No.
A	OR OR	Fabric Lateral Screen	N80-63360 +XX+ZZ	1	
		Translucent Lateral Screen	N80-63359 +XX+ZZ		
		Metal Lateral Screen	N80-63358 +XX+ZZ		
B		Lateral Screen Bracket	A15-63212 +XX	1	
C		#8 - 18 x 1" Flat Quadrex Head Screw, Zc	E04-50005	2	X80-63048
D		#12 x 3/4" Pan Quadrex Head Wood Screw, Zinc	E04-50017	2	
E		Plastic Junction	B02-50095	1	

Not Included

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.	Kit No. / Assy. No.
F		Table with Table Screen	As per Order	N/A	
G		Table with Table Screen	As per Order	N/A	
H		#1/4 - 20 x 5/8" Cross/Square Comb. Round Head M. Screw	E01-50403	N/A	


TOOLS REQUIRED: Cross Drive #2 and #3 or Square Drive #2 and #3

Application

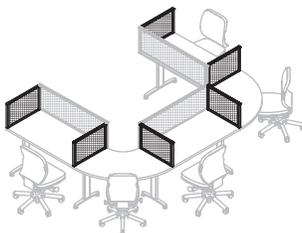


Lateral Screens


LATERAL SCREEN INSTALLATION

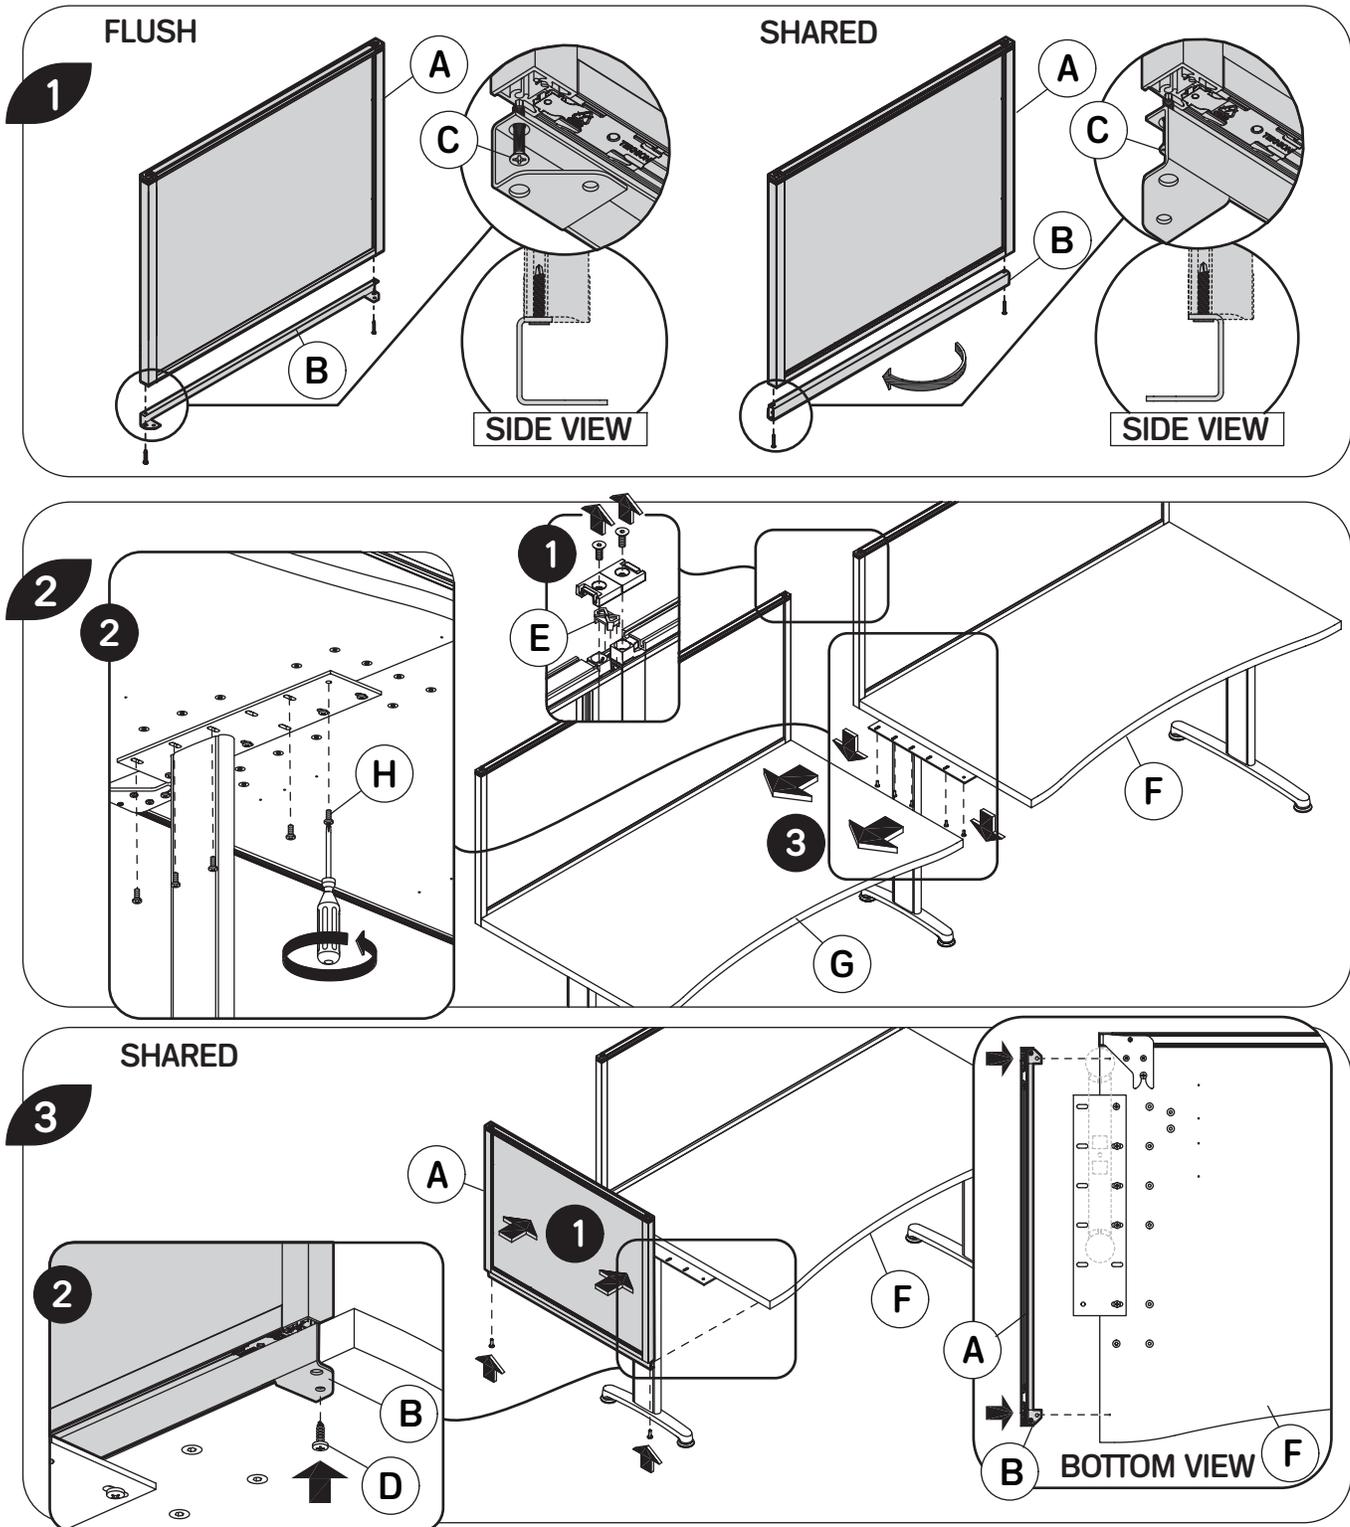

Lateral Screens

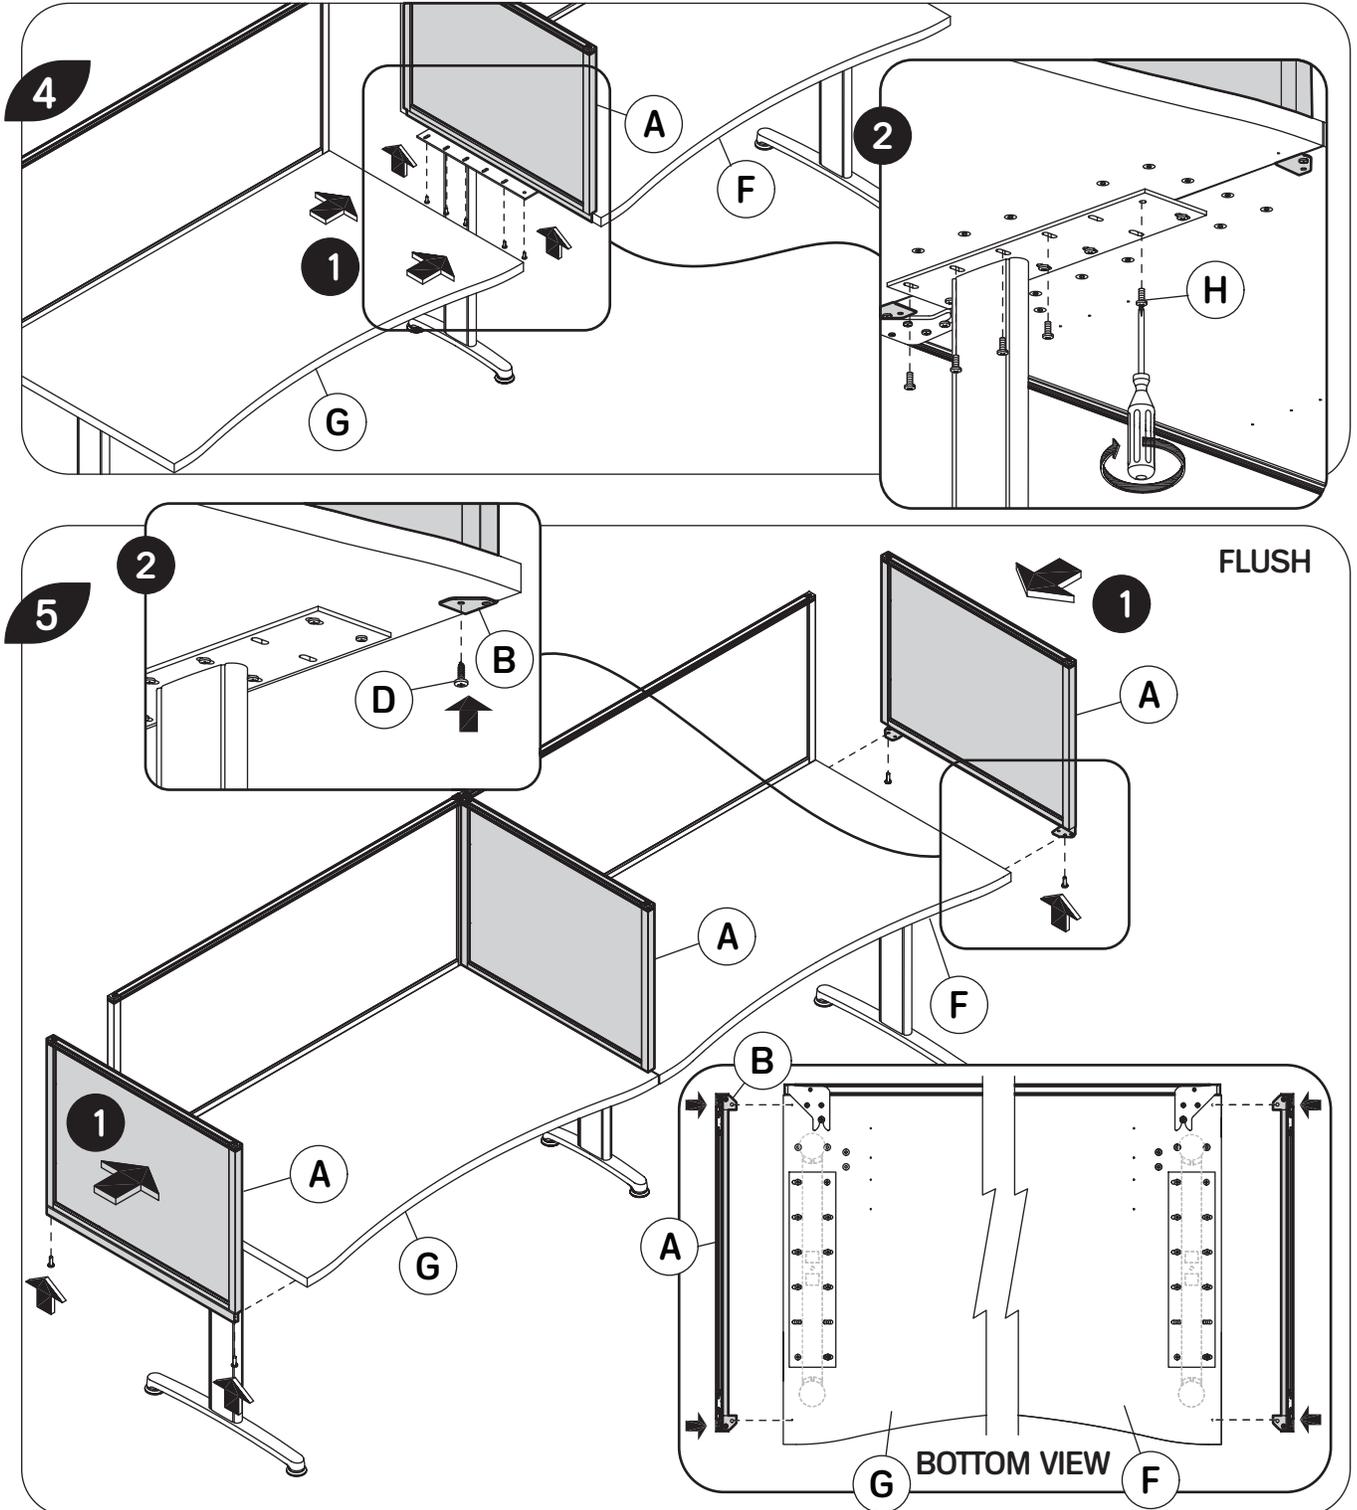


Lateral Screens

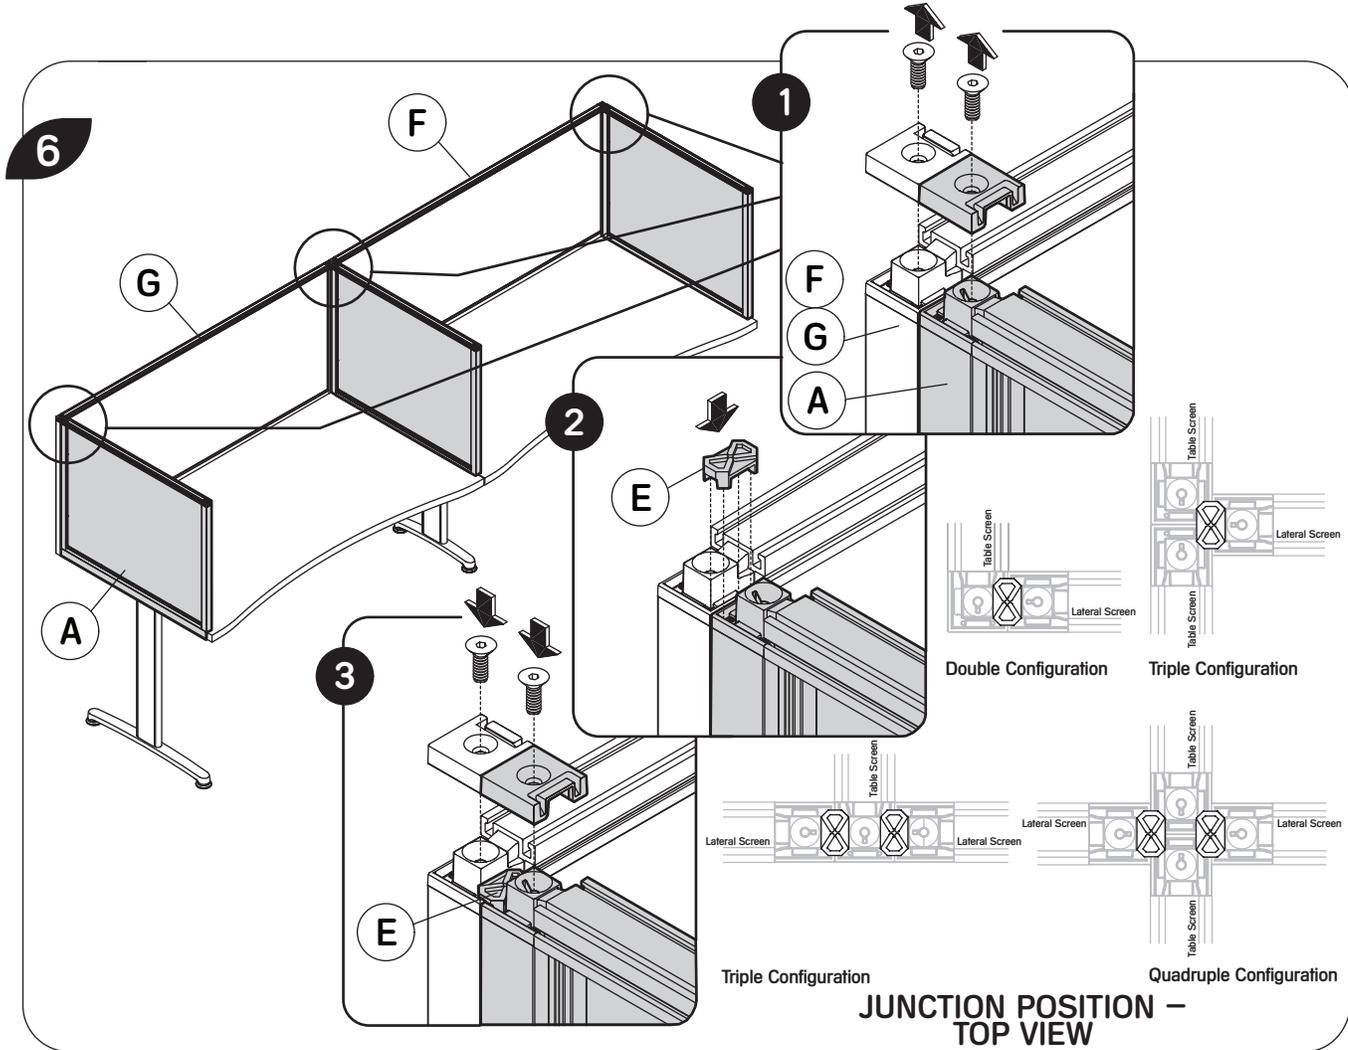


LATERAL SCREEN POSITION

Double Configuration

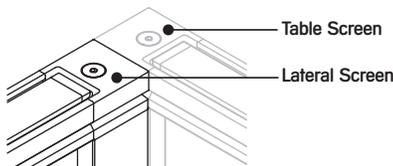


1x Table Screen
1x Lateral Screen

Triple Configuration

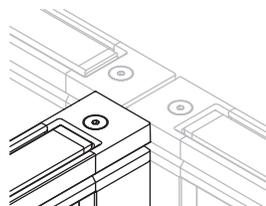


2x Table Screens
1x Lateral Screen

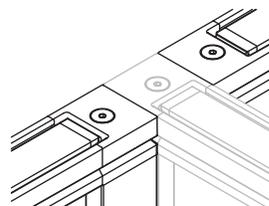

1x Table Screen
2x Lateral Screens


Quadruple Configuration

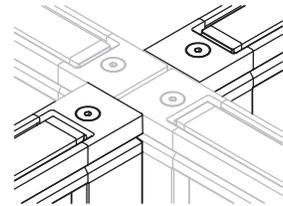

2x Table Screens
2x Lateral Screens

CSTBG, CSTBF, CSTLG, CSTLF -


Back Table Screen + Lateral Table Screen (Glass or Fabric) / Écran arrière pour table + Écran de table latéral (vitré ou tissu)

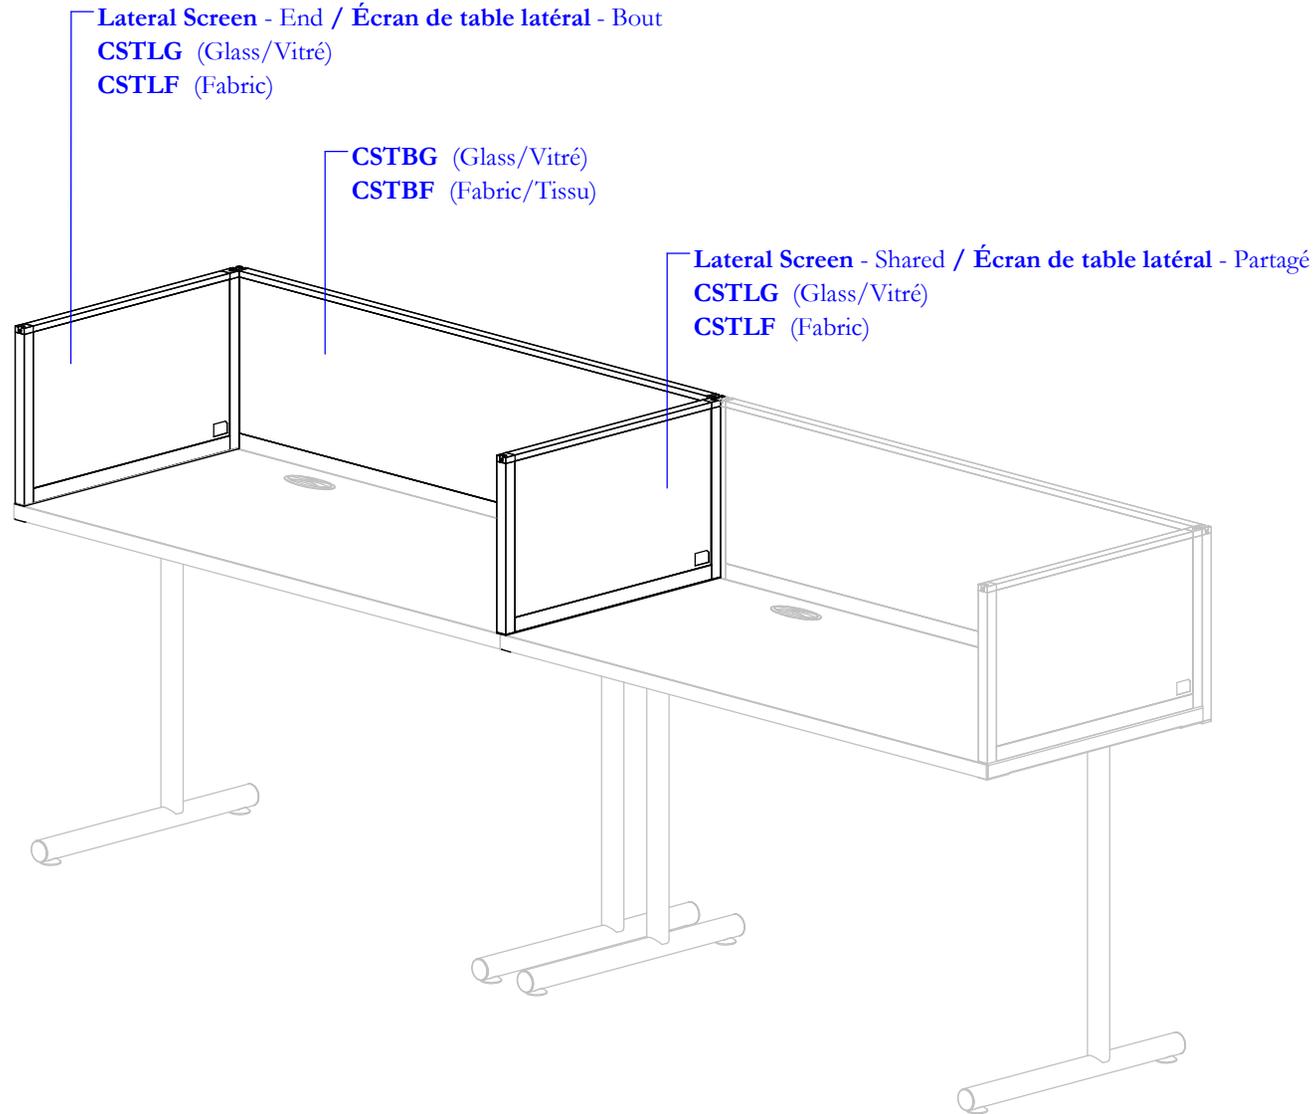


CSTBG, CSTBF, CSTLG, CSTLF -

Back Table Screen + Lateral Table Screen (Glass or Fabric) / Écran arrière pour table + Écran de table latéral (vitré ou tissu)

1

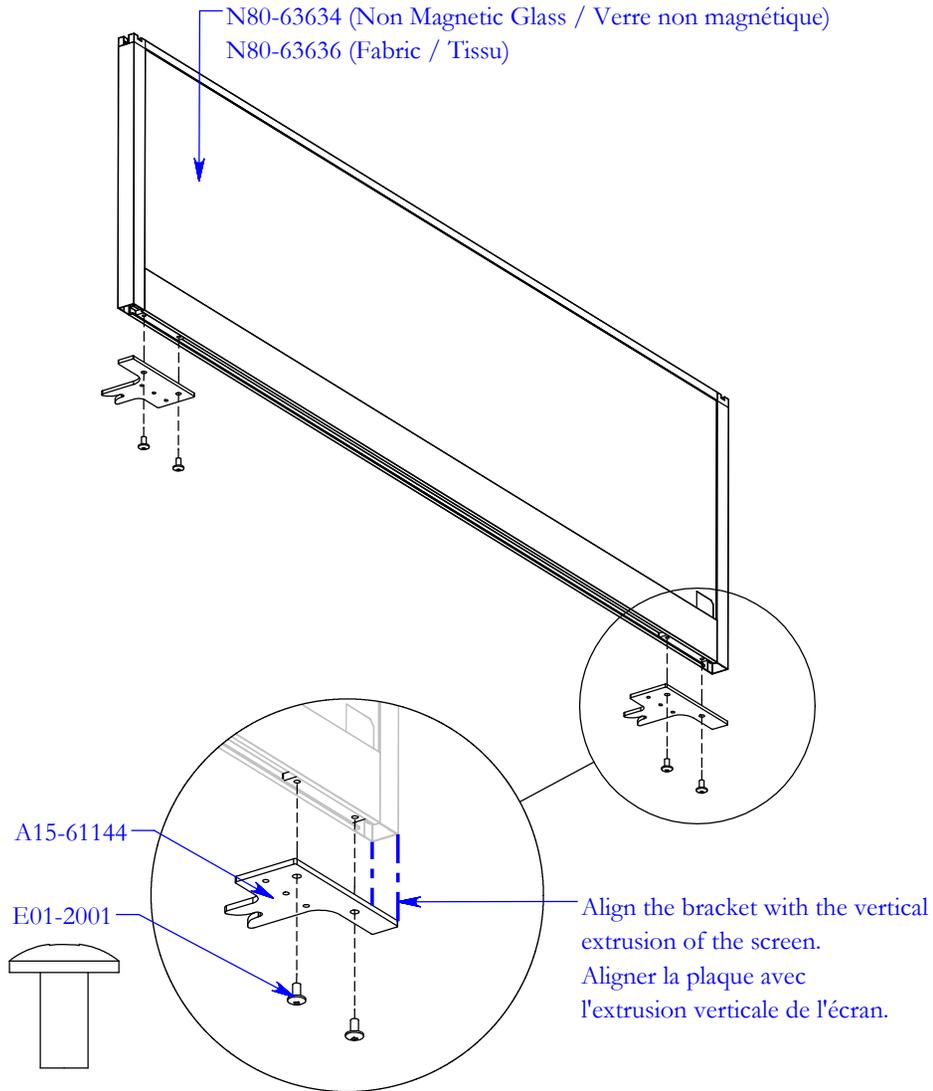


2

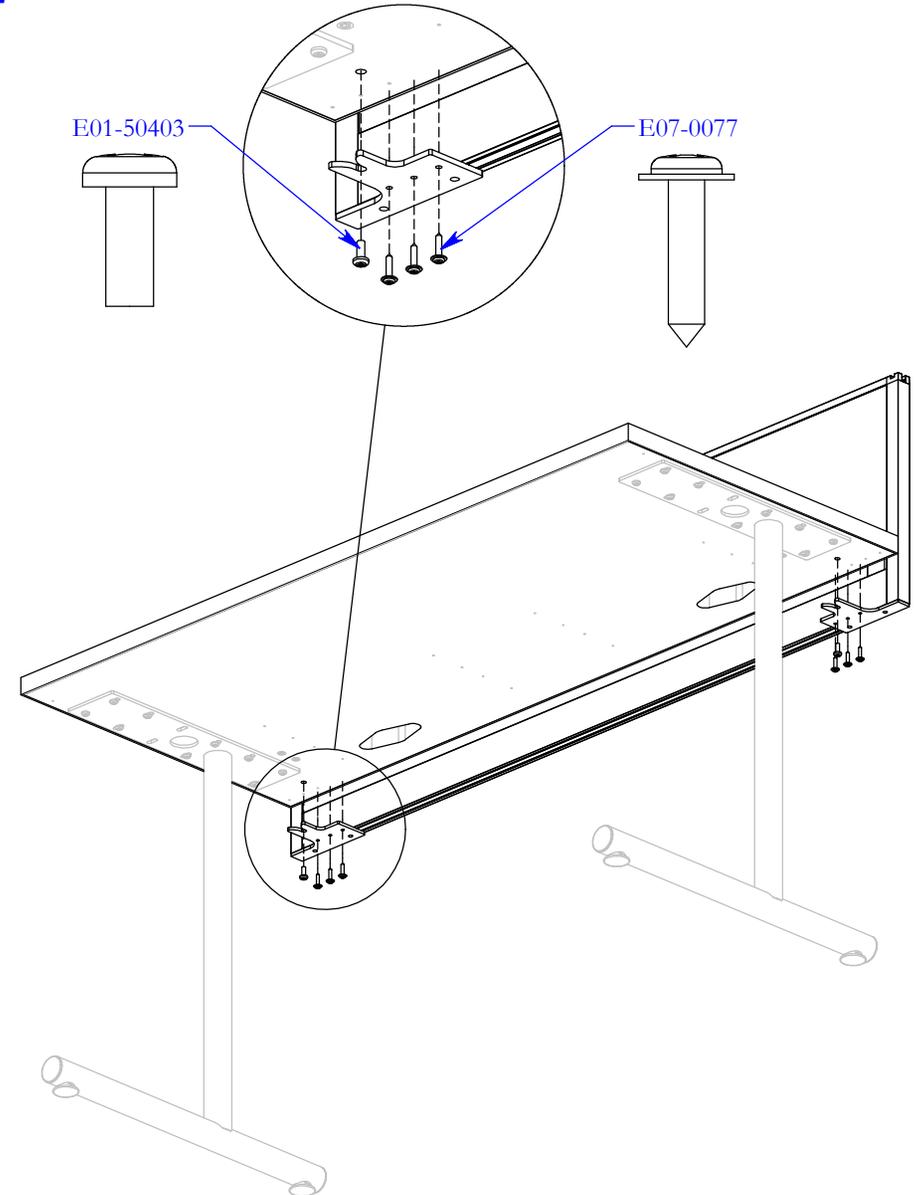


3

END SCREEN ÉCRAN DE BOUT

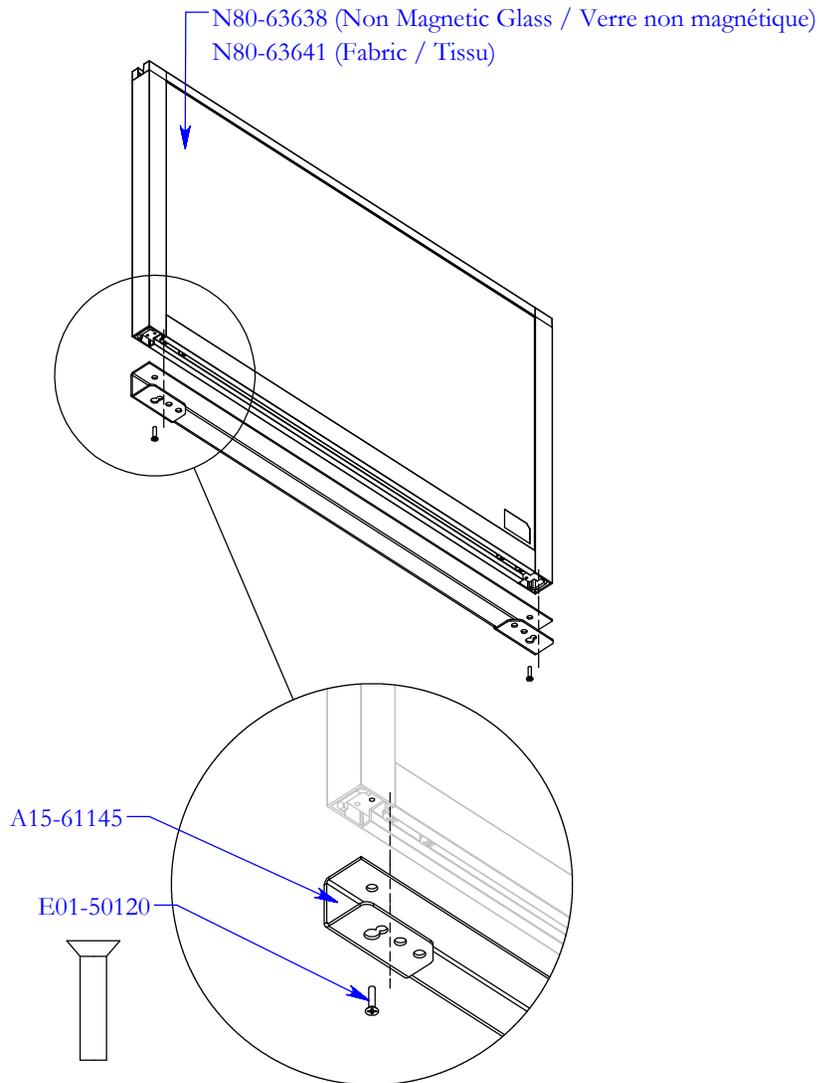


SHARED SCREEN ÉCRAN PARTAGÉ

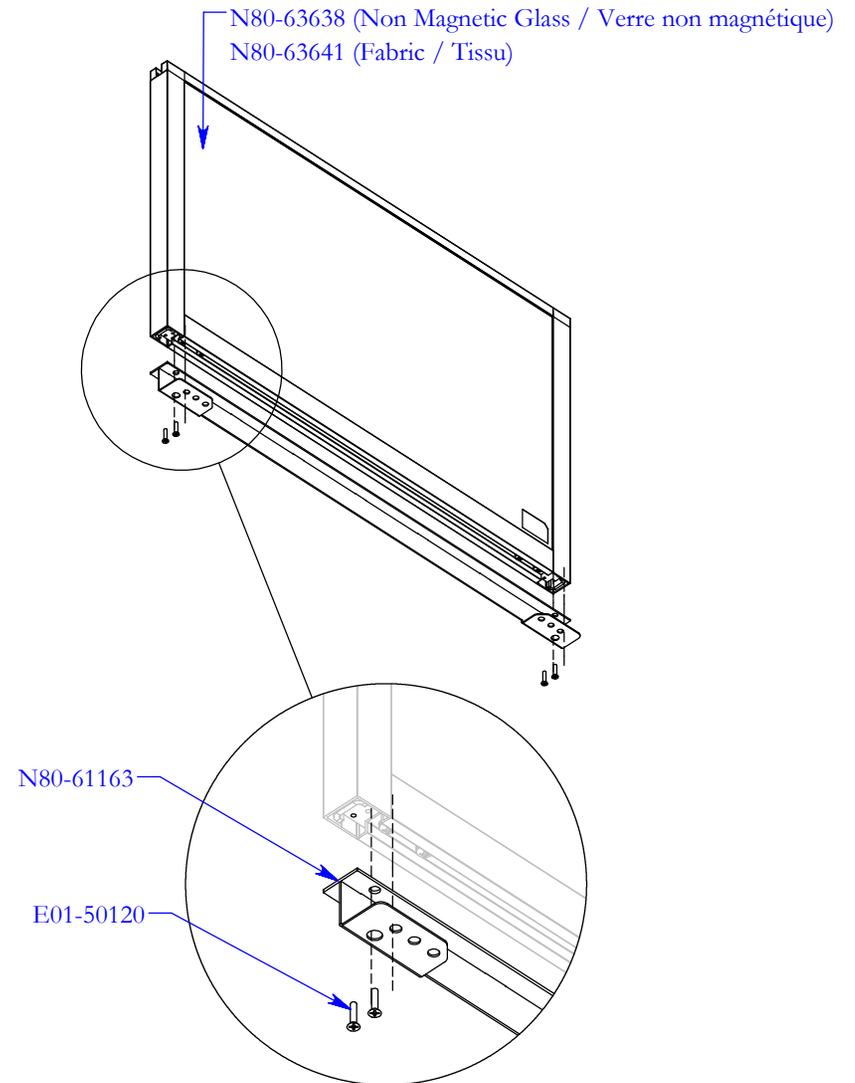


CSTBG, CSTBF, CSTLG, CSTLF -

Back Table Screen + Lateral Table Screen (Glass or Fabric) / Écran arrière pour table + Écran de table latéral (vitré ou tissu)

4

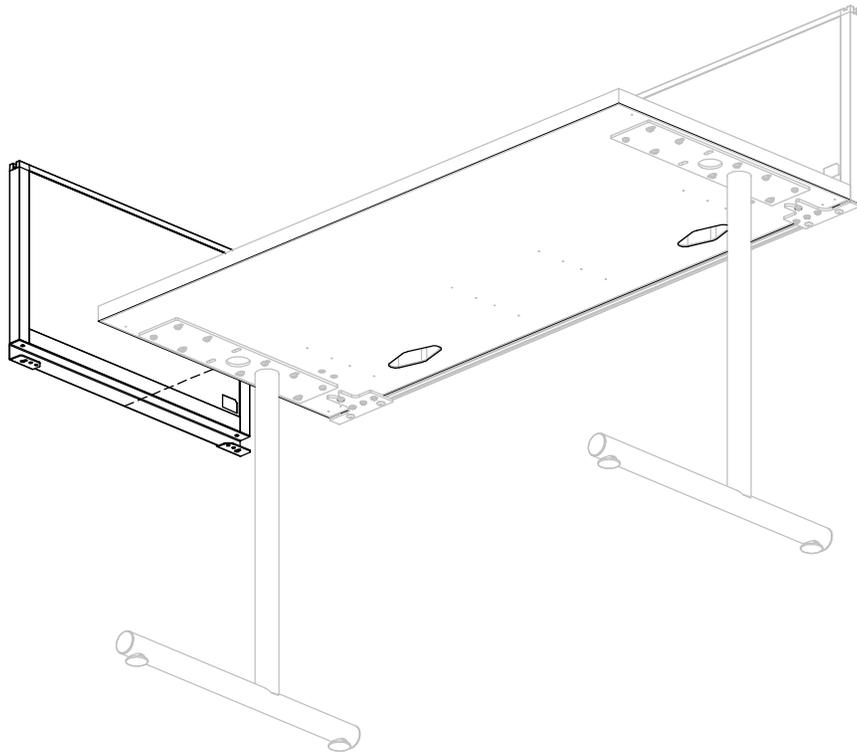


5

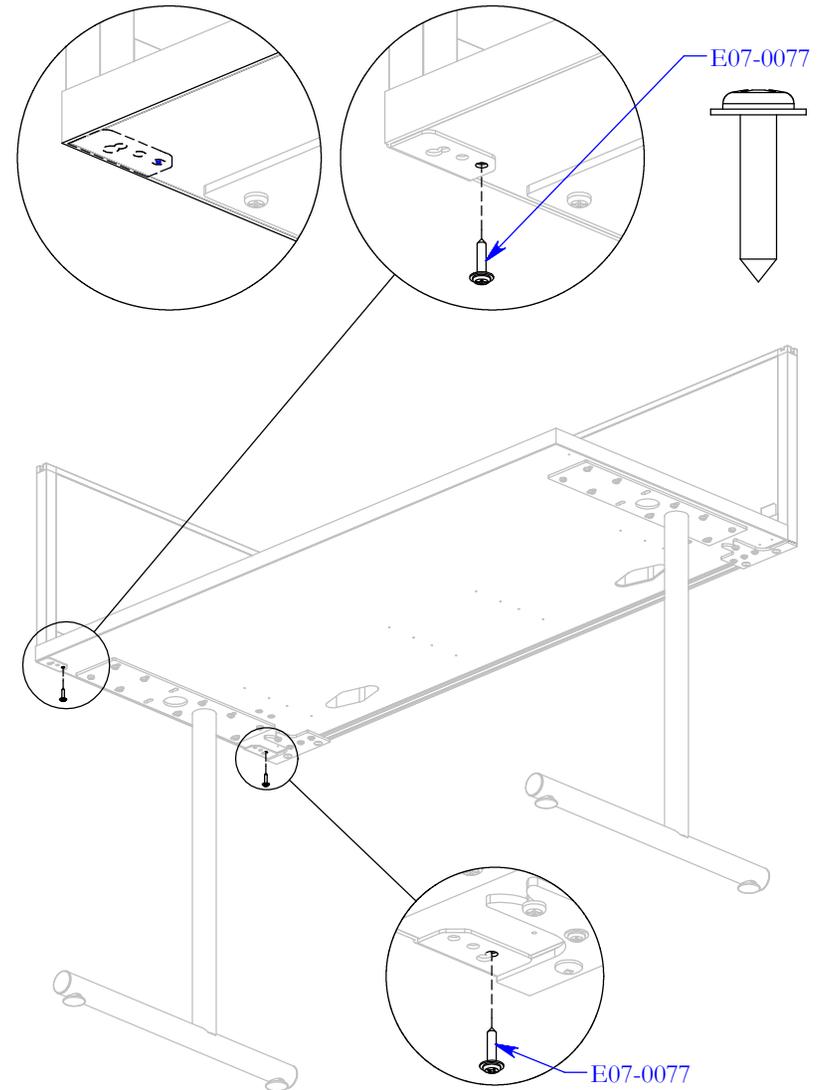

CSTBG, CSTBF, CSTLG, CSTLF -

Back Table Screen + Lateral Table Screen (Glass or Fabric) / Écran arrière pour table + Écran de table latéral (vitré ou tissu)


6

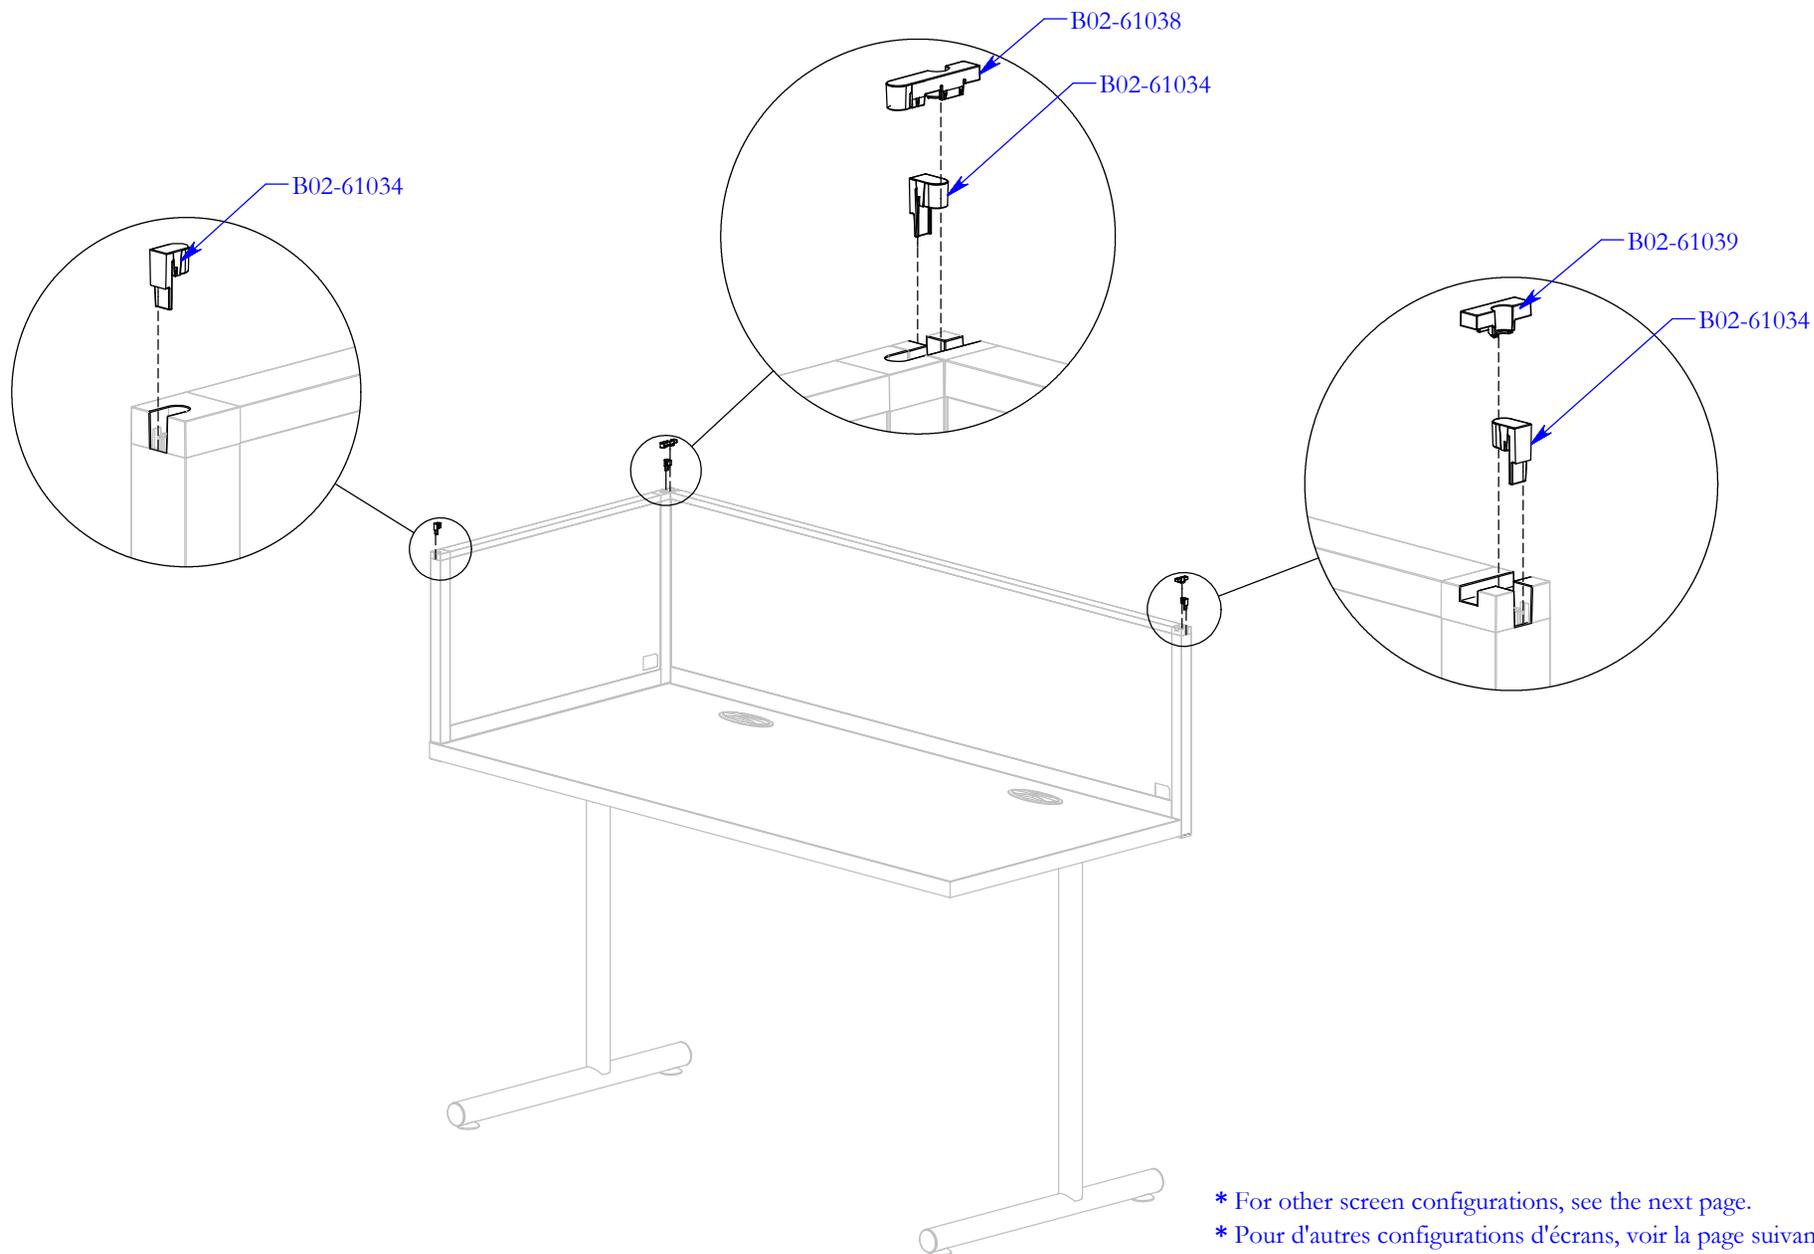



* For other screen configurations, see the next page.
 * Pour d'autres configurations d'écrans, voir la page suivante.

CSTBG, CSTBF, CSTLG, CSTLF -


Back Table Screen + Lateral Table Screen (Glass or Fabric) / Écran arrière pour table + Écran de table latéral (vitré ou tissu)

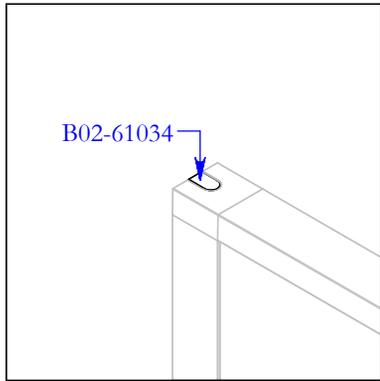



1 Back Table Screen
1 Écran arrière pour table

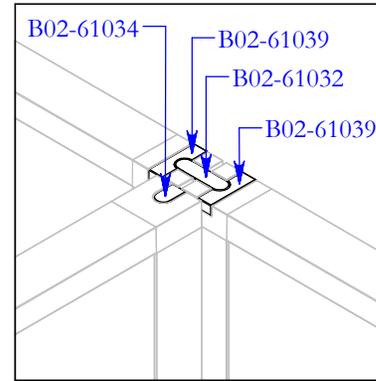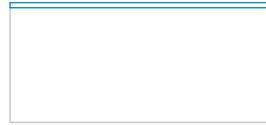


2 Back Table Screens
1 Lateral Table Screen (shared)
2 Écrans arrière pour table
1 Écran de table latéral (partagé)

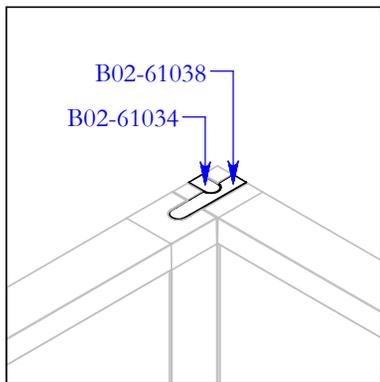


1 Back Table Screen
1 Lateral Table Screen (end)
1 Écran arrière pour table
1 Écran de table latéral (bout)

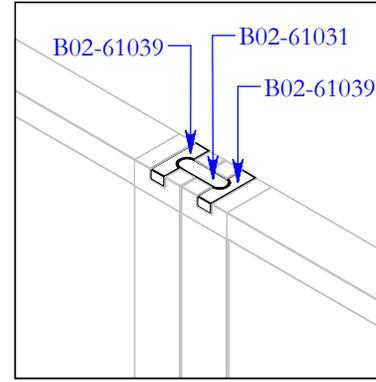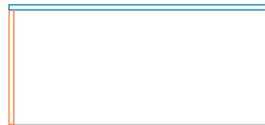


2 Back Table Screens
2 Écrans arrière pour table

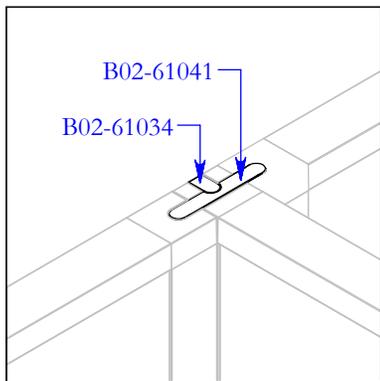

1 Back Table Screen
2 Lateral Table Screens (end)
1 Écran arrière pour table
2 Écrans de table latéral (bout)

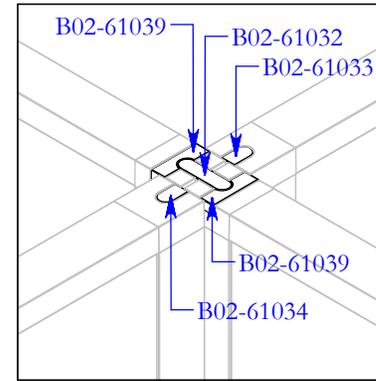

2 Back Table Screens
2 Lateral Table Screens (shared)
2 Écrans arrière pour table
2 Écrans de table latéral (partagés)

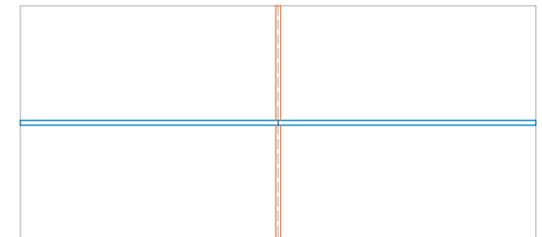

Quick Release Linking System

CAQR

Product



CAQR


TOOLS REQUIRED:
Cross or Square Drive #3

CAQR - Part / Product Identification and What's Included

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.	Kit No. / Assy. No.
A		Quick Release Linking Plate	A15-63022	1	
B		#1/4" - 20 x 3/4" Cross Handwheel	E03-50907	2	X80-50008

Not Included


Ref.	Illustration	Description	Part No. / Prod. Code	Qty.	Kit No. / Assy. No.
C		Training Worksurface or Flip-Top Table	As per Order CTFT	N/A	
D		Leg	As per Order	N/A	
E		#1/4" - 20 x 5/8" UNC Cross/Square Comb. Round Head M. Screw	E01-50403	N/A	

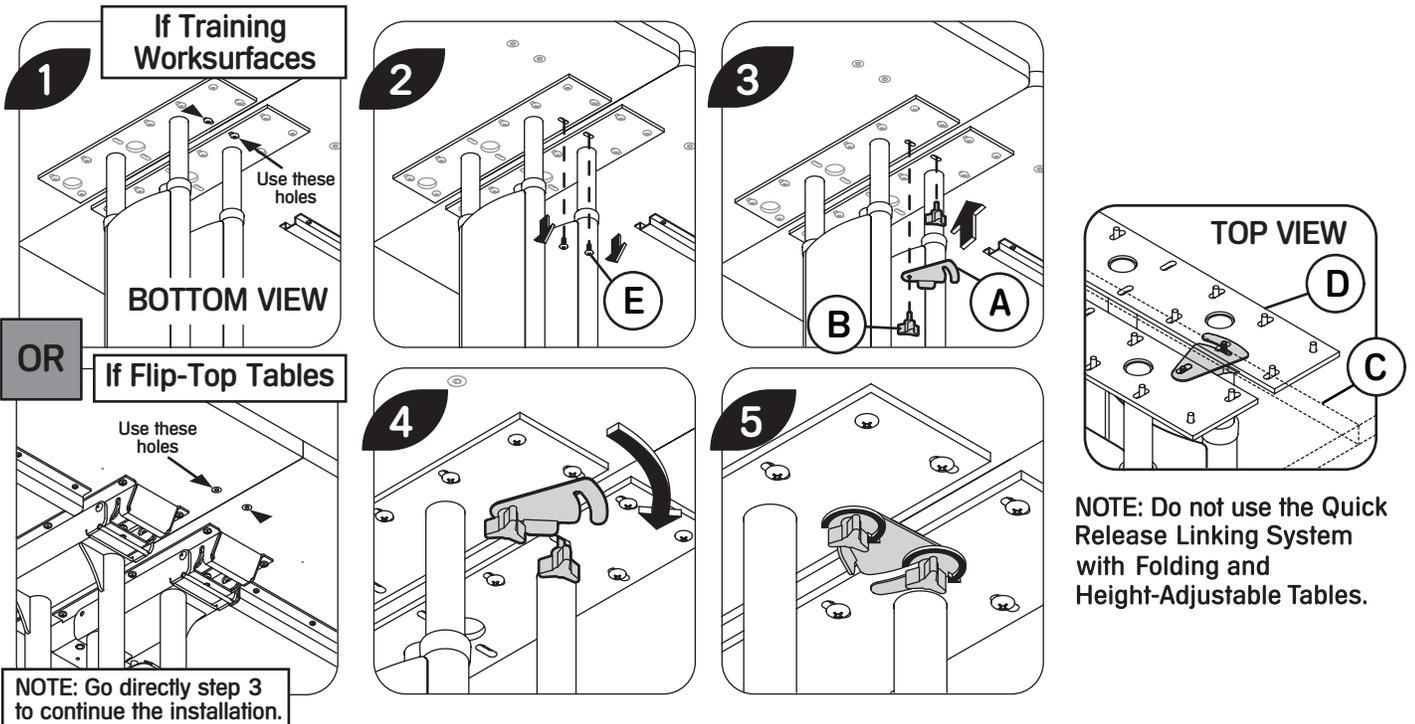

Mobile Table Trolley



CTMT

Product

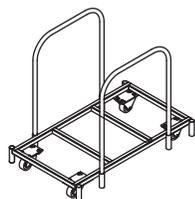


CTMT


CTMT - Part / Product Identification and What's Included

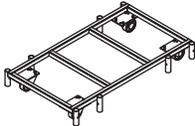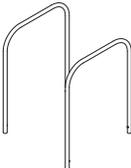Ref.	Illustration	Description	Part No. / Prod. Code	Qty.
A		Mobile Trolley Frame	N80-63153	1
B		Mobile Trolley Handles	A15-63152	2

Application

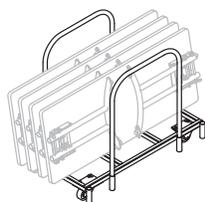

MOBILE TABLE TROLLEY INSTALLATION

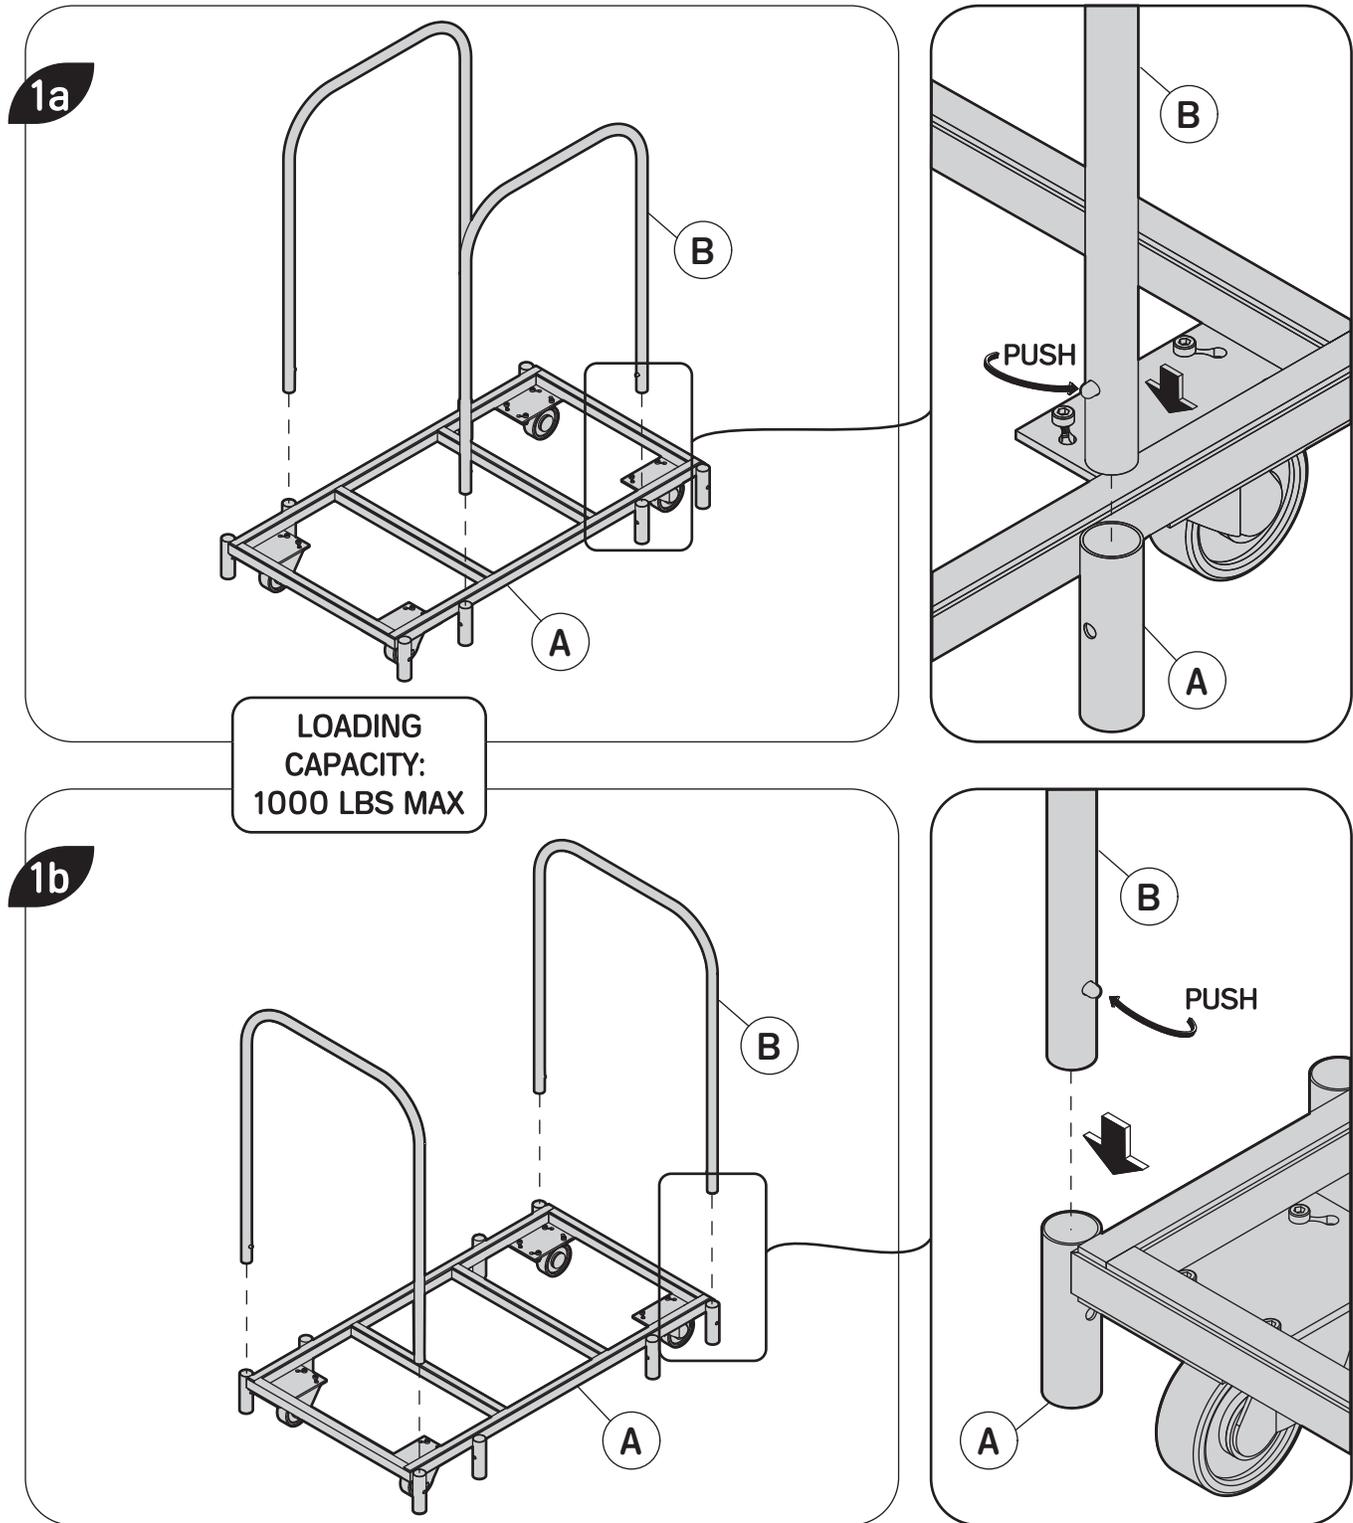


tables & collaborative spaces *Installation Guides*
Training Section – Lighting, Electrics & Communications

RLPP – Under-Worksurface Plug-In Power Bar
 CLWP – Under-Worksurface Power Outlet
 CLBX – Splitter Box

No. 1203

Product

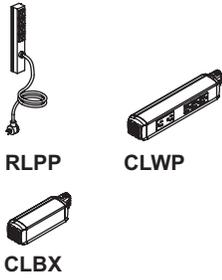

**POWER BARS -
 Part / Product Identification and What's Included**

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.
A		Under-Worksurface Plug-In Power Bar	RLPP	1
B		Under-Worksurface Power Outlet	CLWP	1
C		Splitter Box	CLBX	1
D		Connector End Cap (includes with CLWP & CLBX)	PB02-E041	2
E		Base Feed	CLBF	1
F		Pass-Through	CLPH	1

Part / Product Identification and NOT INCLUDED

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.
G		Electrical Tray	CTET	1

CAUTION:


Installation of electrical harness must be made under supervision of a licenced electrician in accordance with applicable codes and regulations.

Use of this product is subject to codes and regulations applicable at the site of installation.

Reference Installation Guides:
 No. 1197 Tables & Collaborative Spaces “Electrical Tray CTET”

For additional information on this installation contact Teknion | Roy & Breton **Technical Support**.
Issue Date: 2019 April 1


INSTALLATION

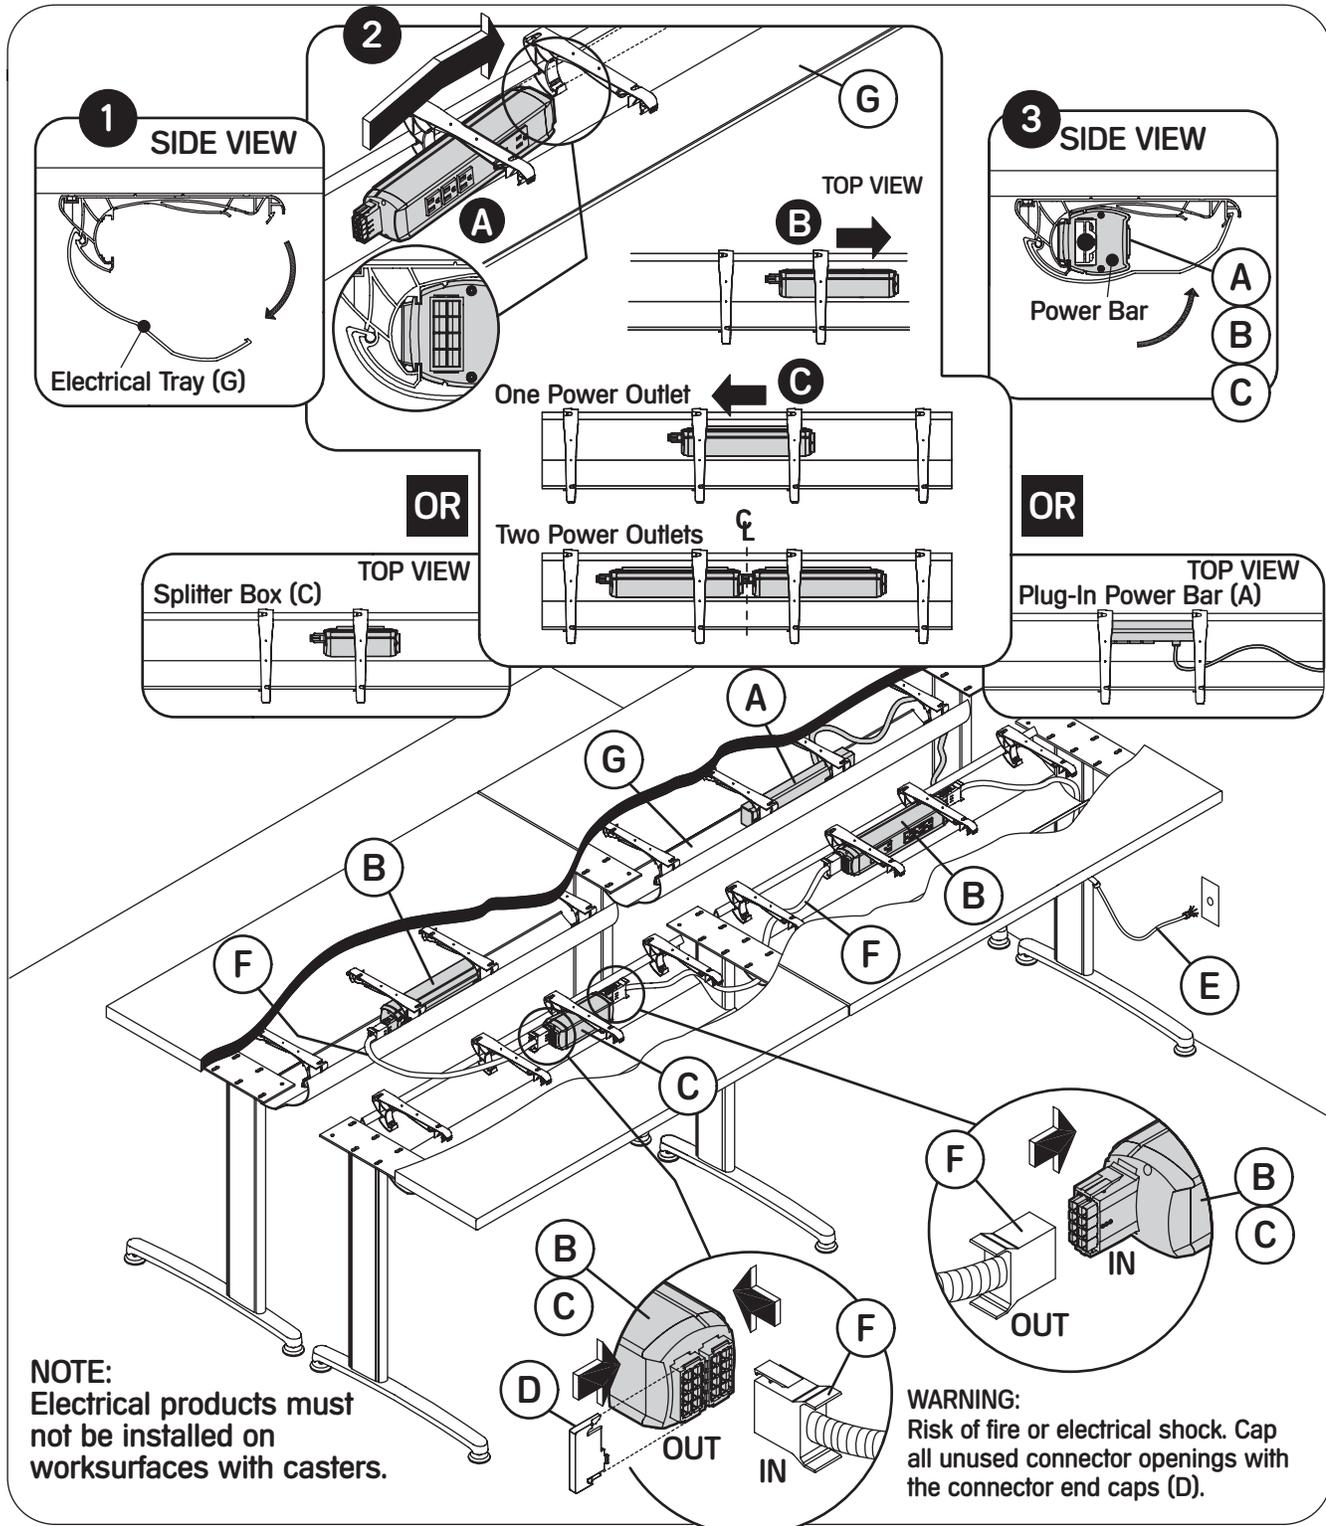

Base Feed
Pass-Through

CLBF
CLPH

Product

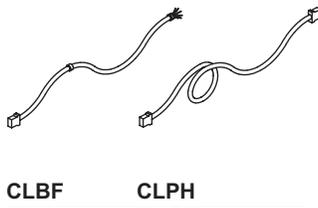

CLBF CLPH


Power Harness - Part / Product Identification and What's Included

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.
A		Base Feed	CLBF	1
B		Pass-Through	CLPH	1

Not Included

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.
C		Under-Worksurface Power Outlet	CLWP	N/A
D		Electrical Tray	CTET	N/A
E		Training Table	As per Order	N/A

Application

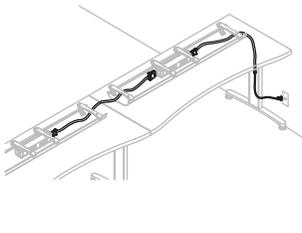

CAUTION:

Installation of electrical harness must be made under supervision of a licenced electrician in accordance with applicable codes and regulations.

Use of this product is subject to codes and regulations applicable at the site of installation.

Reference Installation Guides:
No. 1197 Tables & Collaborative Spaces "Electrical Tray CTET"

For additional information on this installation contact Teknion | Roy & Breton **Technical Support**.


Issue Date: 2014 January 27

Base Feed
Pass-Through

CLBF
CLPH

INSTALLATION

NOTE:
Electrical products must
not be installed on
worksurfaces with casters.

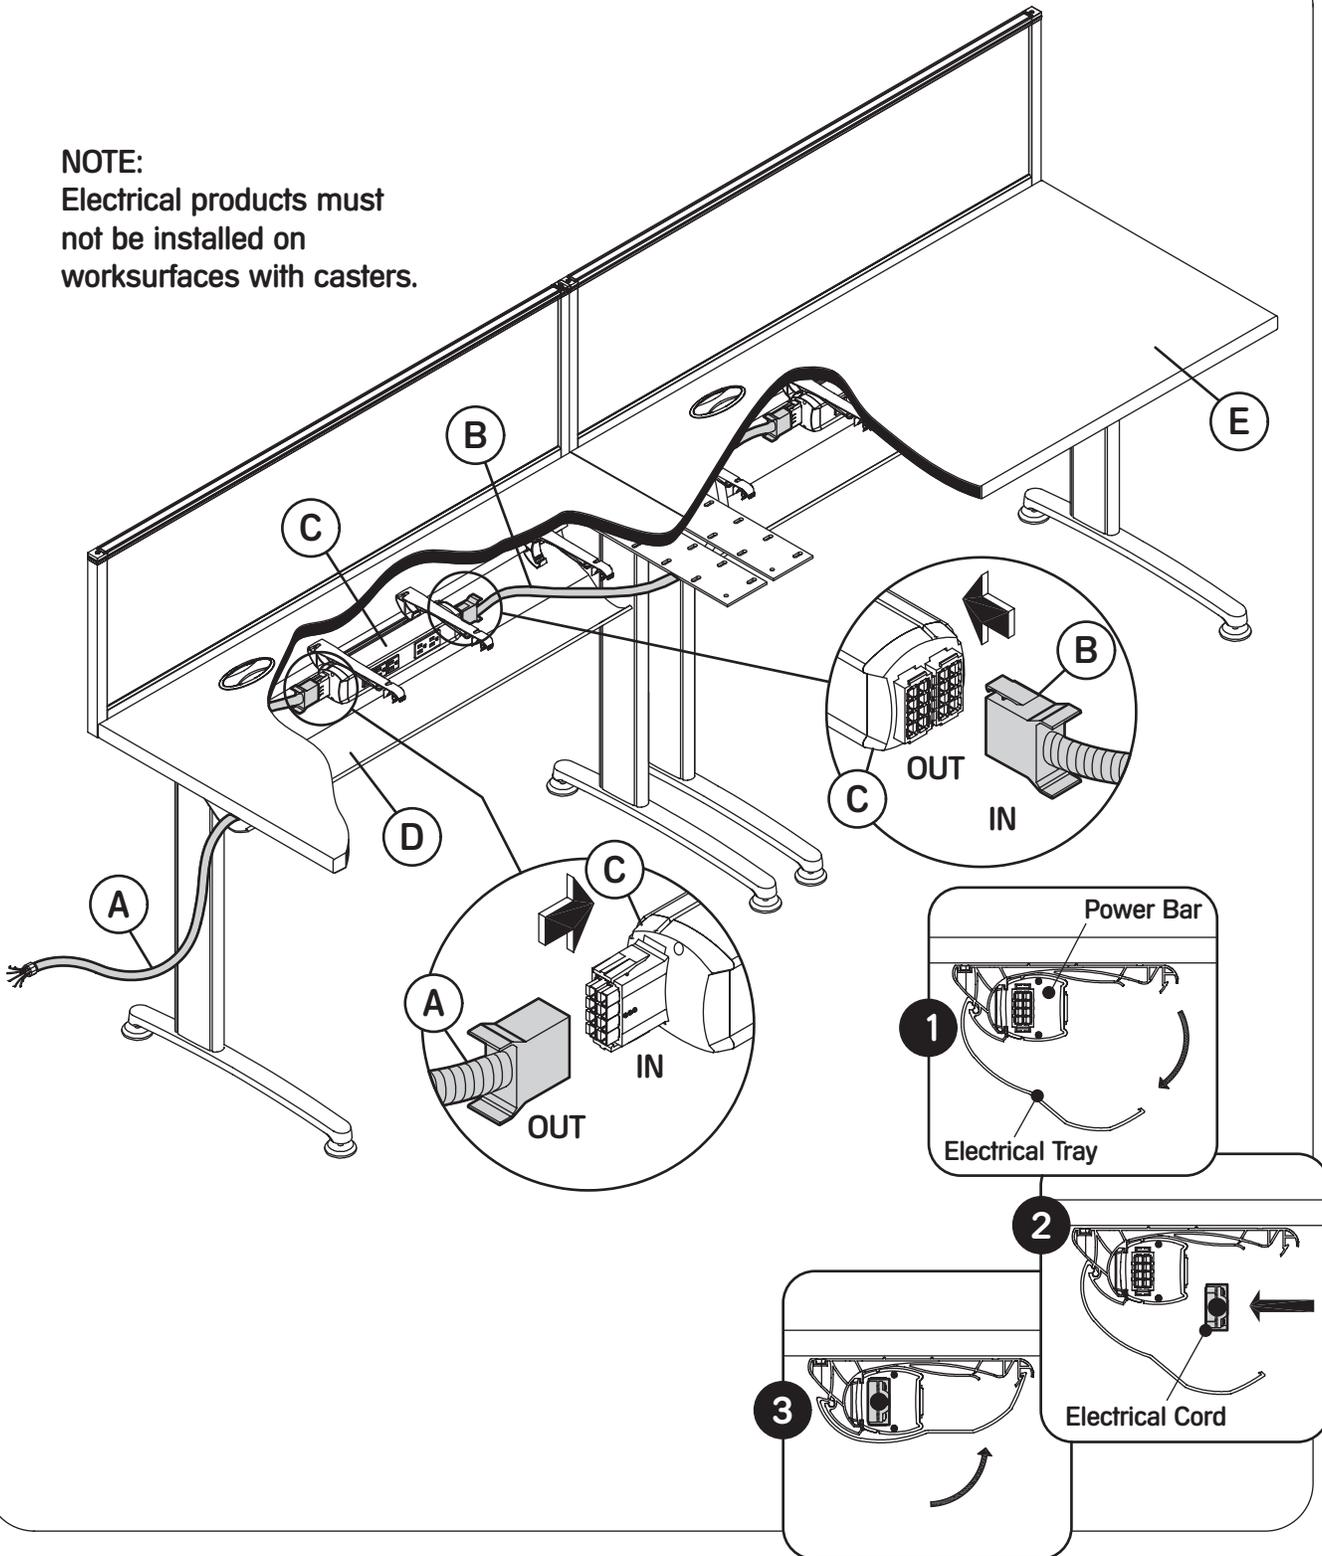

expansion desking, expansion casegoods, tables & collaborative spaces and thesis Installation Guides

Expansion Desking Section – **Lighting, Electrics & Communications**

No. **1297**

Expansion Casegoods Section – **Lighting, Electrics & Communications**

Tables & Coll. Spaces (Expansion Training) Section – **Lighting, Electrics & Communications**

Thesis Section – **Lighting, Electrics & Communications**

BLMC, RLDMC, CLMC or THEPDC Power/Data Center

Product



BLMC, RLDMC, CLMC & THEPDC

TOOLS REQUIRED:






Cross Drive #2, Utility Knife, 1/8" and 3/8" Wood Drill, Power Driver, Jigsaw, and Pencil

Power Data/Center - Part / Product Identification and What's Included

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.
A		Template	N/A	1
B		Power/Data Center (221) (2 Power / 2 USB / 1 Data) or Power/Data Center (301) (3 Power / USB / 1 Data)	BLMC or RLDMC or CLMC or THEPDC	1
C		Face Plates	N/A	12
D		Wire Management Clip	N/A	2
E		Quadrex Flat Head Tapping Screw, Type A Zinc	N/A	2

BLMC, RLDMC, CLMC or THEPDC Power/Data Center


POWER/DATA CENTER INSTALLATION

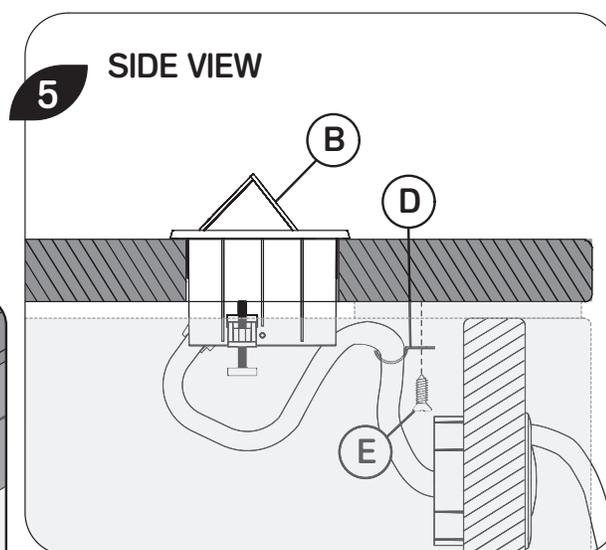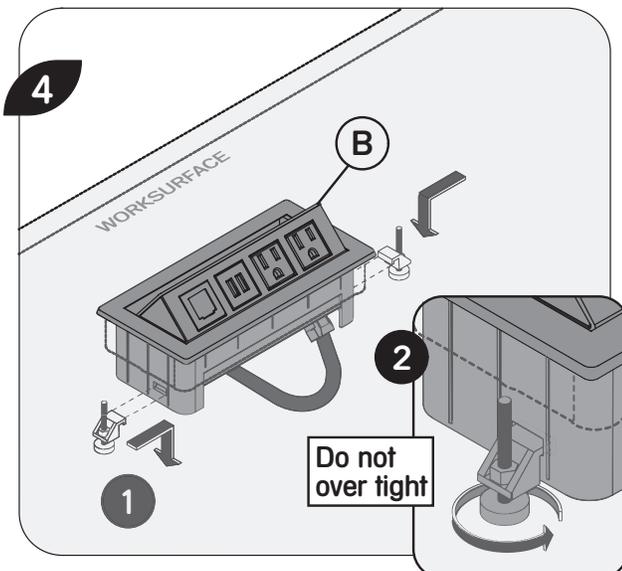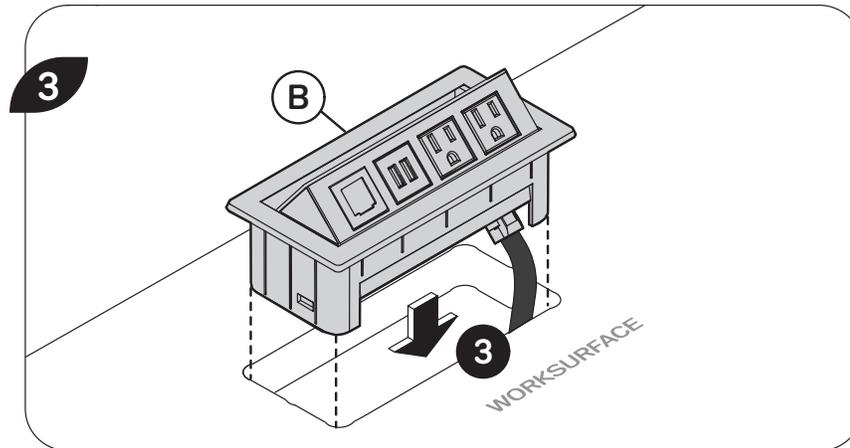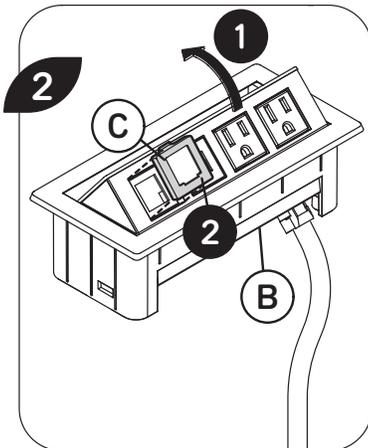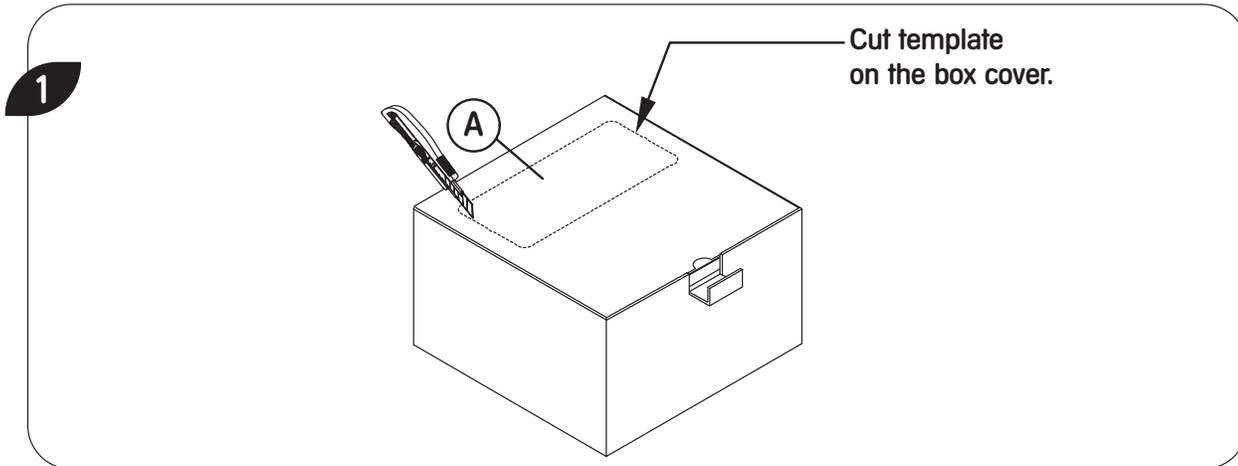

Data Box


CLDB

Product

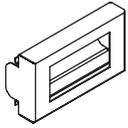


CLDB


CLDB - Part / Product Identification and What's Included

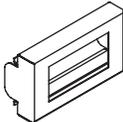Ref.	Illustration	Description	Part No. / Prod. Code	Qty.
A		Data Box	A15-64062	1

Not Included

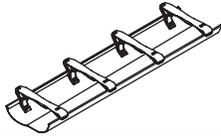Ref.	Illustration	Description	Part No. / Prod. Code	Qty.
B		Electrical Tray	CTET	N/A
C		Data Cable	N/A	N/A
D		Table	As per Order	N/A





Application

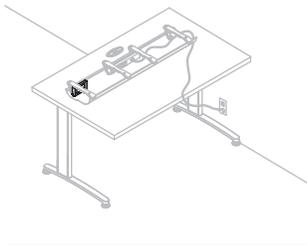

Reference Installation Guides:
No. 1197 Tables & Collaborative Spaces "Electrical Tray CTET"

For additional information on this installation contact Teknion | Roy & Breton **Technical Support**.
Issue Date: 2006 October 16

DATA BOX INSTALLATION

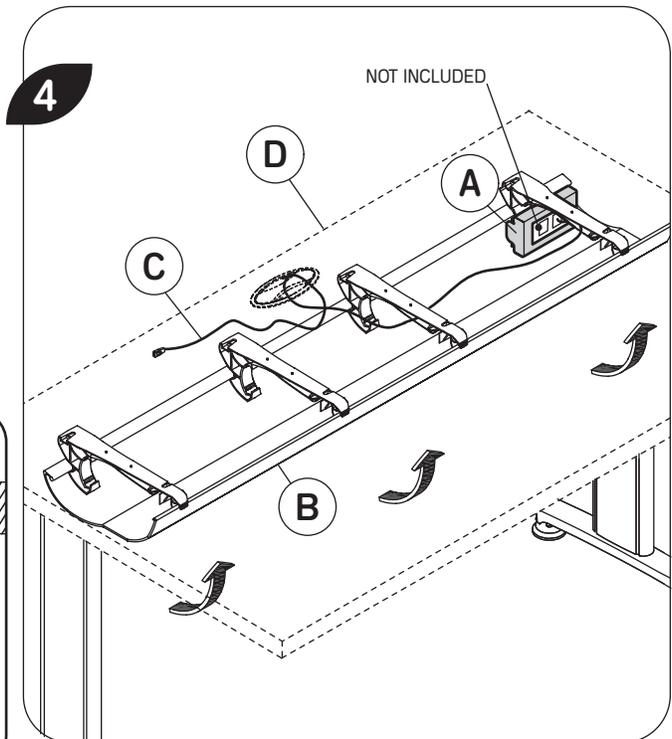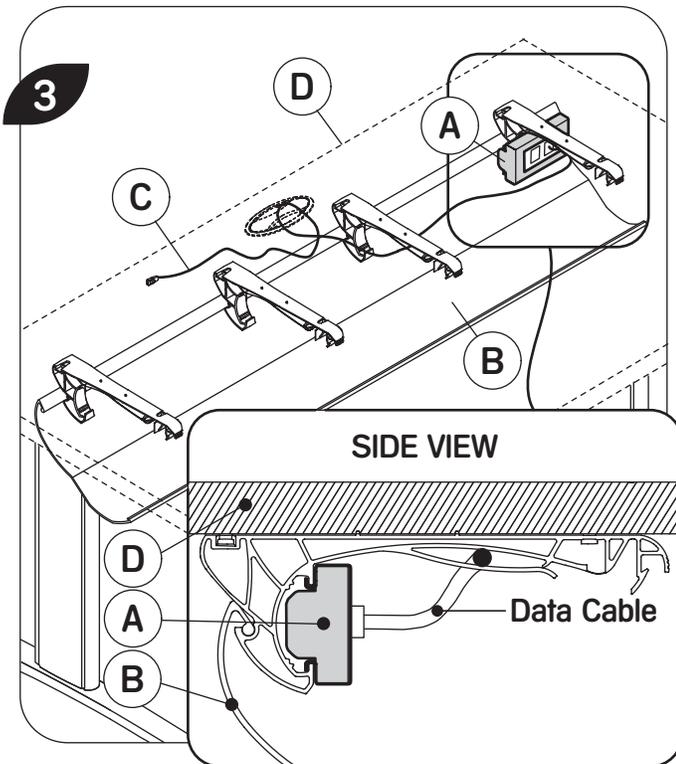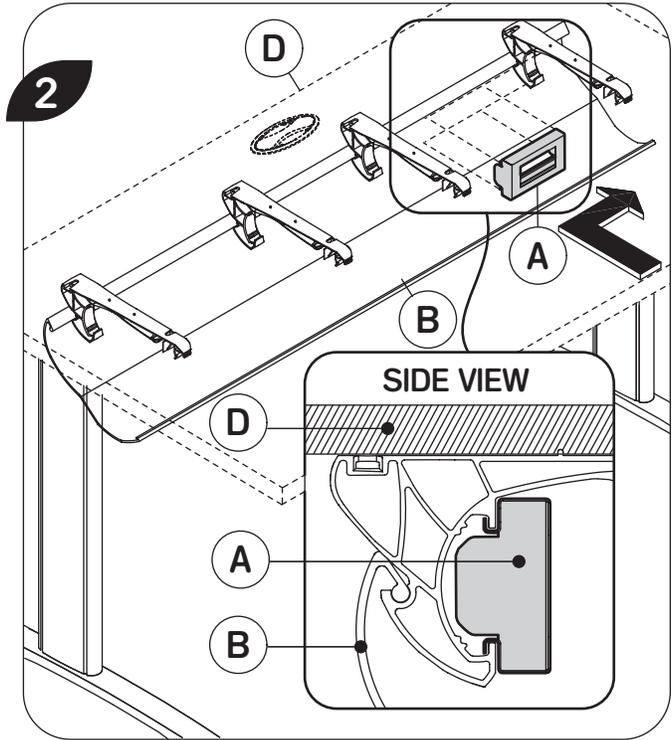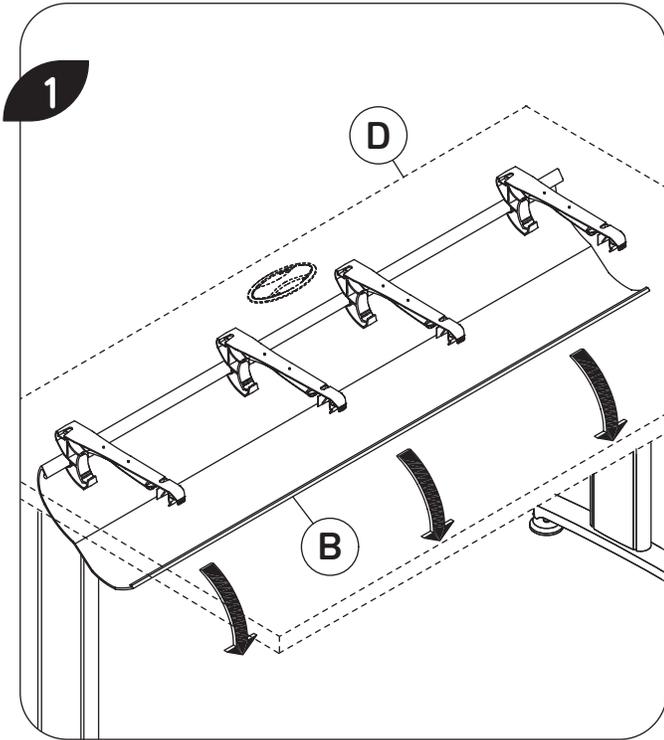

Power/Data Sphere

CLPS

Product




CLPS

CLPS - Part / Product Identification and What's Included




Ref.	Illustration	Description	Part No. / Prod. Code	Qty.
A		Power/Data Sphere	CLPS	1

Part / Product Identification and NOT INCLUDED

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.
B		Data Faceplate	N/A	As per Order
C		Coupler/Jack	N/A	As per Order
D		Data Cable	N/A	As per Order
E		Table	As per Order	N/A

TOOLS REQUIRED: Power Driver

POWER/DATA SPHERE INSTALLATION

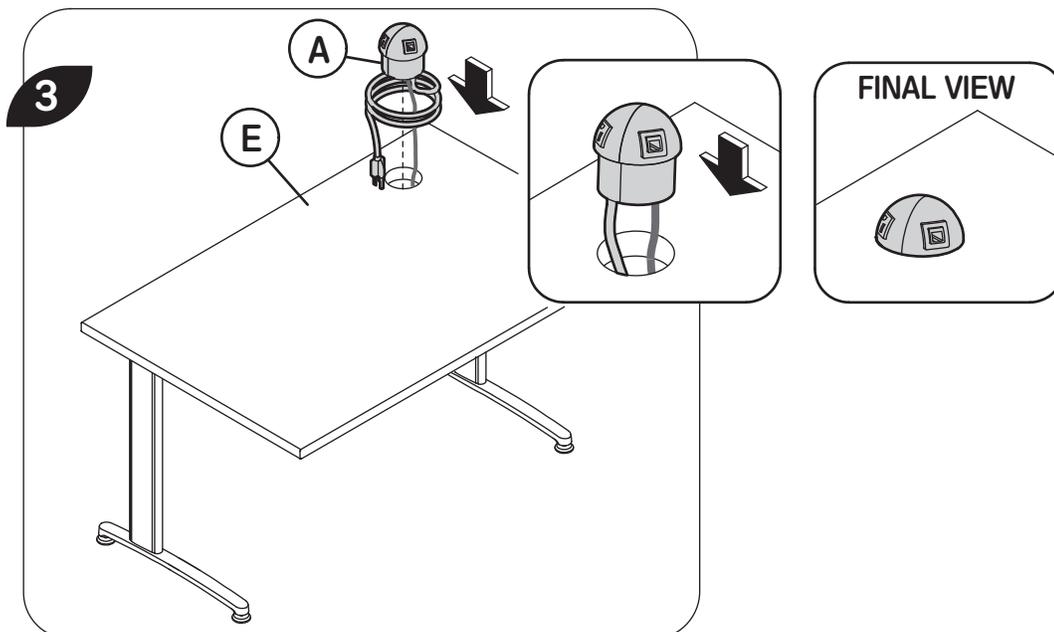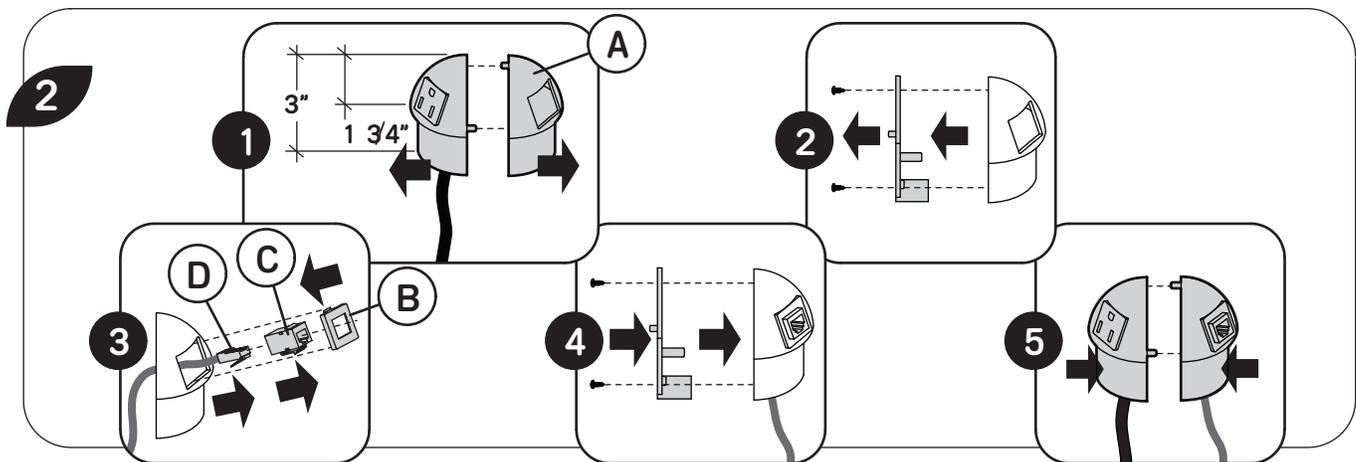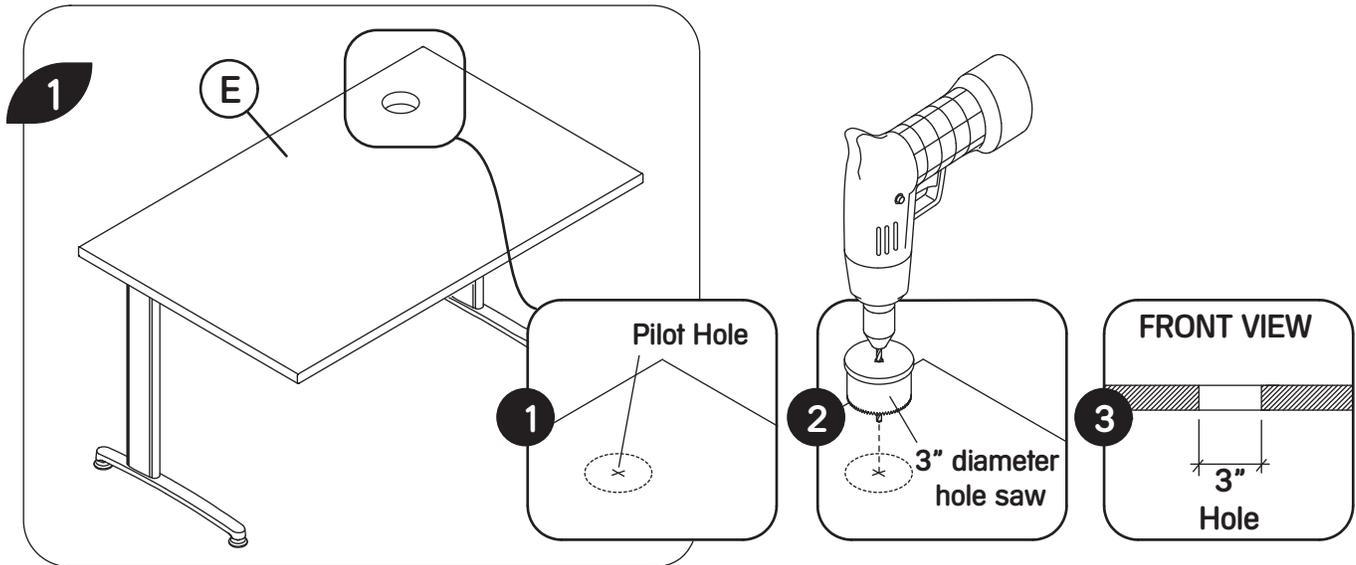


Section – **Casual Tables**

No. **583**

Square Lounge Table	ATCSL	Circular Lounge Table	ATCCL	Oval Lounge Table	ATCVL
Square Café Table	ATCSC	Circular Café Table	ATCCC	Rectangular Dining Table	ATCRD
Square Bistro Table	ATCSB	Circular Bistro Table	ATCCB		
Square Dining Table	ATCSD	Circular Dining Table	ATCSD		

Product

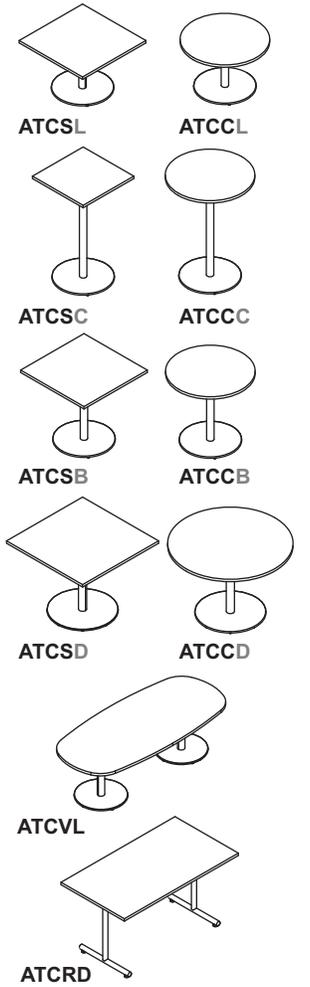



TOOLS REQUIRED:
Cross or Square Drive #3 and Hexagonal Key

Casual Tables - Part / Product Identification and What's Included

Ref.	Illustration	ATCS_	ATCC_	ATCVL	ATCRD	Kit No. / Assy. No.
		Quantity				
A	Circular Work. C05-2090+XX		1			
	OR Square Work. C05-2082+XX	1				
	OR Rectangular Work. C05-2082+24+36 (for 24" d x 36" w only) or C05-2082\30\XX				1	
	OR Oval Work. C05-2103X-X			1		
B	Disk Base Upper Weldment N09-2637+XX	1	1	1	1	1x or 2x (ATCVL only) N09-2639
C	Table Shell A15-8719\XX	1	1	1	1	
D	Table Base Ass. N09-2638\XX	1	1	1	1	
E	1/4" – 20 x 5/8" Quadrex Truss Hd. M. Screw, Zinc E01-0098	12	12	24	12	For 24" d x 36" w configuration only
F	3/8" – 16 x 1 1/2" 90° Countersunk Flat Head, Hex Socket Cap Screw E01-50038	5	5	10	5	
G	1/4" – 20 x 5/8" Quadrex Truss Hd. M. Screw, Zinc E01-0098				12	2x N09-1208
H	T-Base N09-1329				1	


Reference Installation Guides:
No. 582 Tables "Power/Data Modules"

MONO-POD LEG INSTALLATION

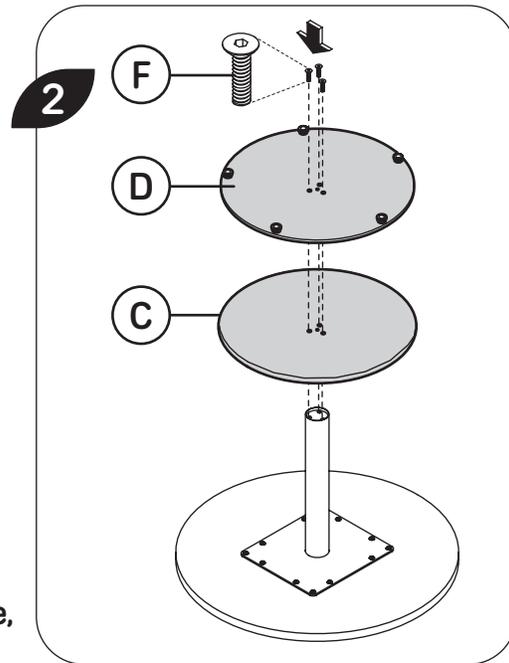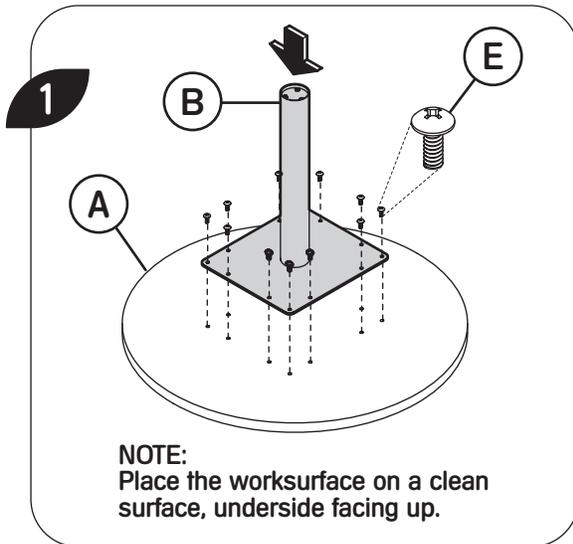


NOTE:
For installation of Recessed Power/Data Module, Pop-Up Power/Data Module or Grommet see installation guide number #582

T-BASE INSTALLATION

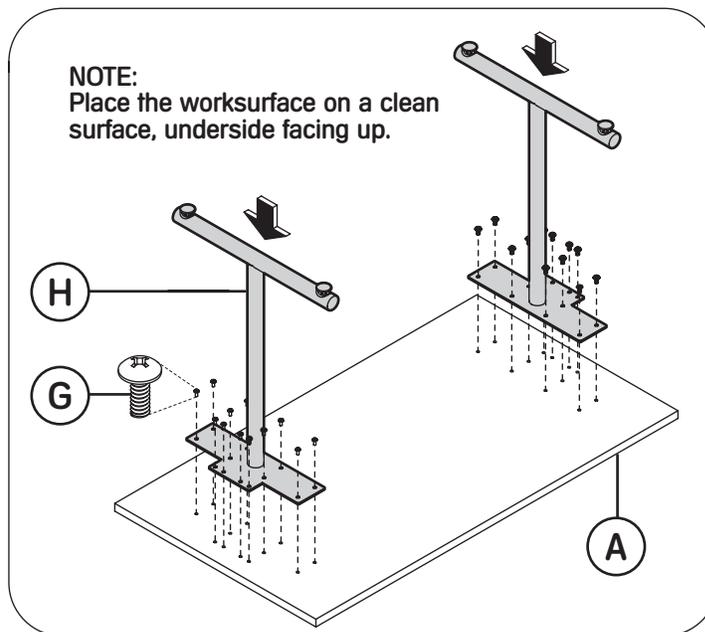

Product

CLUBTalk Mobile Cart

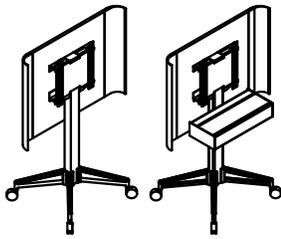

CUC
CUC with Tek Box
CLUBTalk Mobile Carts




CUC - Part / Product Identification and What's Included CUC

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.	
A		CLUBtalk Surround Board	C05-6639	1	
B1		CLUBtalk Cart Handle Subassembly	X01-2282-X A23-3851	2	
B2		1/4-20X5/8 long Stainless Steel, Low Head, Socket Head Cap Screw		E01-0790 - 38" High E01-0790 - 43" & 46"	10 or 14
C		CLUBtalk Camera Shelf Assembly (Optional) CLUBtalk Post Assembly CLUBtalk Leg Assembly	N09-4221 N09-3877 N09-3801	1 1 1	
D		#10 x 0.875" LG. Quad Pan Washer	E07-0077	12	
E		CLUBtalk Tech Box Assembly	N09-6125-X	1	
F1		CLUBtalk Cart Wire Hanger	X01-2420 A16-2183	1	
F2		5 mm x 5/8" Flat head Wood Screw		E04-0053	2
G		Worksurface Monitor Mount Wireless bracket Asembly	N09-4694	1	
H1		CLUBtalk Surround Top	A15-9977	1	
H2		CLUBtalk Surround Top	A16-1022	1	
H3		Display Mount Vertical (A16-0926) X 2	A16-0926	2	
H4		M6 x 1 x 30mm Hex Socket, Butt. Hd, Plain	N09-4057 E01-0803	4	
H5		M6 x 1 x 40mm Hex Socket, Butt. Hd, Plain		E01-0804	4
H6		M8 x 1.25 x 30mm Hex Socket, Butt. Hd, Plain		E01-0805	4
H7		M8 x 1.25 x 40mm Hex Socket, Butt. Hd, Plain	X01-2257 E01-0806	4	
H8		Spacer 12mm OD x 8.2mm ID x 25mm L		E03-0556	1
H9		Spacer 12mm OD x 8.2mm ID x 10mm L		E03-0555	2
H10		Spacer 15mm OD x 6.3mm ID x 15mm L		E03-0554	4
H11		Natural Nylon Washer .719" OD x .250" ID x .062" THK		E03-0902	4
H12		Compact Power Bar	YEPS	1	




Application





CLUBTalk Mobile Cart

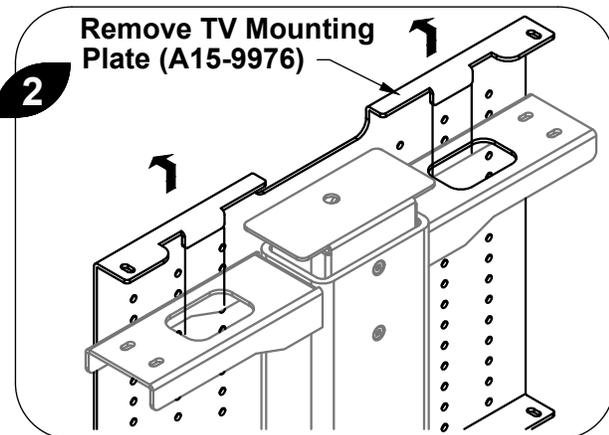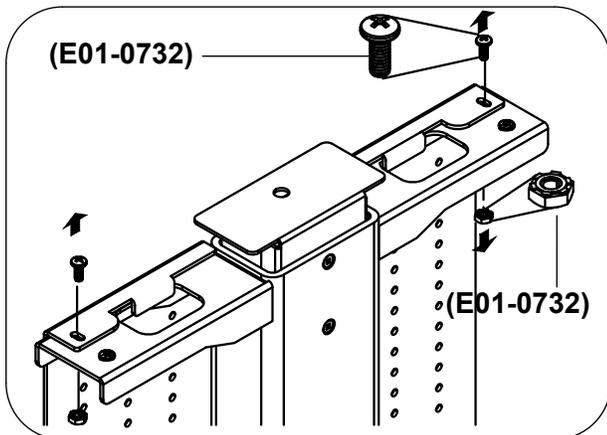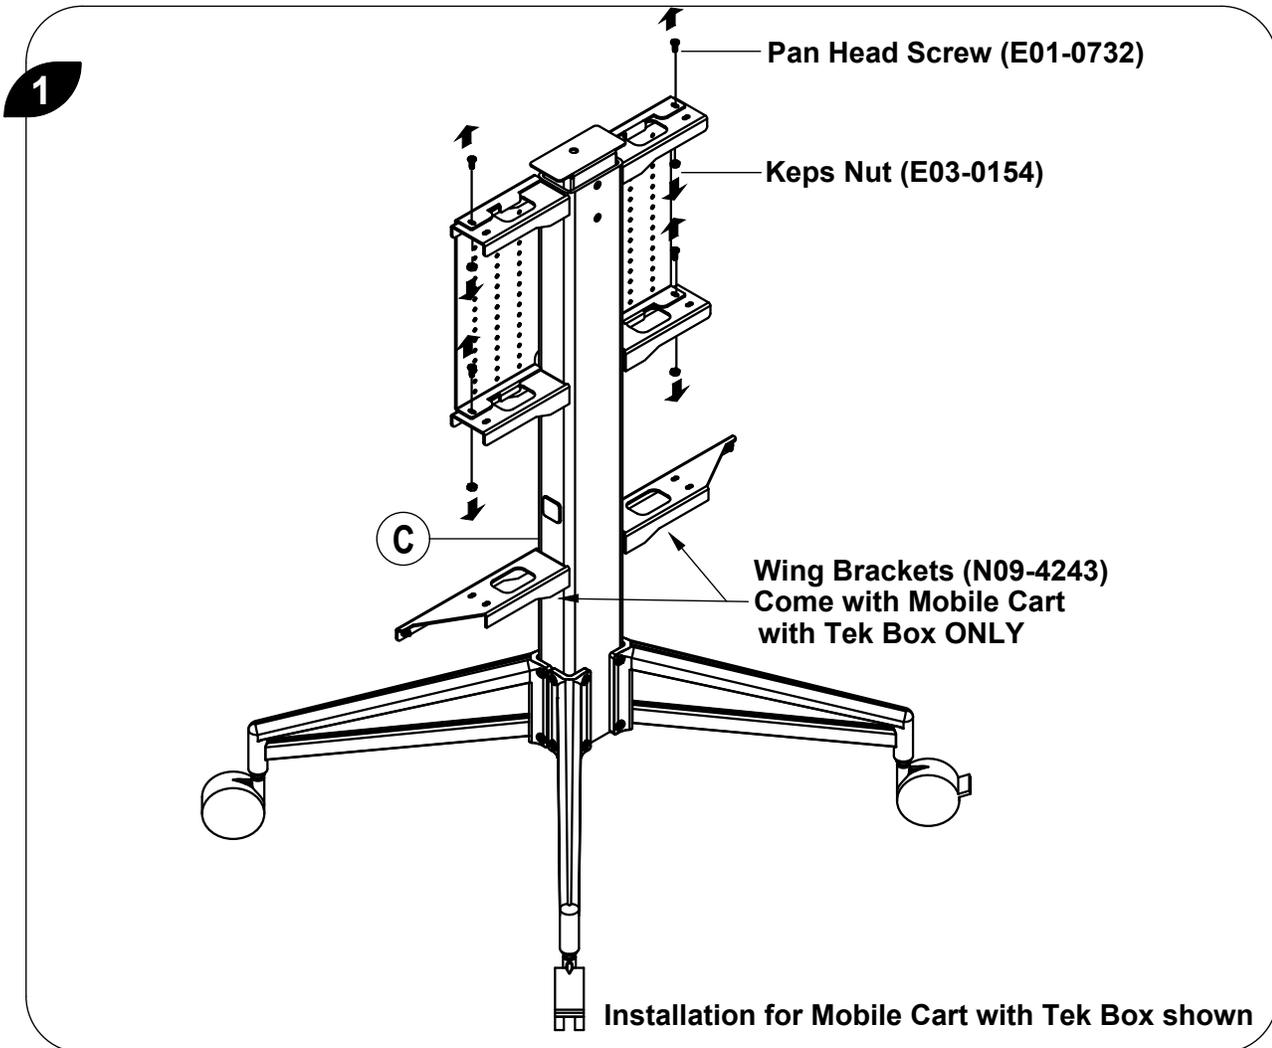



CLUBTalk Mobile Cart

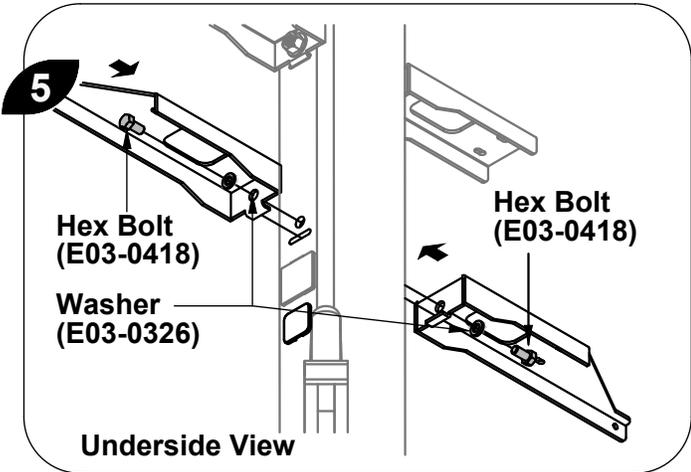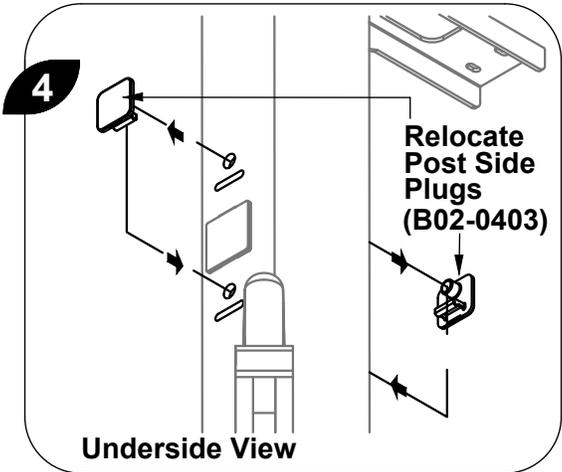
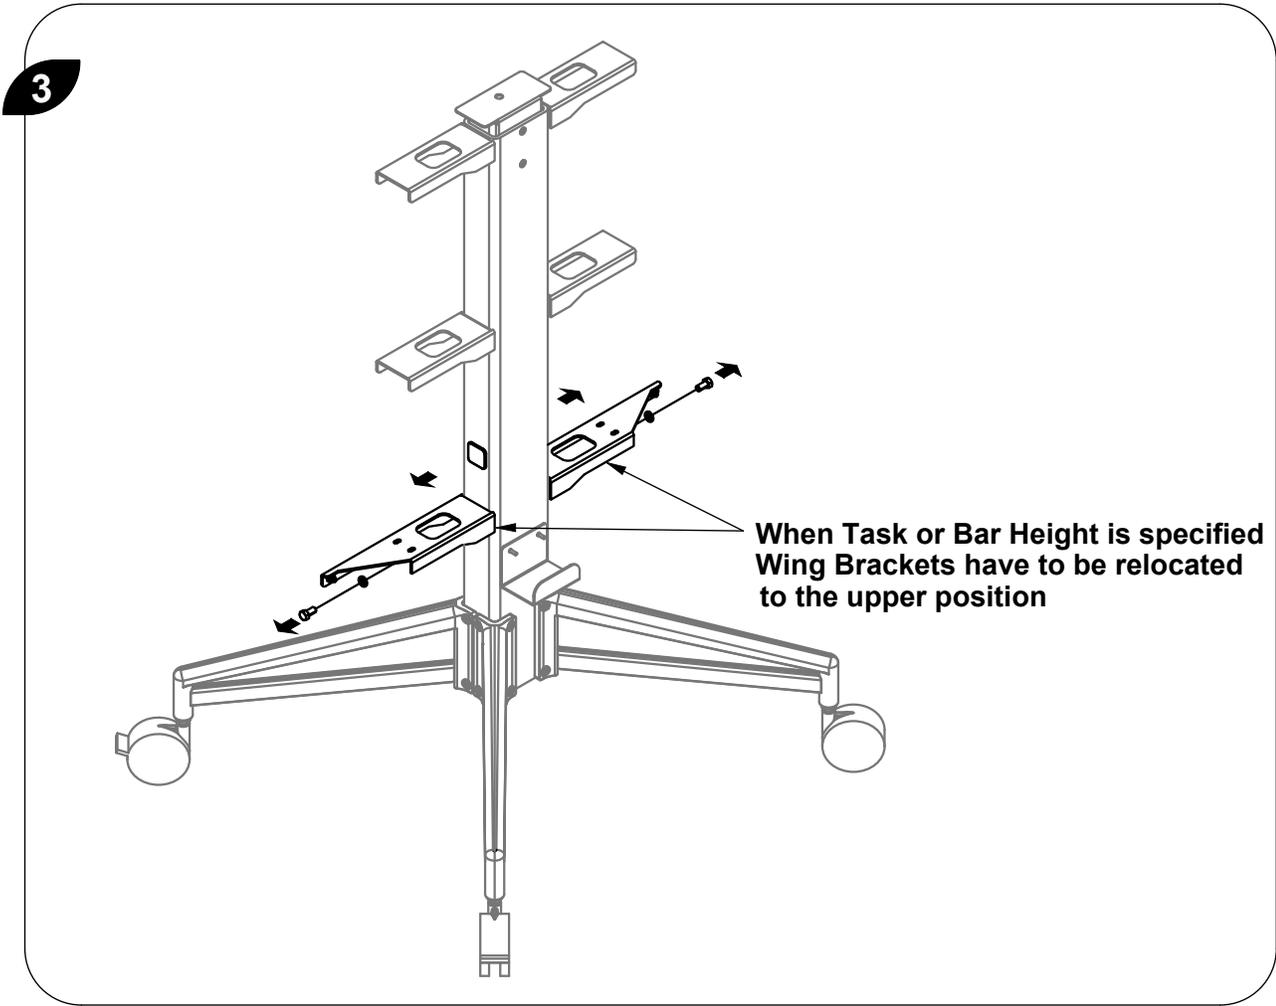


CLUBTalk Mobile Cart

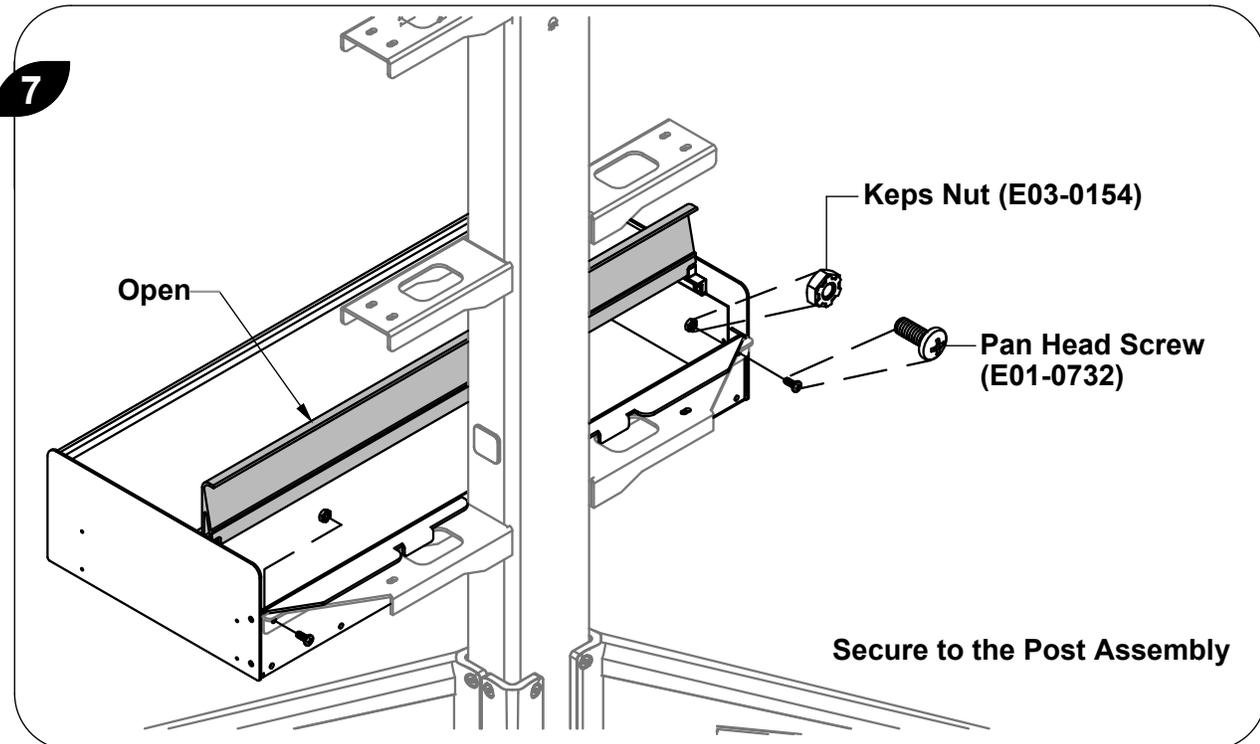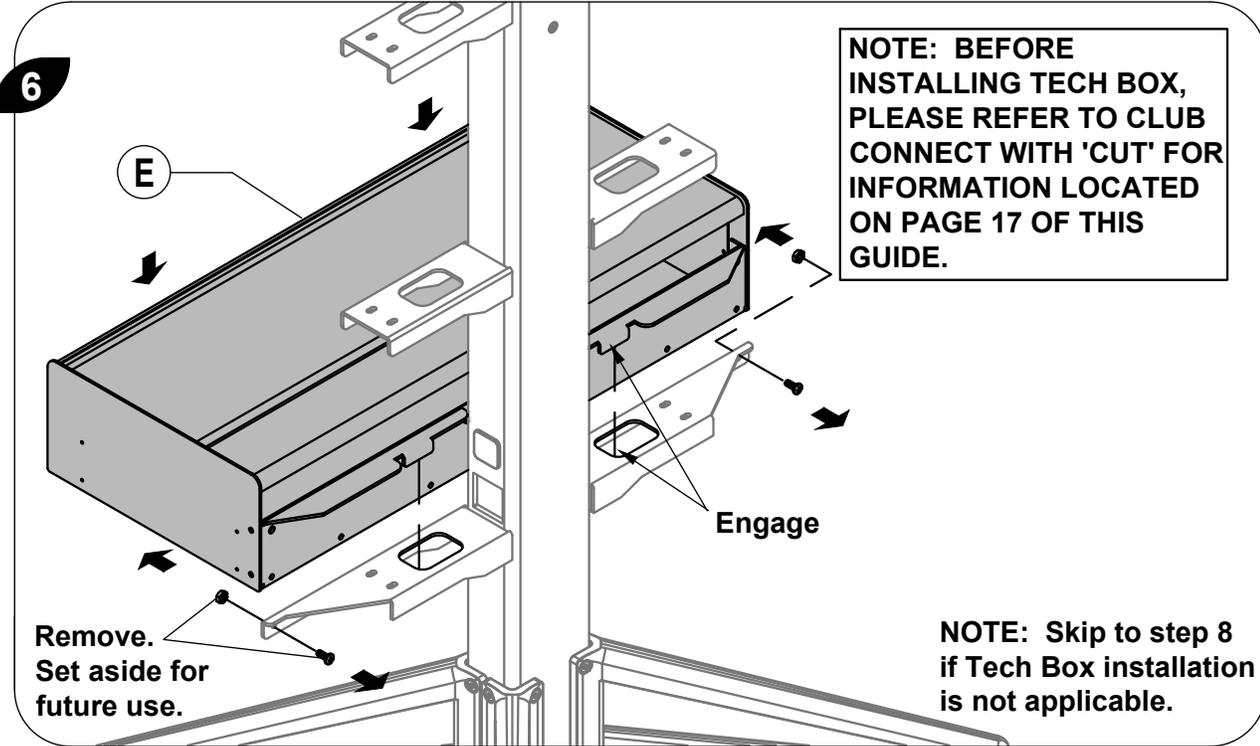


CLUBTalk Mobile Cart

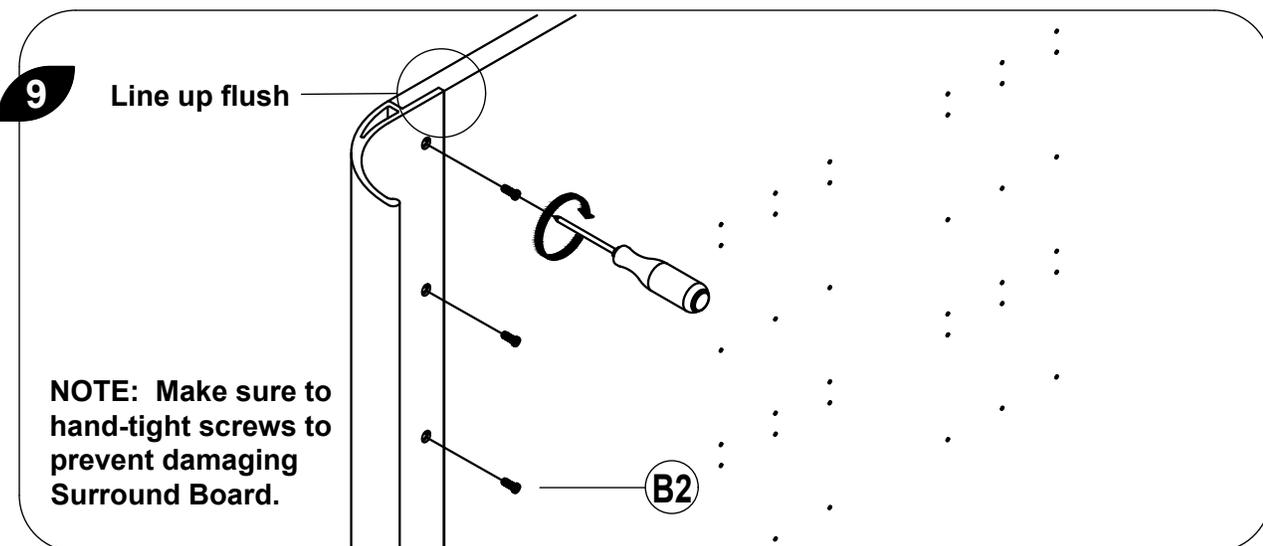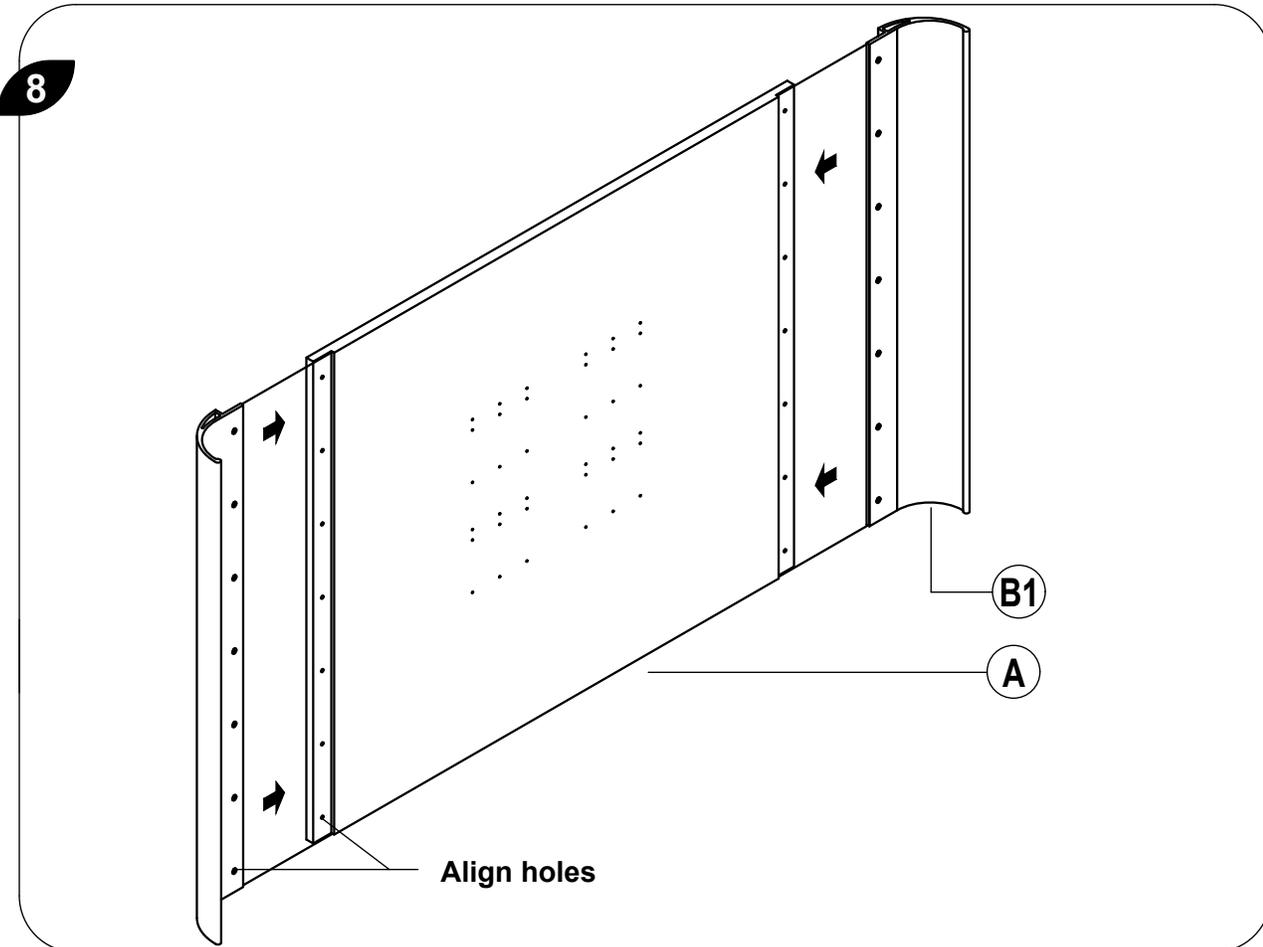

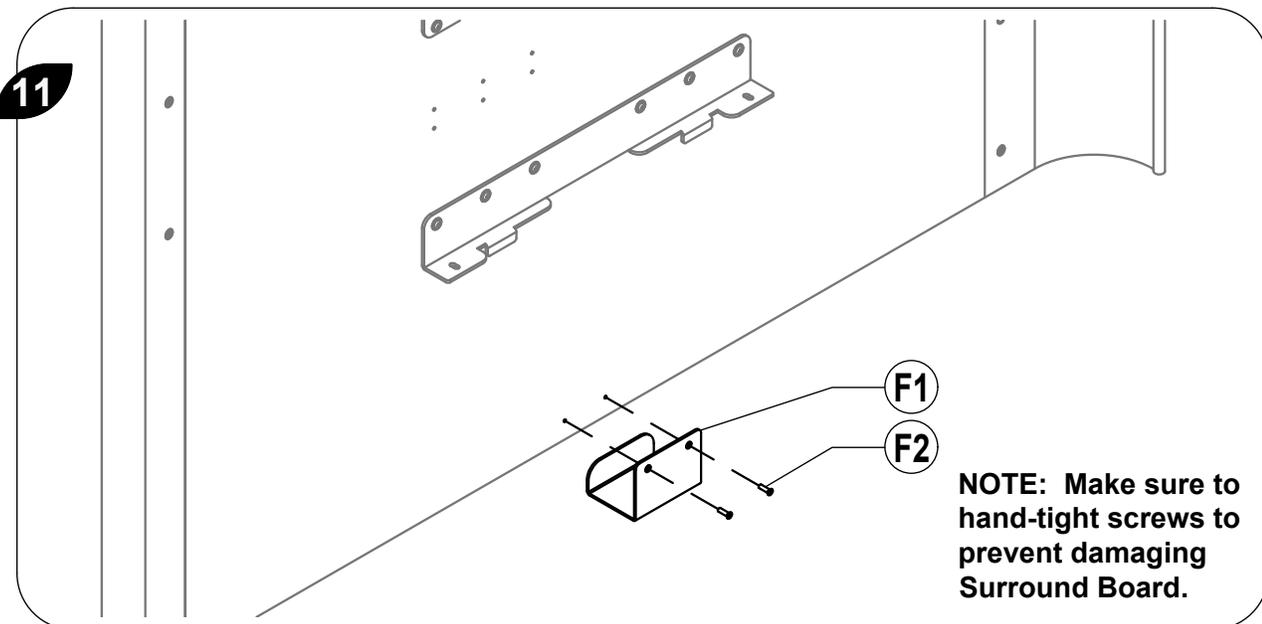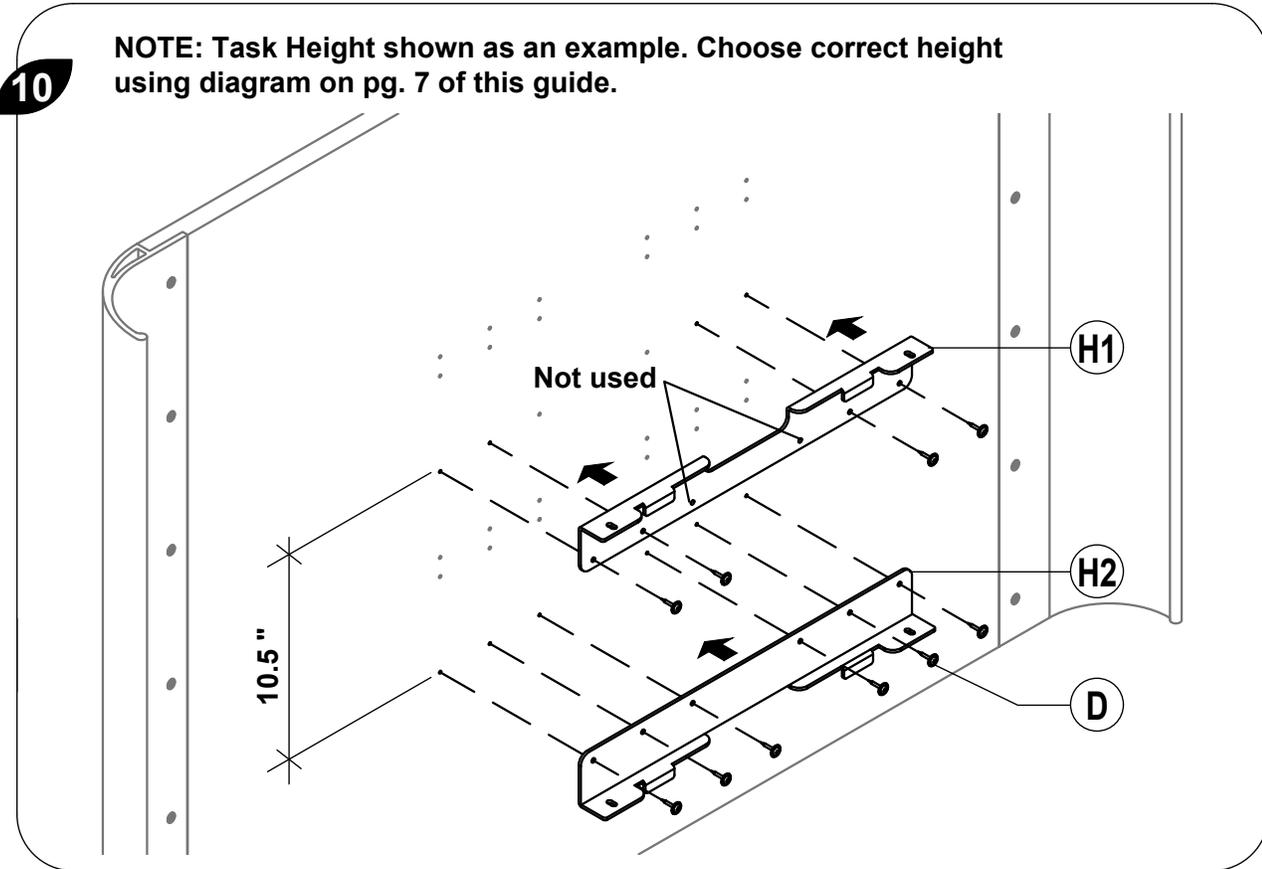


CLUBTalk Mobile Cart


Location of Surround Mounting Brackets on Surround Board.

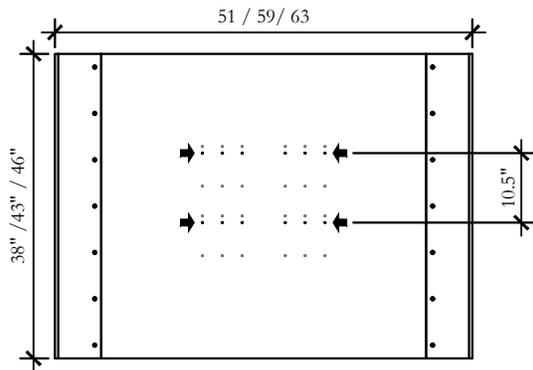


Lounge Height specified

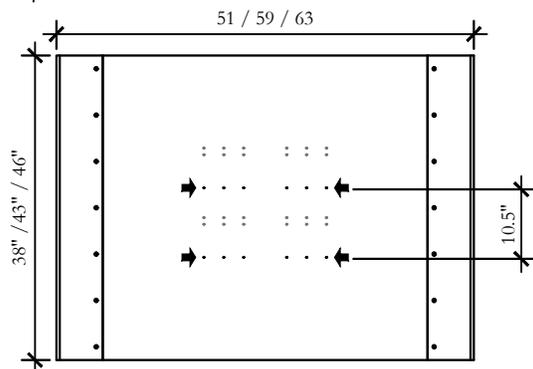

Task Height specified



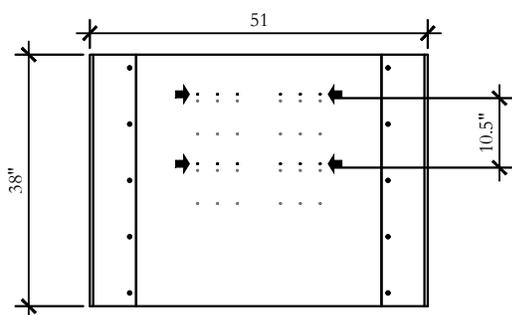


Counter Height specified


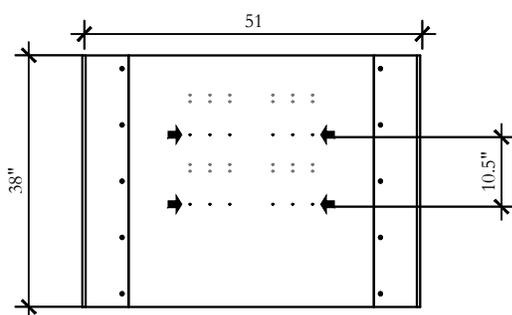


Bar Height specified



CLUBTalk Mobile Cart

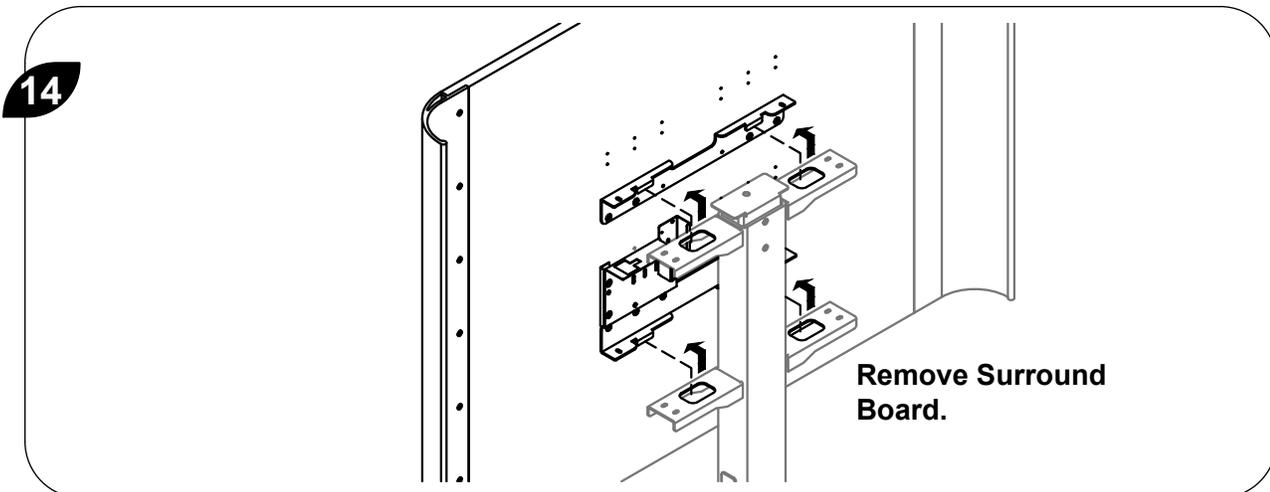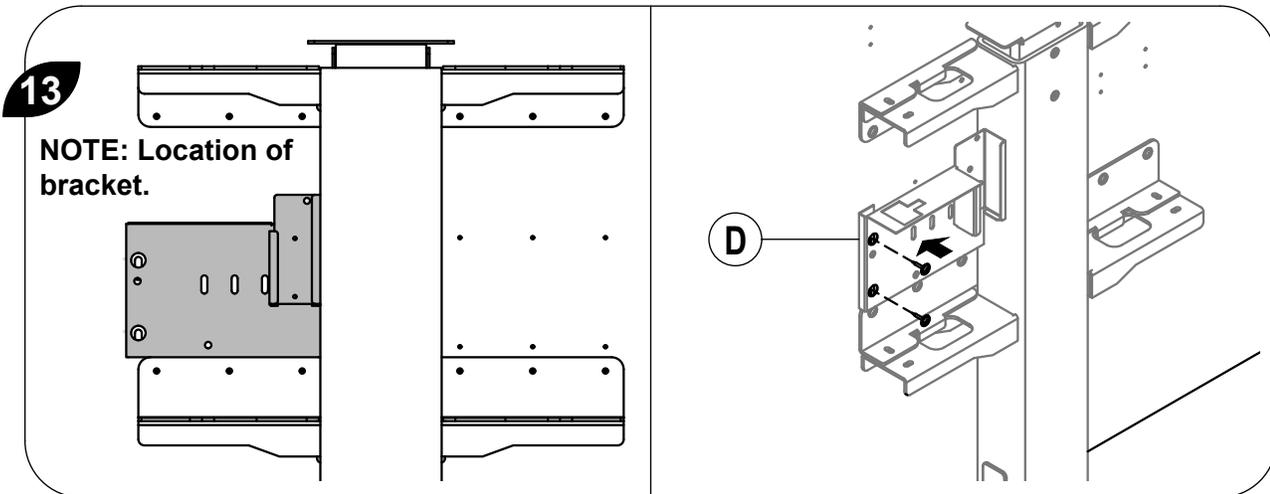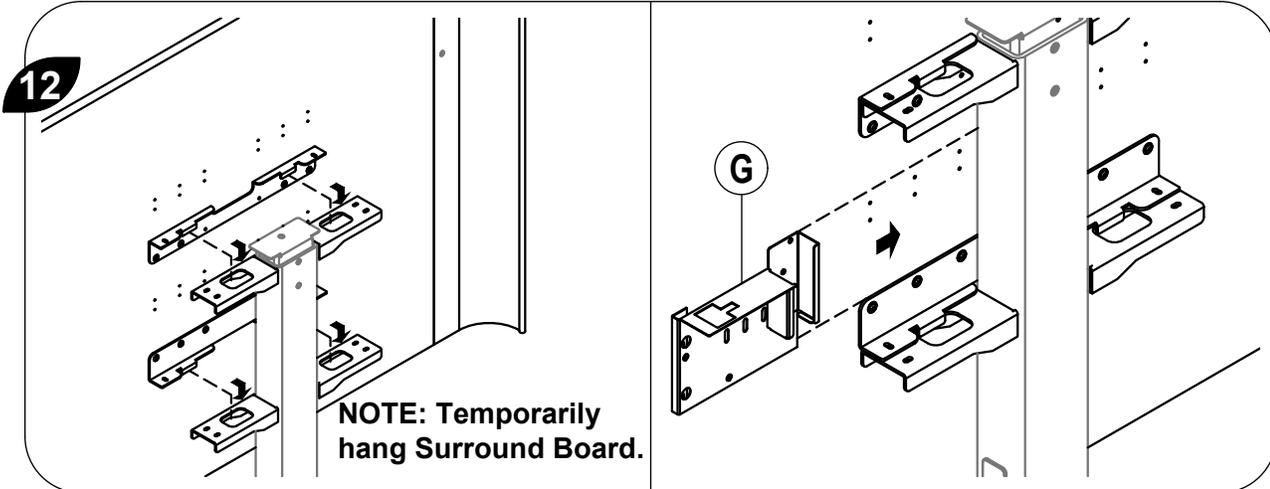


CLUBTalk Mobile Cart

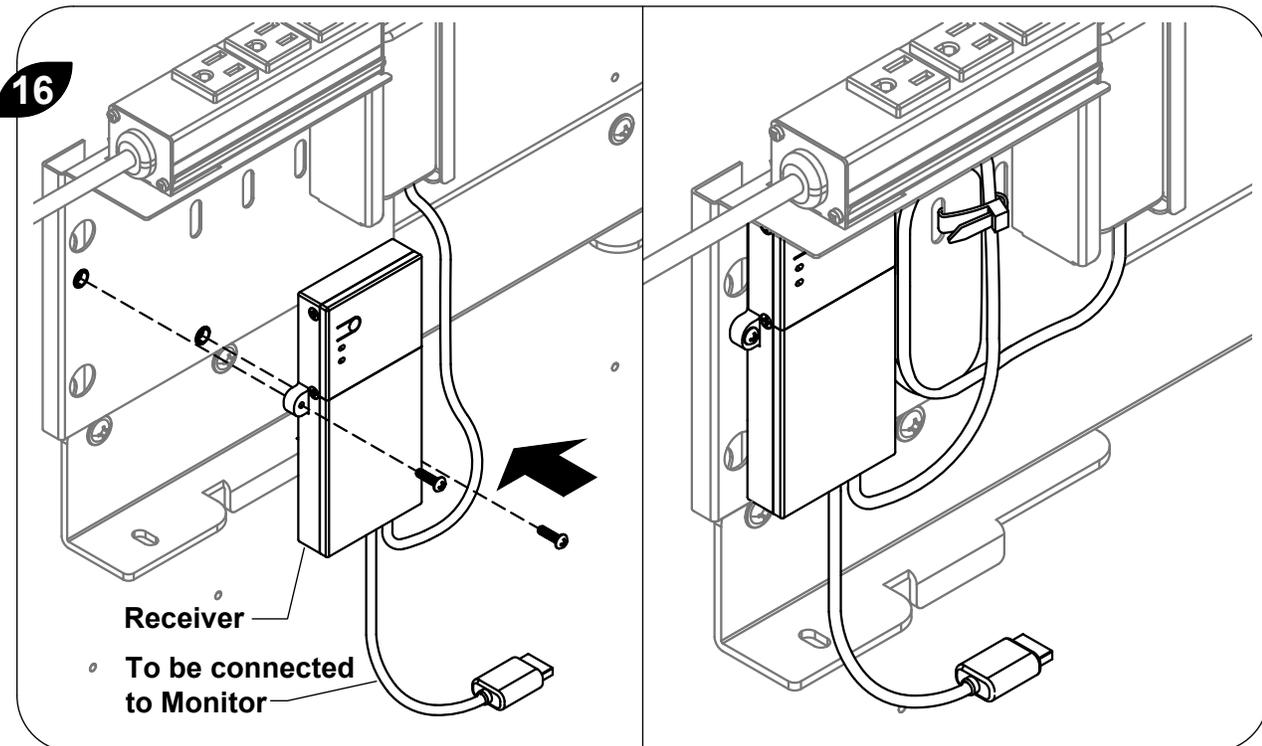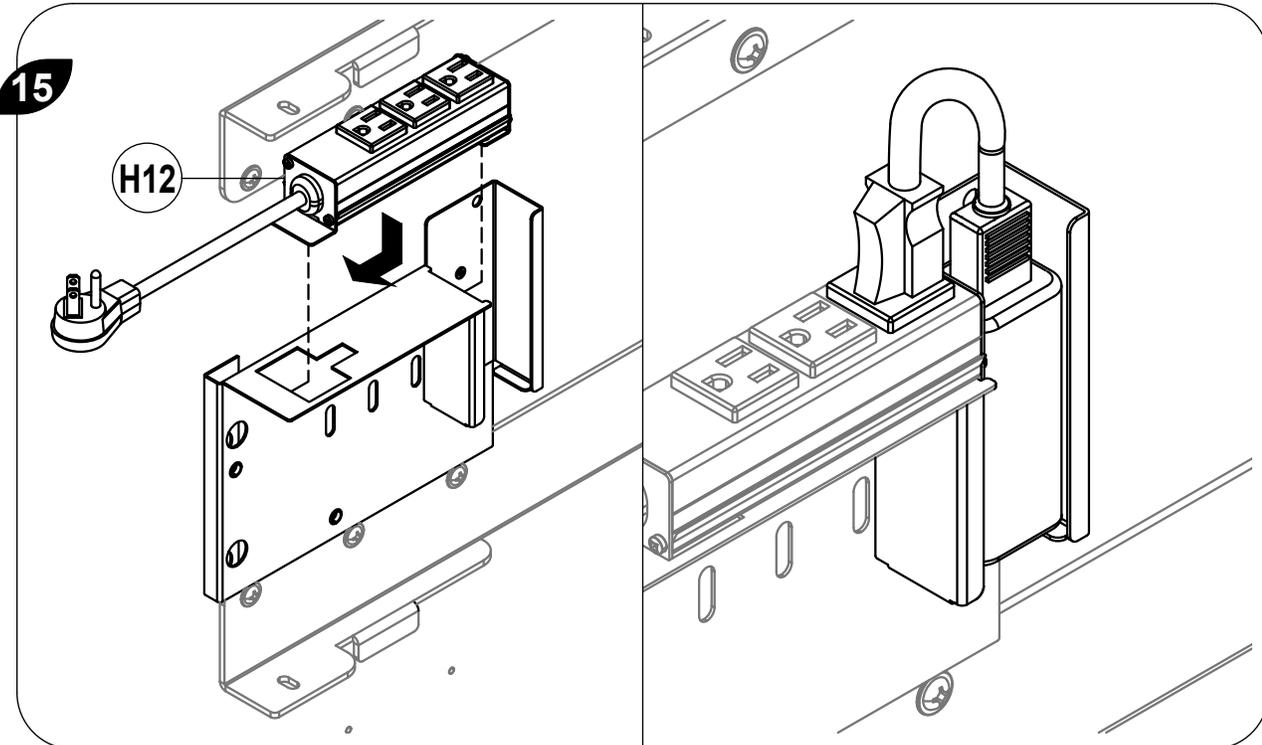

CLUBTalk Mobile Cart

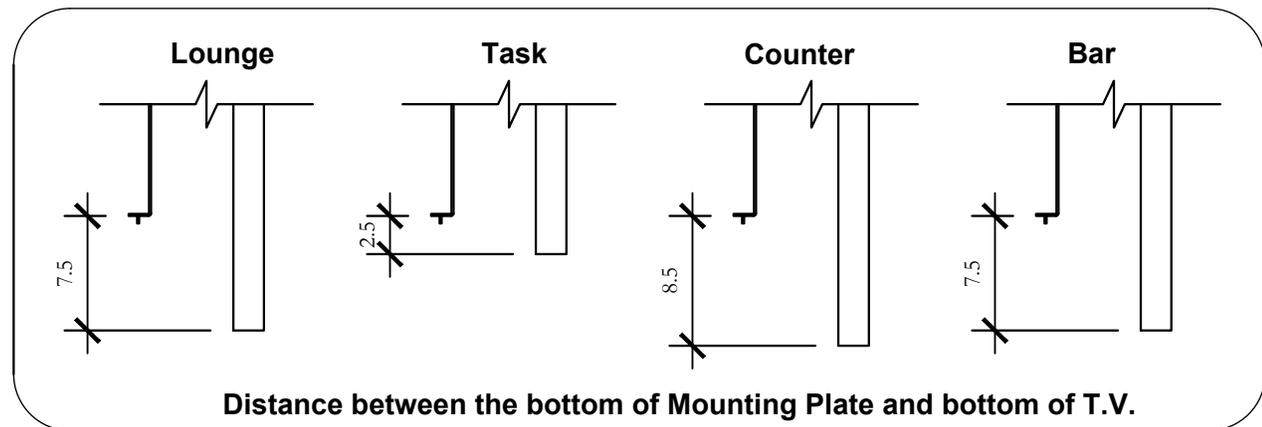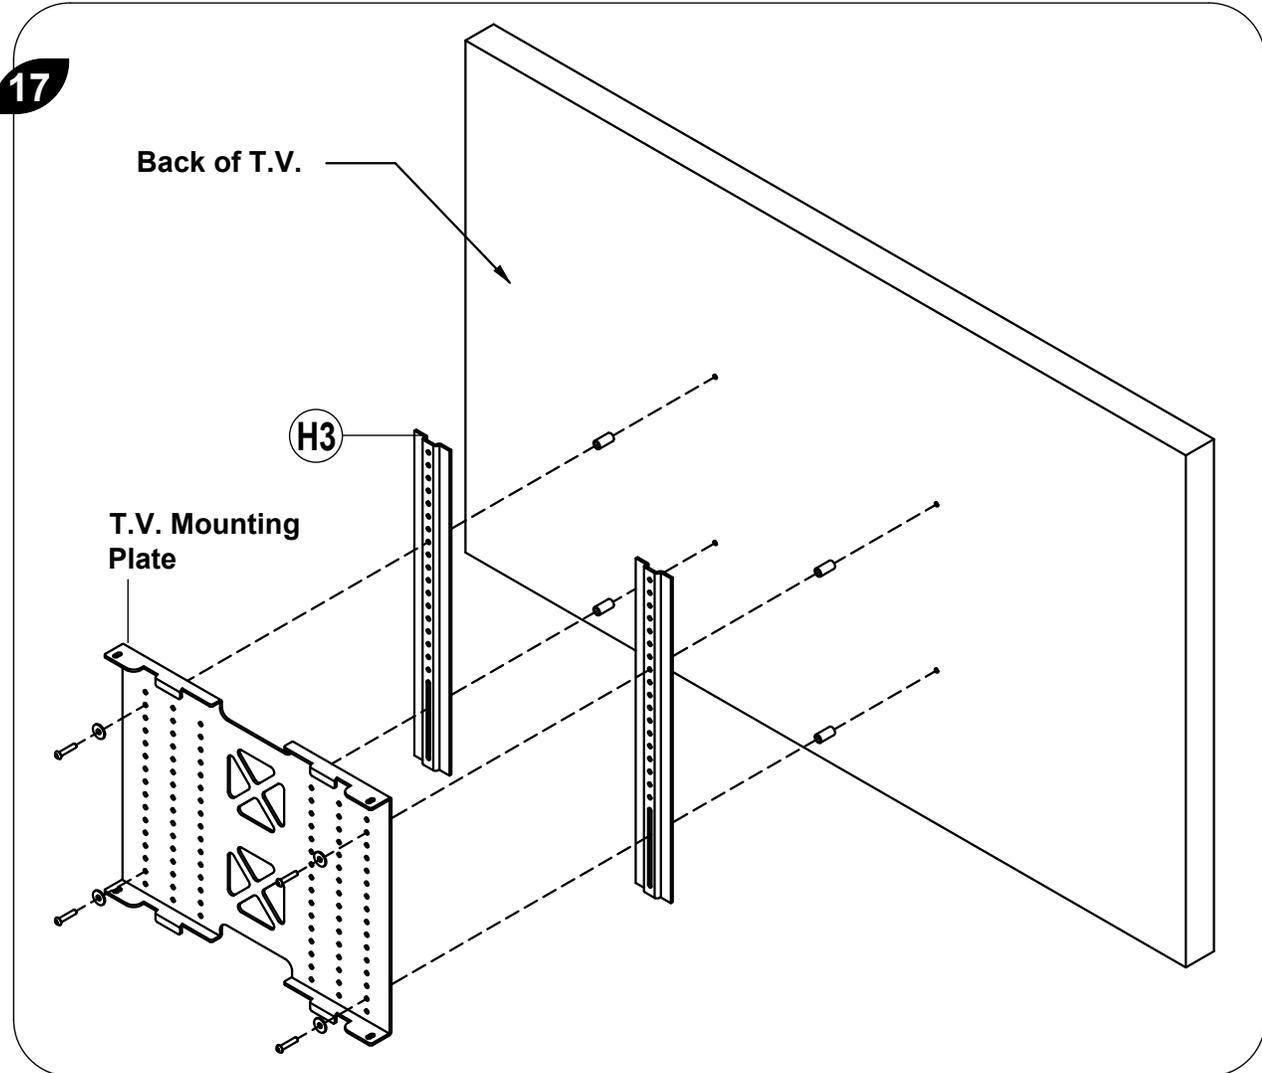

18

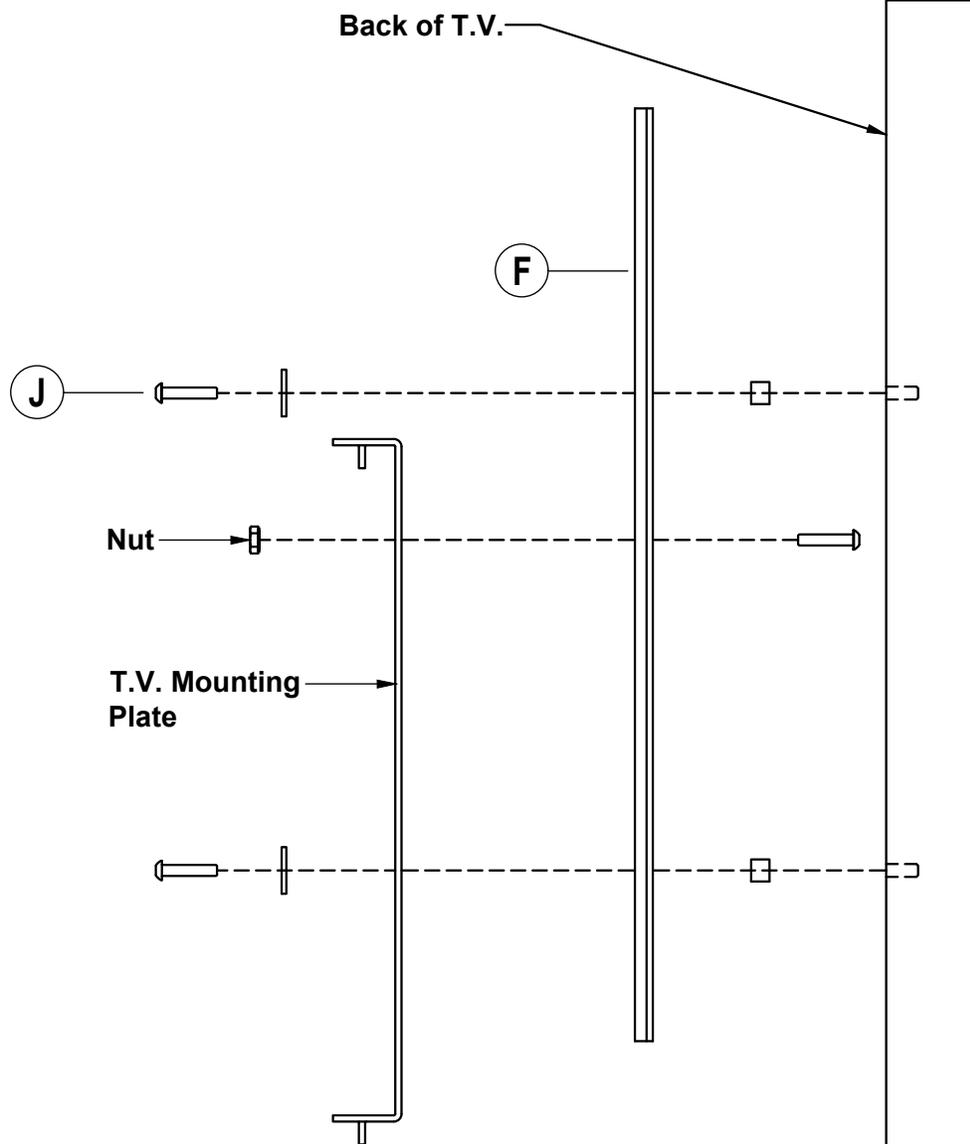


NOTE: Follow illustration above if Mounting Plate does not cover mounting inserts at back of T.V. Skip to Step 21 if not applicable.


CLUBTalk Mobile Cart

19

NOTE: Use top hole of Mounting Plate for this condition ONLY

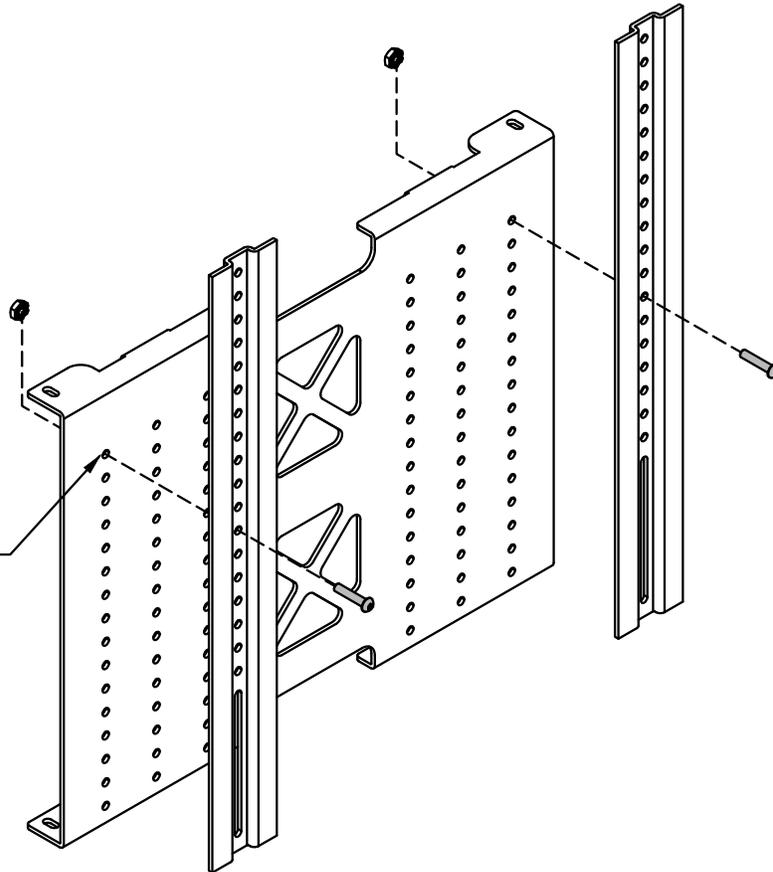

20

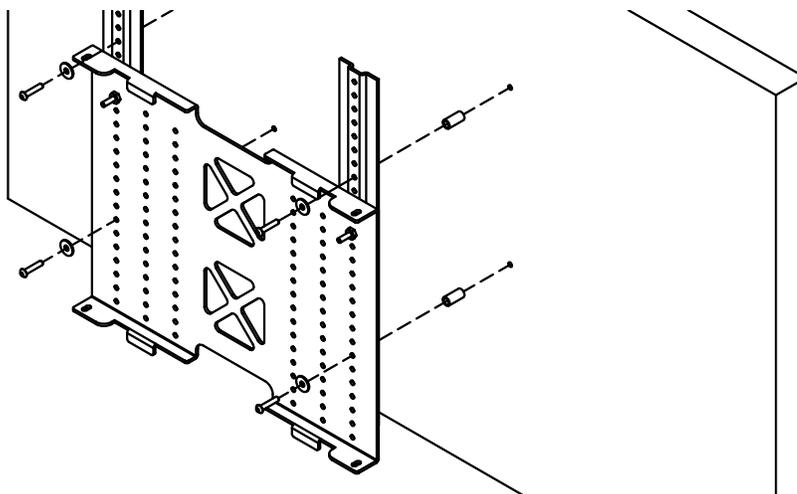

21

Spacer

Washer


H8 H9 H10

H11

H4 H5

**NOTE: Use Spacers (H8-H10)
Provided if necessary. Use Washers
(H11) if using M6 Screws (H4-H5)**


CLUBTalk Mobile Cart

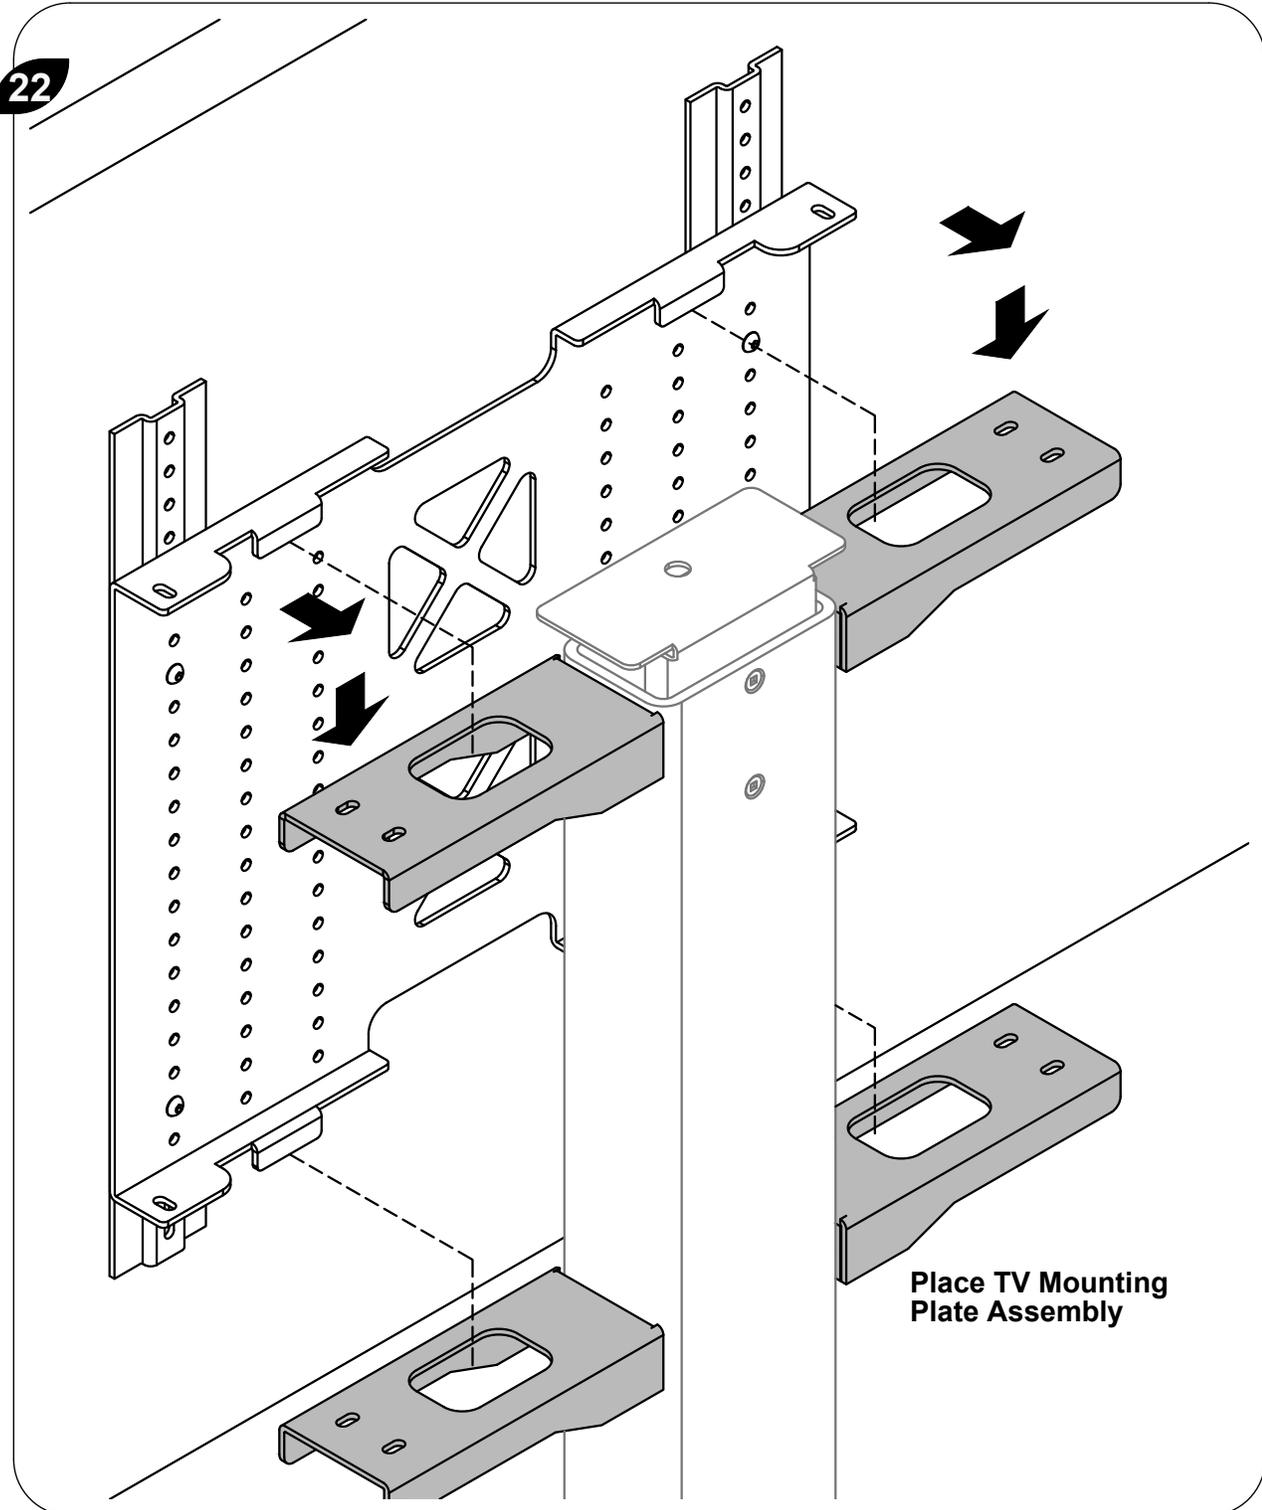



23

Keps Nut (E03-0154)

Pan Head Screw (E01-0732)

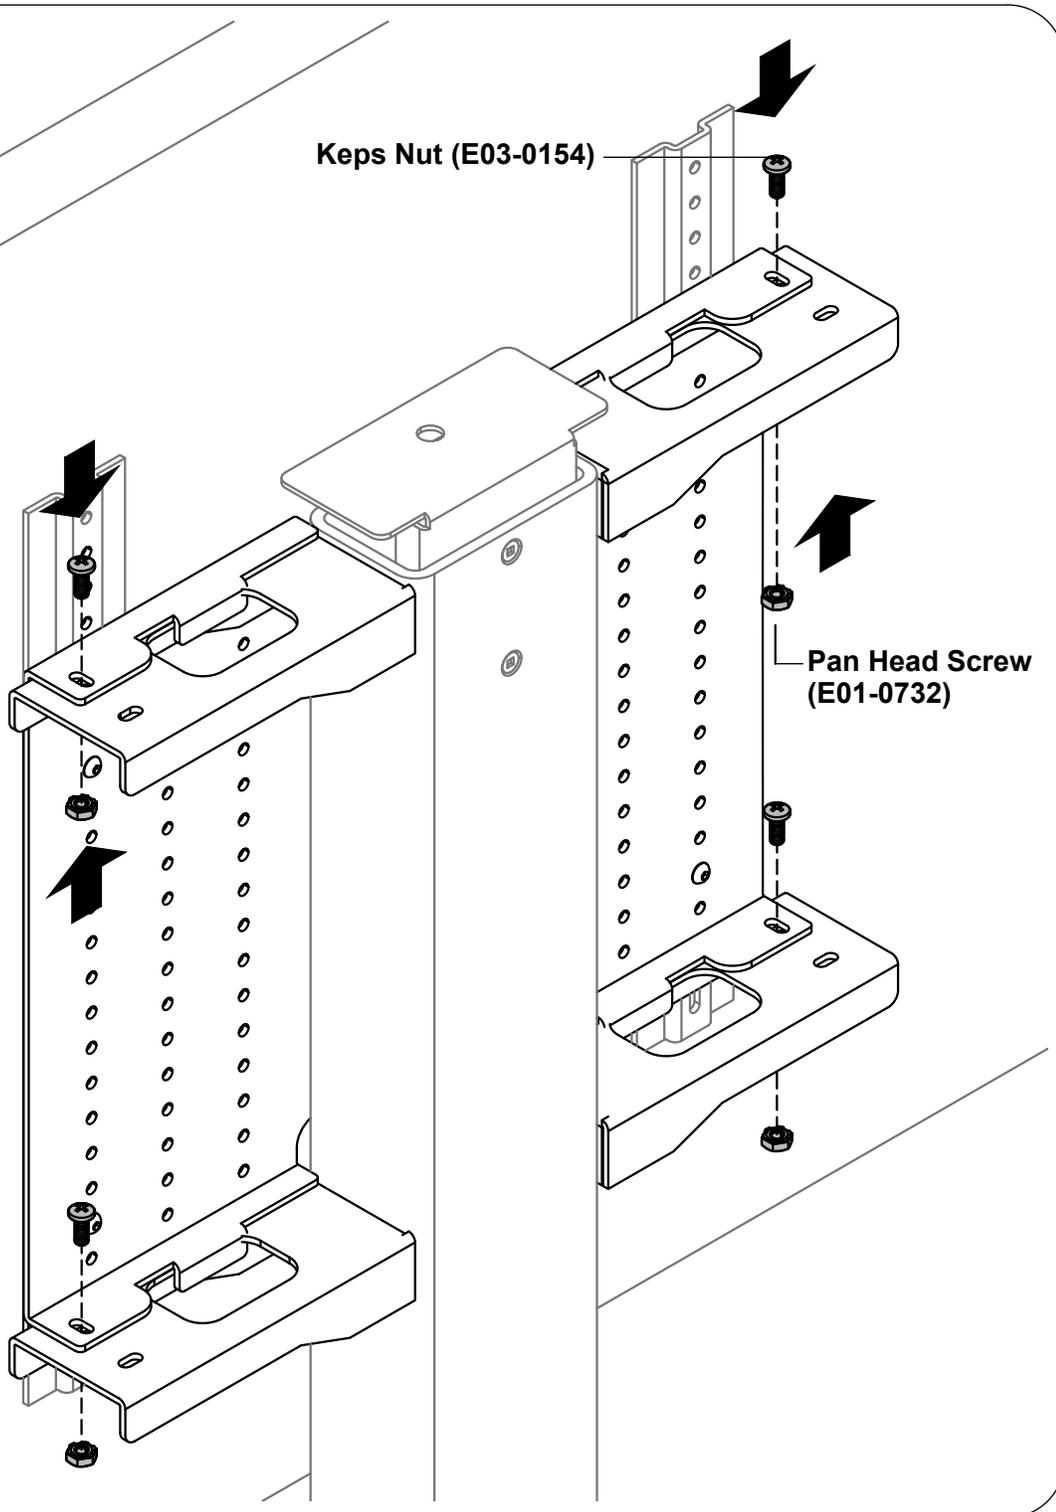


CLUBTalk Mobile Cart

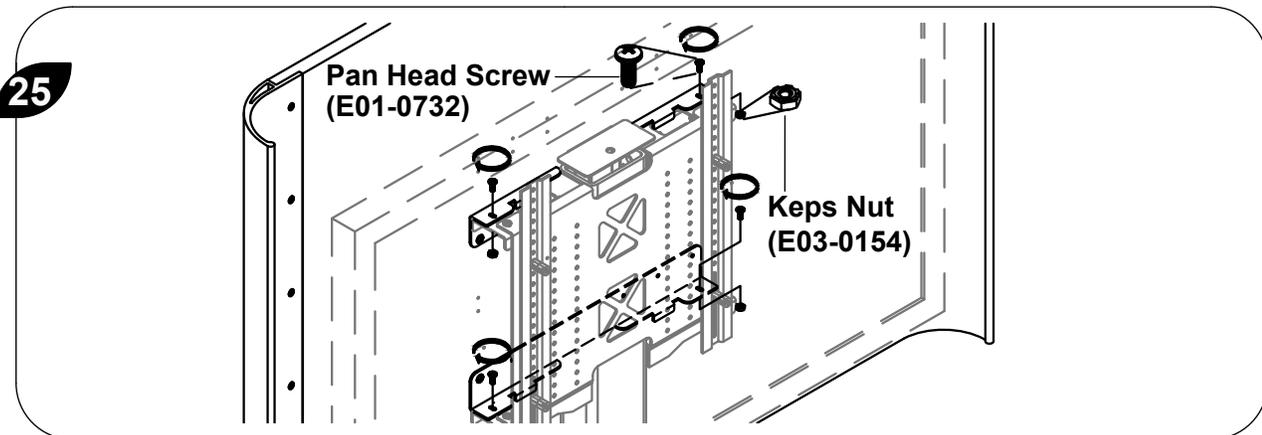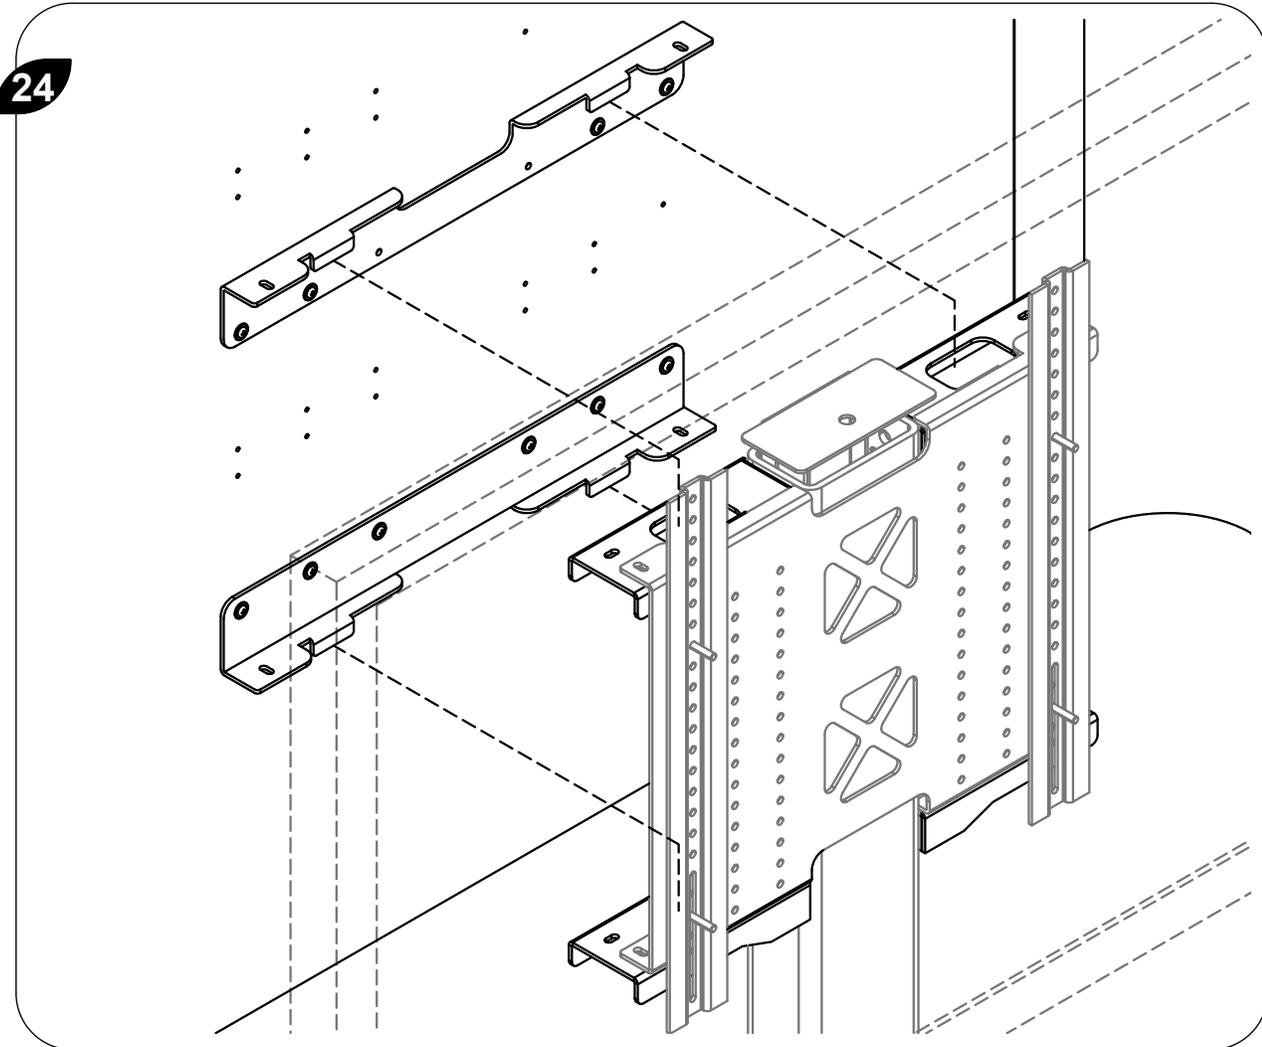

CLUBTalk Mobile Cart

Product

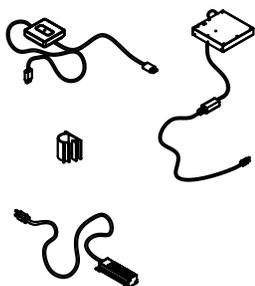

CLUBconnect for Tek Box

NOTE: Optional Wireless Transmitter and Receiver are not recommended for this application.
NOTE: Parts A, B, C discontinued. Steps retained for reference only.


CUT - Part / Product Identification and What's Included

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.
A		Sensor	AX-SE200HD AX-SE201DP AX-SE202UG	1
B		Power Bar - 3 Outlets	YEPSC	1
C		Switcher	AX-SW4	1
D		Wire Management	PCORMGMT	8




Not Included with CUT - Part / Product Identification and What's Included

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.
E		CLUBtalk Tek Box Assembly	N09-6125	1
F		Switcher Plate	A16-1926	1
G		Sensor Docking Plate	A16-1924	1
		Grommets	B02-0404	4
H		Slim Power Bar for Tek Box	YEPDCH	1



Application

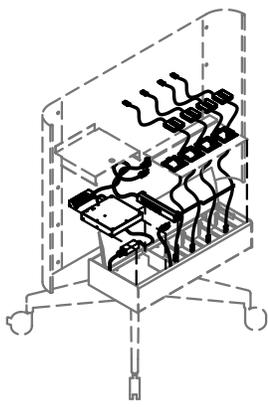

CLUBTalk Mobile Cart

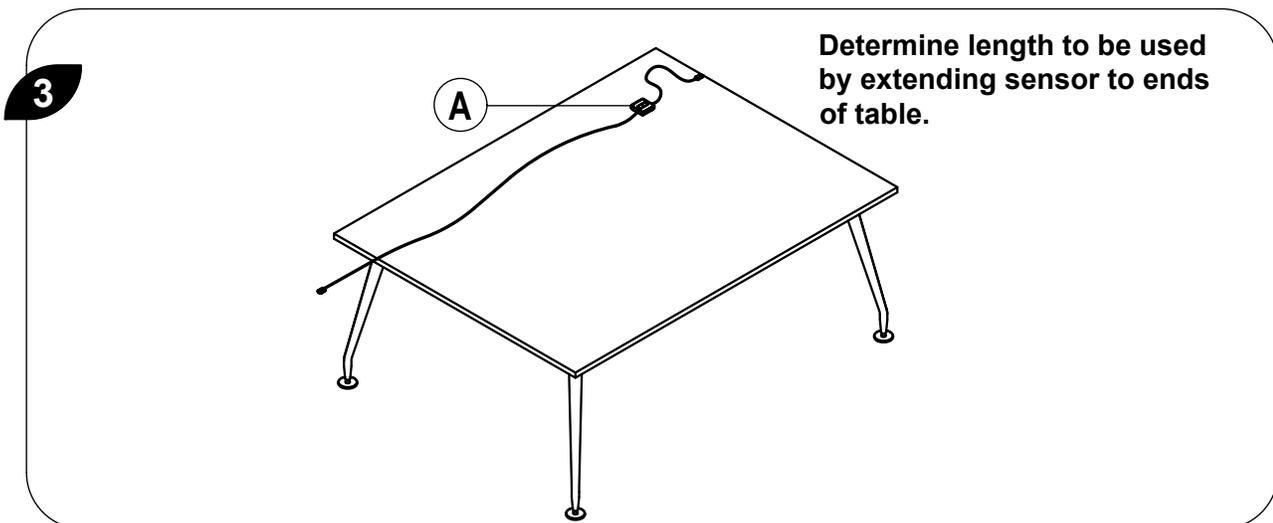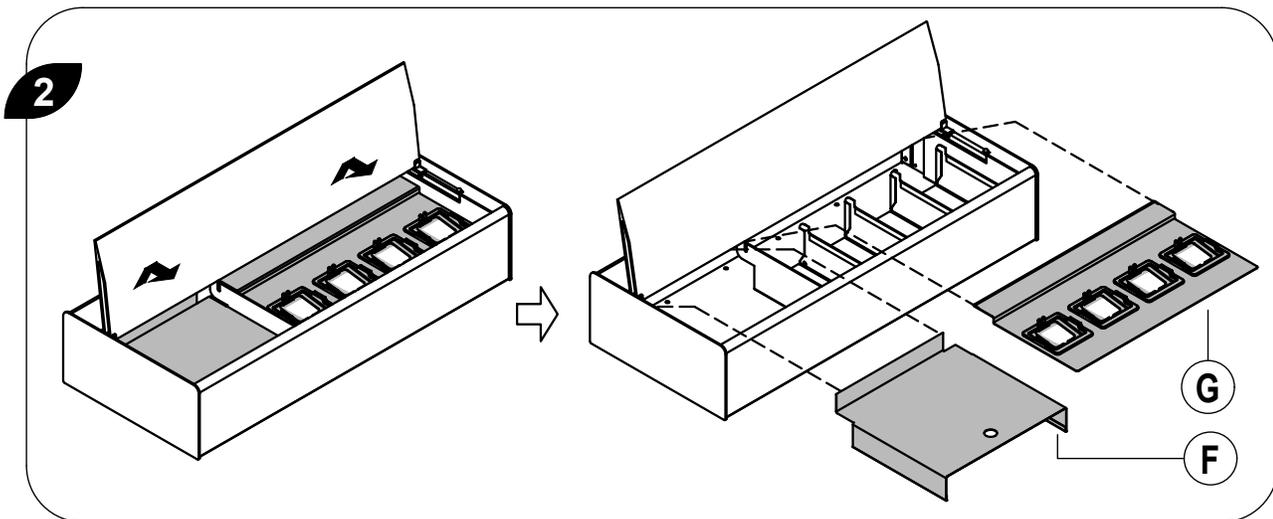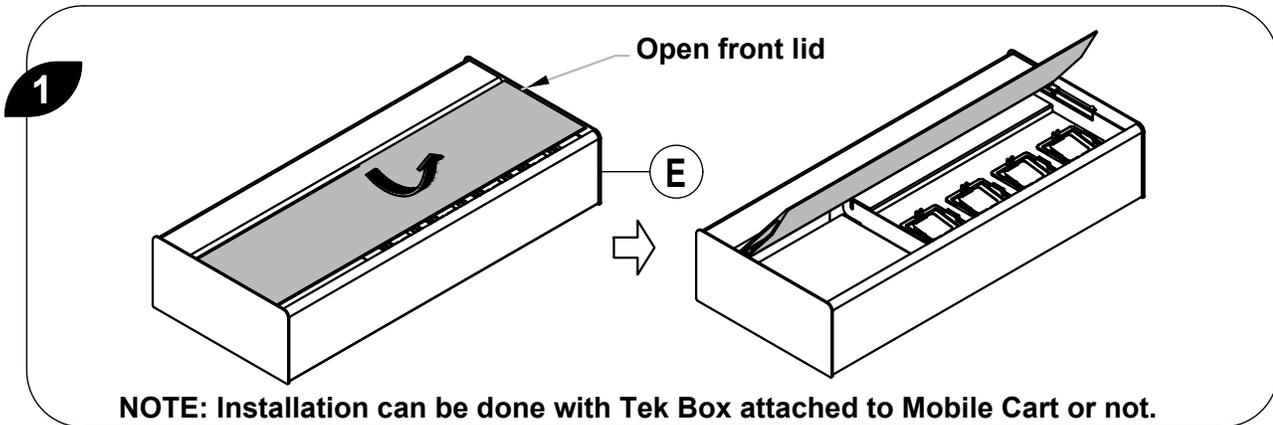


CLUBTalk Mobile Cart

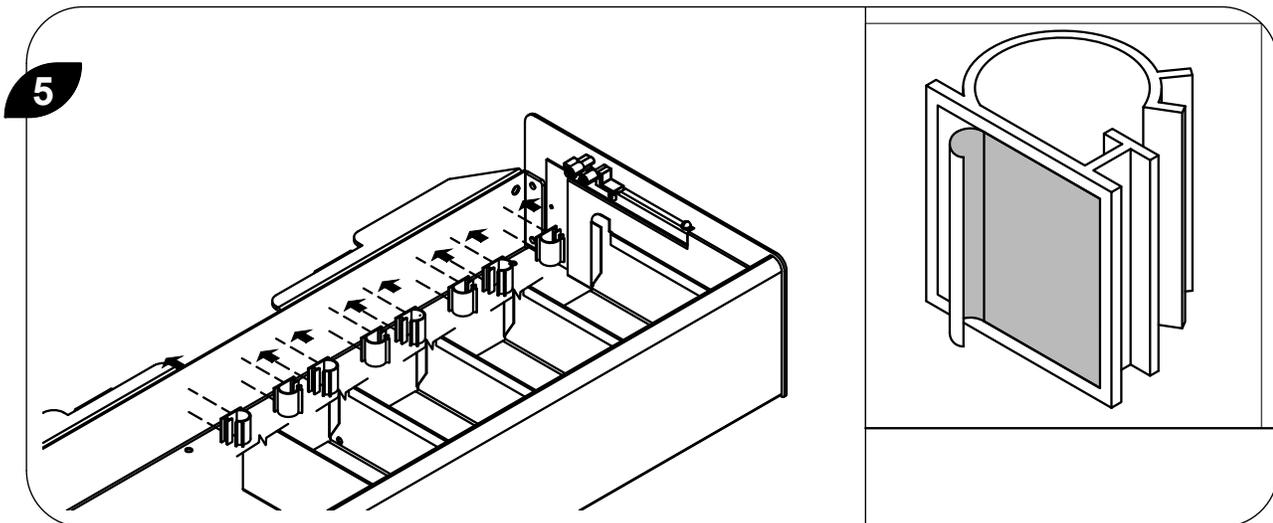
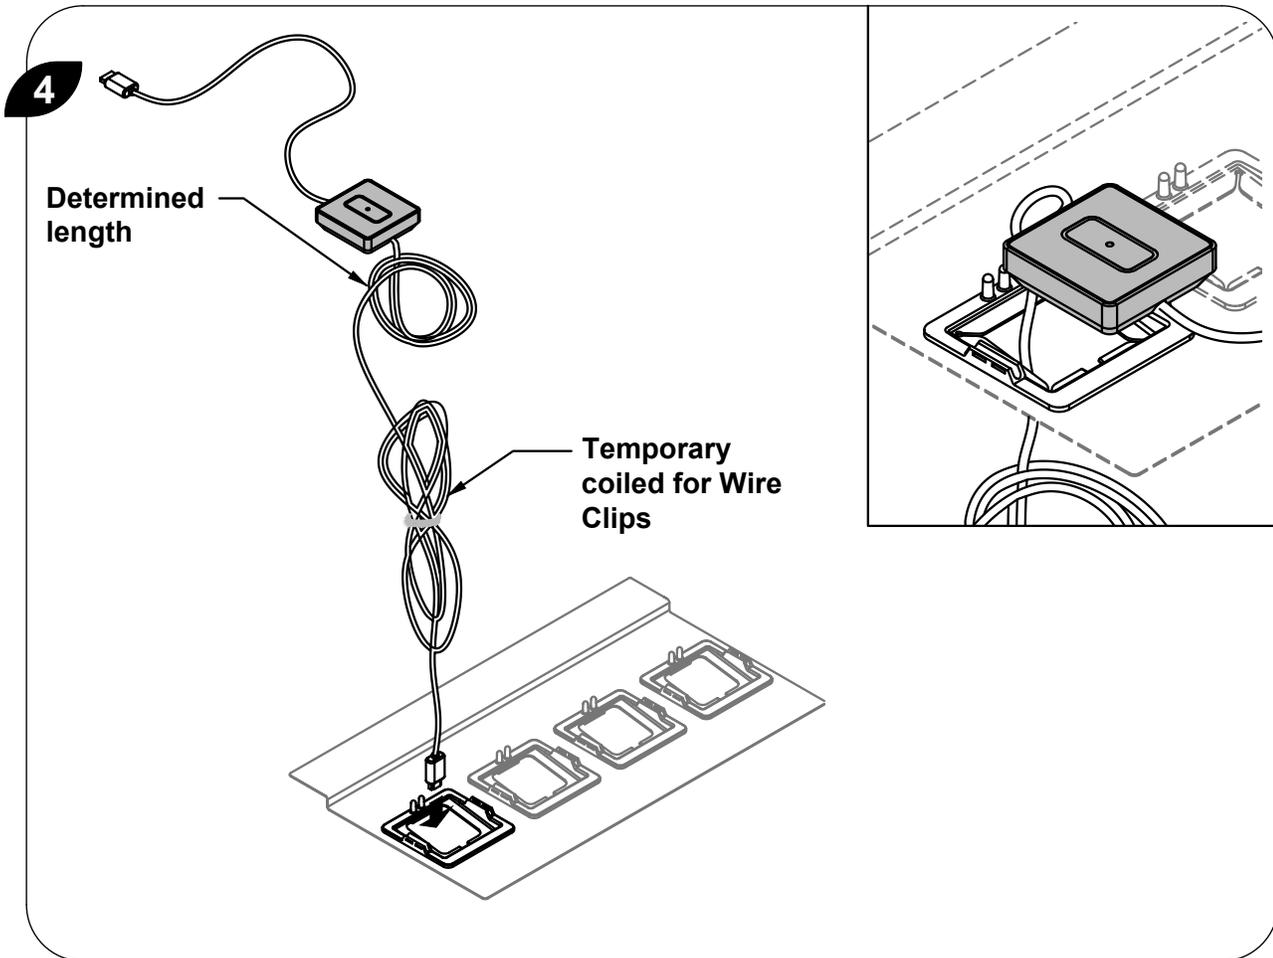


CLUBTalk Mobile Cart



6

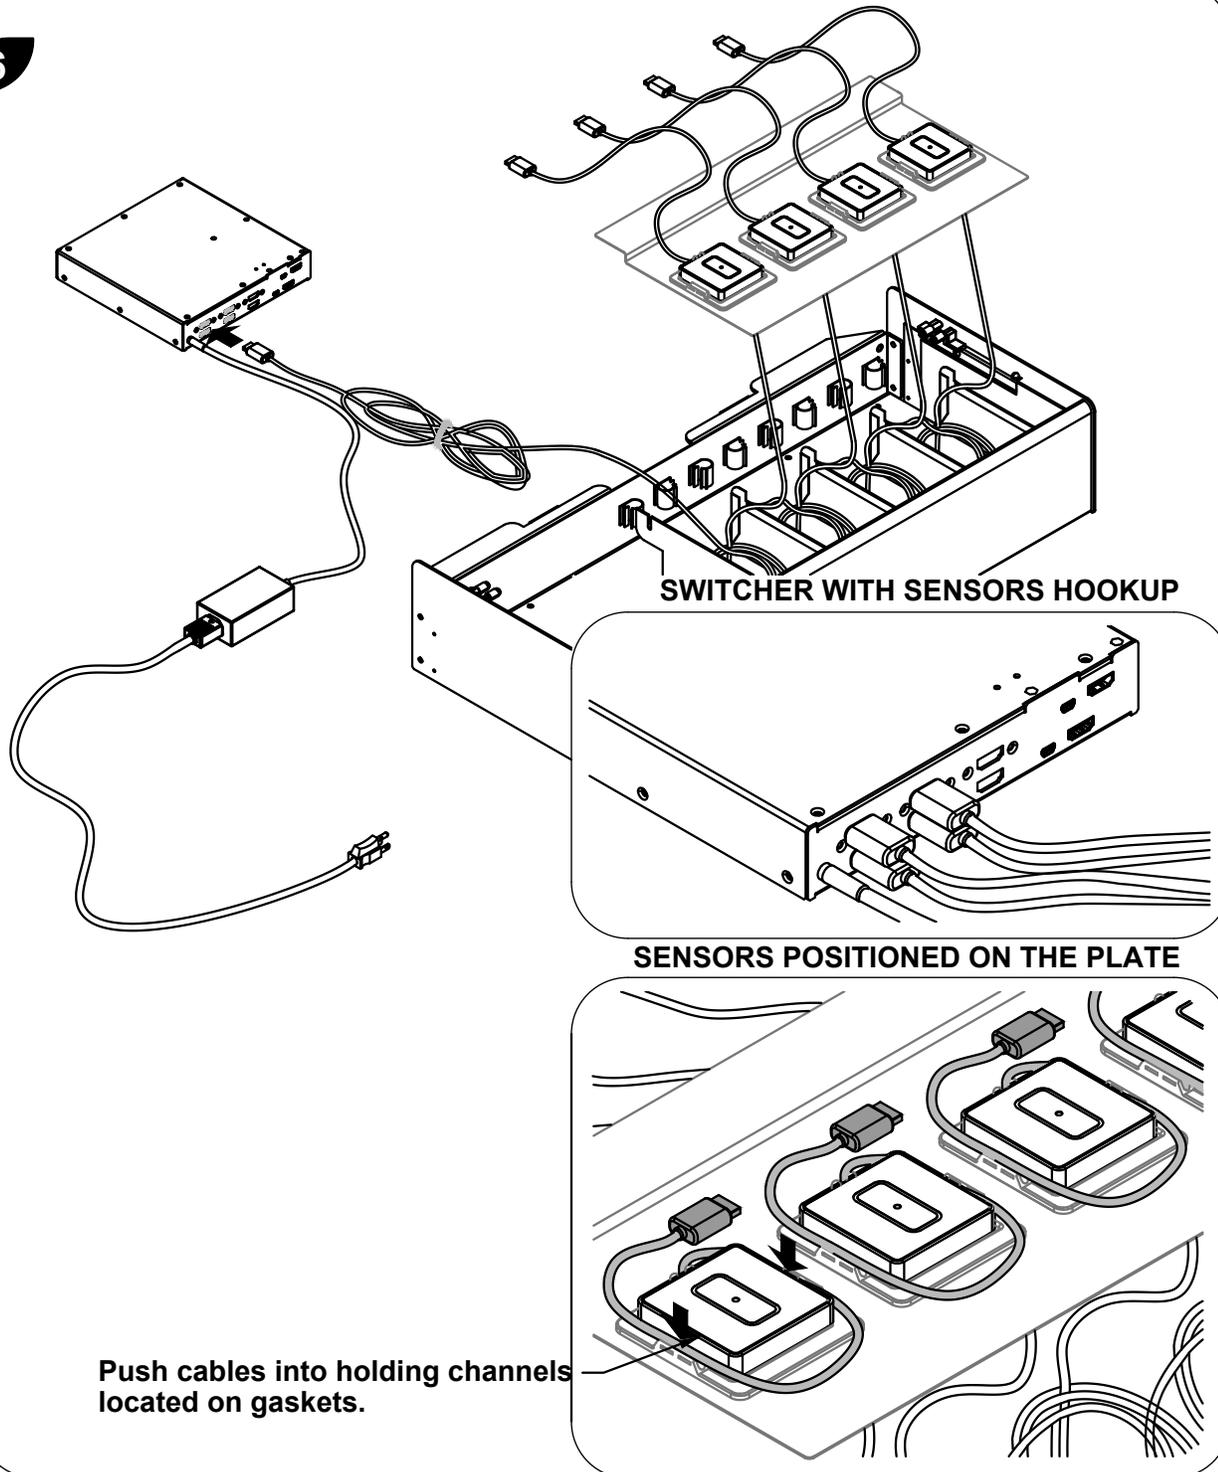



CLUBTalk Mobile Cart

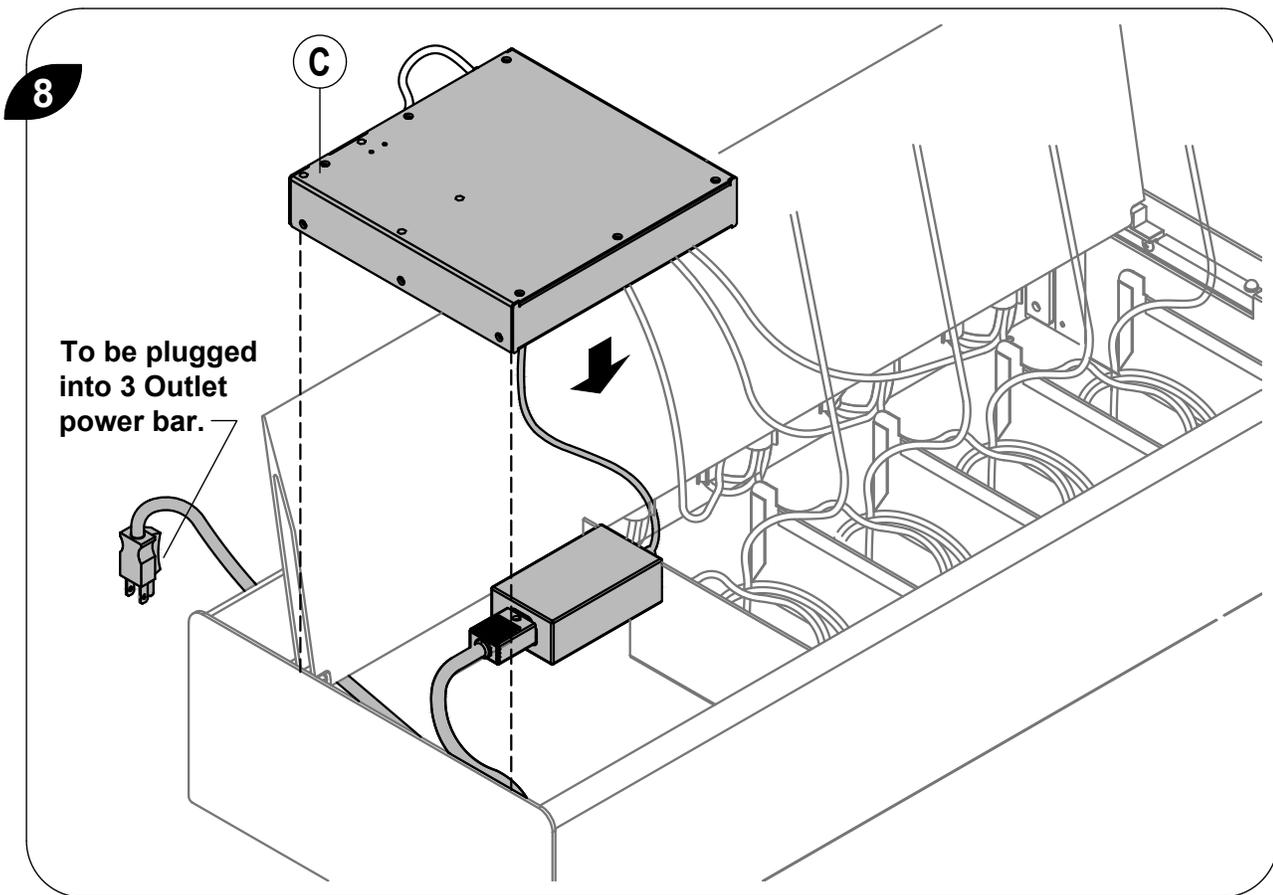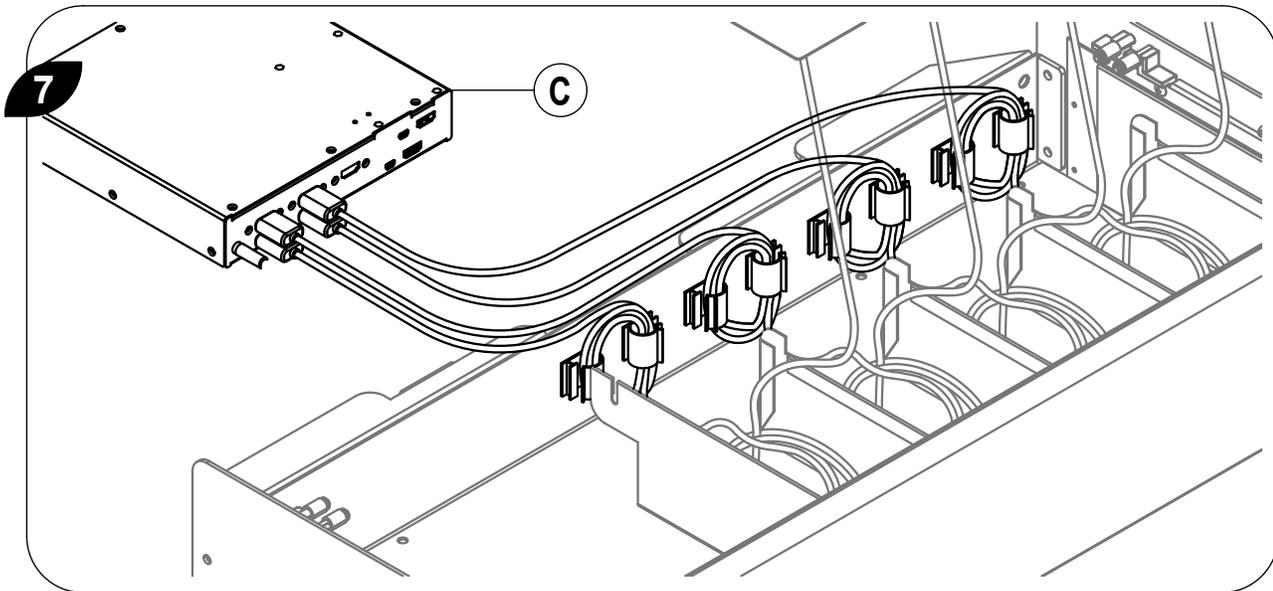

CLUBTalk Mobile Cart

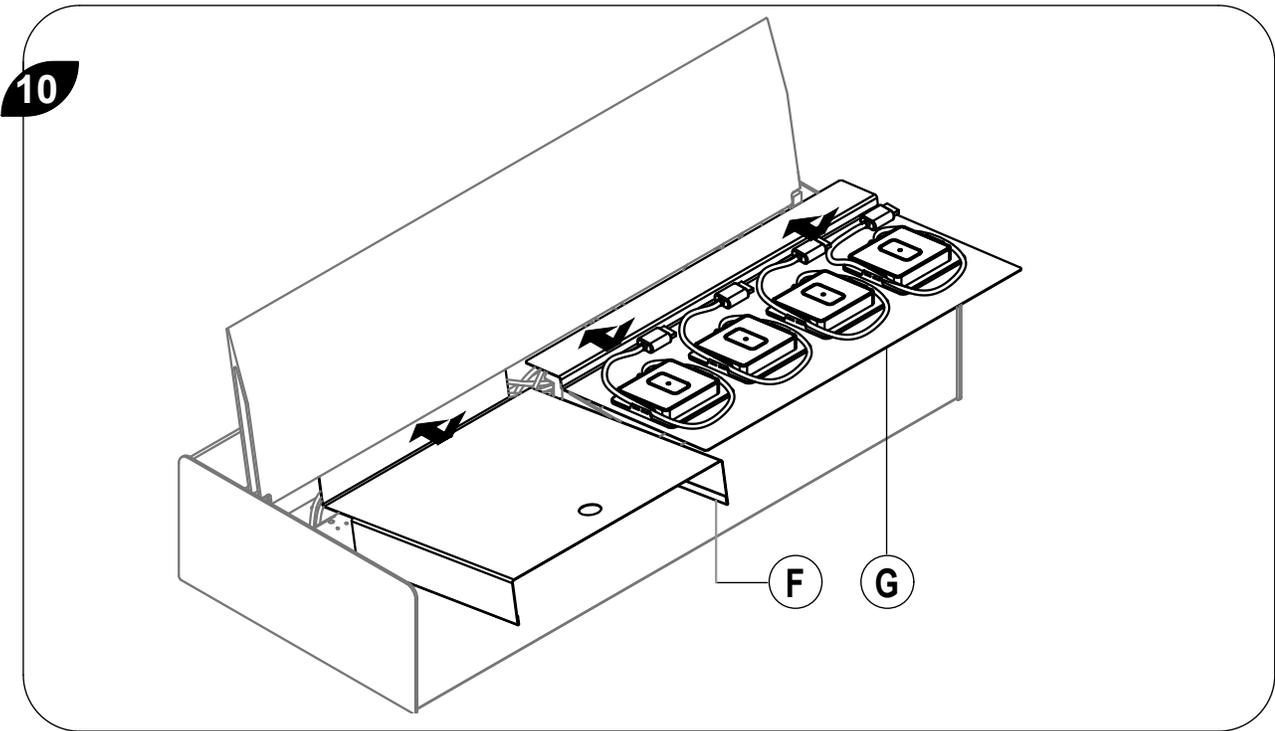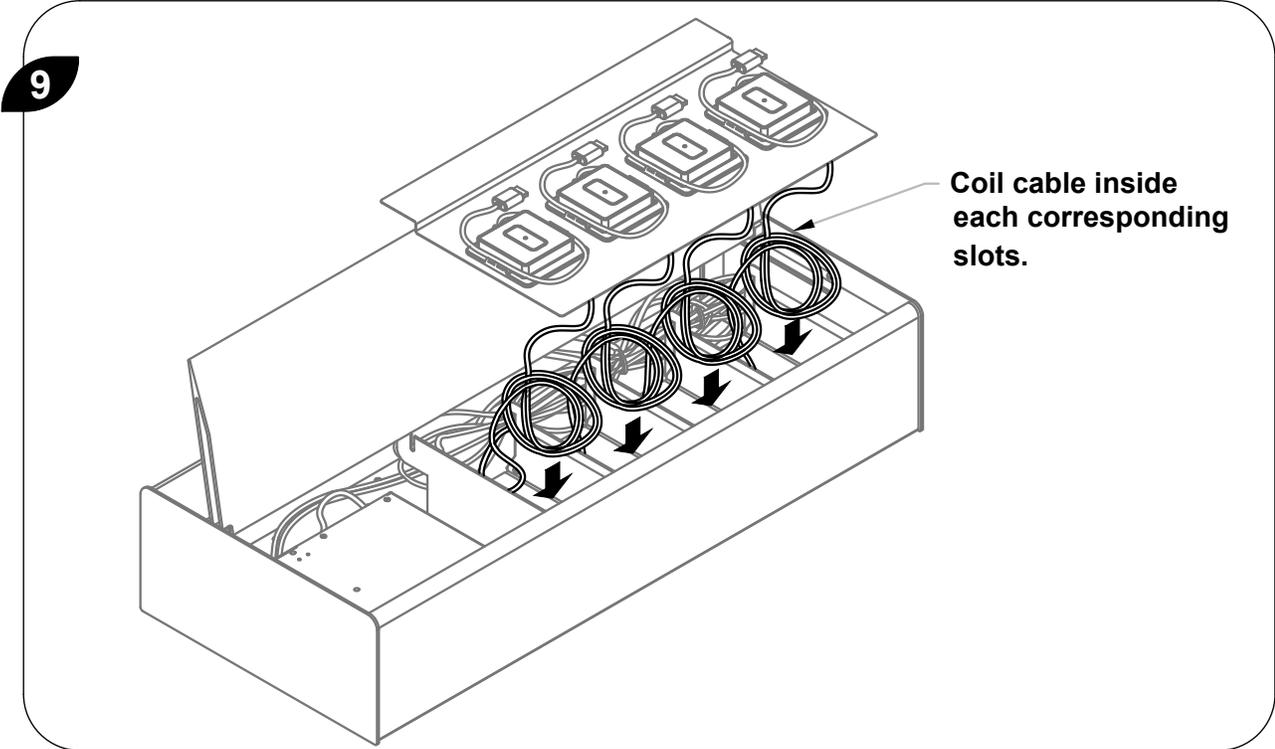


CLUBTalk Mobile Cart

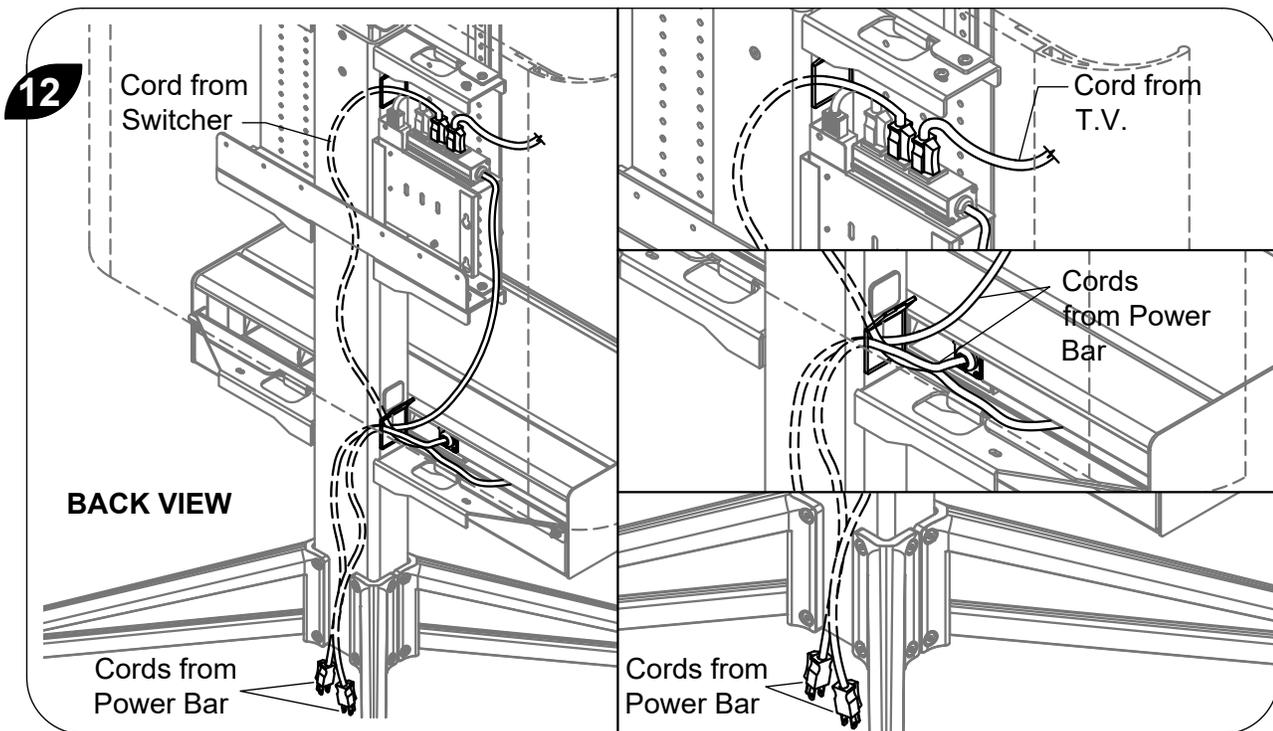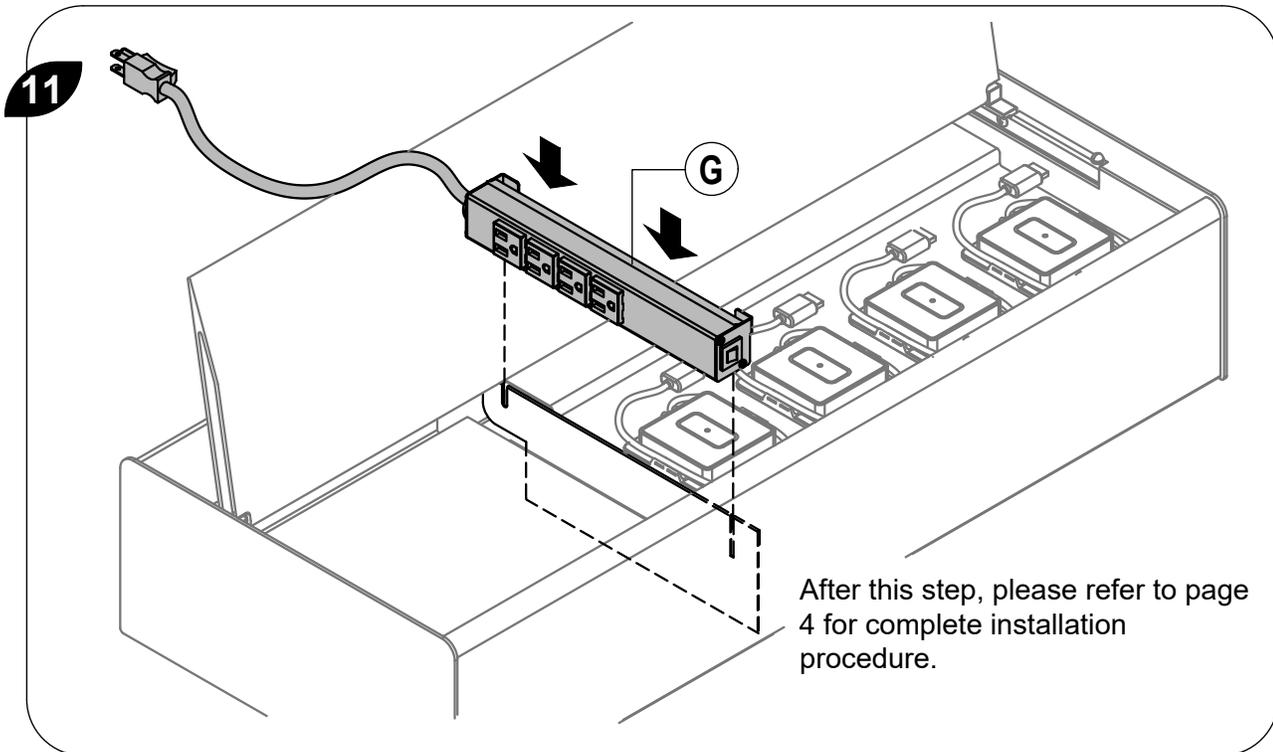

Section – **CLUBtalk**

CUR – CLUBtalk Rectangular Table
 CUS – CLUBtalk Square Table
 CUZ – CLUBtalk Trapezoid Table

Product

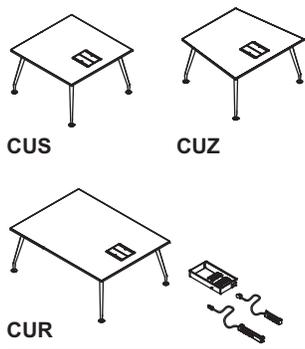

TOOLS REQUIRED:
 Cross or Square Drive #1, #2 and #3, and Level

CUS, CUZ & CUR - Part / Product Identification and What's Included

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.	Kit No. / Assy. No.
A		Square CLUBtalk Worksurface	C05-7149	1	
	OR 	Trapezoid CLUBtalk Worksurface	C05-7155		
	OR 	Rectangular CLUBtalk Worksurface	C05-7157		
B		Stretch Leg with Levelers	N09-0992	4	
C		1/4" – 20 x 0.625" M. Screw, Quadrex, Truss Head, Zinc	E01-0098	24	
D		#10 x 0.875" LG Wood Screw, Quadrex, Pan Washer Head, Zinc	E07-0077	42" w = 32 48" or 54" w = 56 (for CUS only)	N09-4202
				48" w = 50 54" w = 56 72" w = 64 (for CUZ only)	
				48" or 60" w = 64 54 or 72" w = 72 (for CUR only)	
E		Reinforcing Bar	A15-5891 +XX	3 (CUZ 48" w X 48" d only) or 4 (48" to 72" w)	
F		Slim Power Bar	YEPDCH	1	
		Compact Power Bar	YEPS	1	
G		CLUBtalk Access Door Subassembly	N09-4190	1	N09-4202
H		CLUBtalk Access Door Mounting Bracket	A16-1336	2	
I		#8 – 32 UNC x 5/16" M. Screw	E01-0769	4	
J		#10 – 32 UNF x 1/2" M. Screw	E01-0070	4	
K		CLUBtalk Grommet Enclosure Subassembly (Underpan)	N/A	1	
L		Power Bar Bracket	A16-1970	1	
M		#10 x 0.875" LG Wood Screw, Quadrex, Pan Washer Head, Zinc	E07-0077	8	

Section – **CLUBtalk**

CUR – CLUBtalk Rectangular Table


CUS – CLUBtalk Square Table

CUZ – CLUBtalk Trapezoid Table


CLUBTALK TABLE INSTALLATION

1


NOTE: Rectangular Table (CUR)
shown as an example.

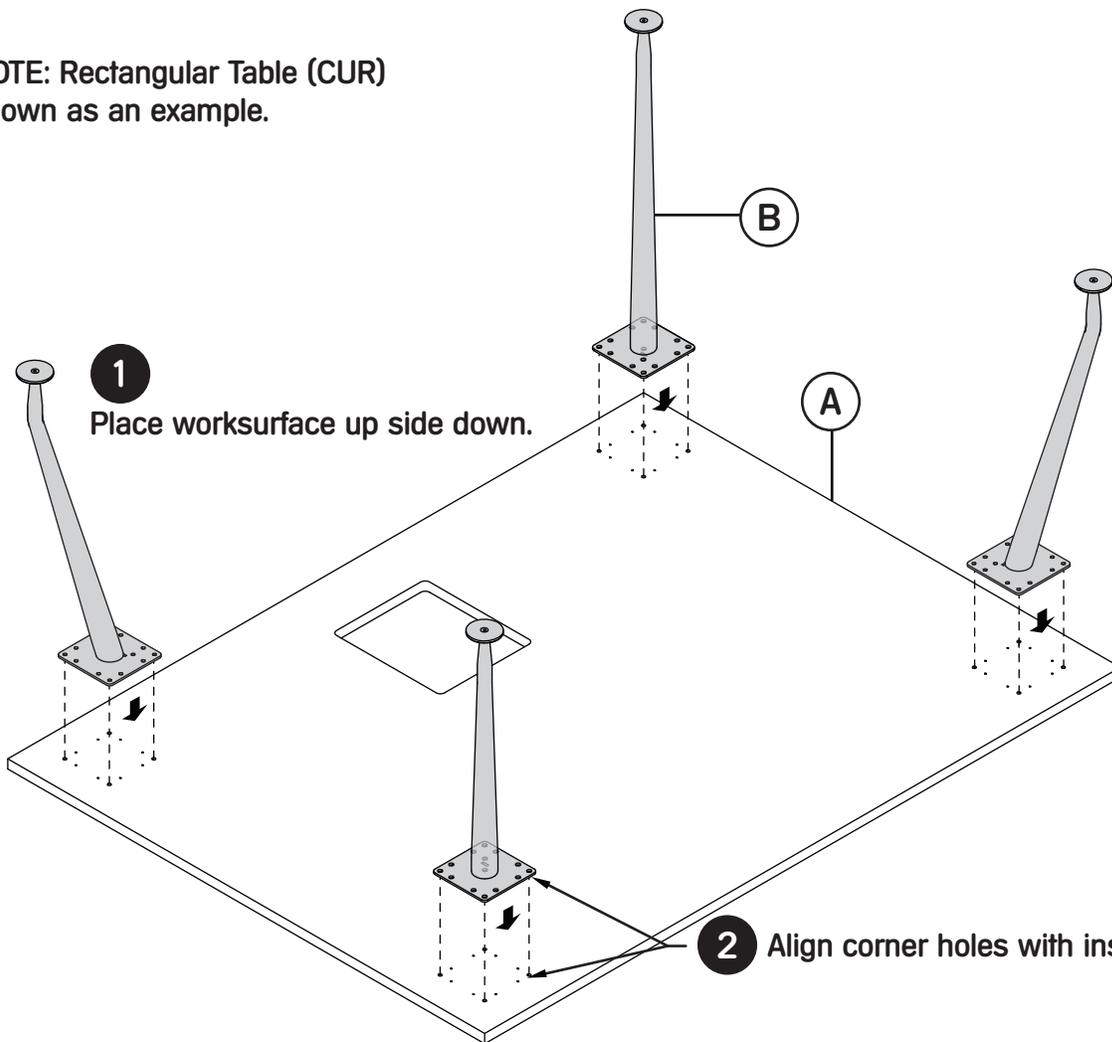

2


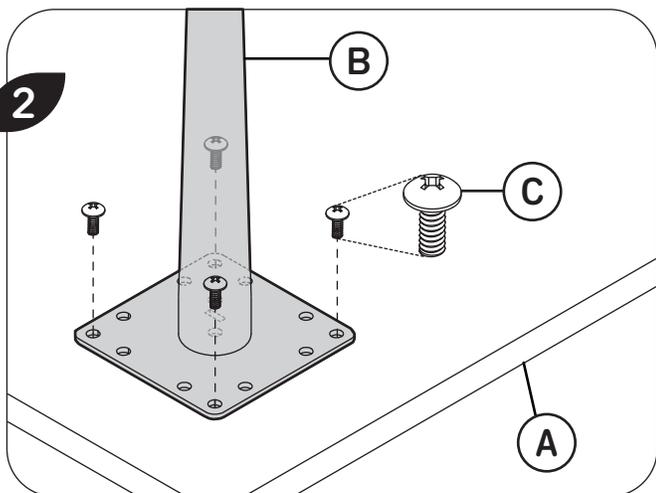


3

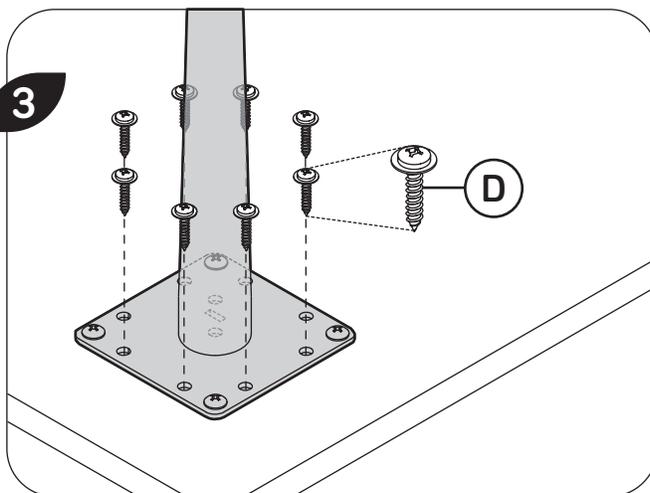

Section – **CLUBtalk**

CUR – CLUBtalk Rectangular Table
CUS – CLUBtalk Square Table
CUZ – CLUBtalk Trapezoid Table


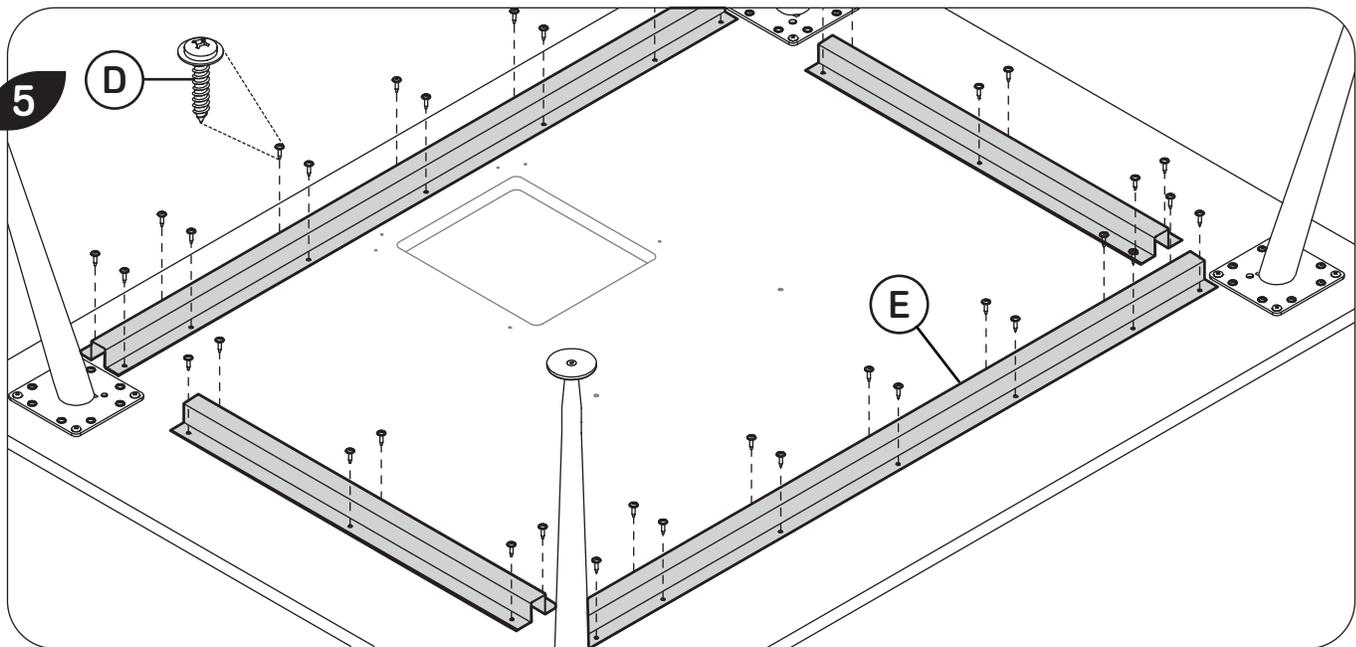
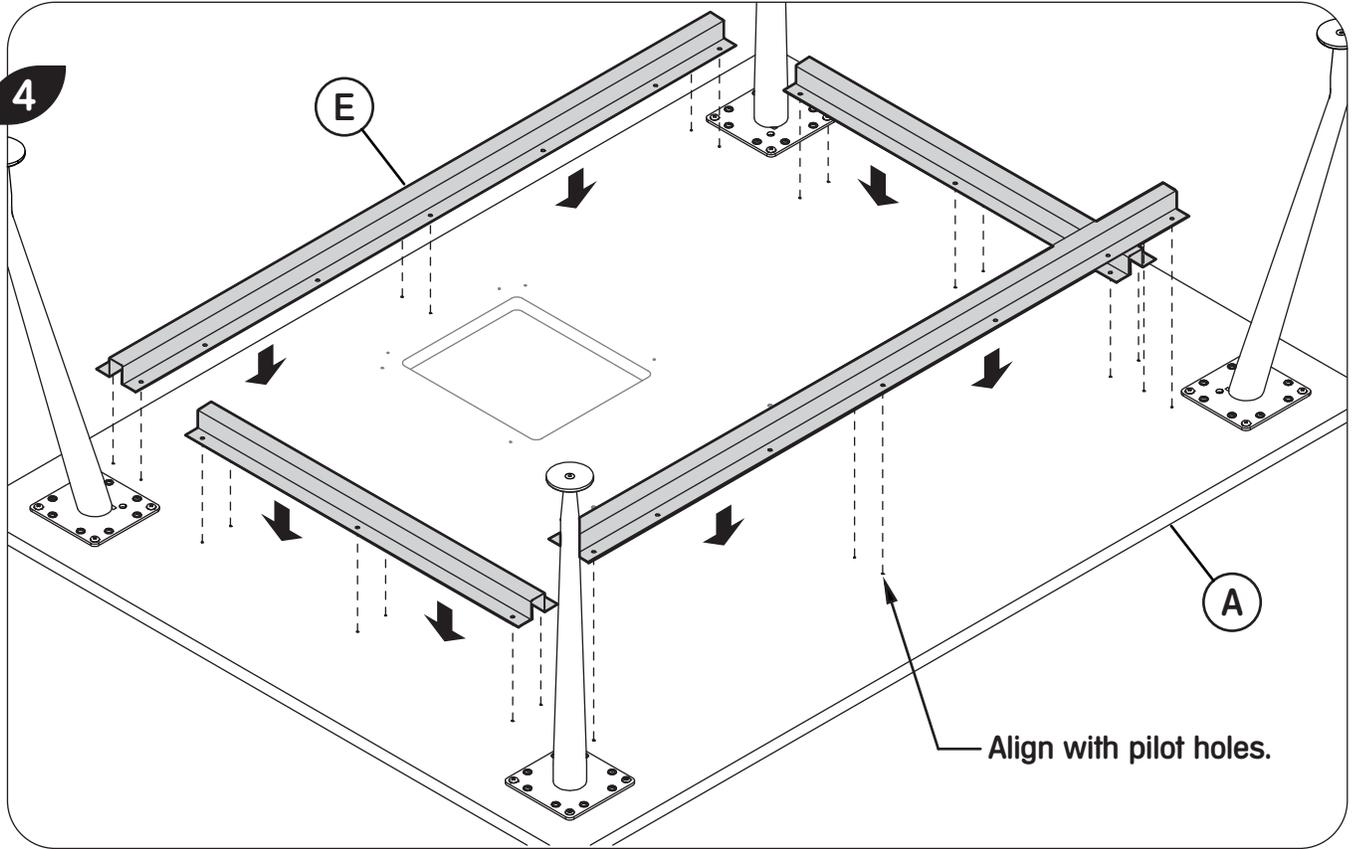


Section – **CLUBtalk**

CUR – CLUBtalk Rectangular Table



CUS – CLUBtalk Square Table

CUZ – CLUBtalk Trapezoid Table

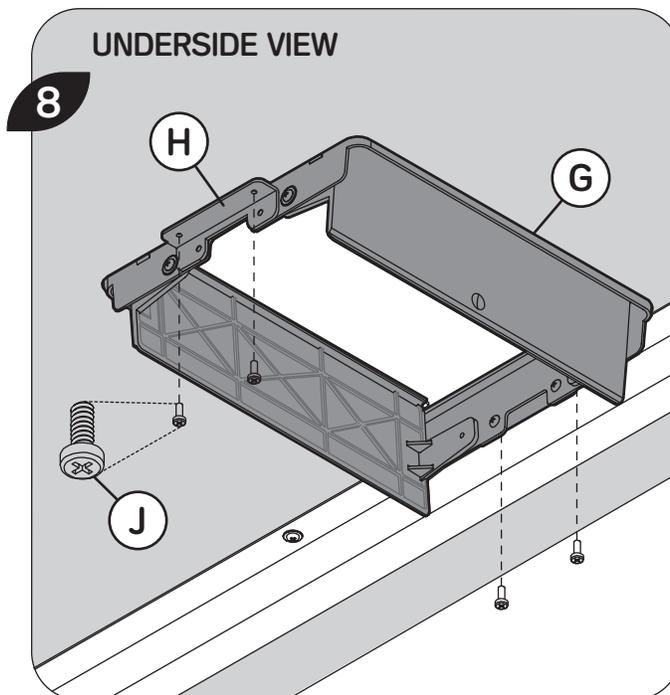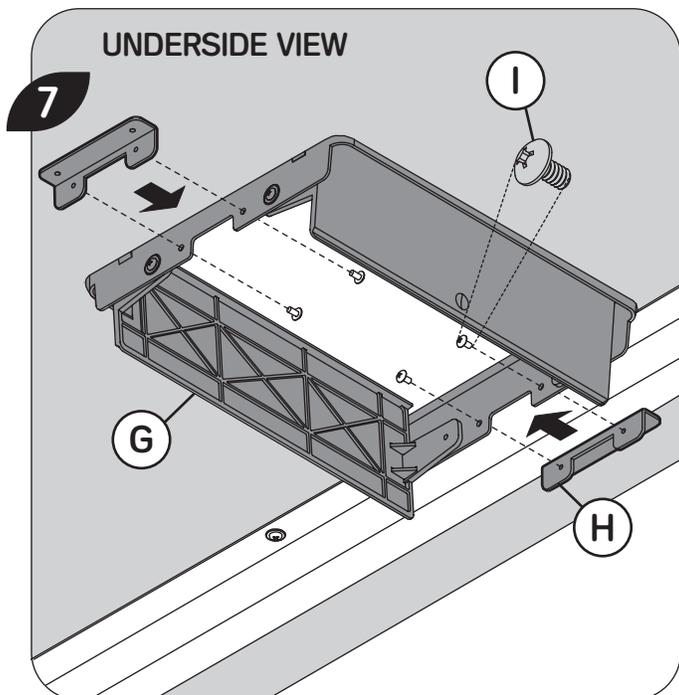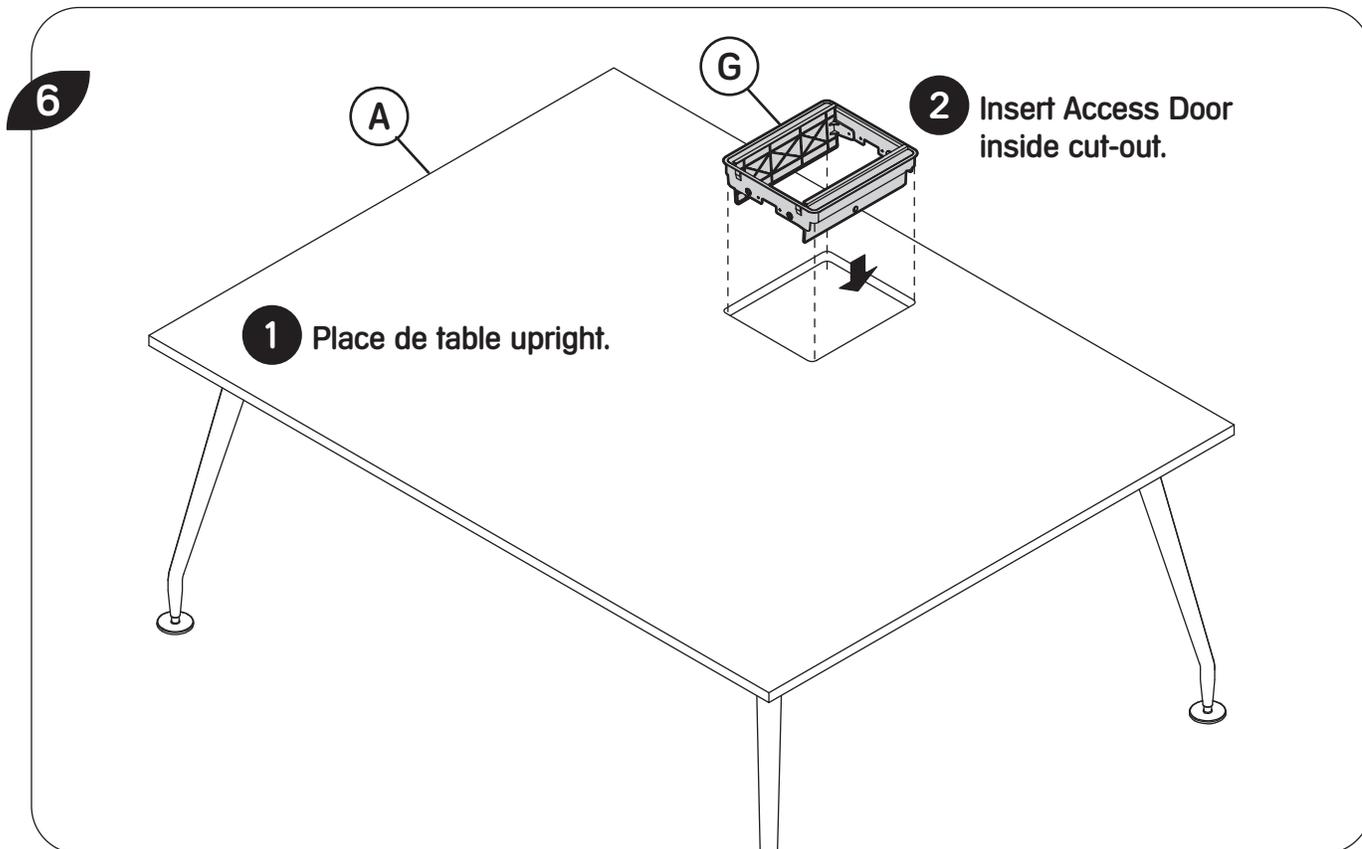



Section – **CLUBtalk**

CUR – CLUBtalk Rectangular Table
CUS – CLUBtalk Square Table
CUZ – CLUBtalk Trapezoid Table

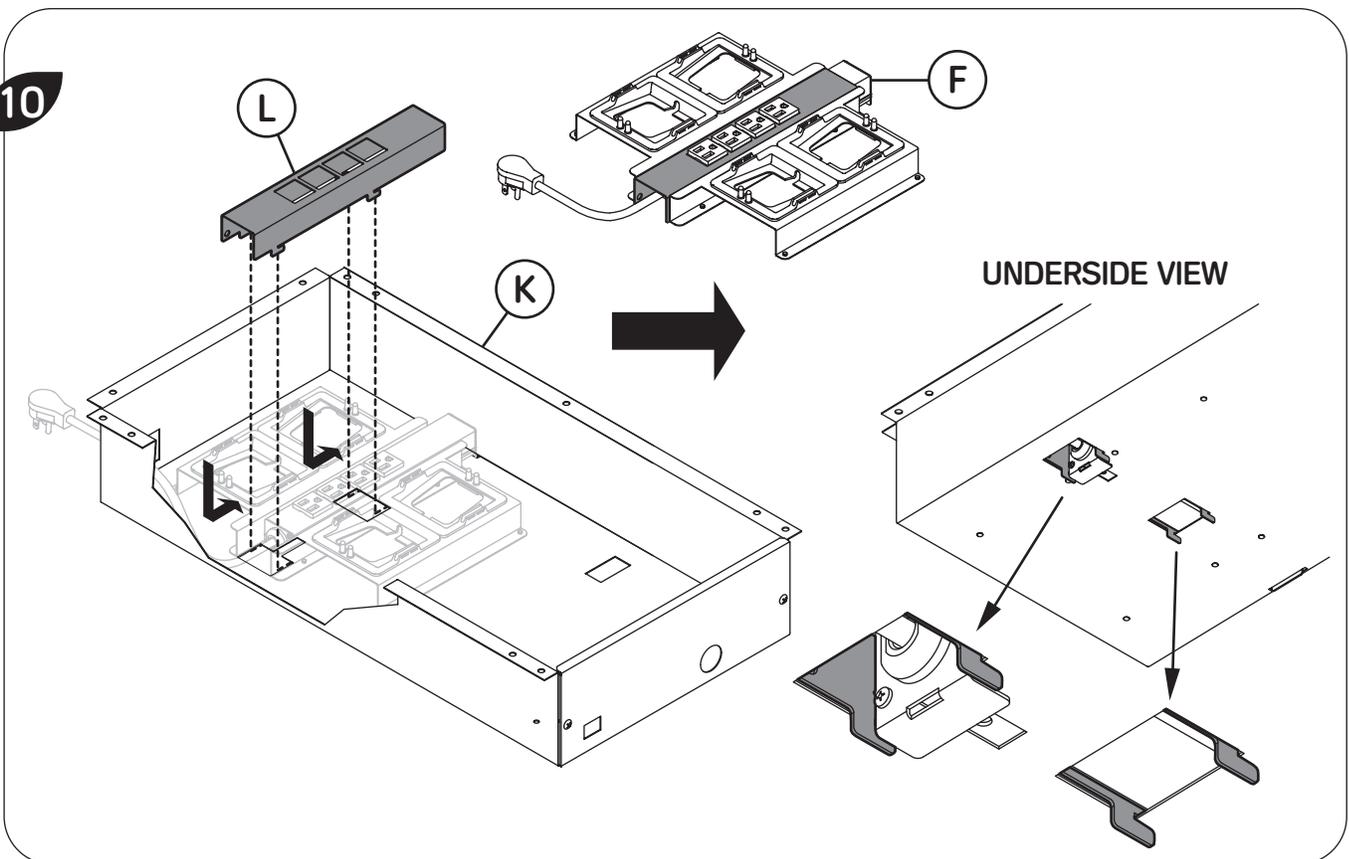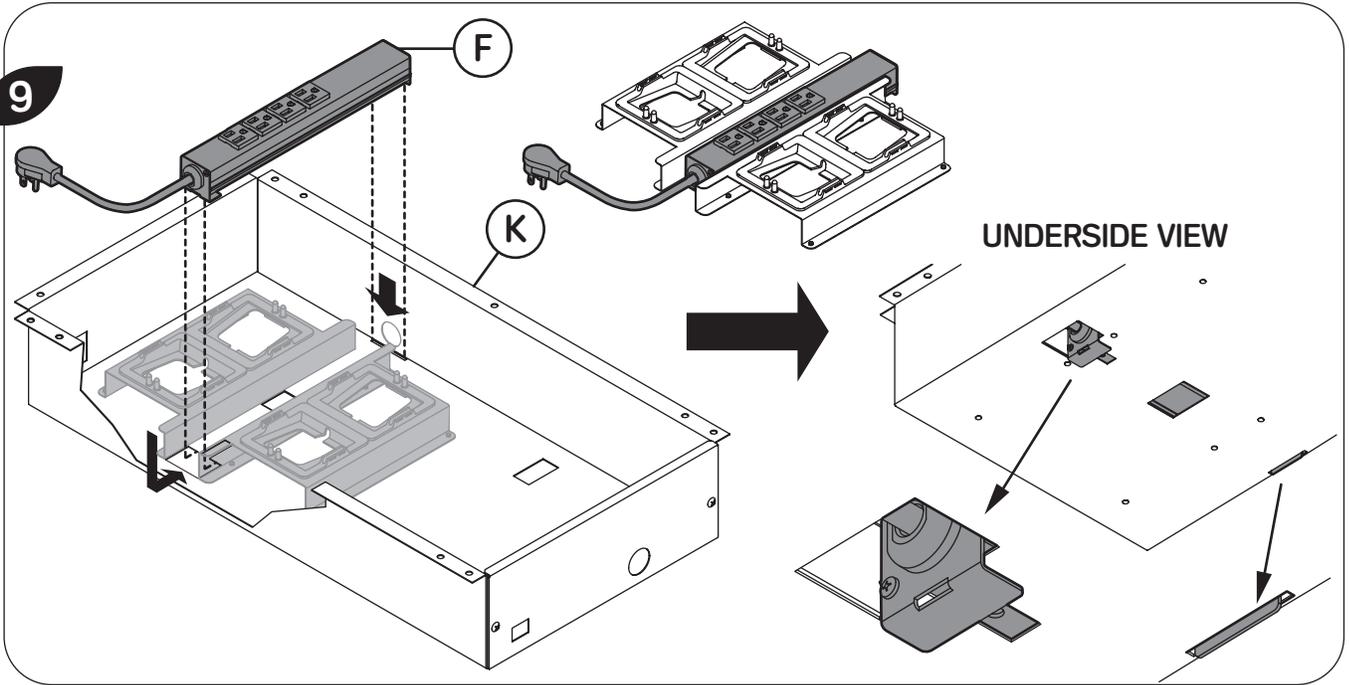

Section – **CLUBtalk**


CUR – CLUBtalk Rectangular Table
CUS – CLUBtalk Square Table
CUZ – CLUBtalk Trapezoid Table

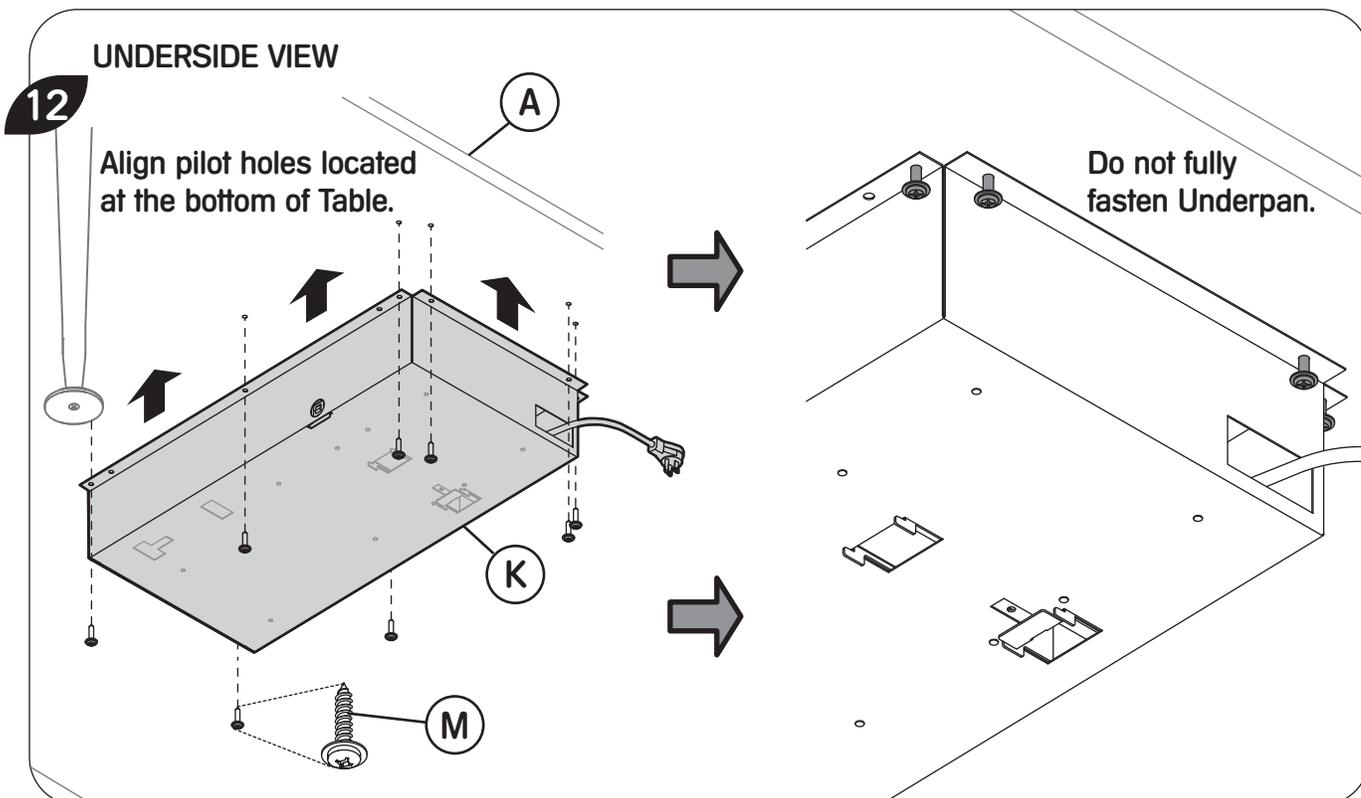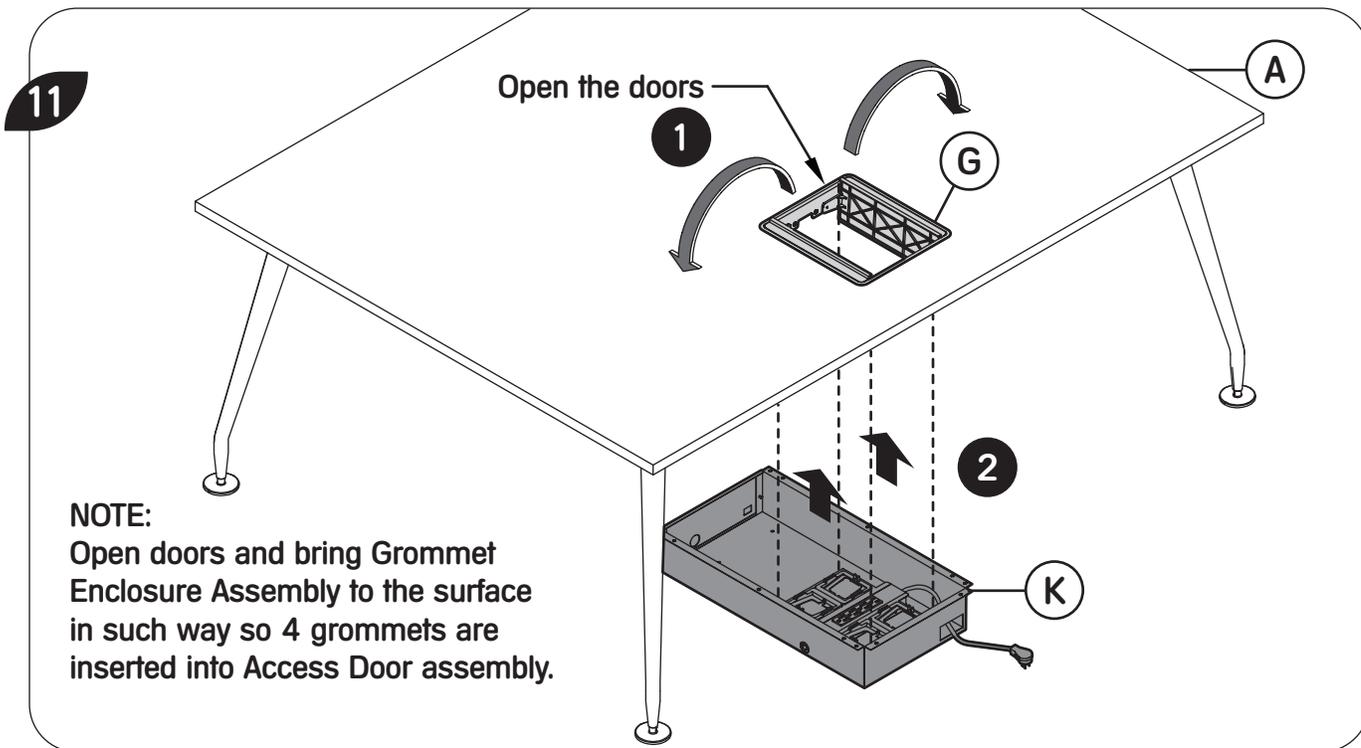

Section – **CLUBtalk**

CUR – CLUBtalk Rectangular Table
CUS – CLUBtalk Square Table
CUZ – CLUBtalk Trapezoid Table

13

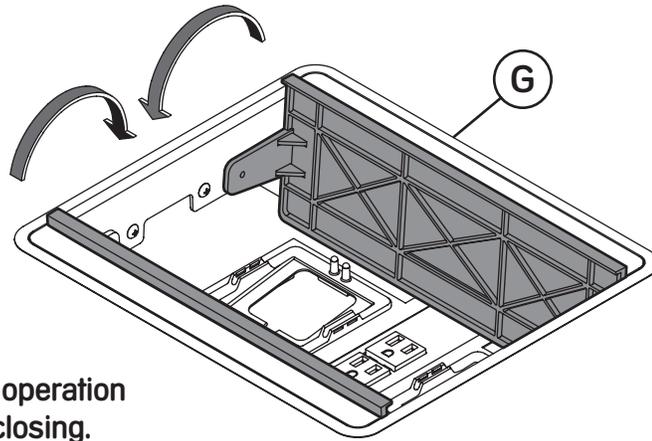


NOTE:
Check the doors operation
by opening and closing.
Adjust position of Underpan
if necessary.










14

UNDERSIDE VIEW




For Grommet Enclosure
wiring, refer to Installation
Guide # 602b.

After doors adjustment,
tighten all screws (M).

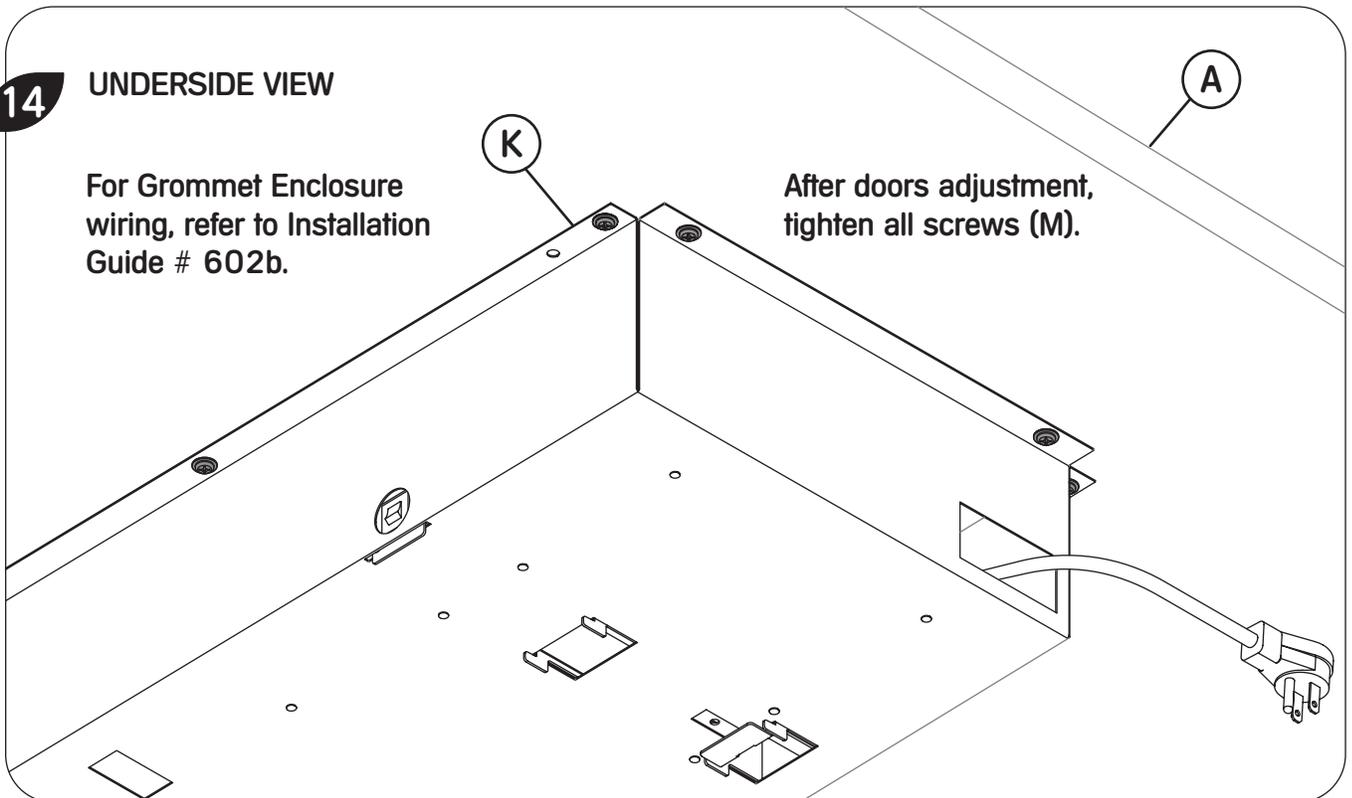

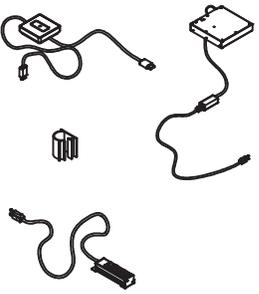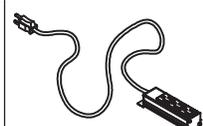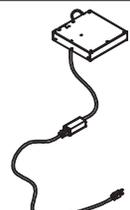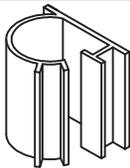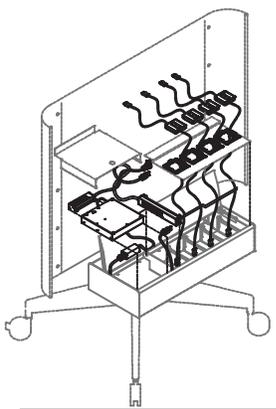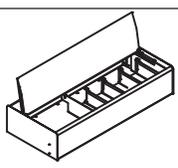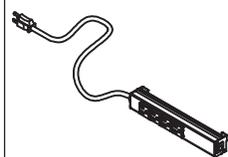Product		CUT - Part / Product Identification and What's Included			
 <p>CLUBconnect for Tek Box</p> <p>NOTE: Optional Wireless Transmitter and Receiver are not recommended for this application.</p>	Ref.	Illustration	Description	Part No. / Prod. Code	Qty.
	A		Sensor	AX-SE200HD AX-SE201DP AX-SE202UG	1
	B		Power Bar - 3 Outlets	YEPSC	1
	C		Switcher	AX-SW4	1
	D		Wire Management	PCORMGMT	8
Not Included with CUT - Part / Product Identification and What's Included					
<p>Application</p> 	Ref.	Illustration	Description	Part No. / Prod. Code	Qty.
	E		CLUBtalk Tek Box Assembly	N09-3876	1
	F		Switcher Plate	A16-1926	1
	G		Sensor Docking Plate	A16-1924	1
	Grommets		B02-0404	4	
	H		Slim Power Bar for Tek Box	YEPDCH	1

CLUBTalk with Mobile Cart

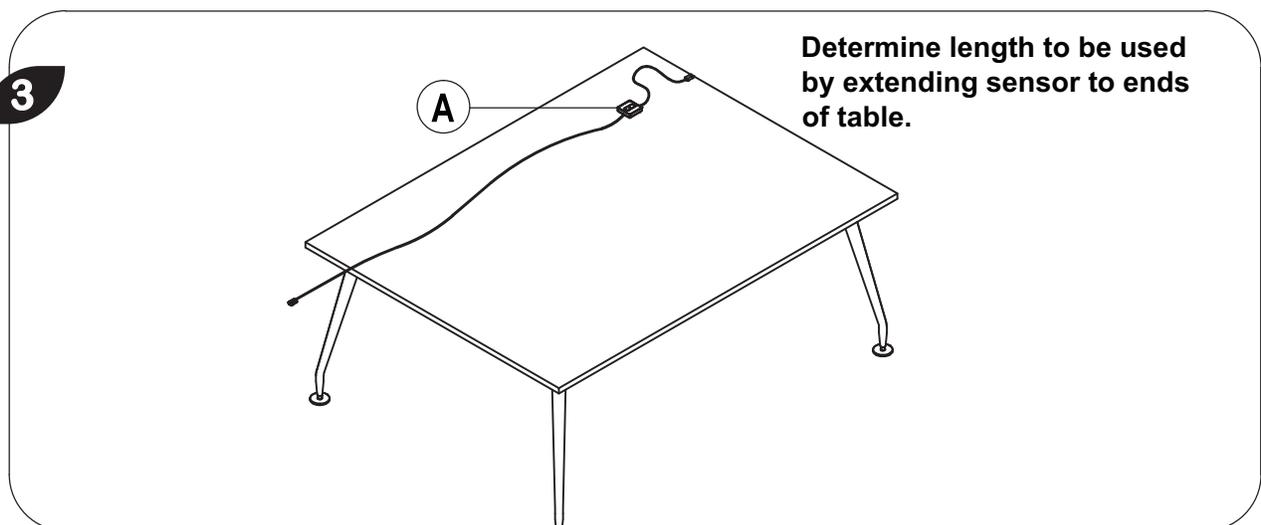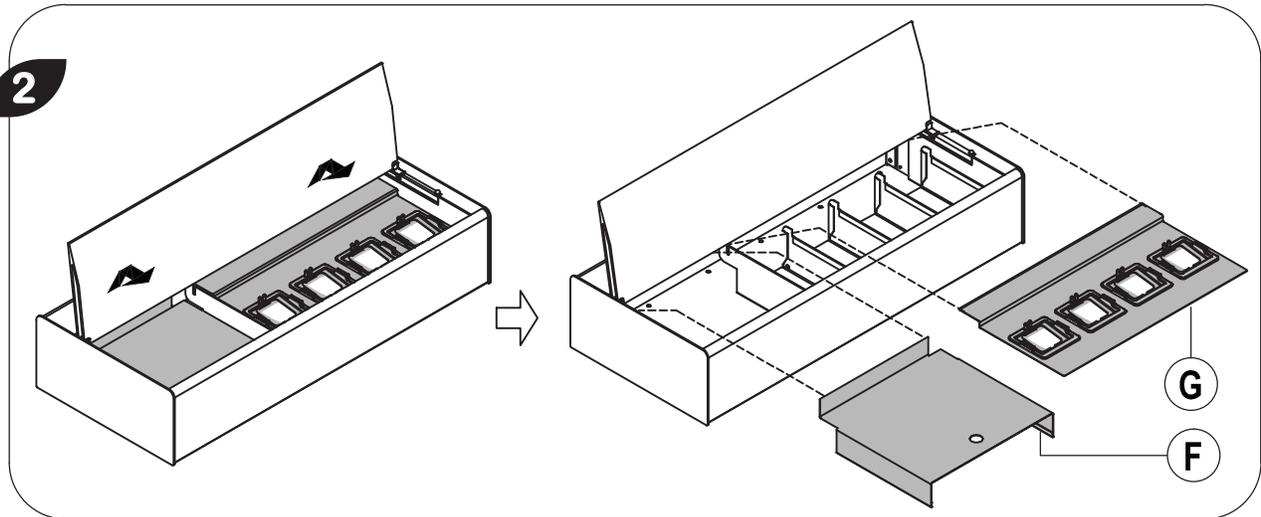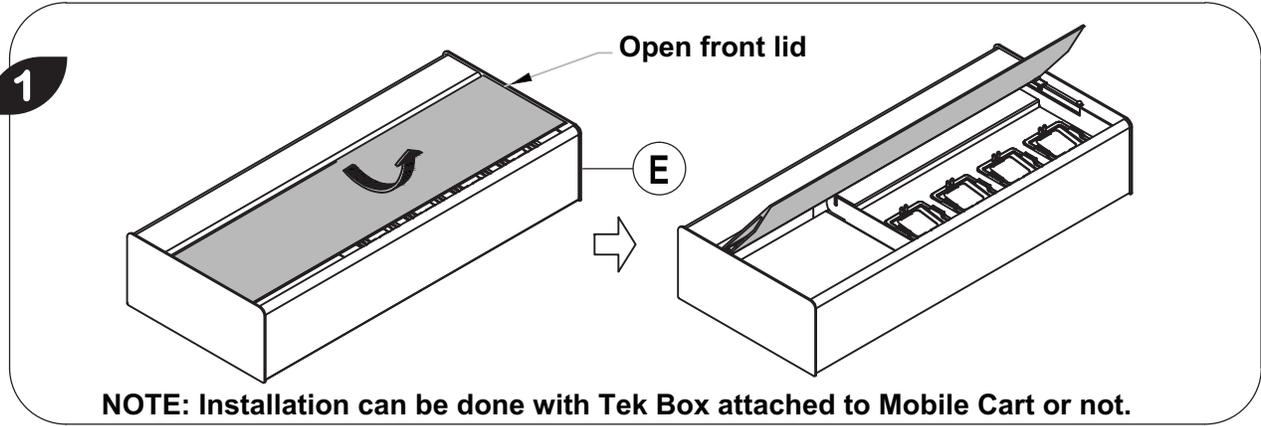


CLUBTalk with Mobile Cart


4

Determined length


Temporary coiled for Wire Clips

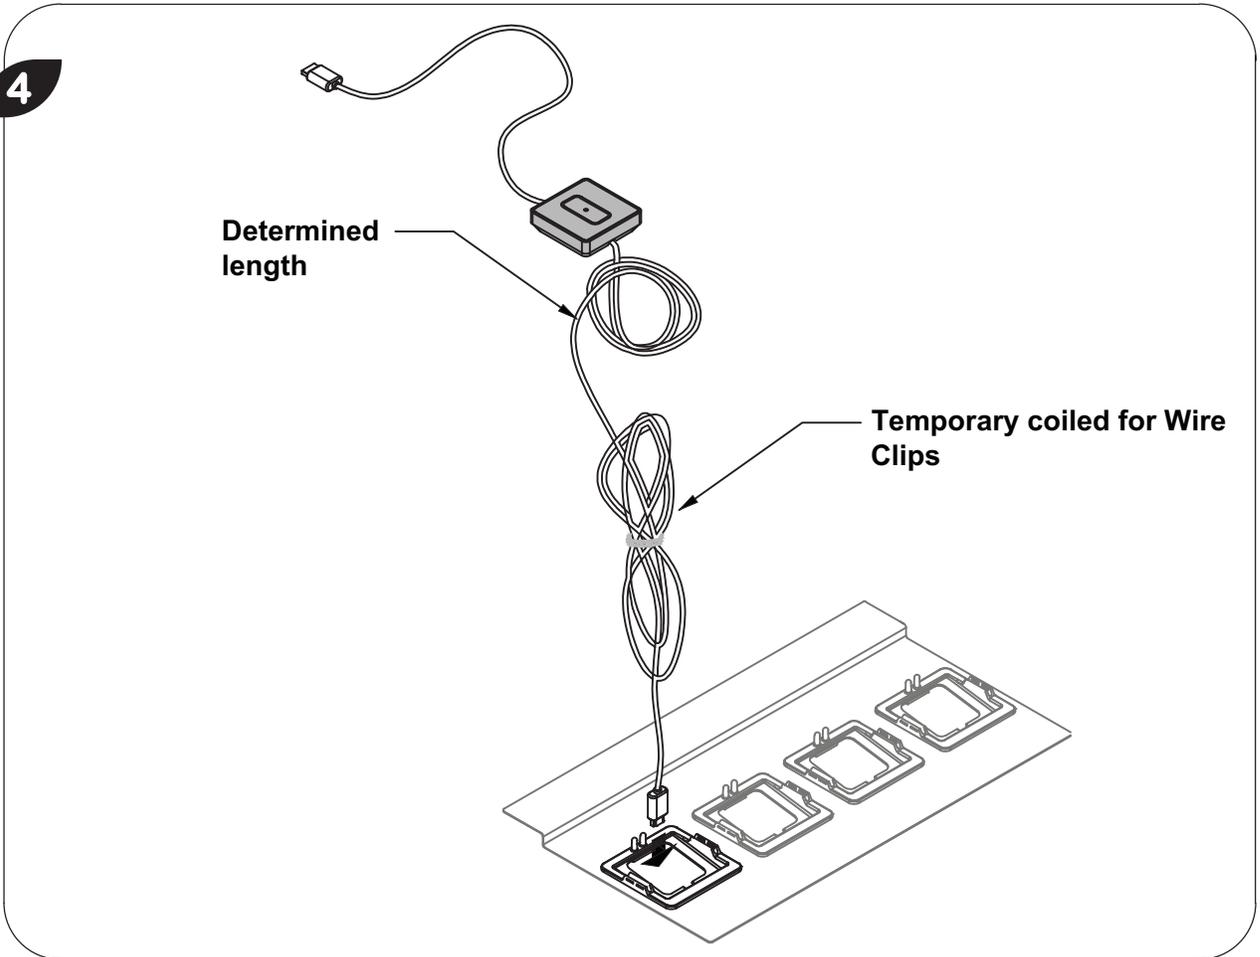


5

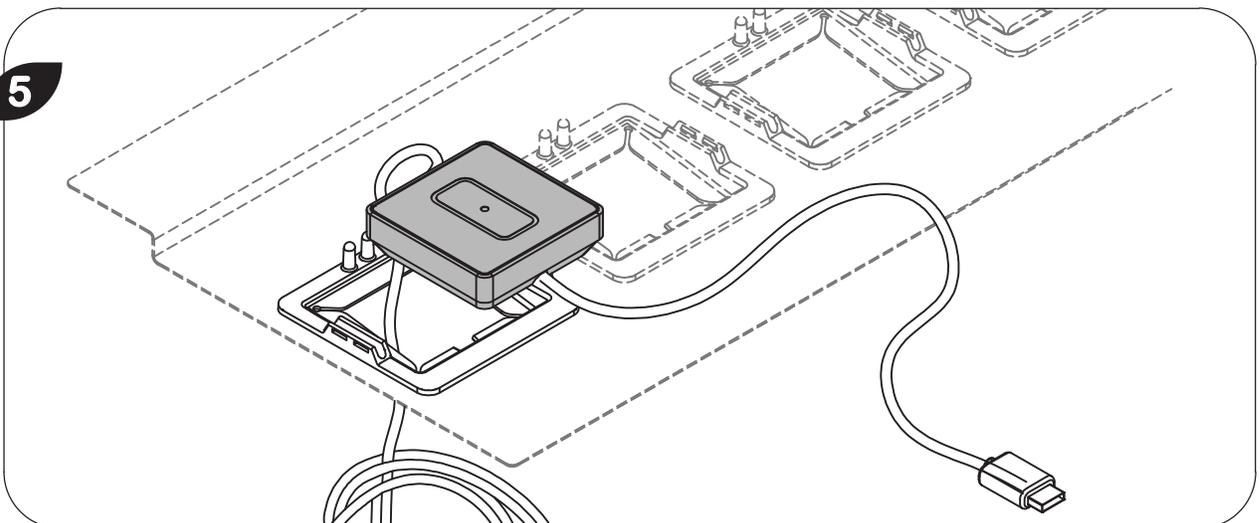



CLUBTalk with Mobile Cart

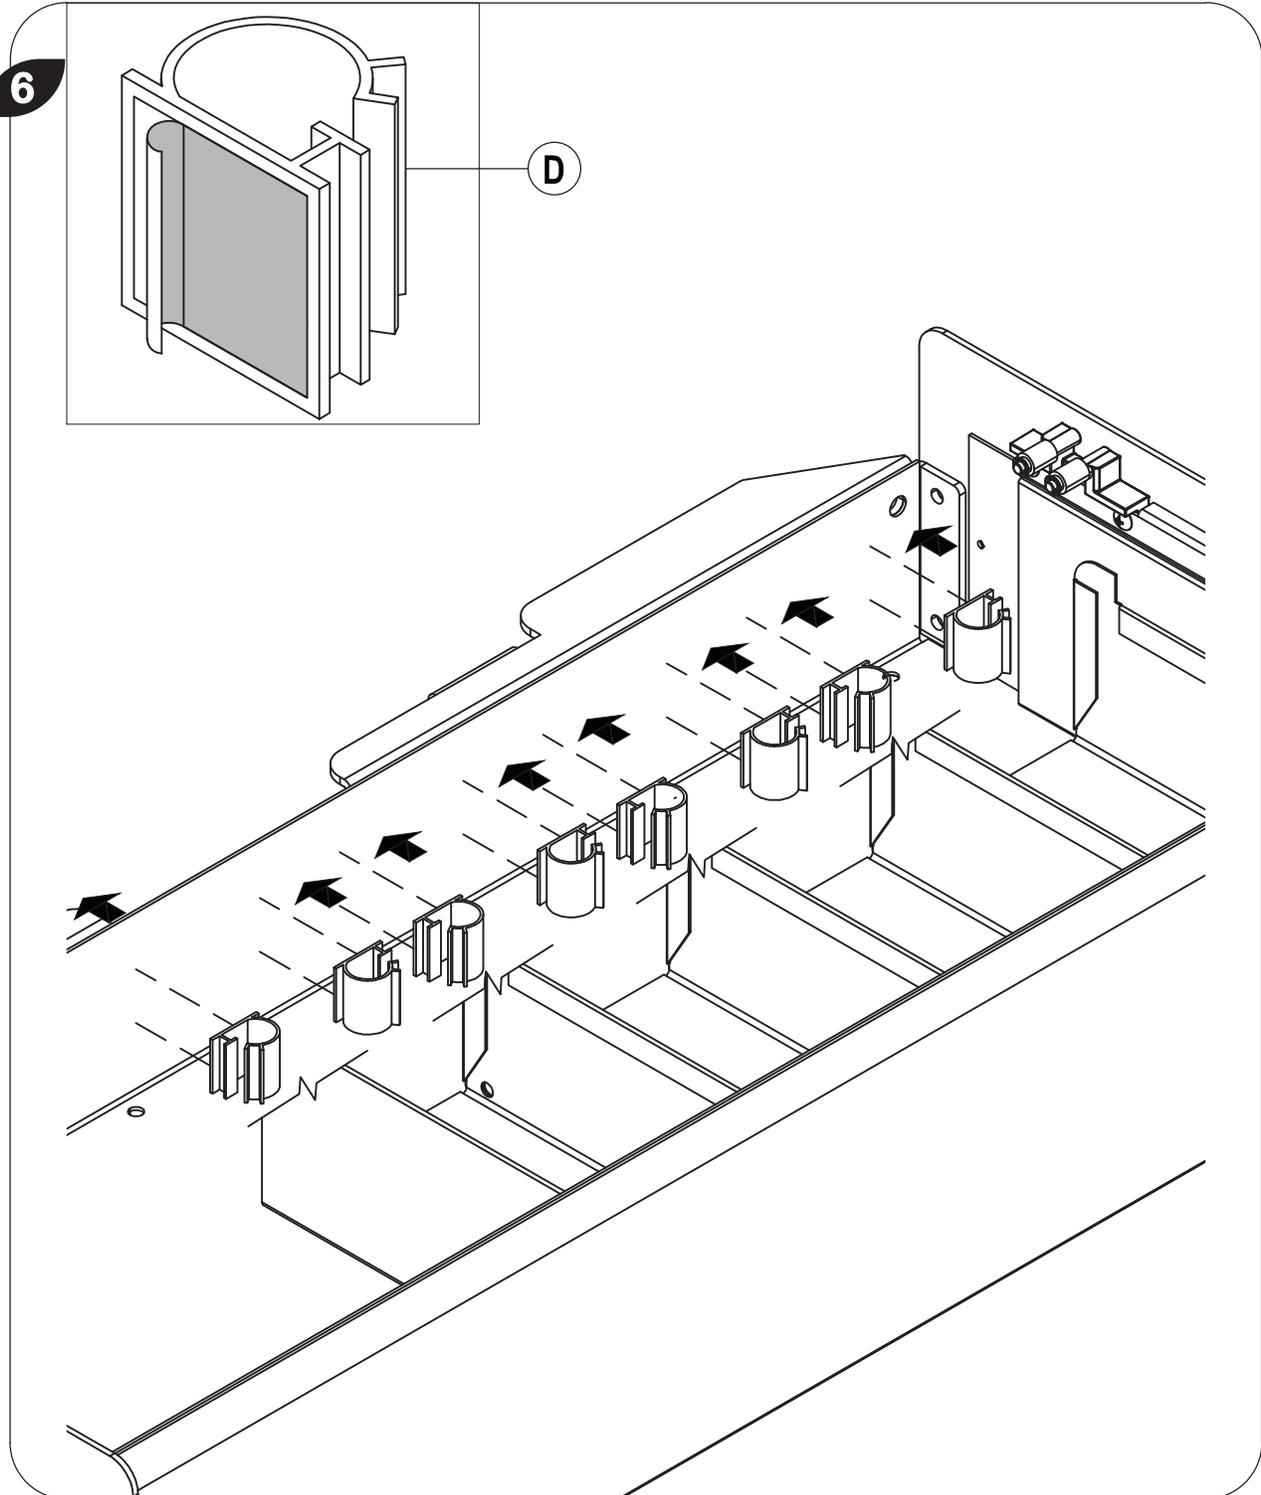


CLUBTalk with Mobile Cart

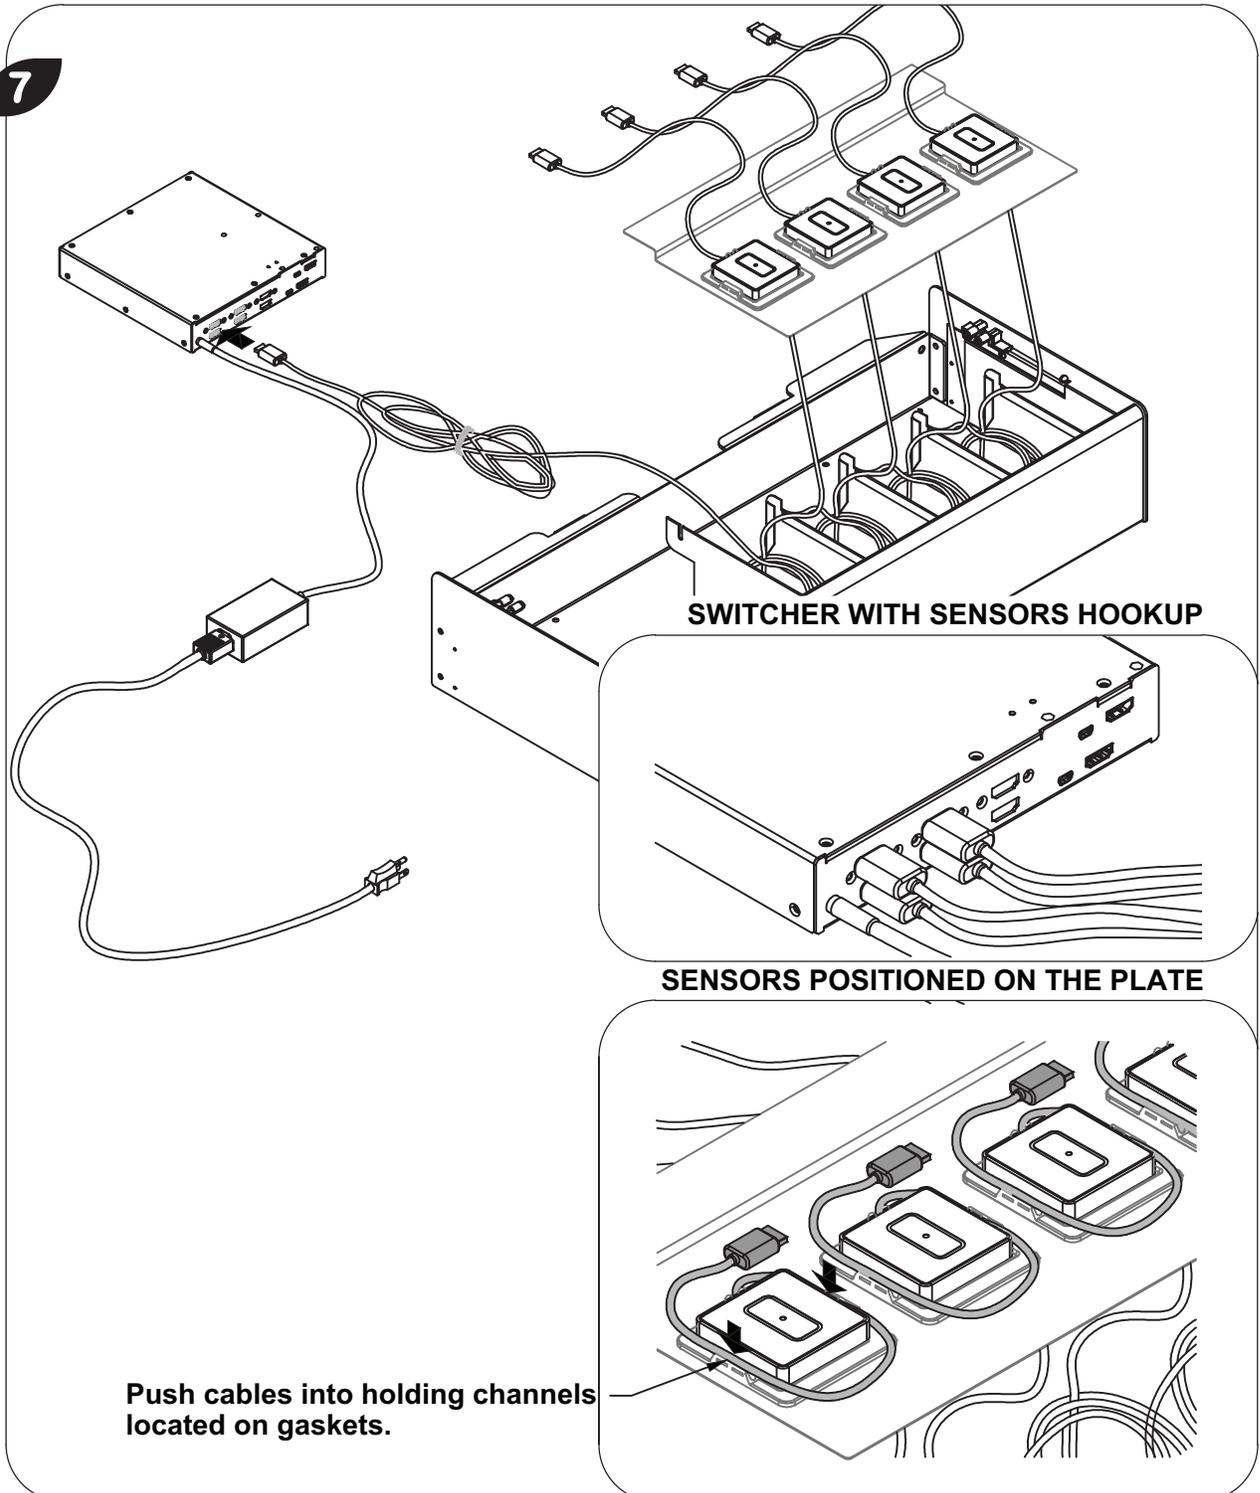

CLUBTalk with Mobile Cart

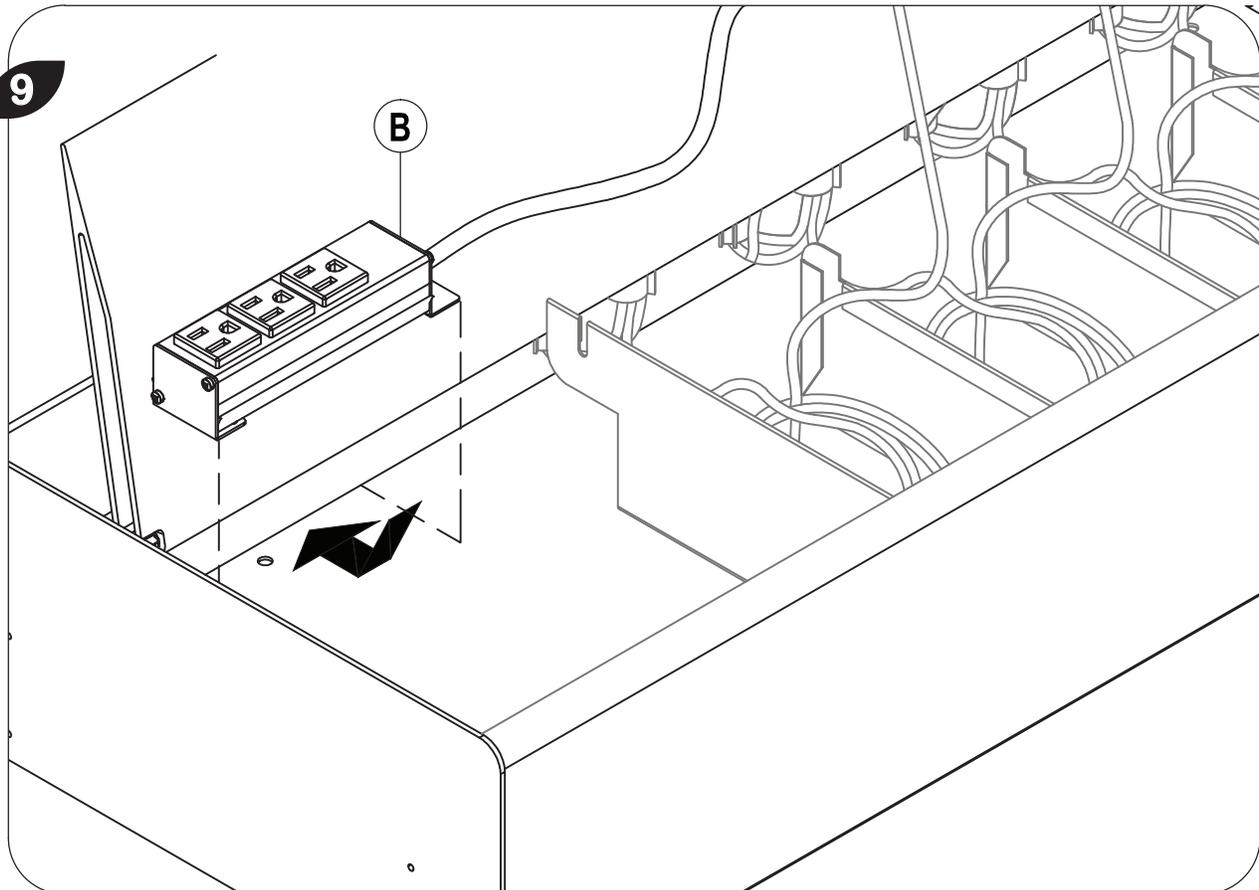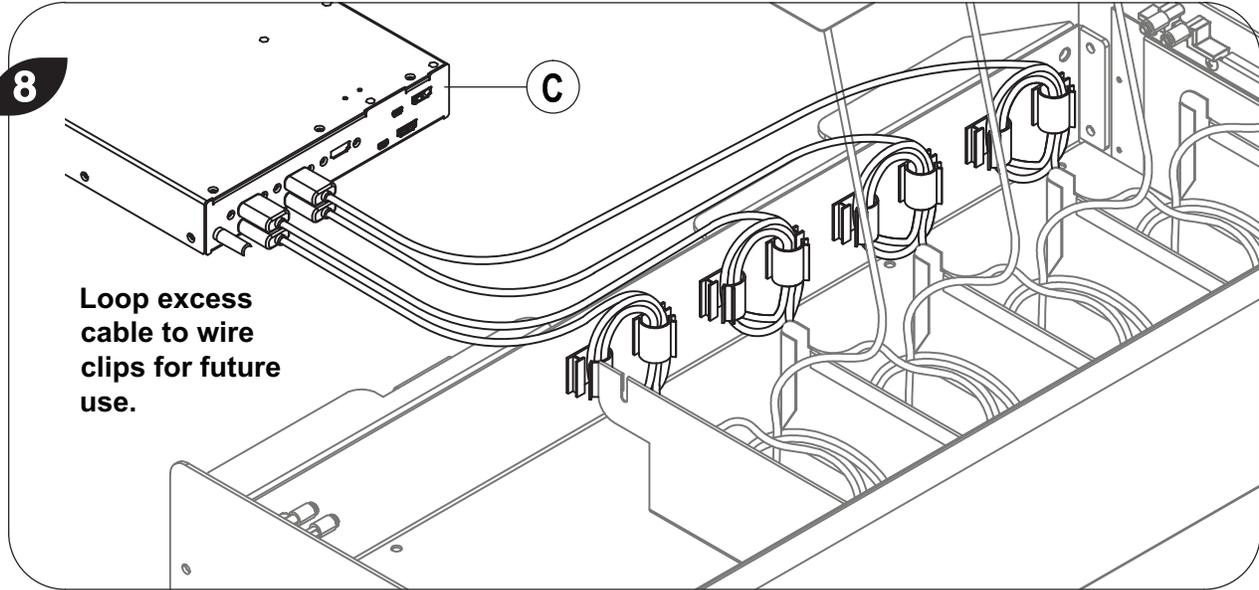


CLUBTalk with Mobile Cart

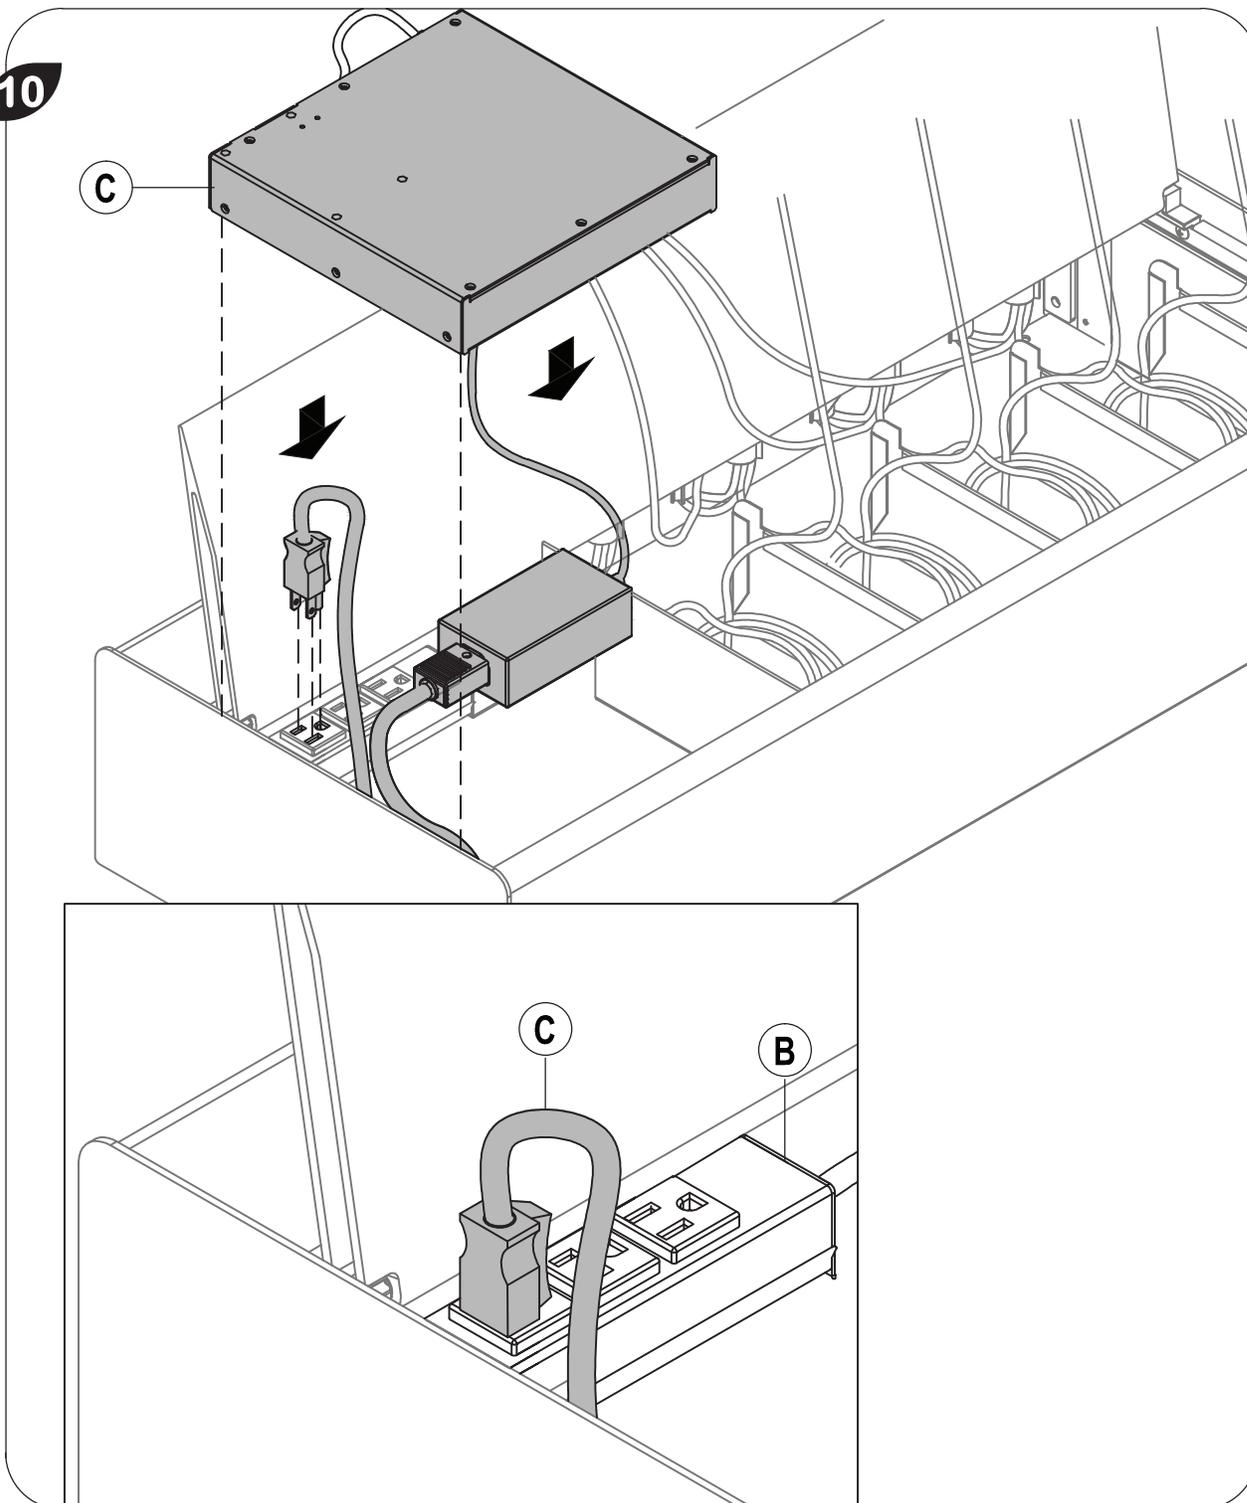


CLUBTalk with Mobile Cart

11


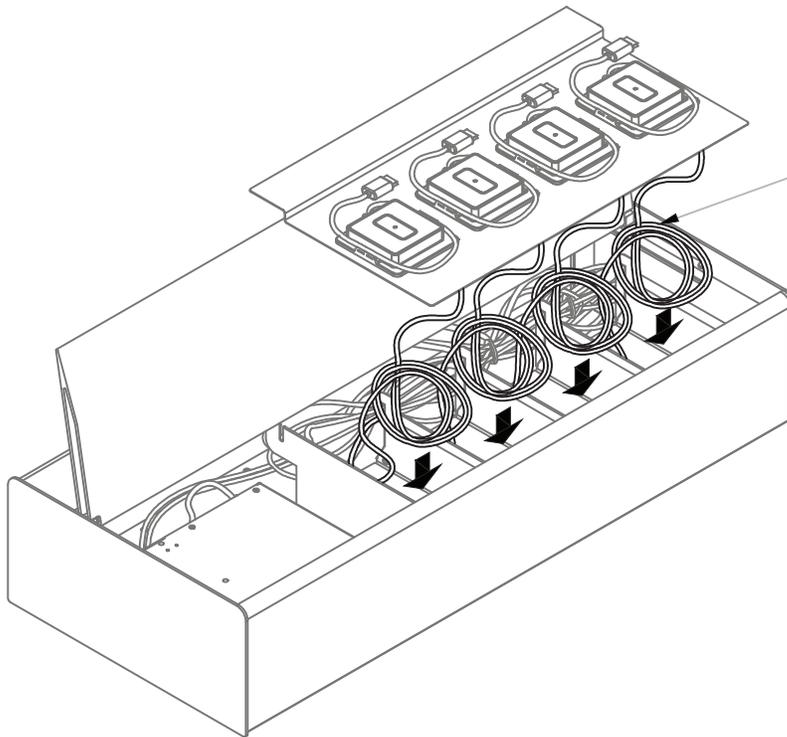


Coil cable inside each corresponding slots.



12

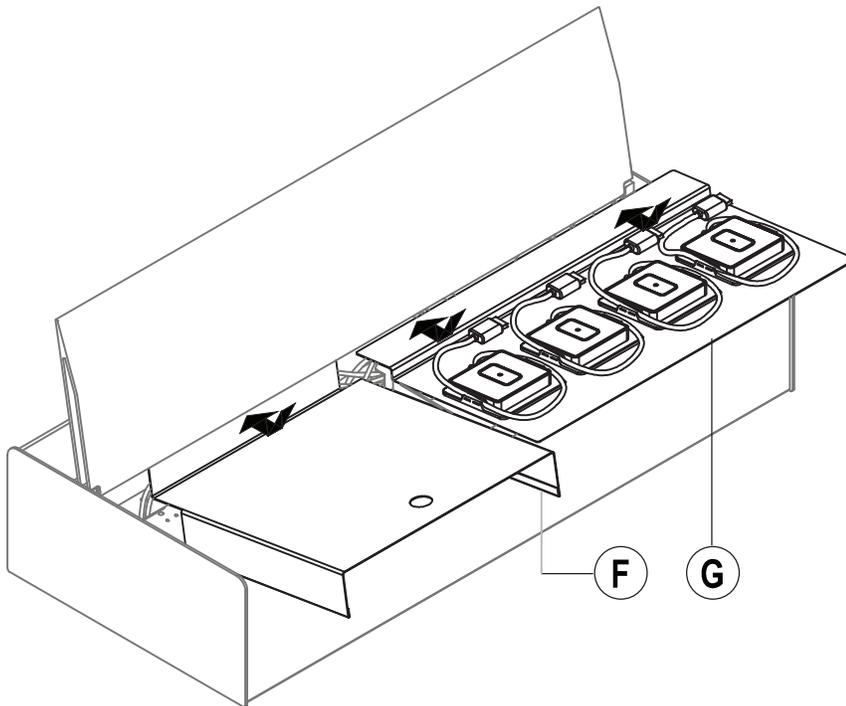

CLUBTalk with Mobile Cart

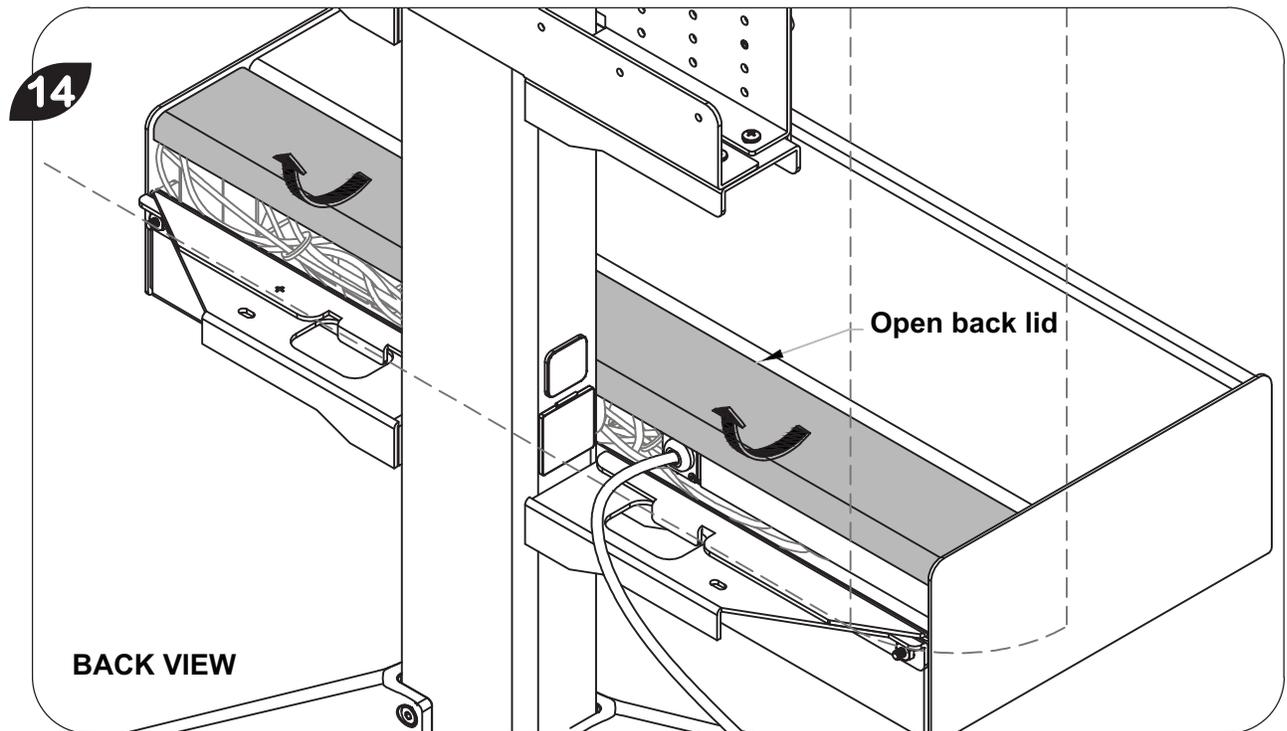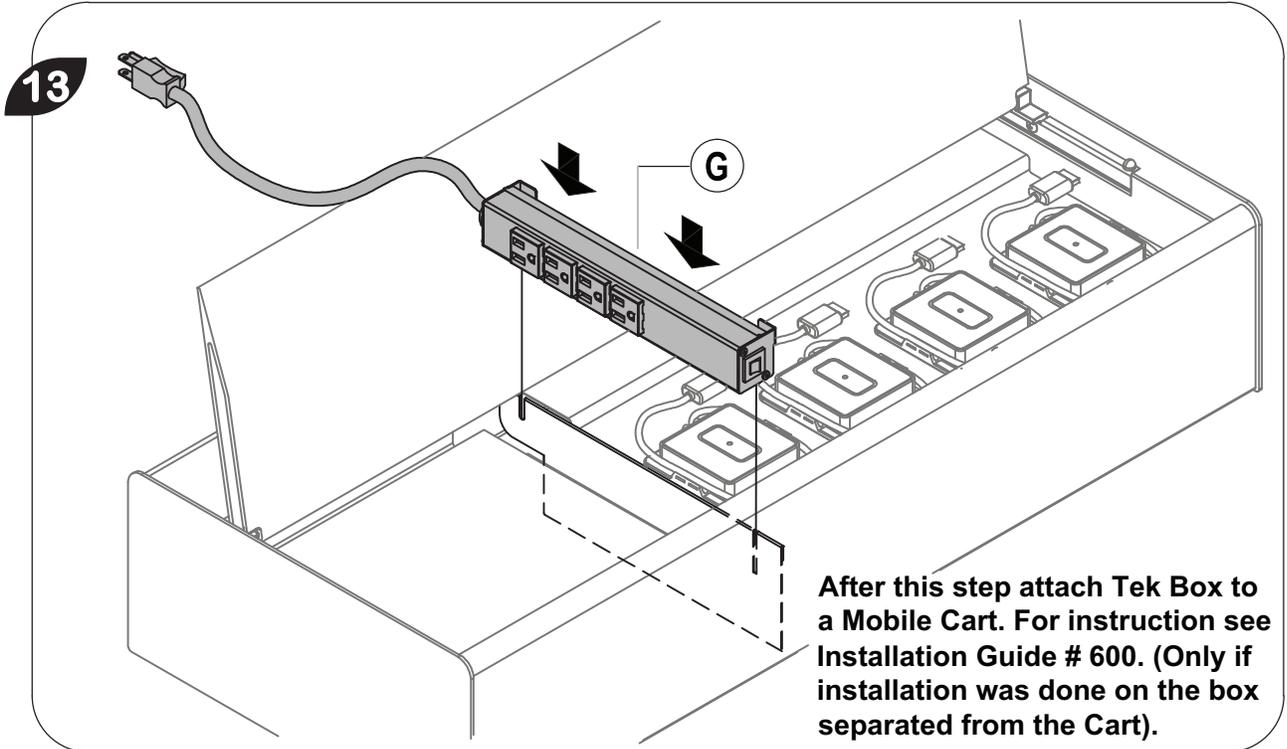


CLUBTalk with Mobile Cart

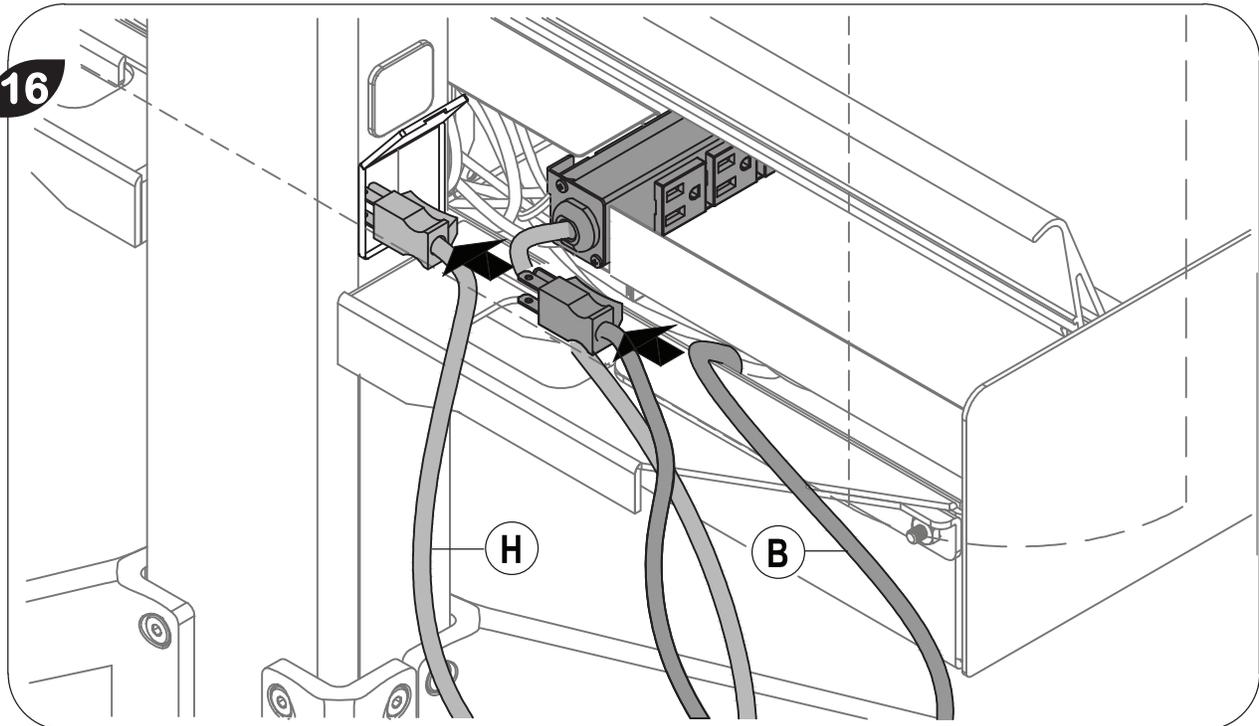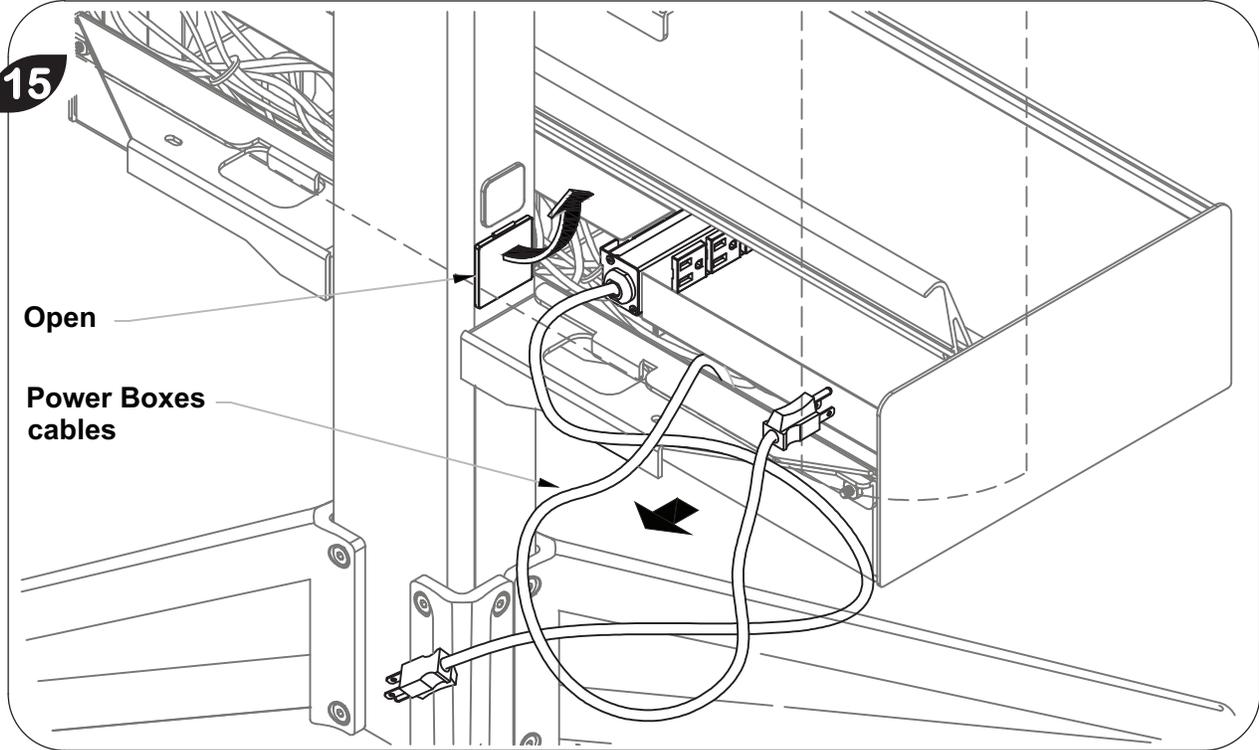

CLUBTalk with Mobile Cart


16

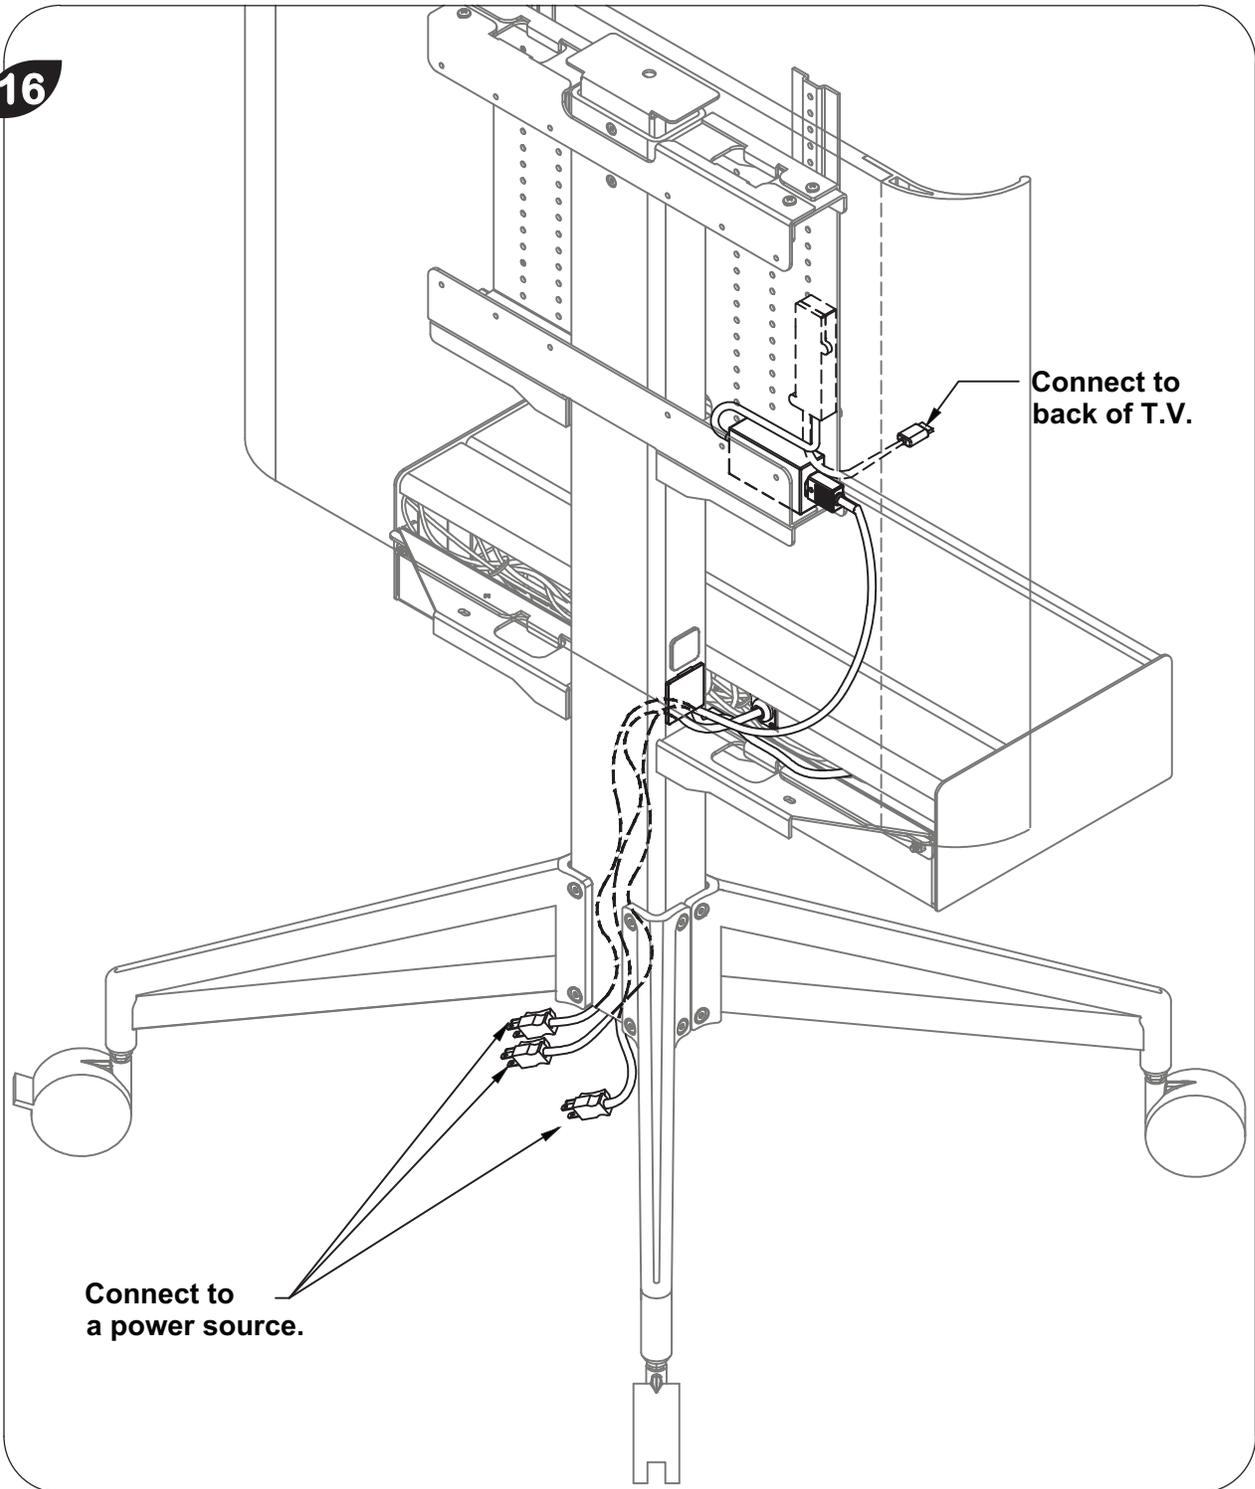

CLUBconnect with Table

CUT

Product

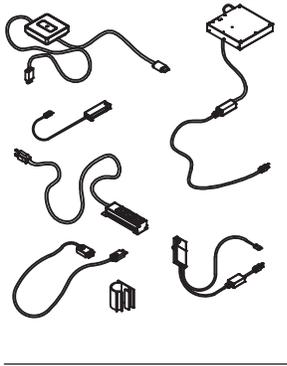

Application



CUT - Part / Product Identification and What's Included


Ref.	Illustration	Description	Part No. / Prod. Code	Qty.	Kit No. / Assy. No.
A		Power Bar - 3 Outlets	YEPSC	1	
B		Sensor	AX-SE200HD AX-SE201DP AX-SE202VG	4	
C		Switcher	AX-SW4	1	
D		Wireless Transmitter (Optional)	AX-WK300-TX	1	
E		Wireless Receiver (Optional)	AX-WK300-RX	1	
F		Wire Management	PCORMGMT	8	
G		HDMI Cable		1	

Not included in CUT - Part / Product Identification and What's Included



Ref.	Illustration	Description	Part No. / Prod. Code	Qty.	Kit No. / Assy. No.
H		CLUBtalk Grommet Enclosure Subassembly (Under Pan)	N09-4201	1	

CLUBTalk with Table



1

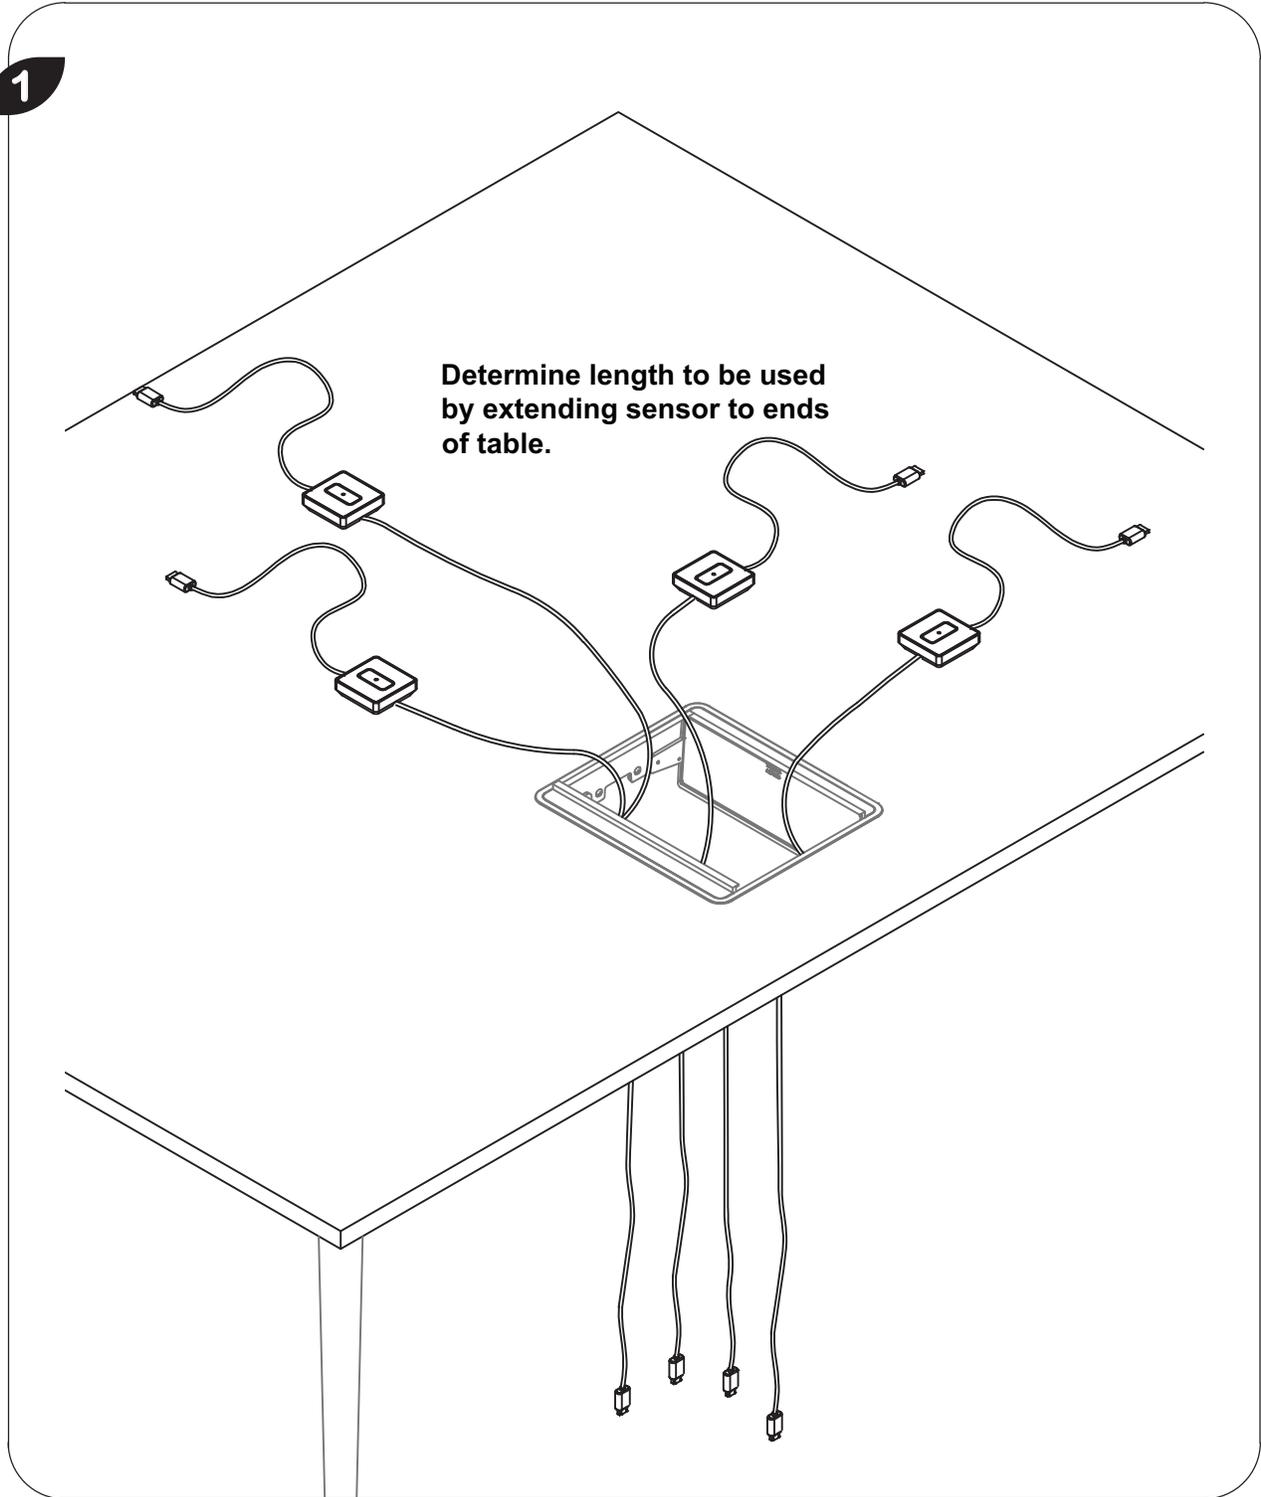



CLUBTalk with Table

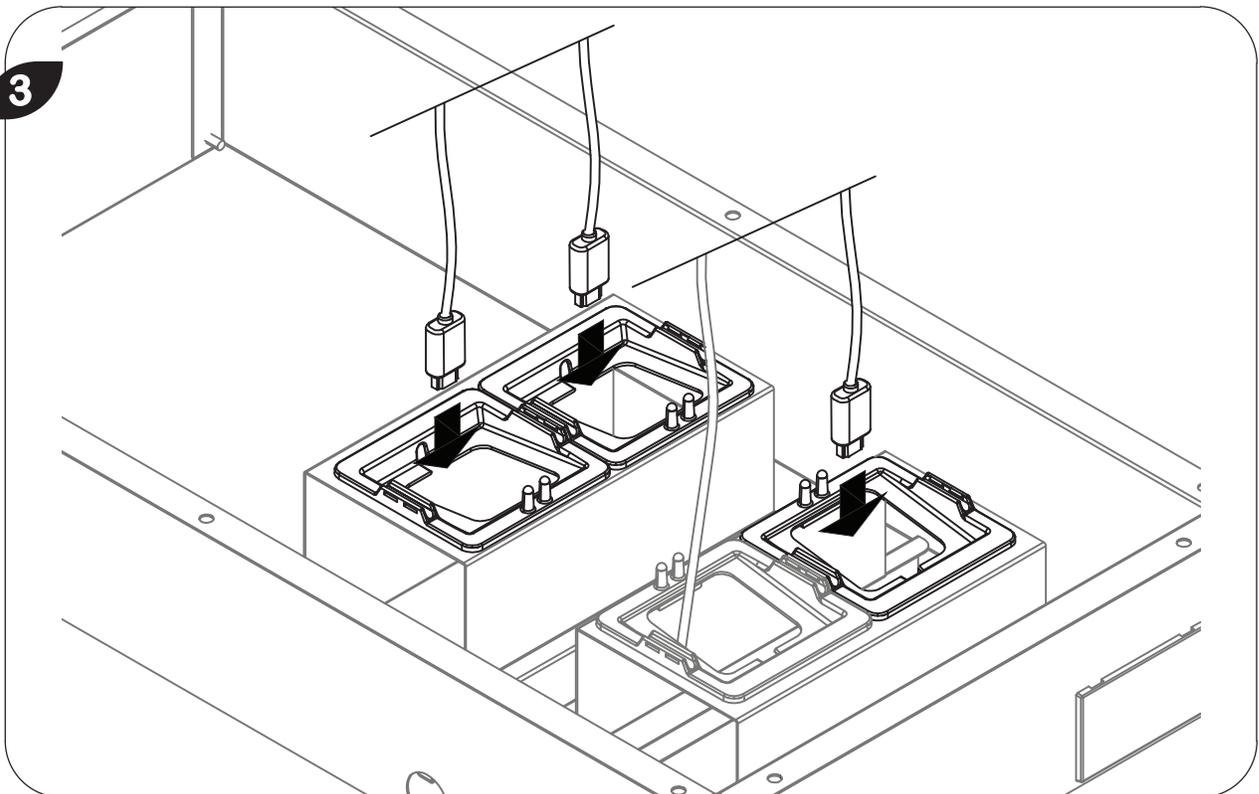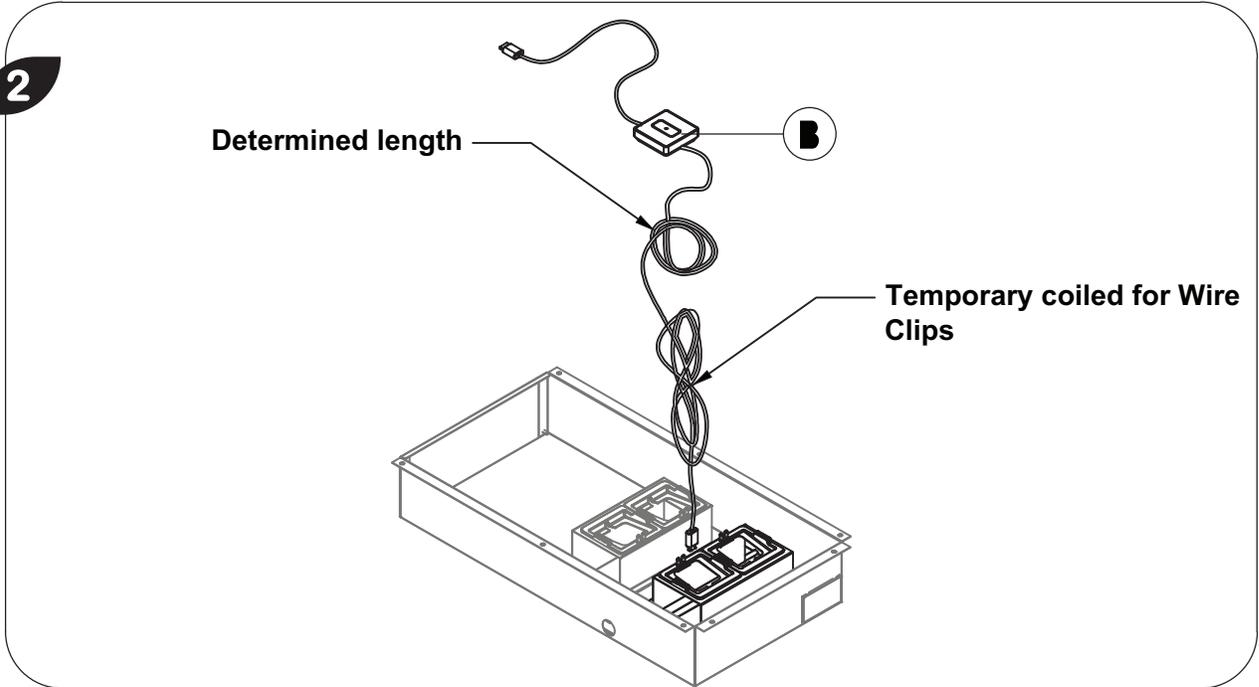

CLUBTalk with Table

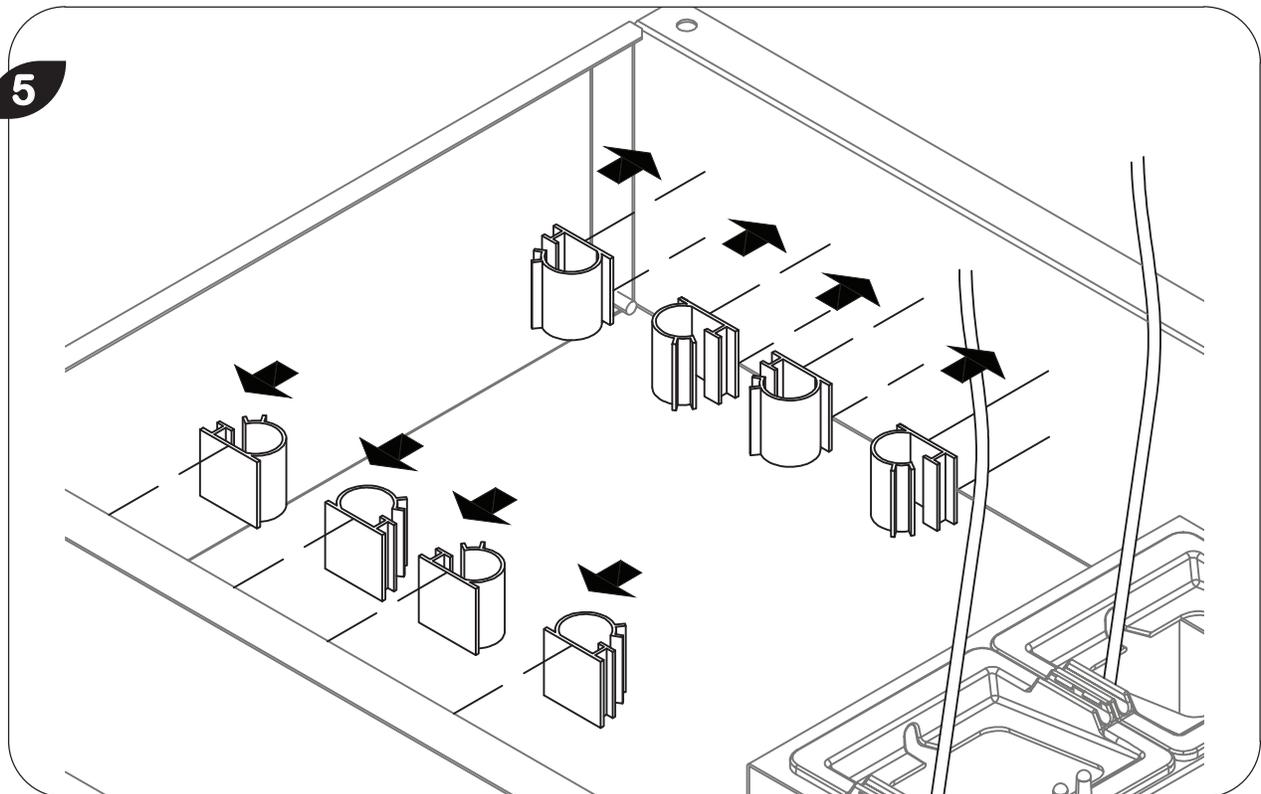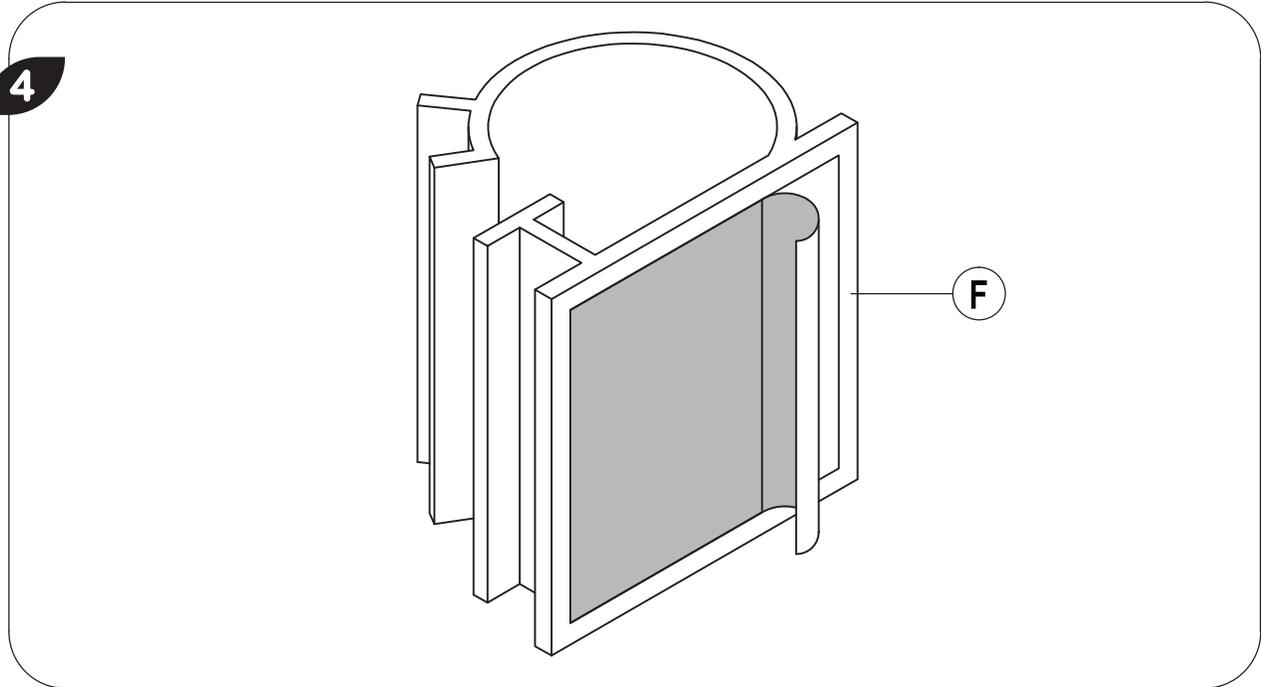


CLUBTalk with Table

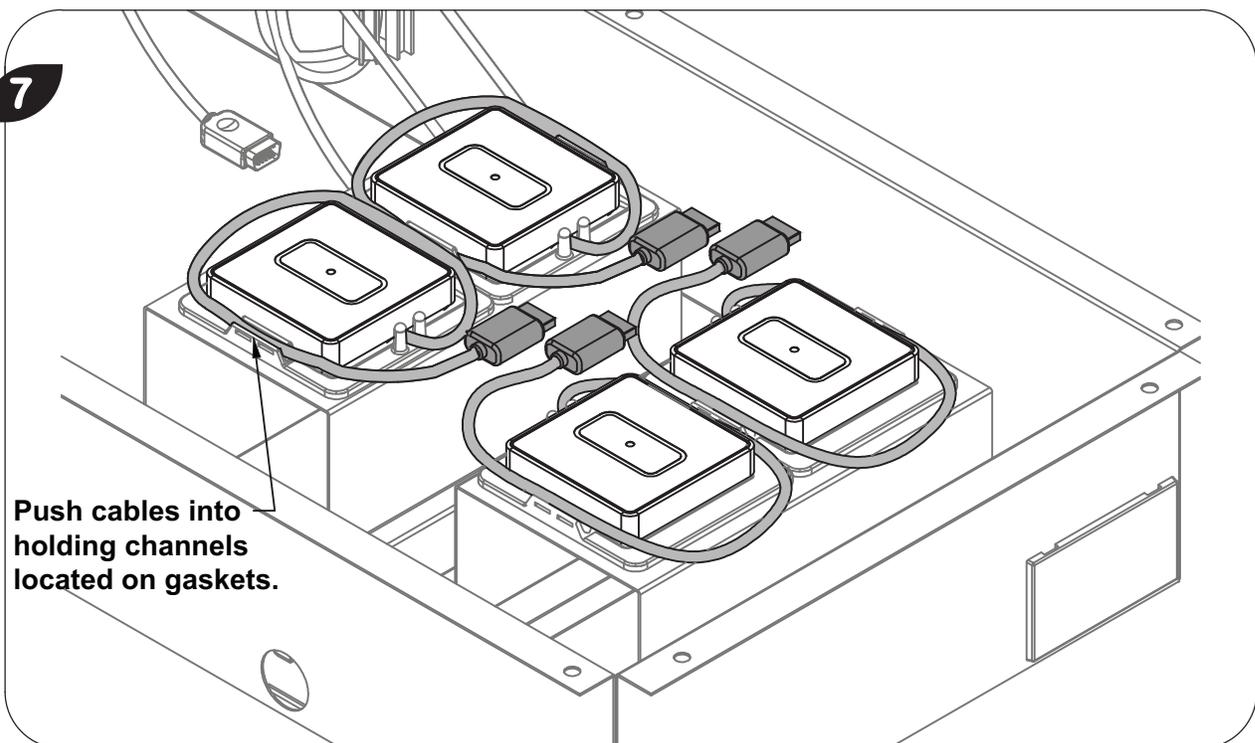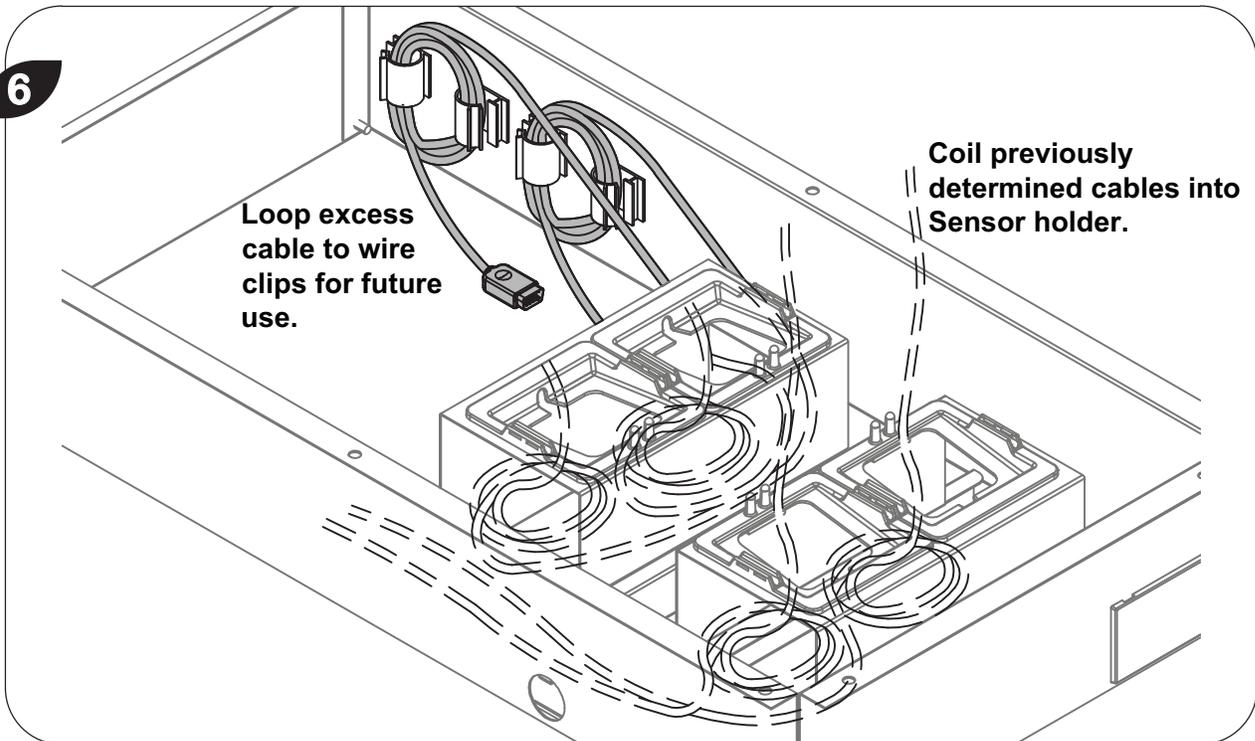


CLUBTalk with Table

8

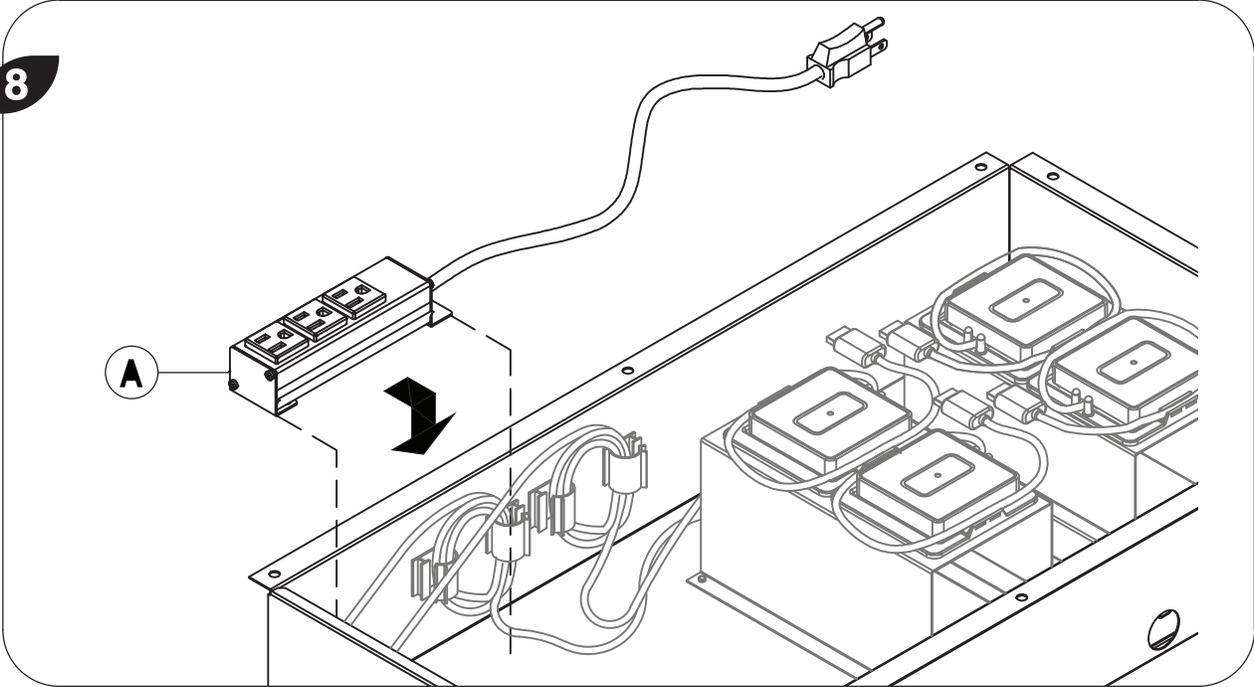


9

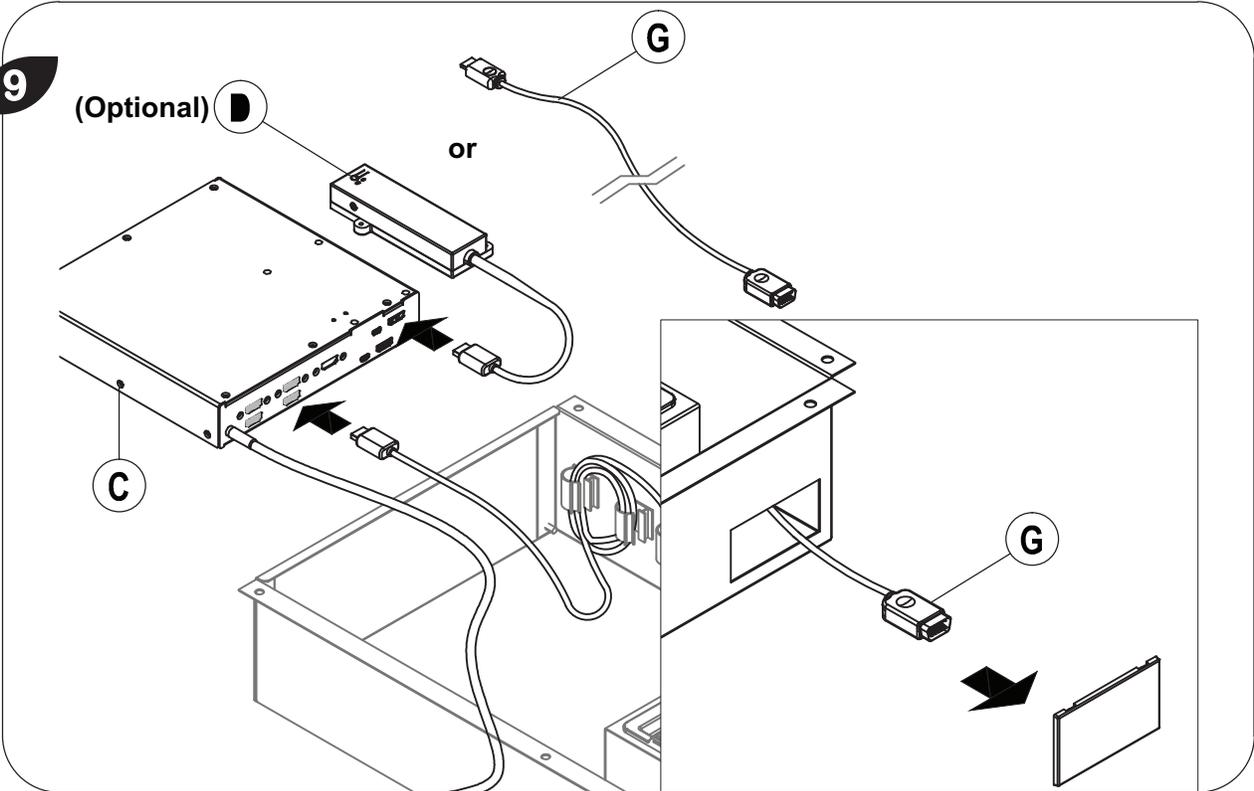


CLUBTalk with Table

10



Switcher with Sensors and Transmitter hooked up

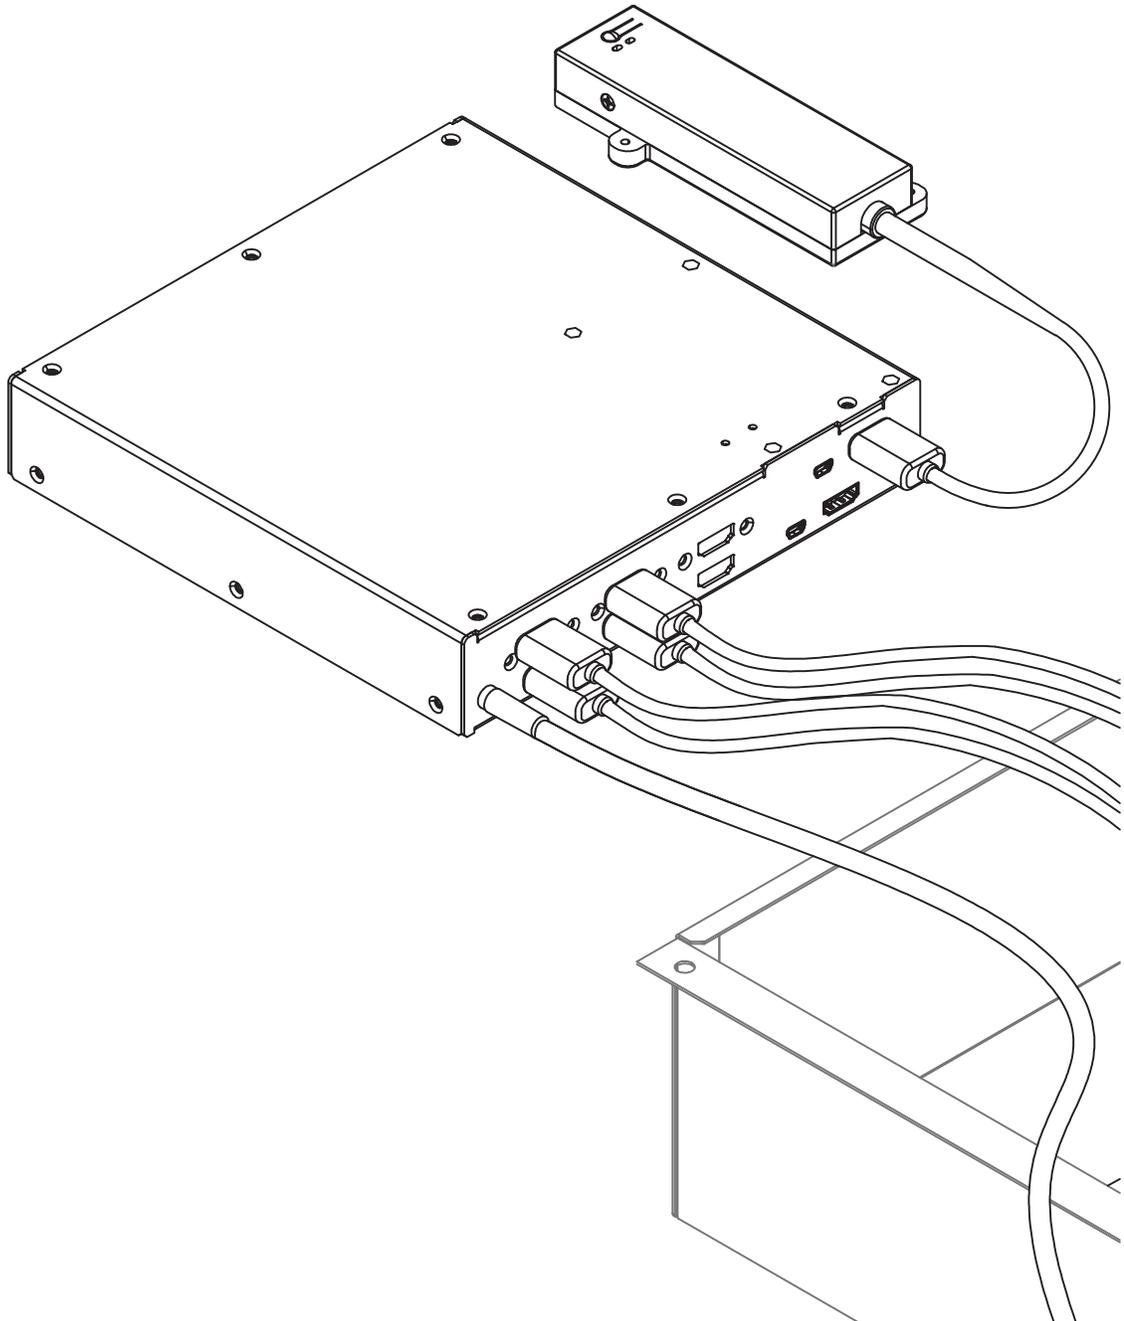


CLUBTalk with Table

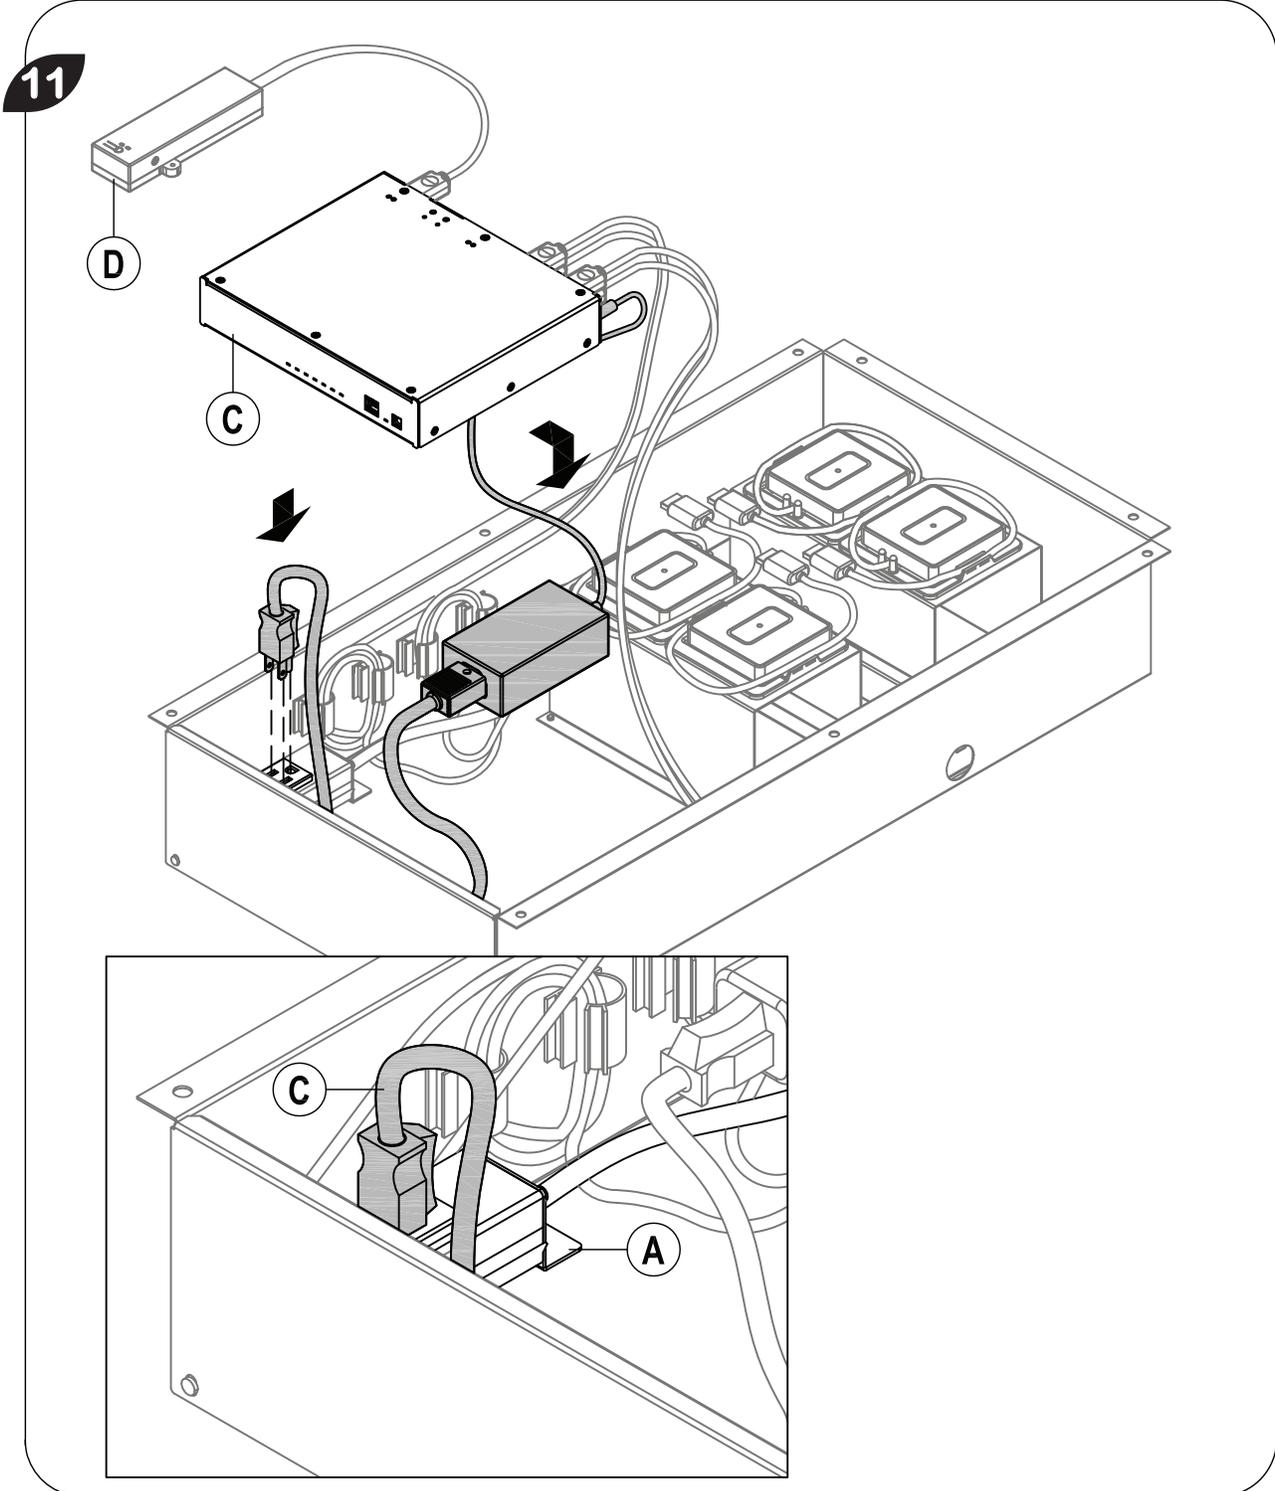



CLUBTalk with Table

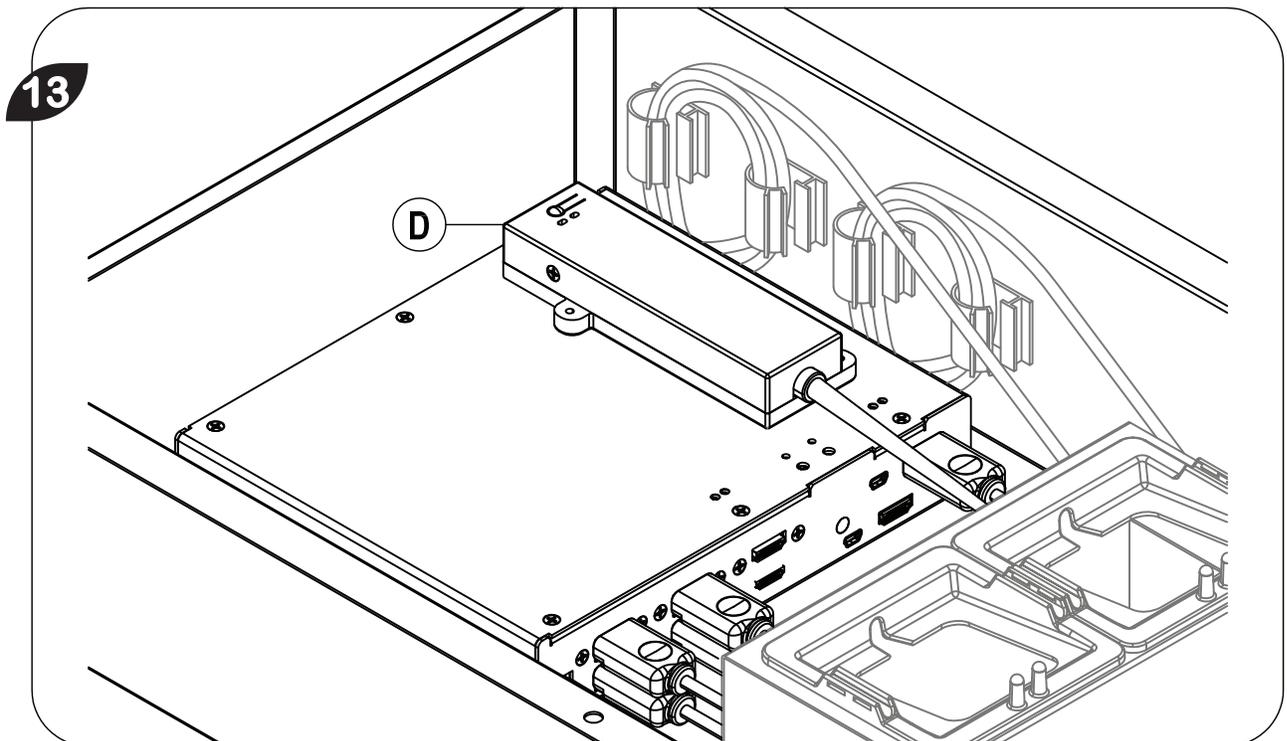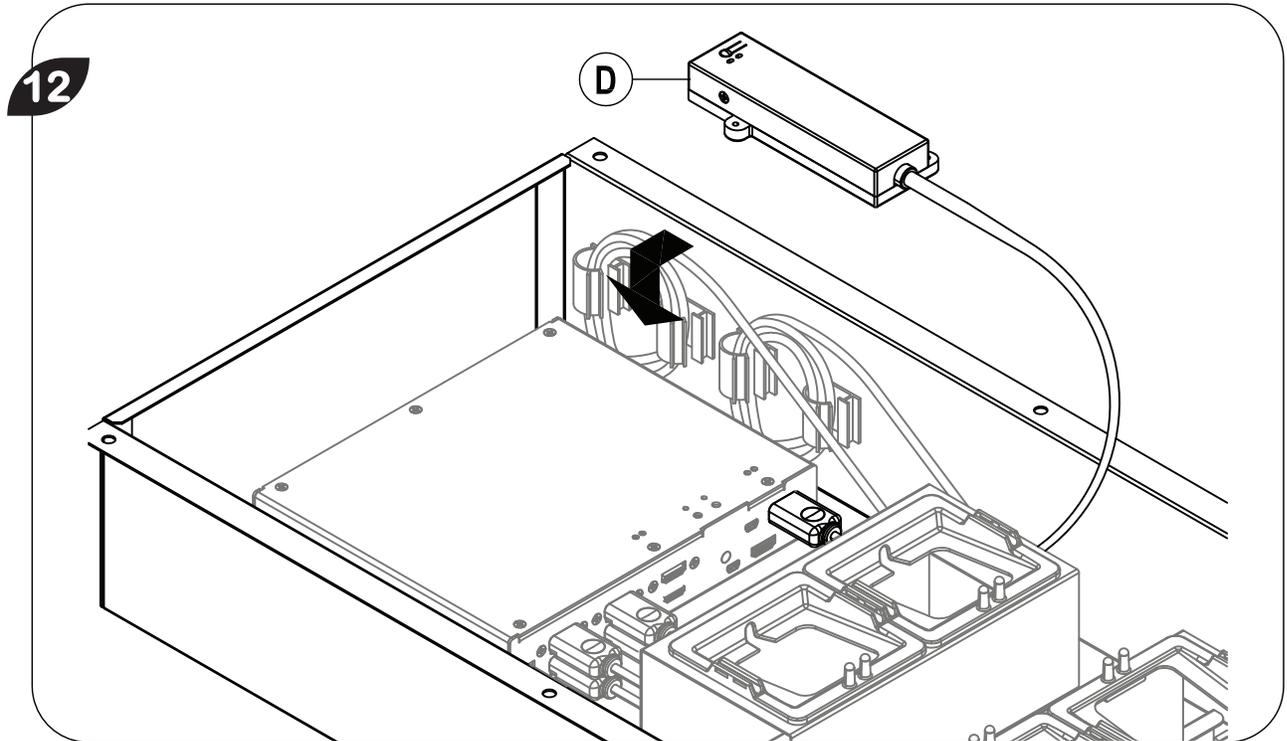

CLUBTalk with Table

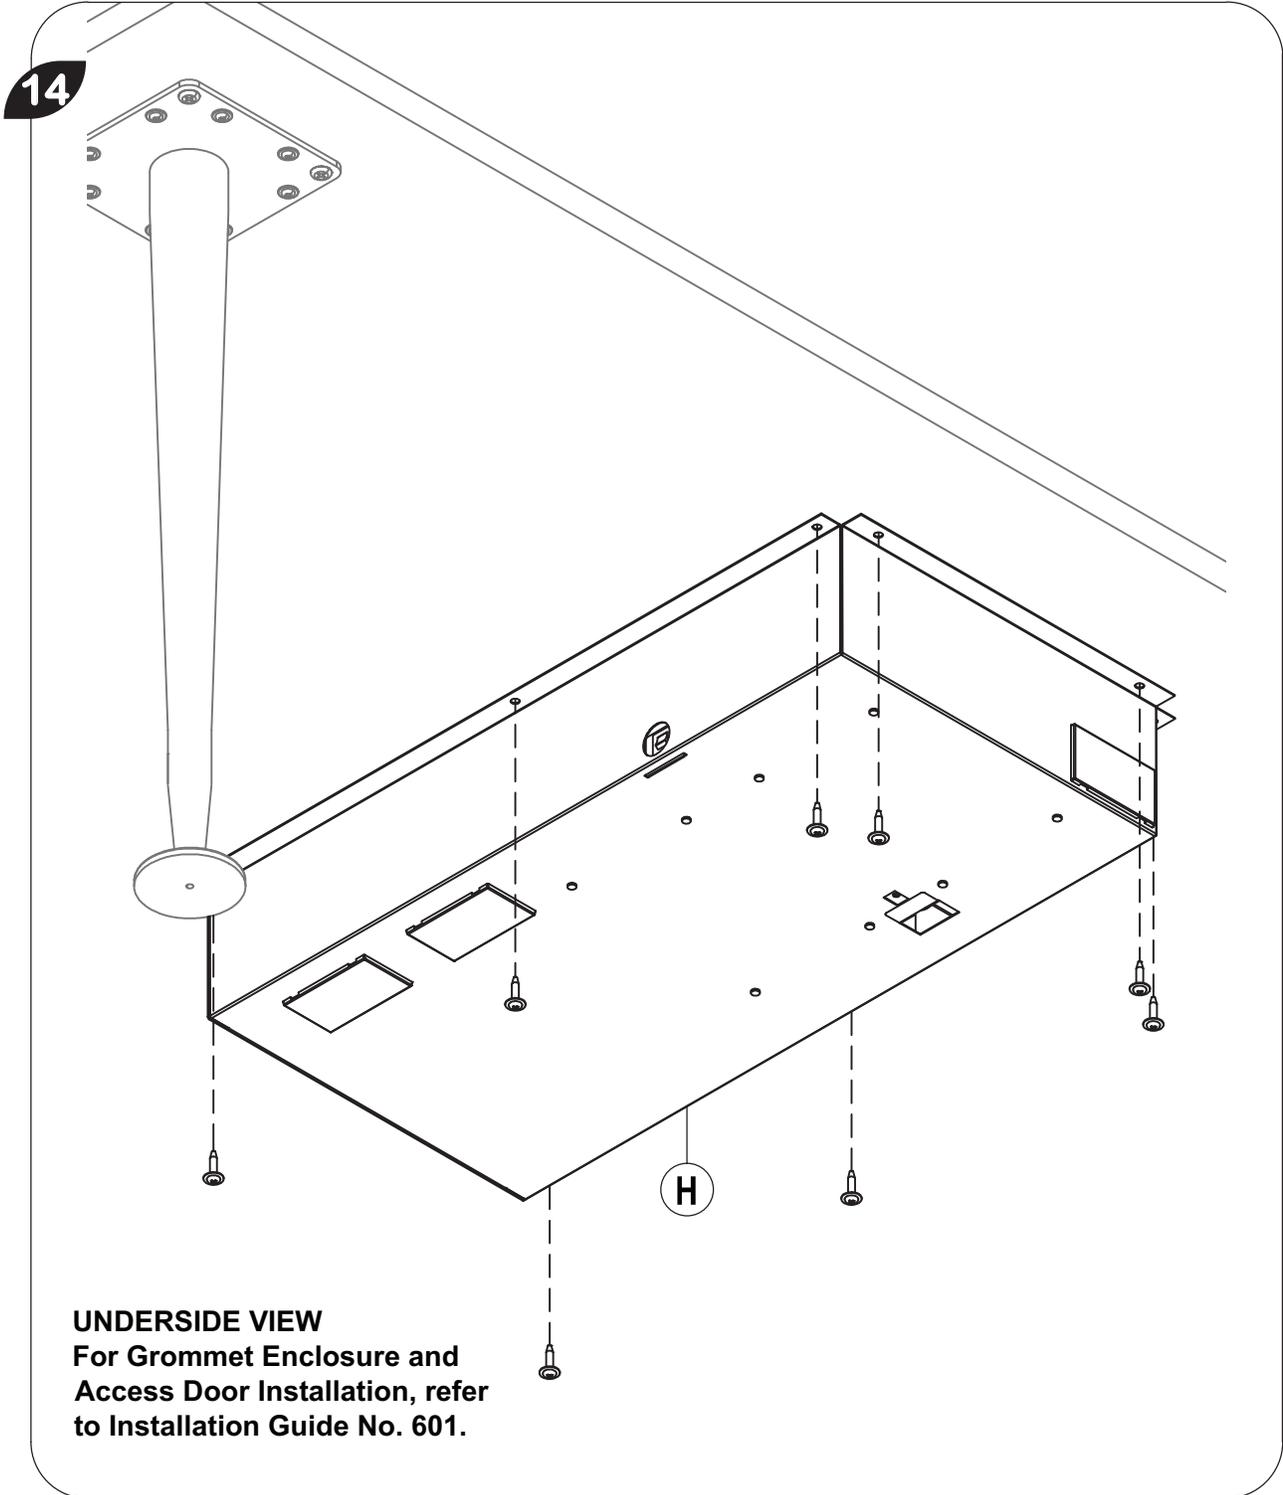



CLUBTalk with Table

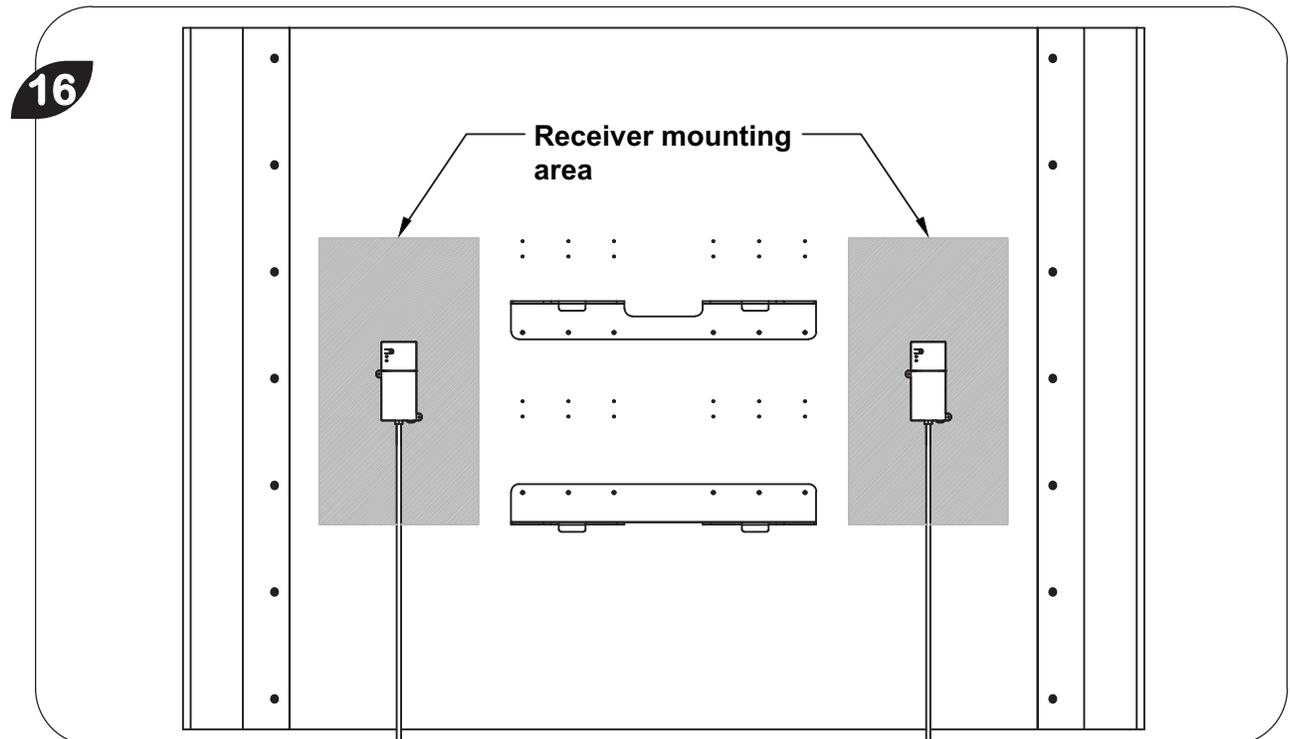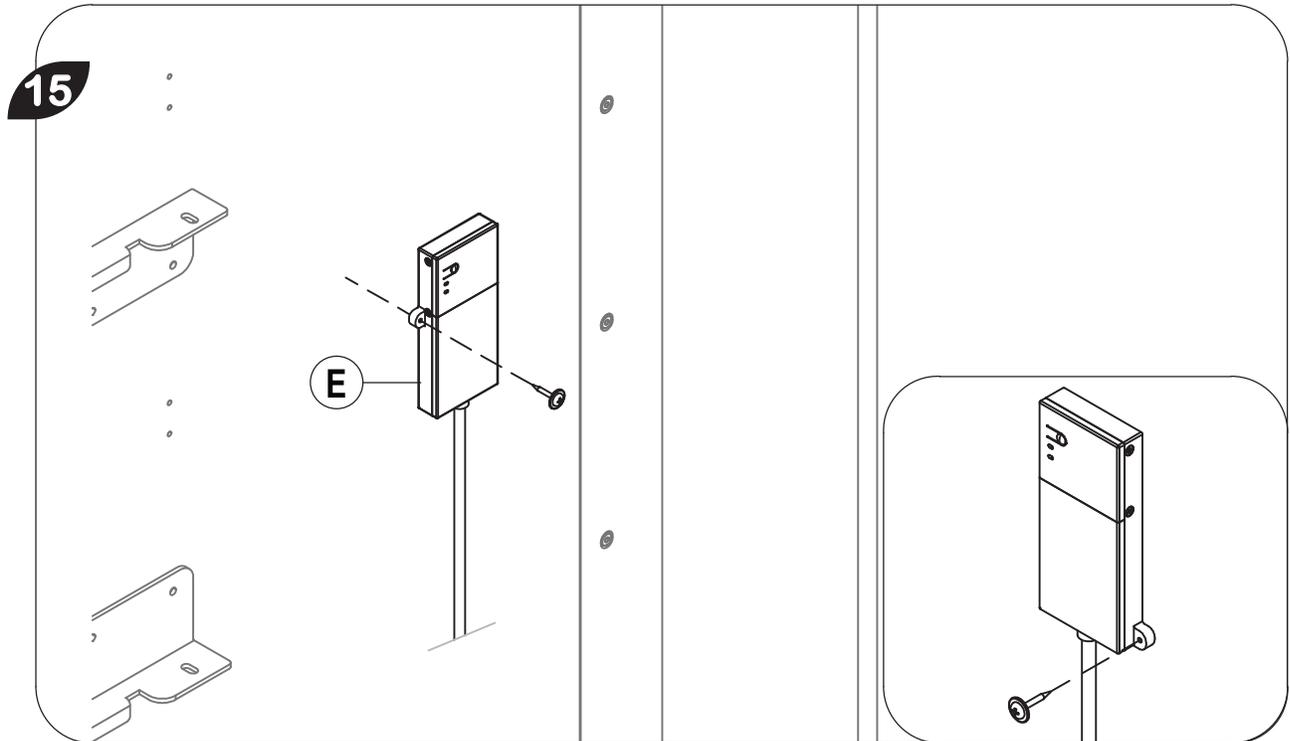


CLUBTalk with Table

18

Connect receiver to power source. Refer to Installation Guide No. 601 for wire management.

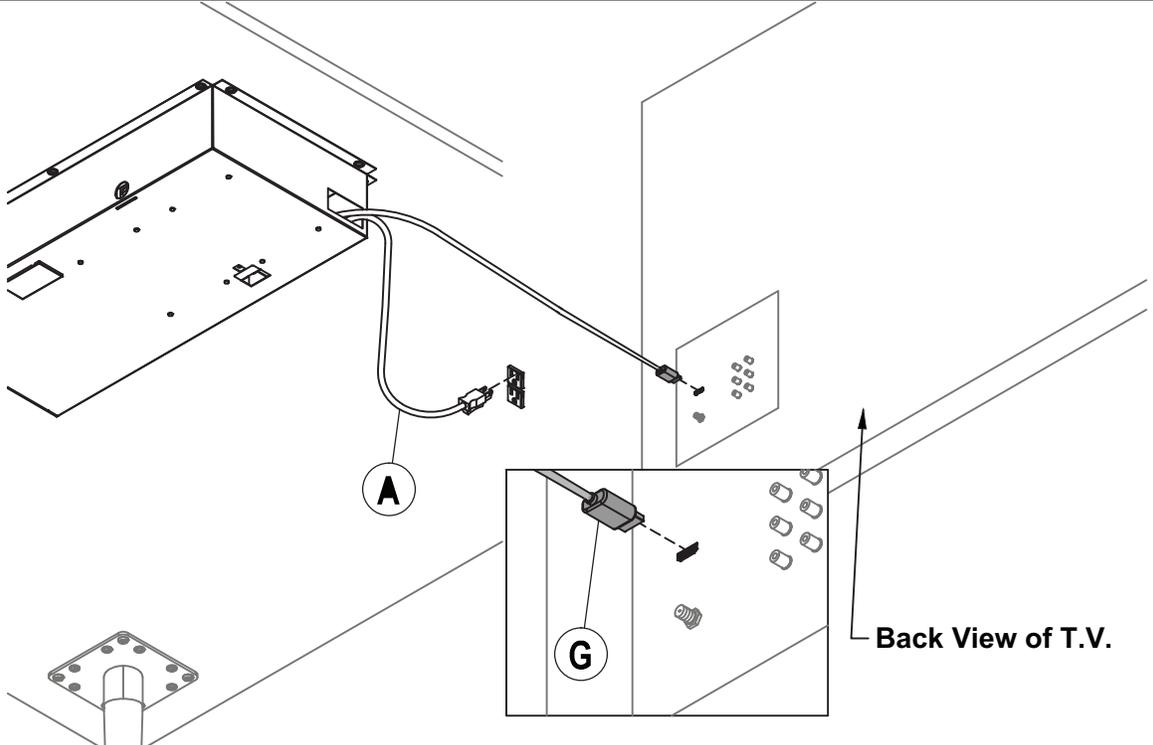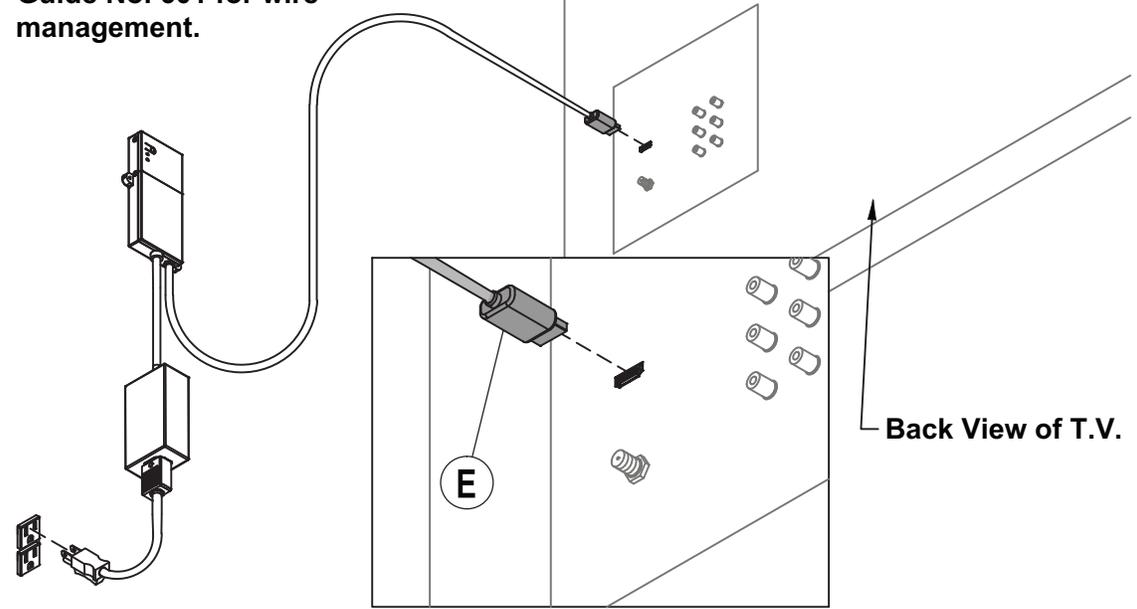

Product

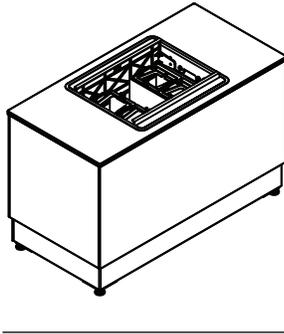


CUFM - Part / Product Identification and What's Included

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.	Kit No. / Assy. No.
A1		CLUBtalk Access Door Subassembly	N09-4190	1	WWEDD
A2		CLUBtalk Access Door Bracket	A16-1336	2	
A3		8-32 UNC x 5/16" Mach. Screw	E01-0769	4	
A4		10-32 UNF x 1/2" Mach. Screw	E01-0770	4	
B1		CLUBtalk DNA 13" Table Top	C05-7884	1	N09-4773
B2		CLUBtalk DNA 13" Table Top Clip	A16-1762	6	
B3		#10-24 UNC X 3/8 Mach. Screw	C05-7884	12	
C1		CLUBtalk Metal Enclosure	N09-4430	1	N09-4430
C2		Power Bar Shroud, CLUBtalk	A16-1970	1	
C3		#10 x 1/2" Quad. Truss. Steel. Zinc Tapping Screw	E03-6013	4	
C4		#6 x 5/8" Tapping Screw	E07-0131	2	
D		CLUBtalk 13" Table Case Assembly	N09-4540	1	


Not included in CUFM - Part / Product Identification and What's Included

E		Compact Power Bar	YEPS	1	
F		Sensor	AX-SE200HD AX-SE201DP AX-SE202VG	4	
G1		Switcher	AX-SW4	1	
G2		Machine Screw	Supplied with Switcher	4	
H		Wireless Transmitter (Optional)	AX-WK300-TX	1	
I		Wireless Receiver (Optional)	AX-WK300-RX	1	



CLUBTalk 13" Modular Table

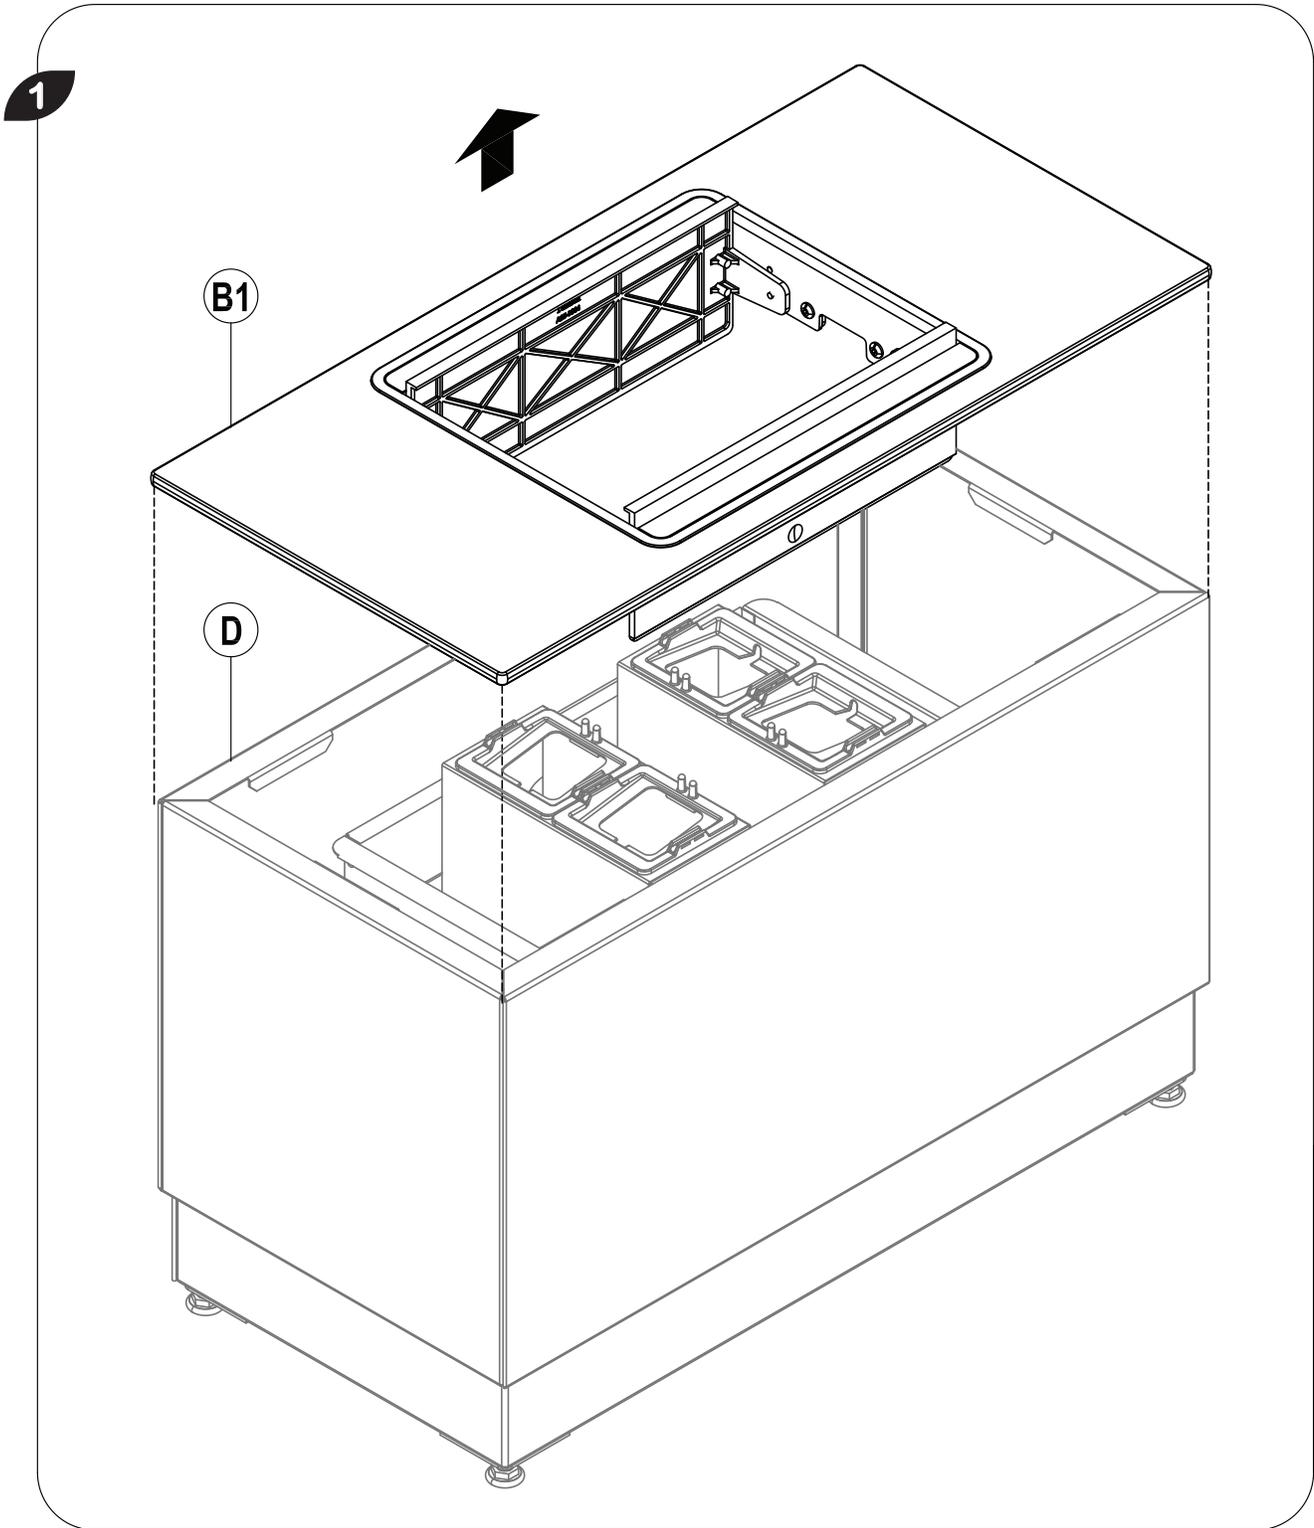



CLUBTalk 13" Modular Table

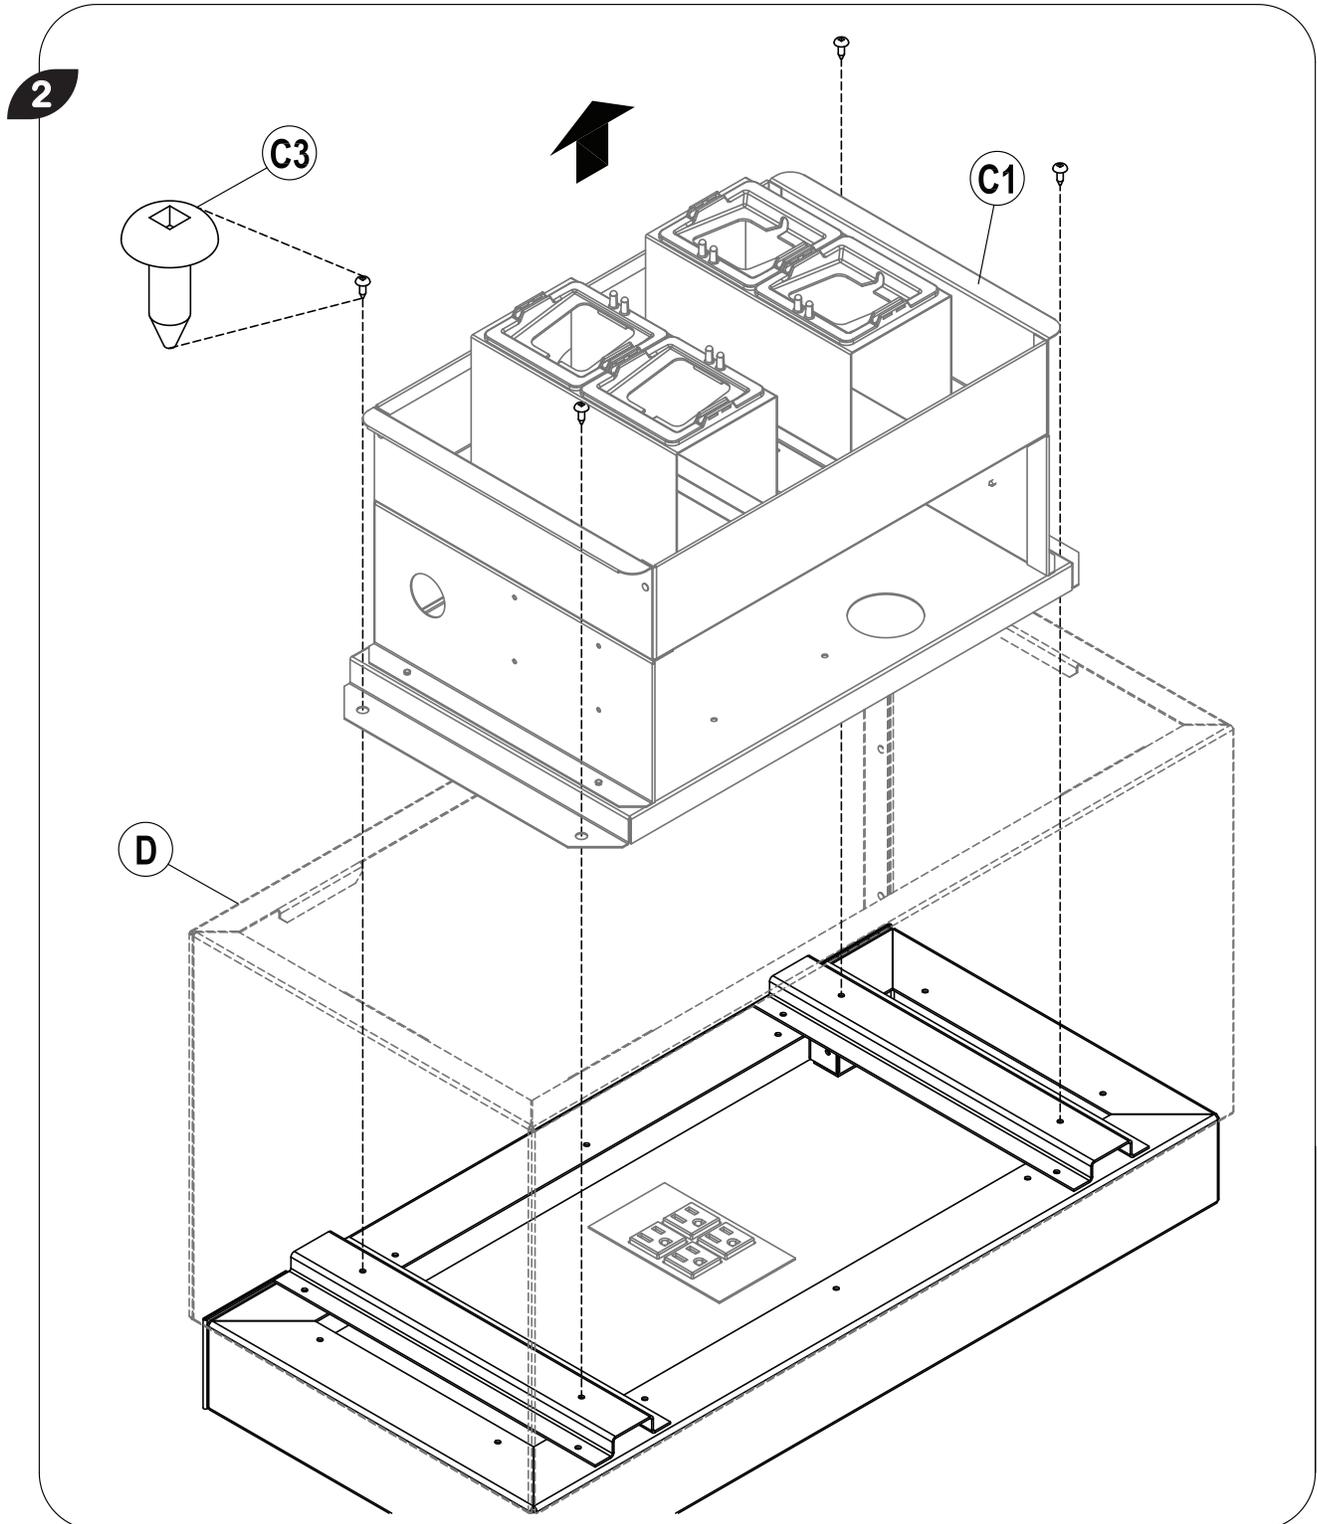



CLUBTalk 13" Modular Table

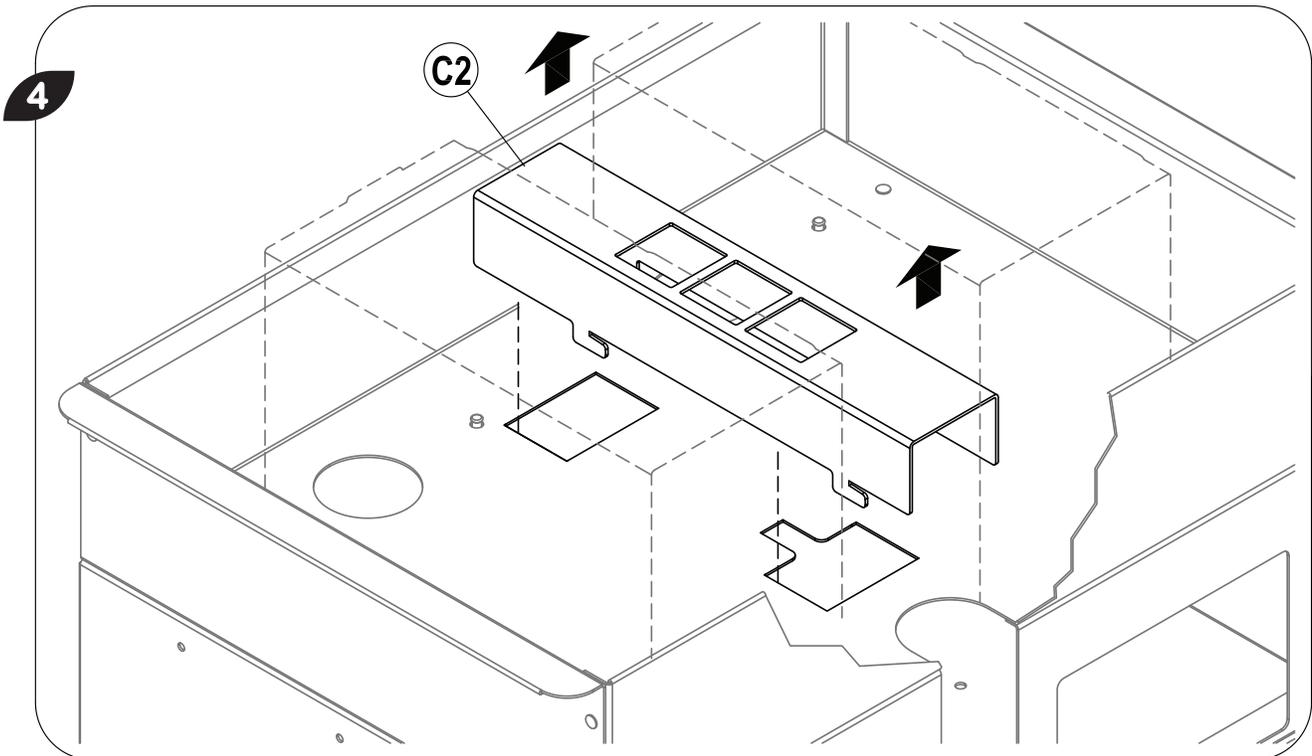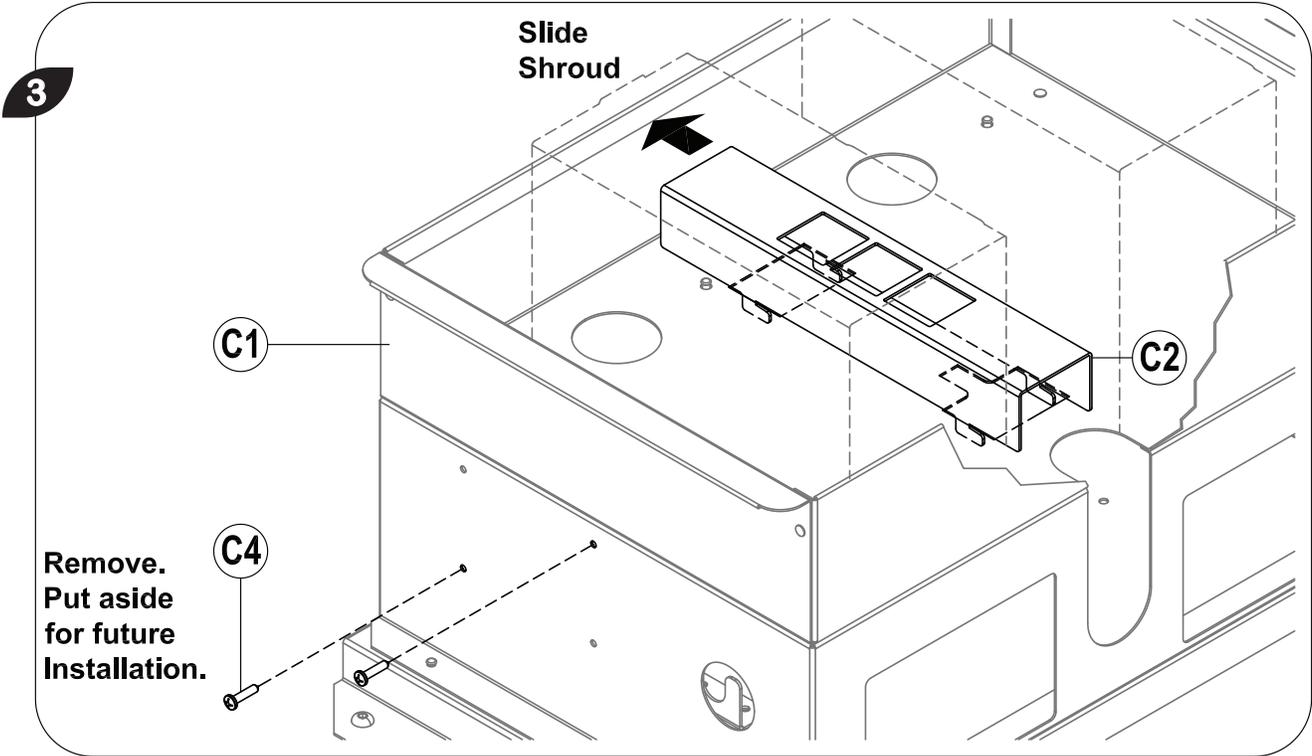

CLUBTalk 13" Modular Table

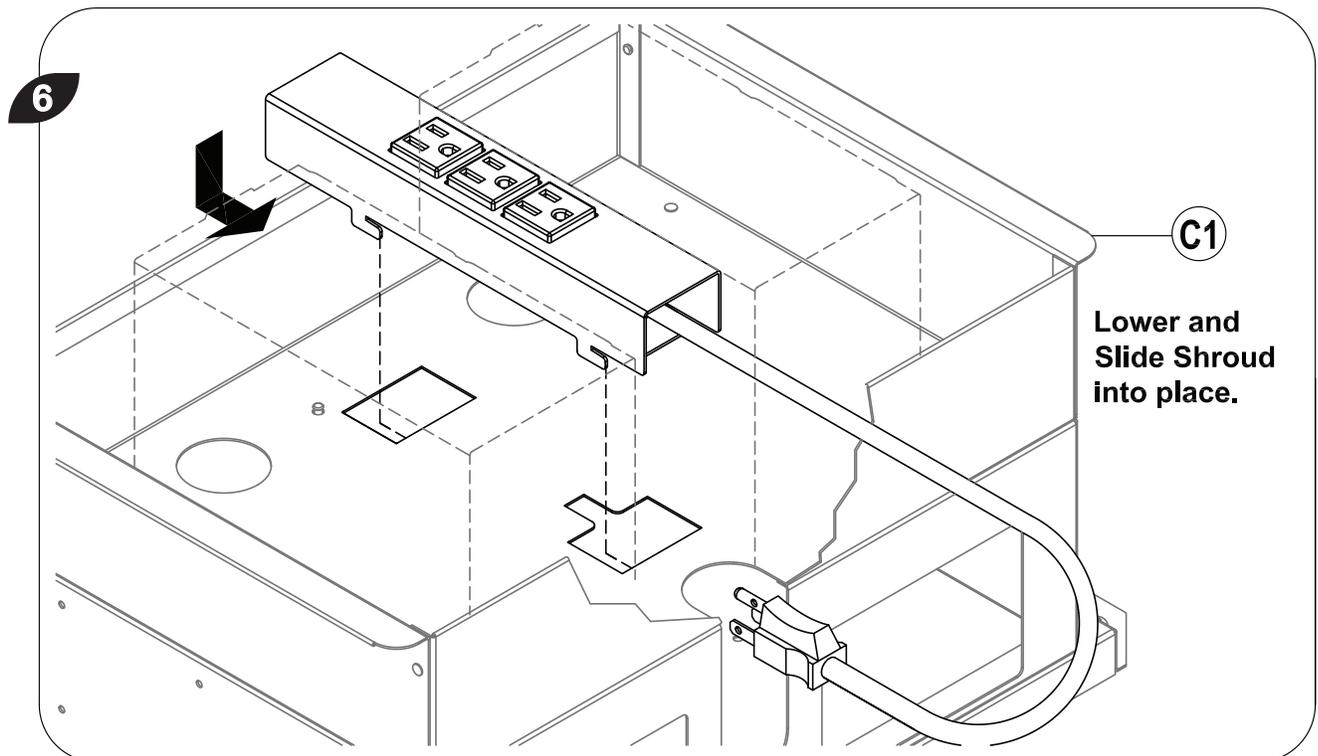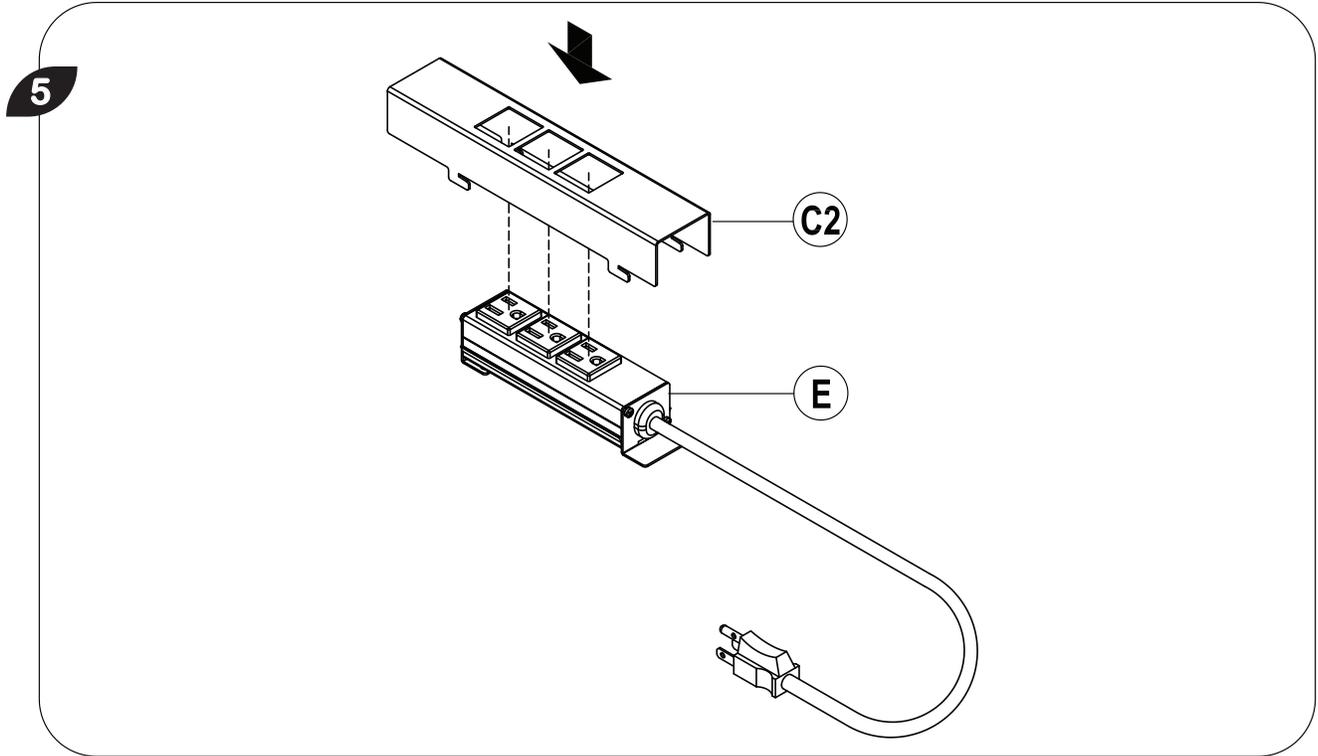


CLUBTalk 13" Modular Table

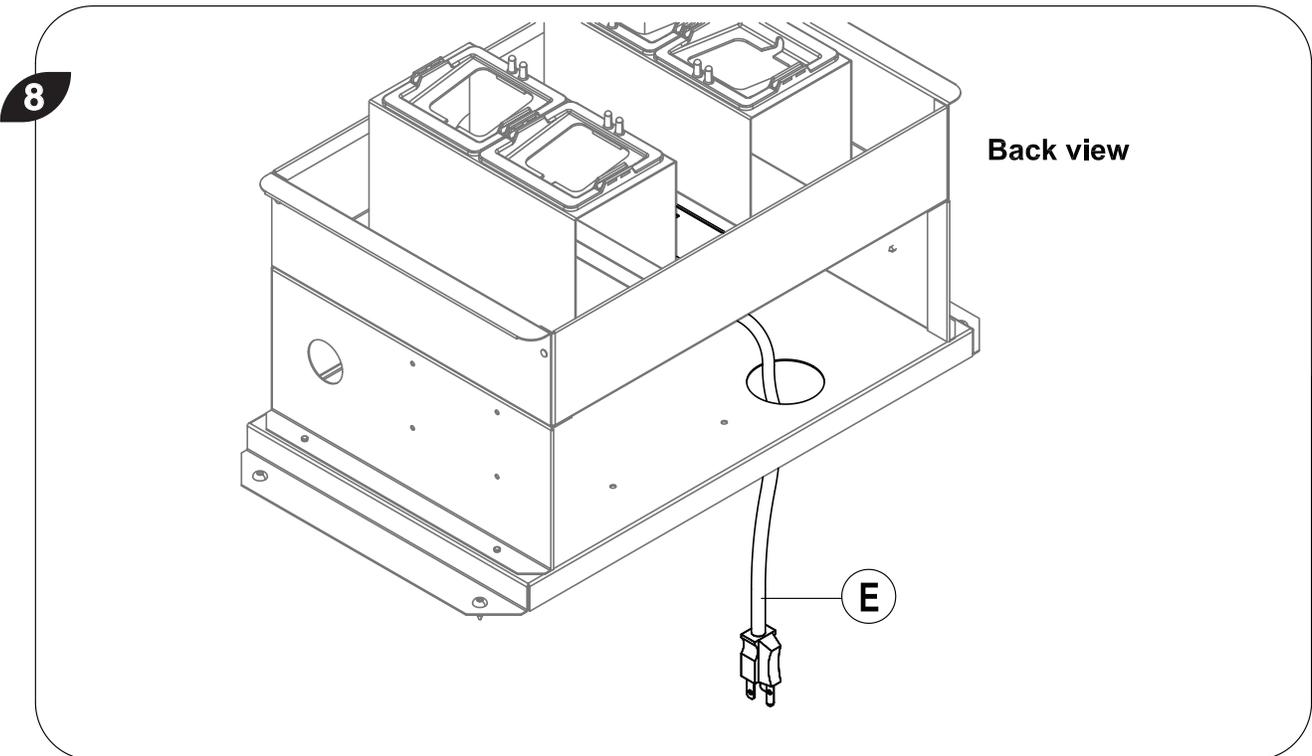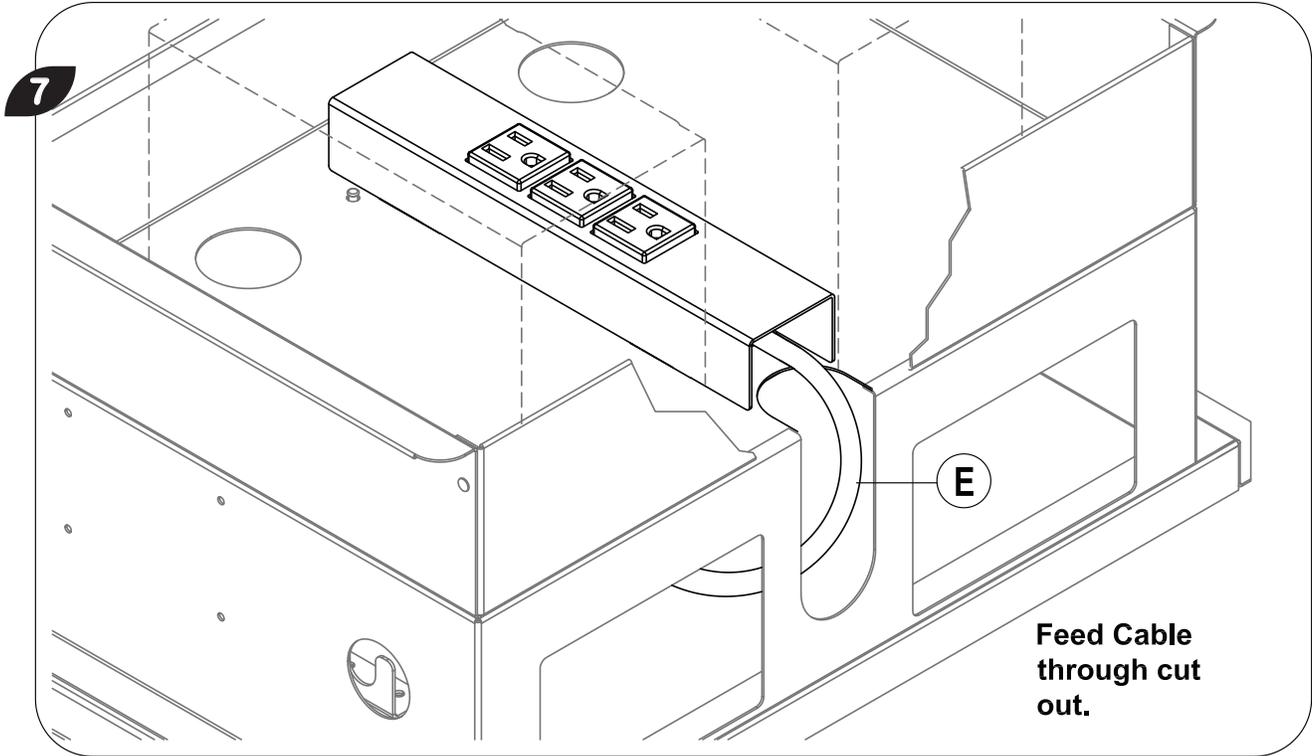


CLUBTalk 13" Modular Table

9

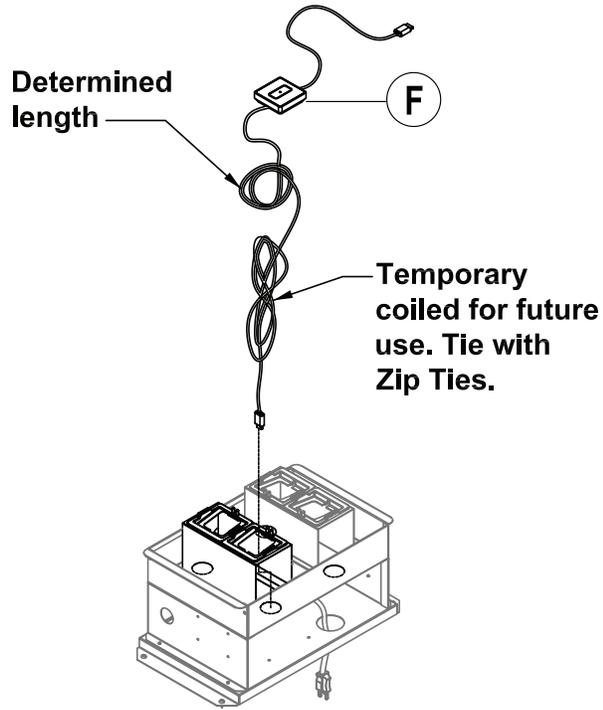

10



Side View

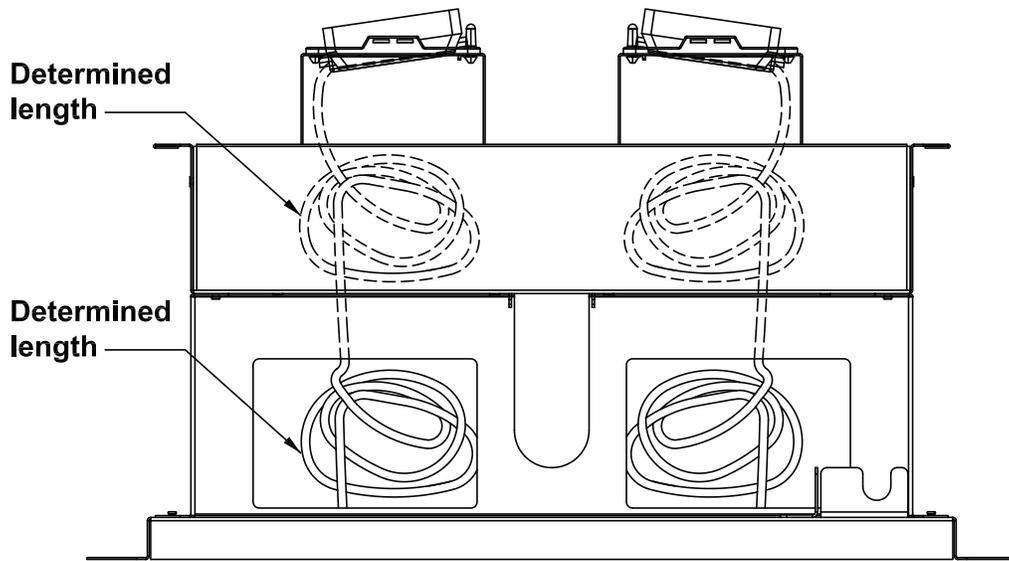


CLUBTalk 13" Modular Table

11

Feed Transmitter cable through opening.

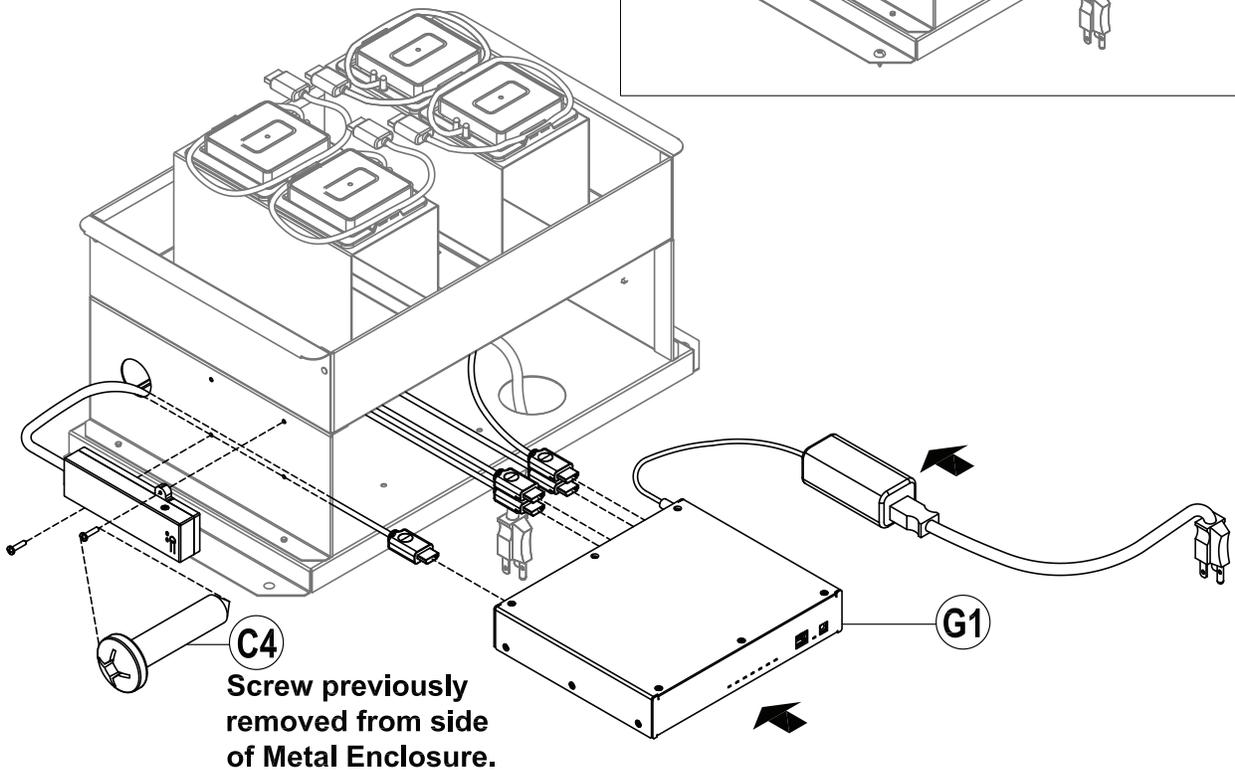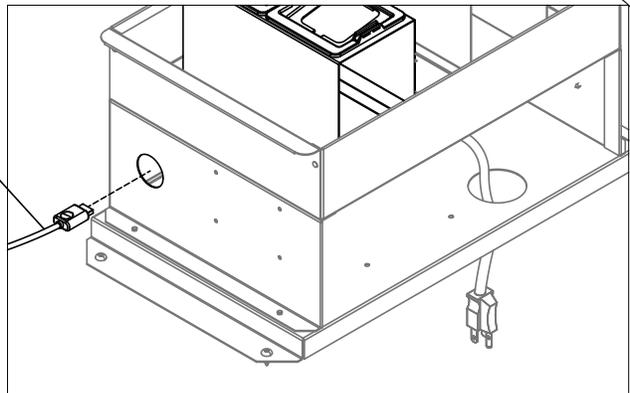


Screw previously removed from side of Metal Enclosure.

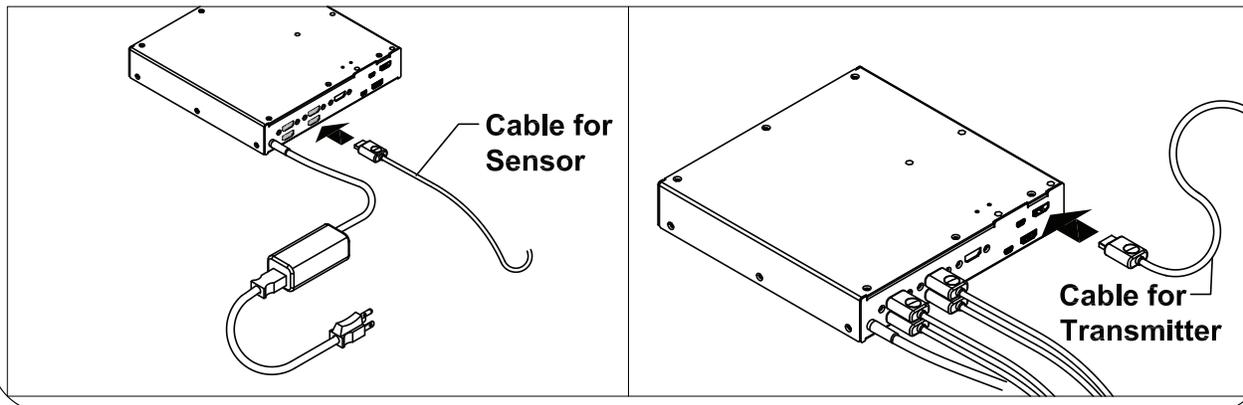

CLUBTalk 13" Modular Table


12

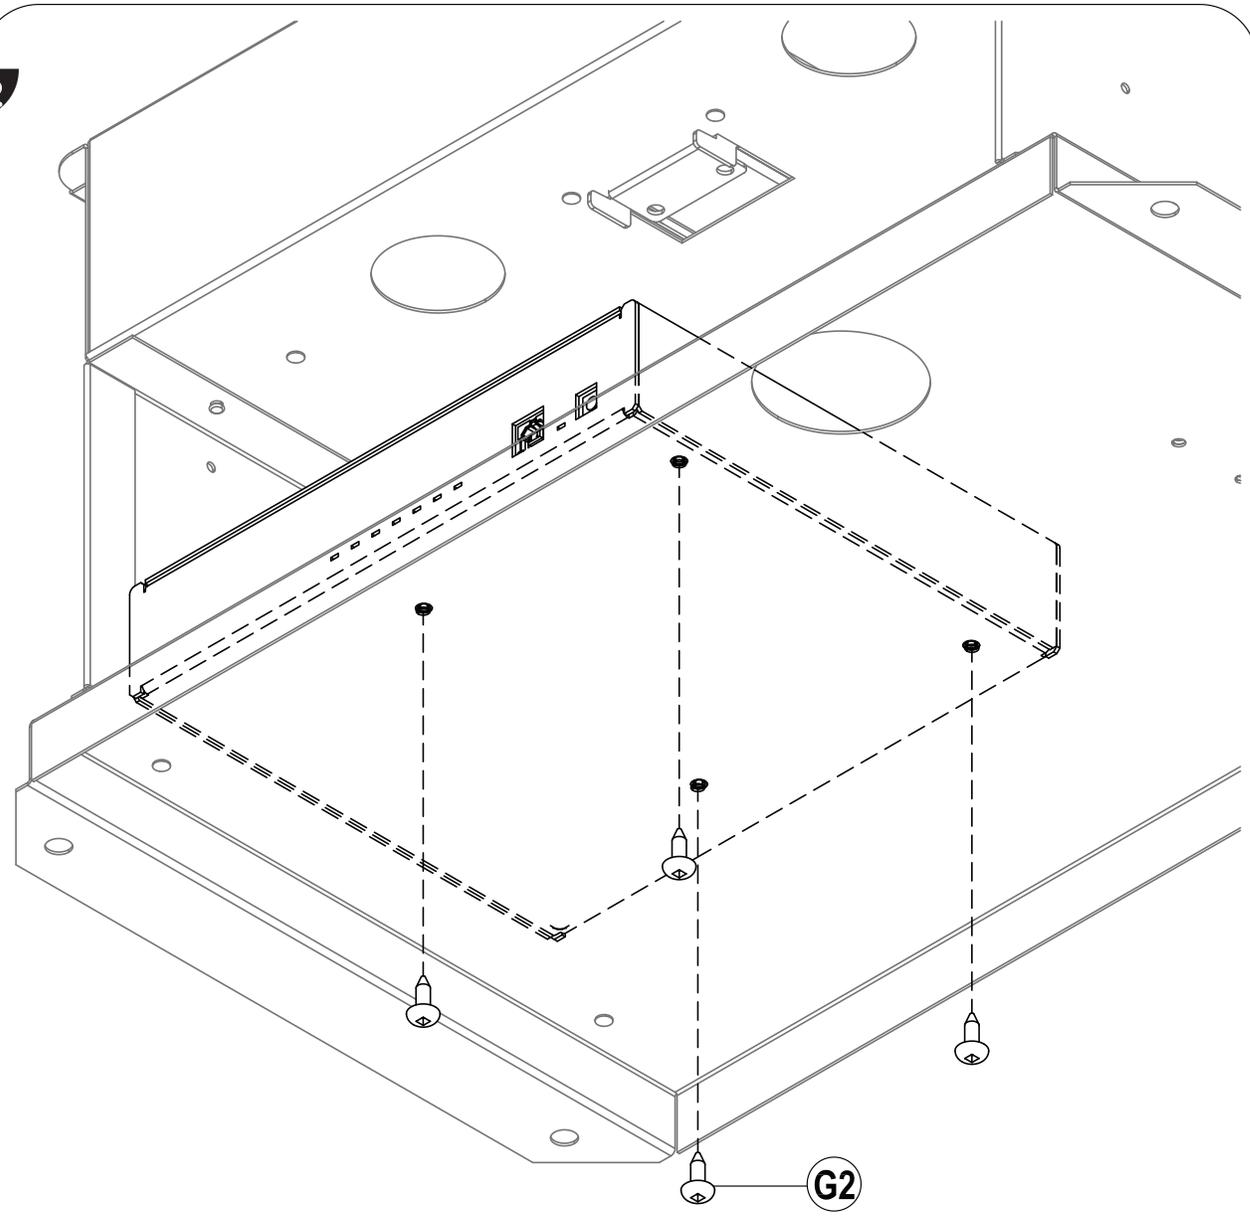


Underside View

CLUBTalk 13" Modular Table

13

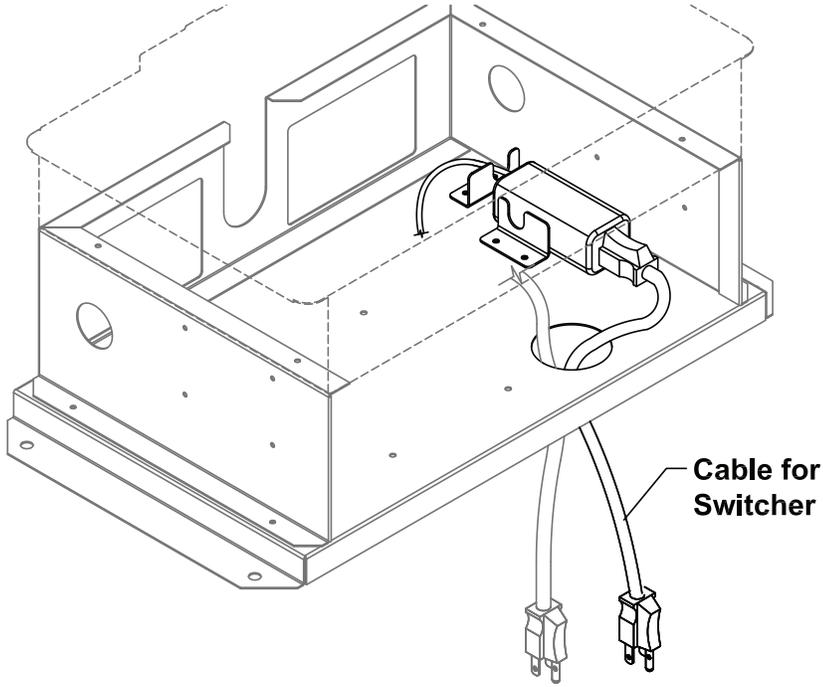


14

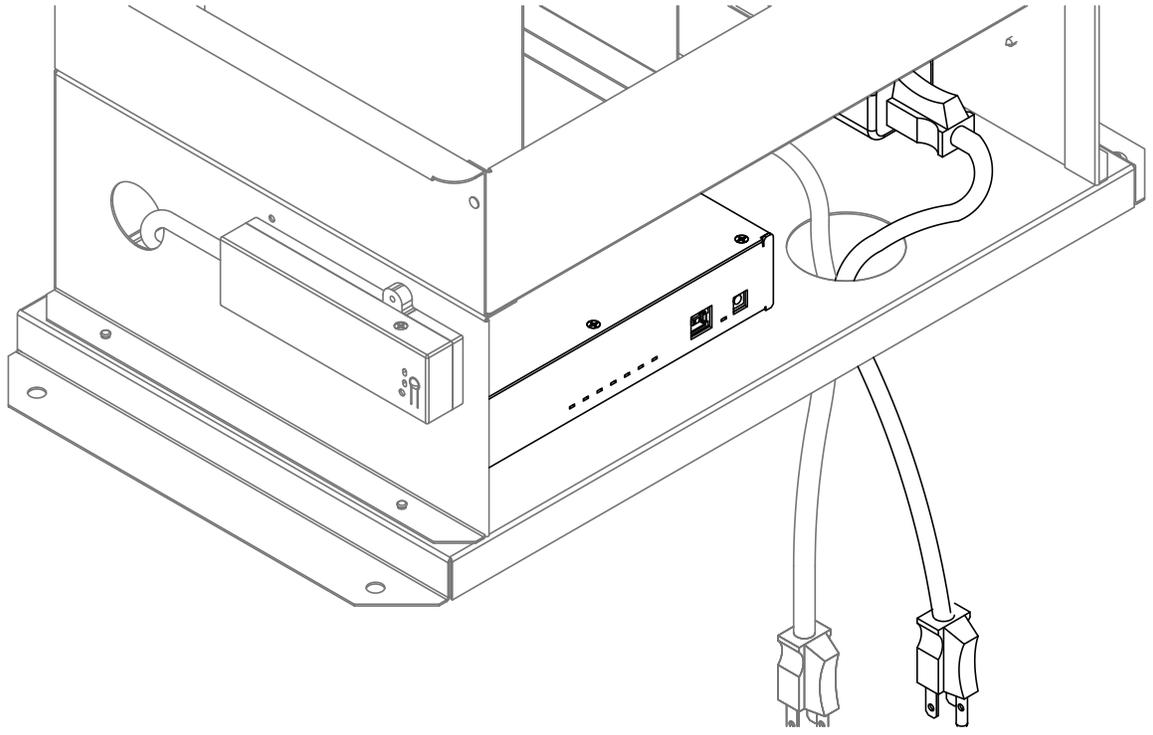


CLUBTalk 13" Modular Table


15

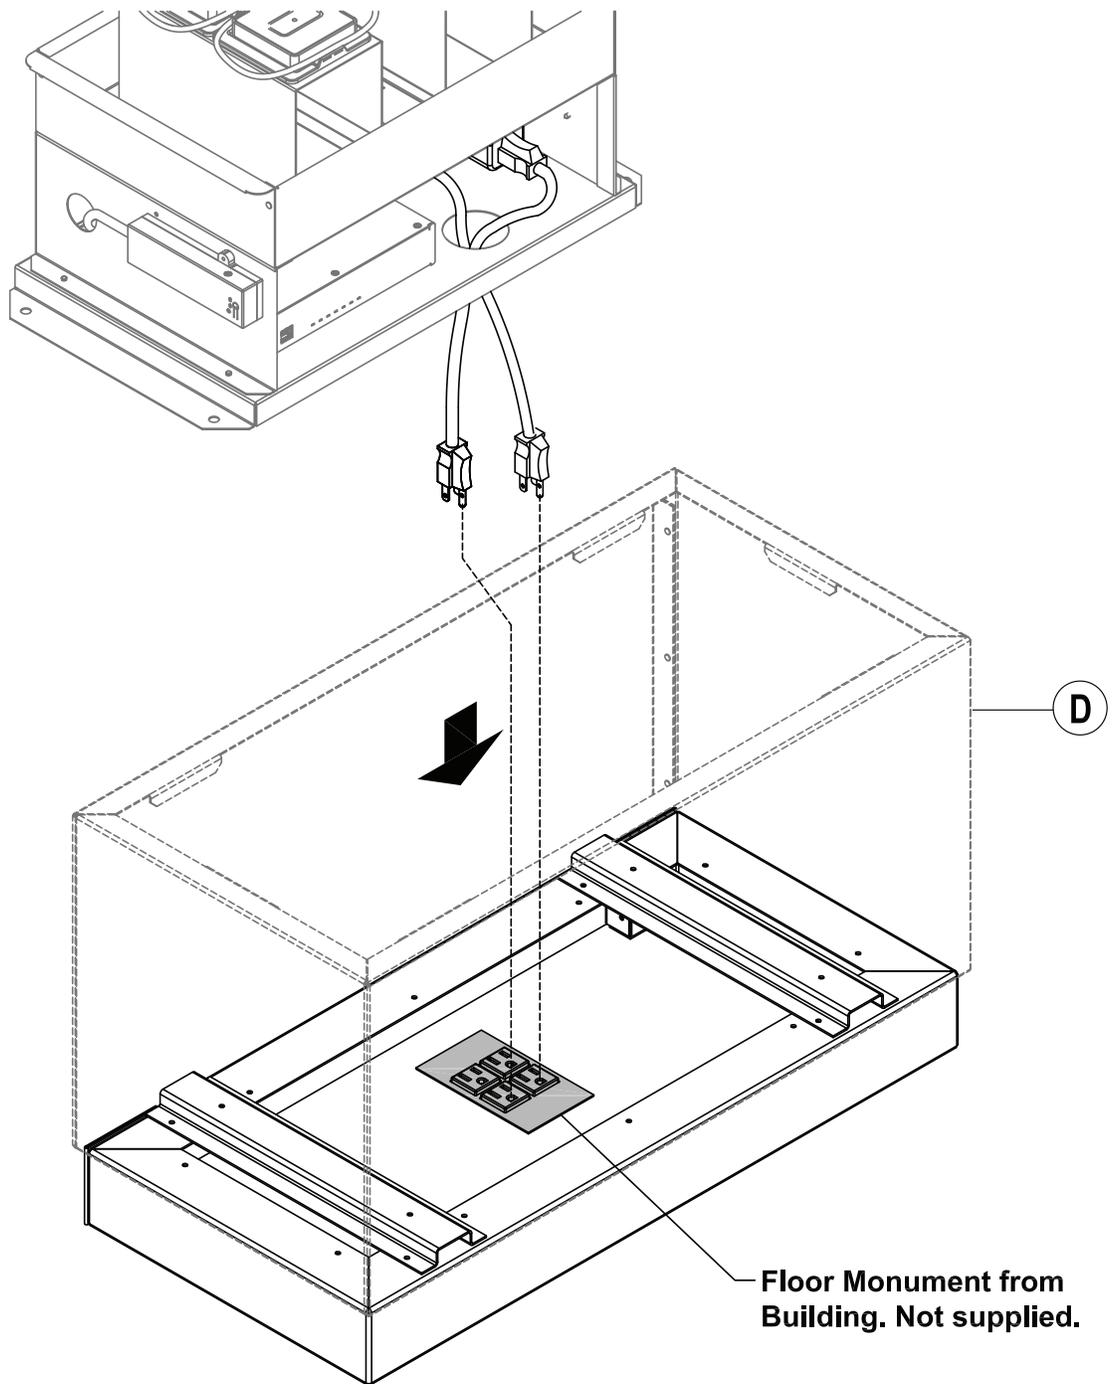

CLUBTalk 13" Modular Table

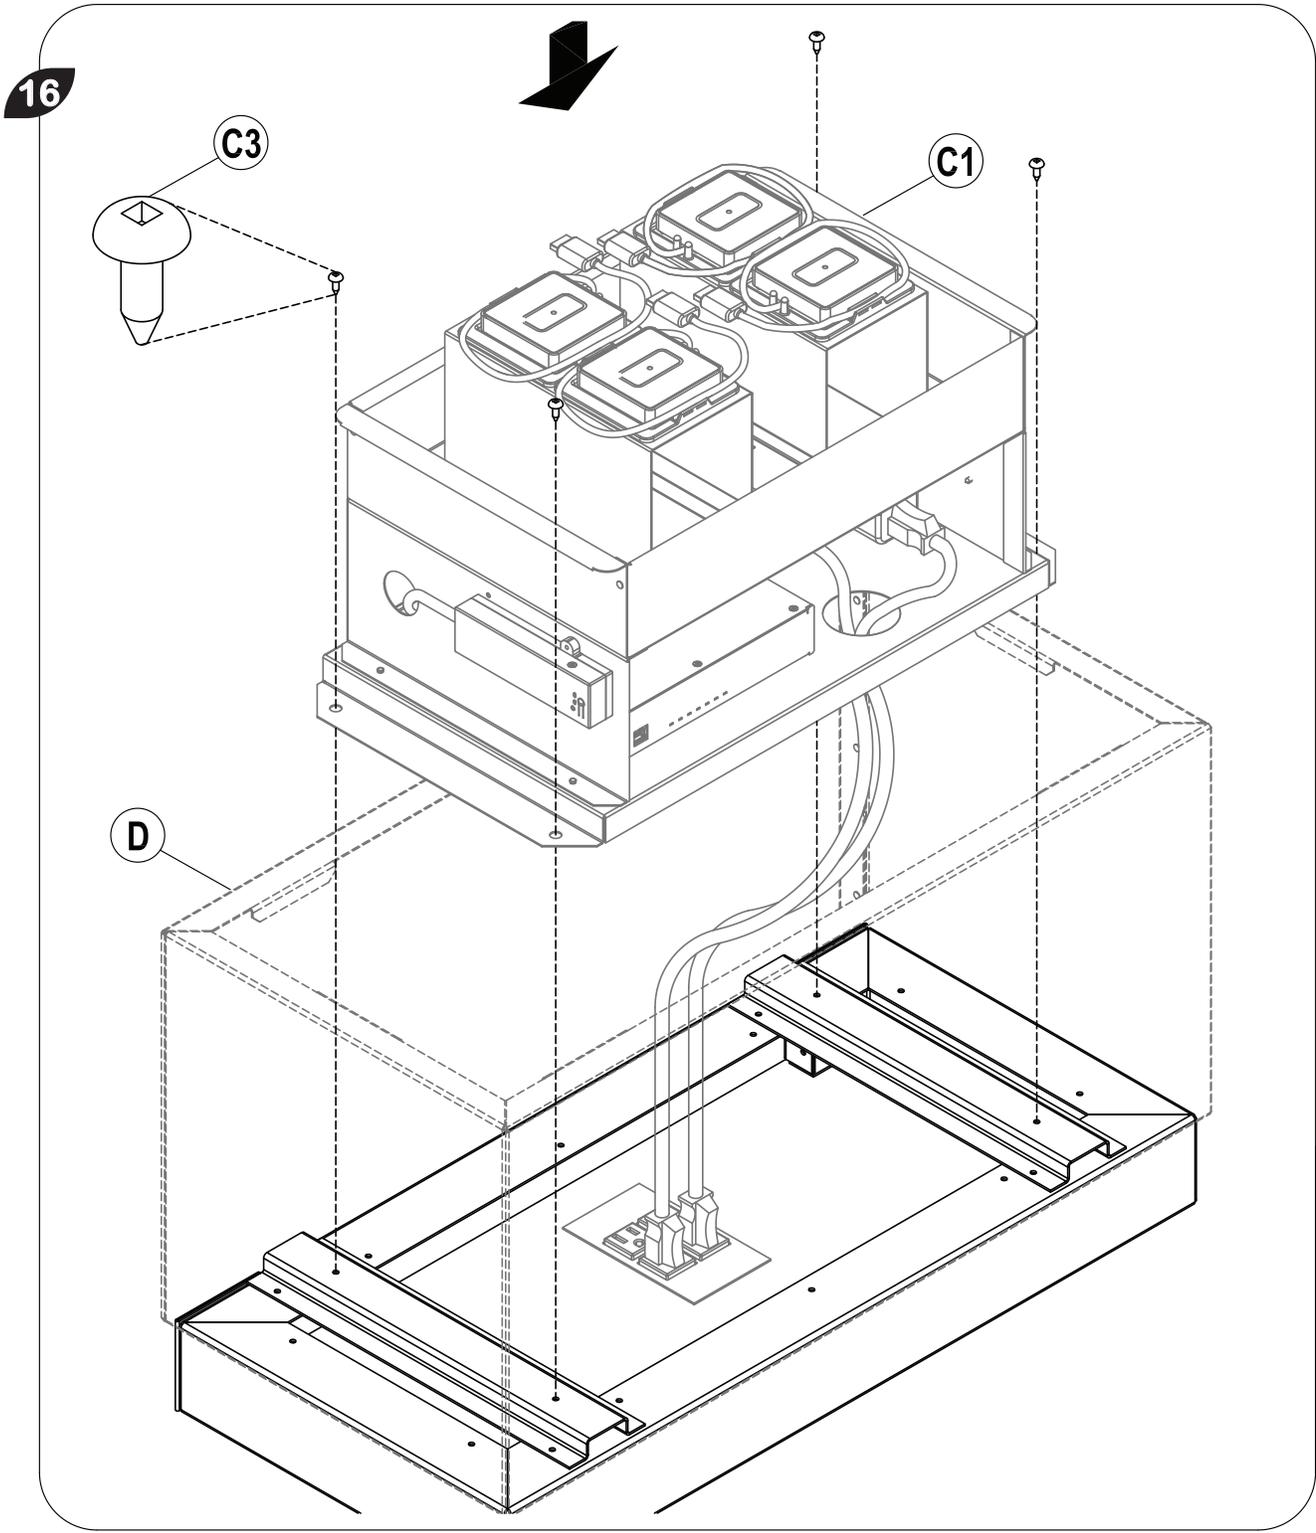

CLUBTalk 13" Modular Table

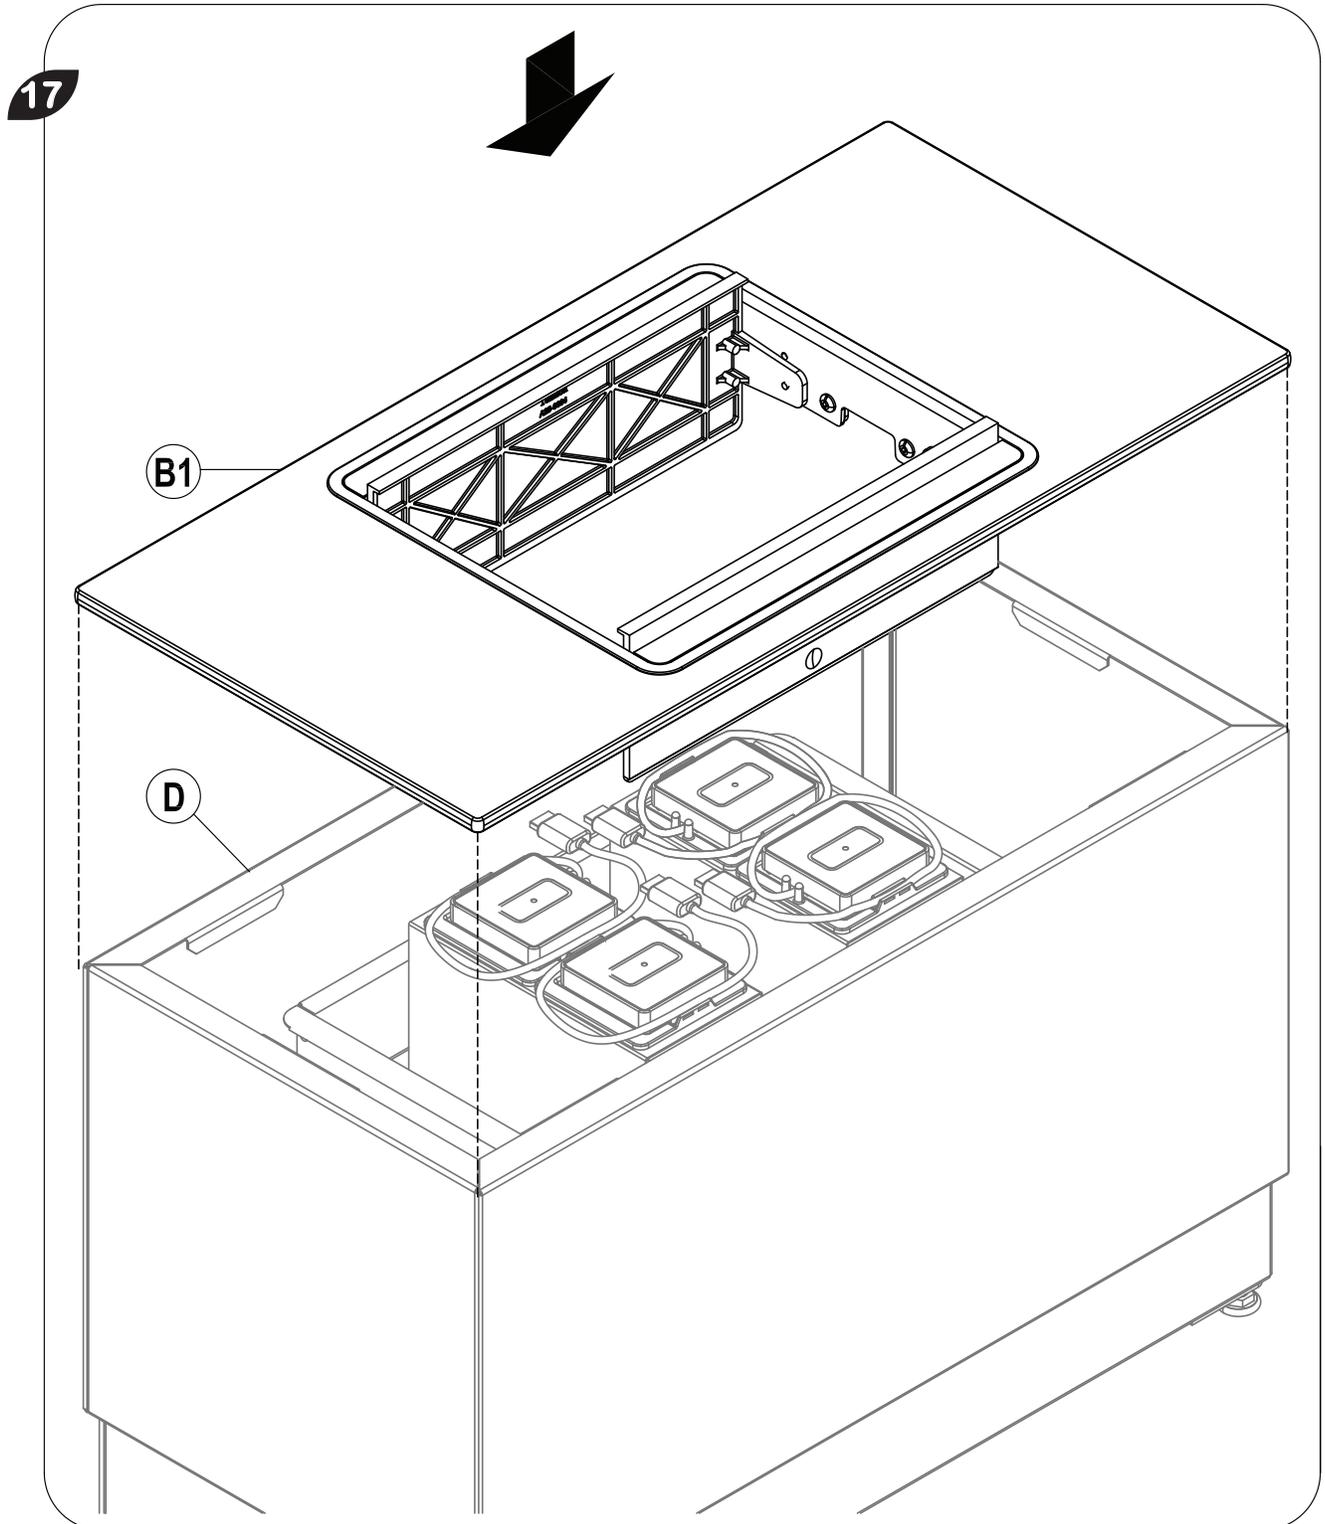


CLUBTalk Worksurface Monitor Mount

CUWM


Product

CUWM - Part / Product Identification and What's Included

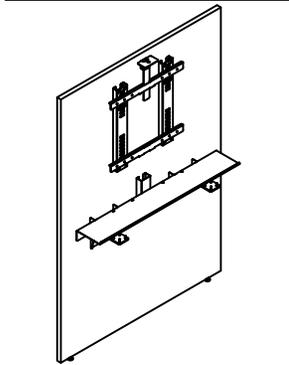


Ref.	Illustration	Description	Part No. / Prod. Code	Qty.	Kit No. / Assy. No.
A		Desk Edge Wood Board CLUBtalk	C05-8004	1	
B		Sensor Tray Assembly	N09-4577	1	
C1		Bracket Weldment	N09-4573	2	N09-4658
C2		1/4 - 20 x .625 Pan Head Quad	E01-0732	6	
D		#10 x .875 Quad Pan Washer	E07-0077	8	
E		Camera Shelf (OPTIONAL)	A16-2251	1	
F		Bracket - Screen Side	A16-2304	2	
G1		Top Bracket Subassembly	N09-4656	1	
G2		Screen Mounting Bracket	A16-2303	1	
H		Wireless Bracket Assembly	N09-4694	1	
I		Chimney Subassembly	A16-2358	1	
J1		M6 x 1 x 30mm Hex Socket, Butt. Hd, Plain	E01-0803	4	
J2		M6 x 1 x 40mm Hex Socket, Butt. Hd, Plain	E01-0804	4	
J3		M8 x 1.25 x 30mm Hex Socket, Butt. Hd, Plain	E01-0805	4	
J4		M8 x 1.25 x 40mm Hex Socket, Butt. Hd, Plain	E01-0806	4	
J5		Spacer 12mm OD x 8.2mm ID x 25mm L	E03-0556	1	
J6		Spacer 12mm OD x 8.2mm ID x 10mm L	E03-0555	2	
J7		Spacer 15mm OD x 6.3mm ID x 15mm L	E03-0554	4	
J8		Natural Nylon Washer .719" OD x .250" ID x .062" THK	E03-0902	4	



CLUBTalk Worksurface Monitor Mount

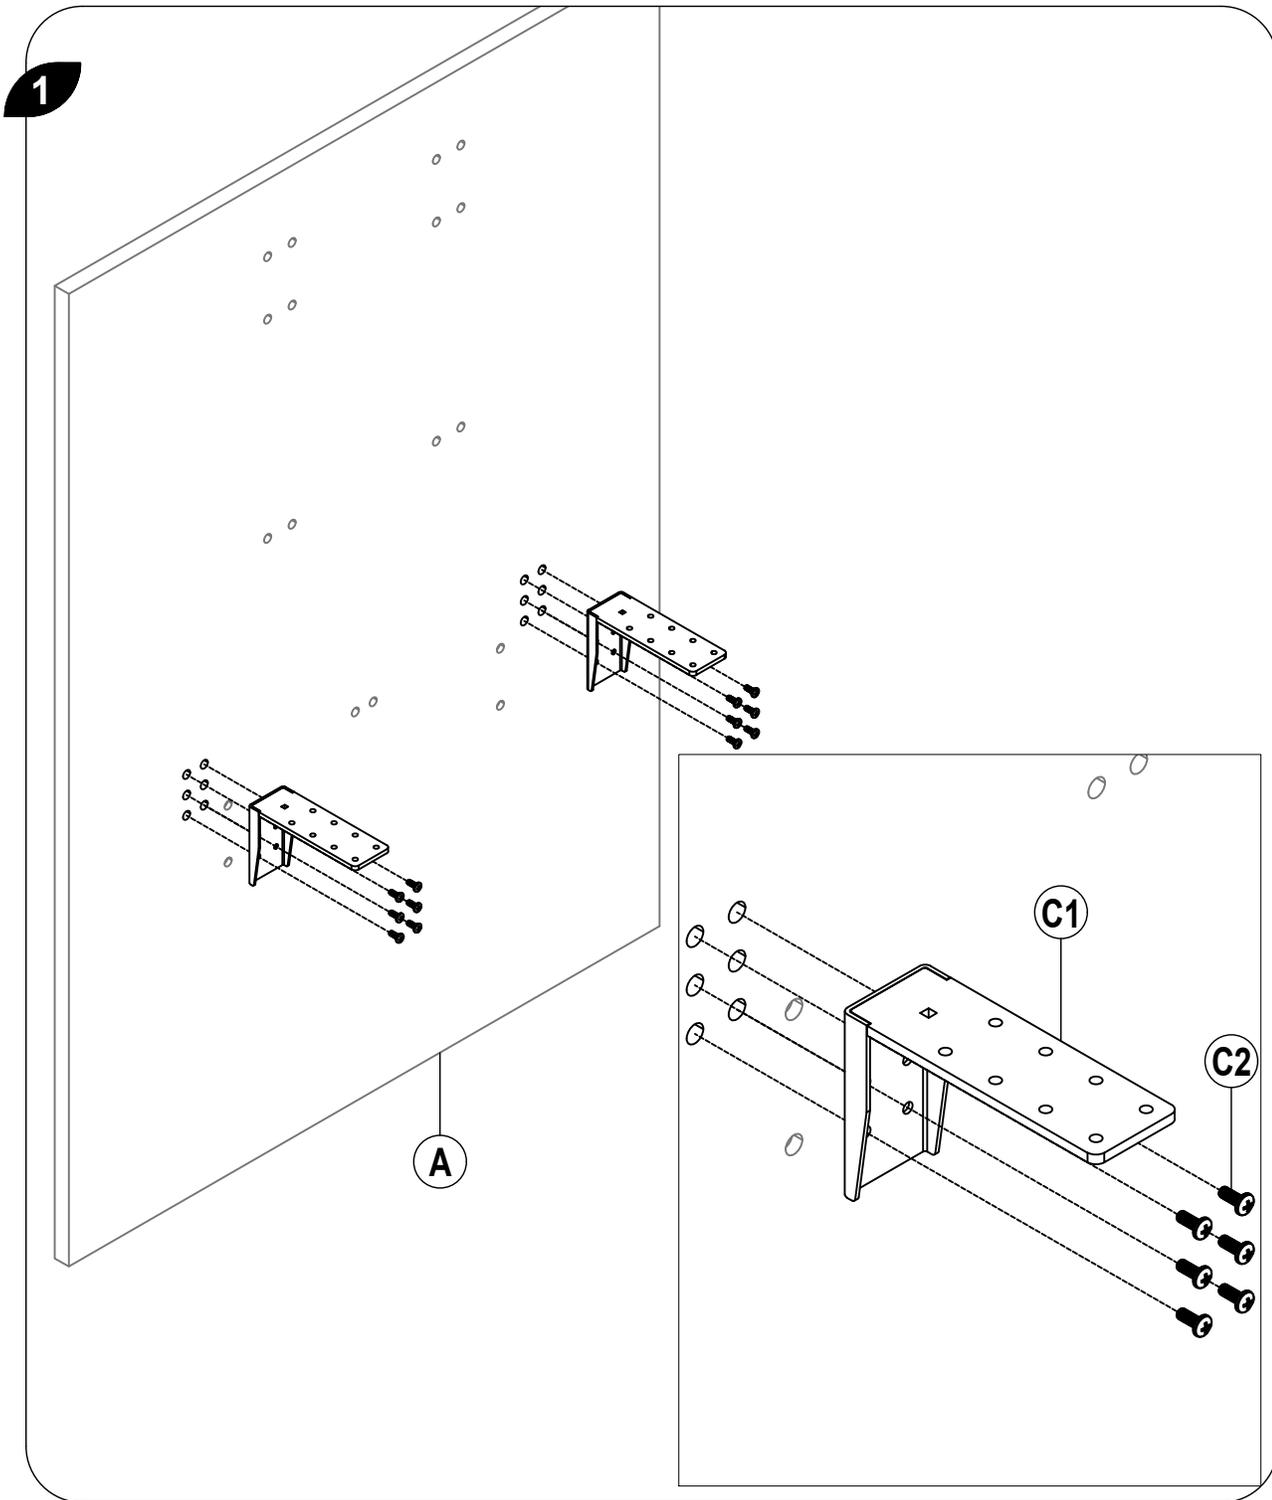



CLUBTalk Worksurface Monitor Mount

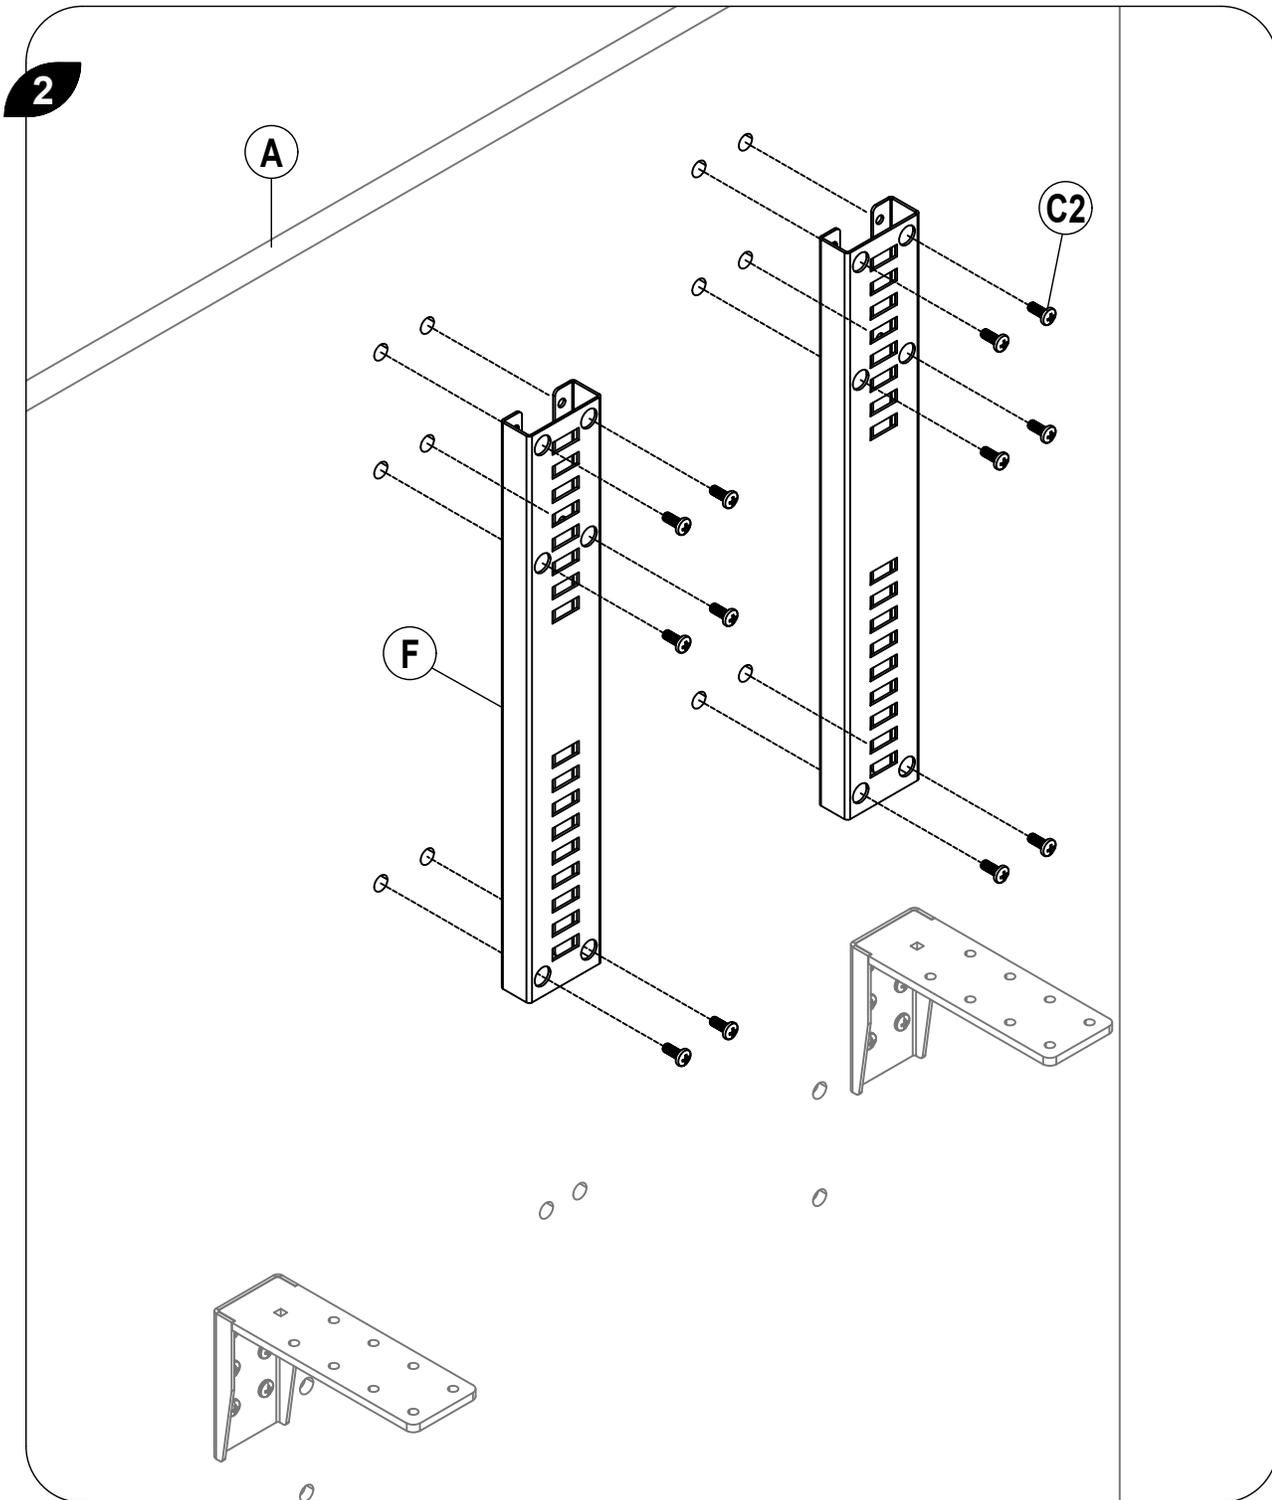


CLUBTalk Worksurface Monitor Mount

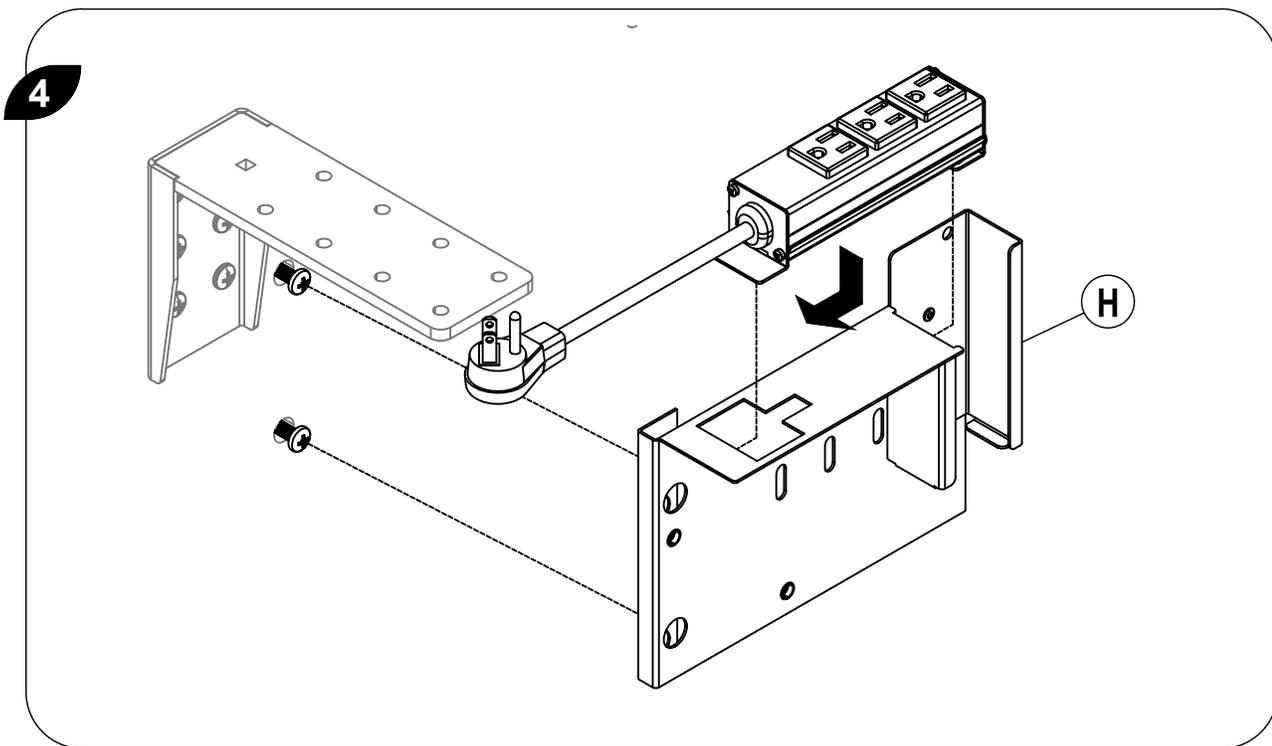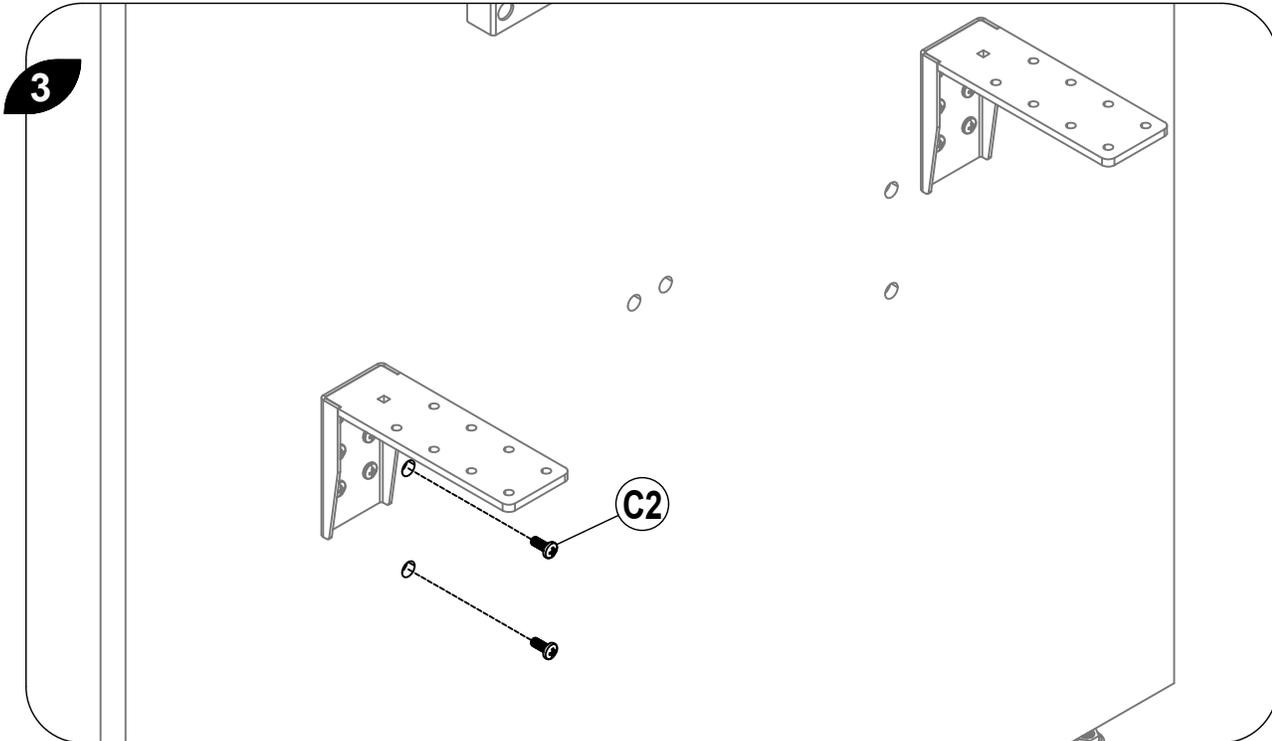


CLUBTalk Worksurface Monitor Mount

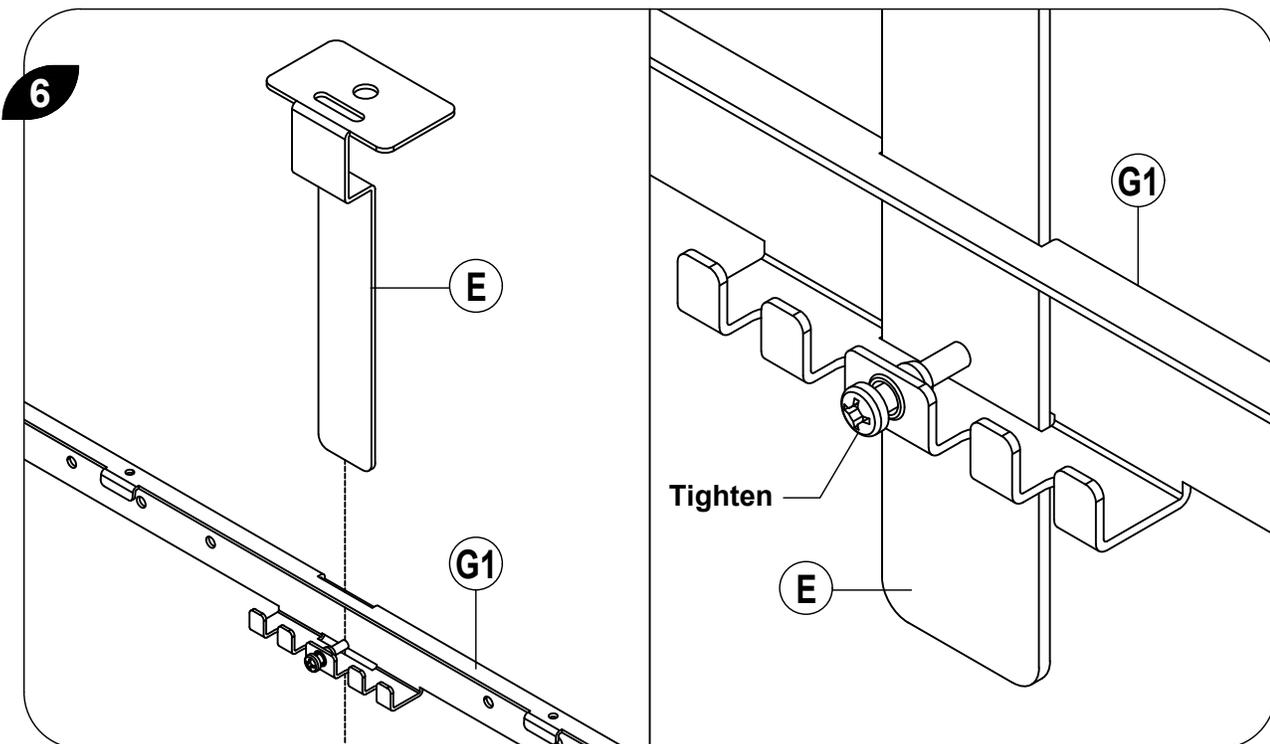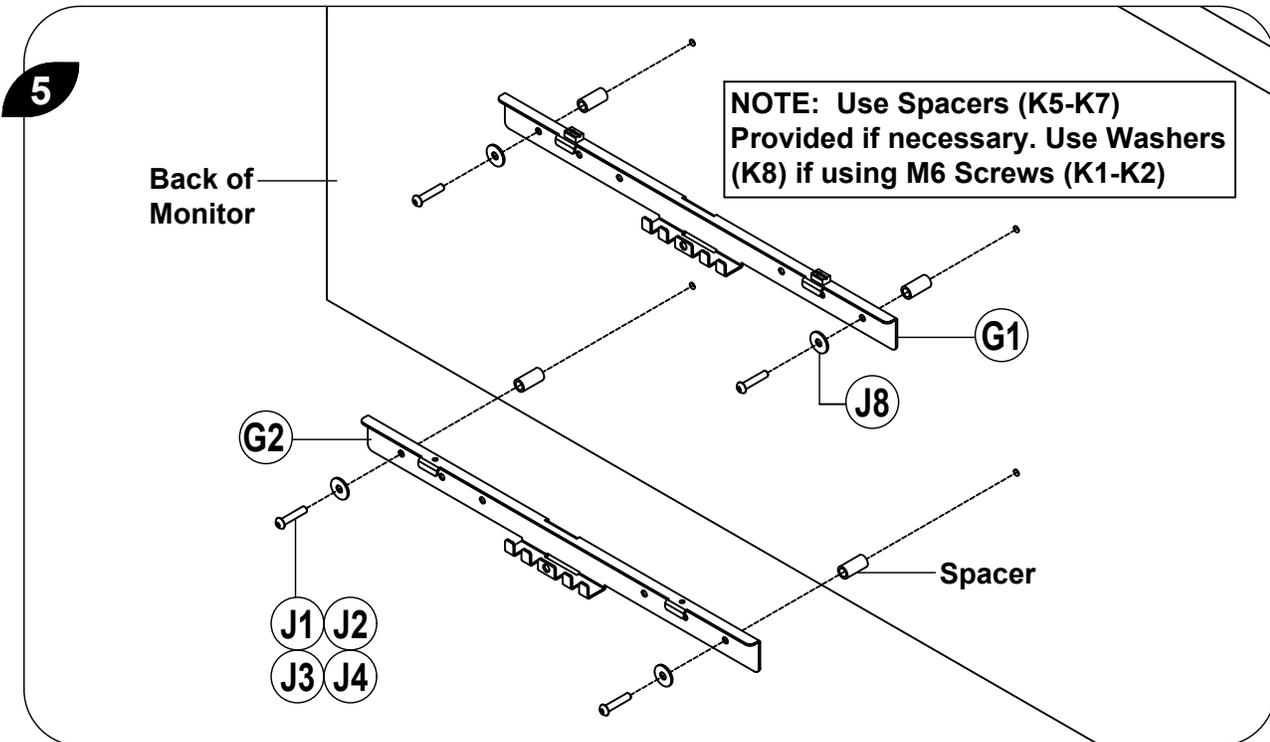


CLUBTalk Worksurface Monitor Mount

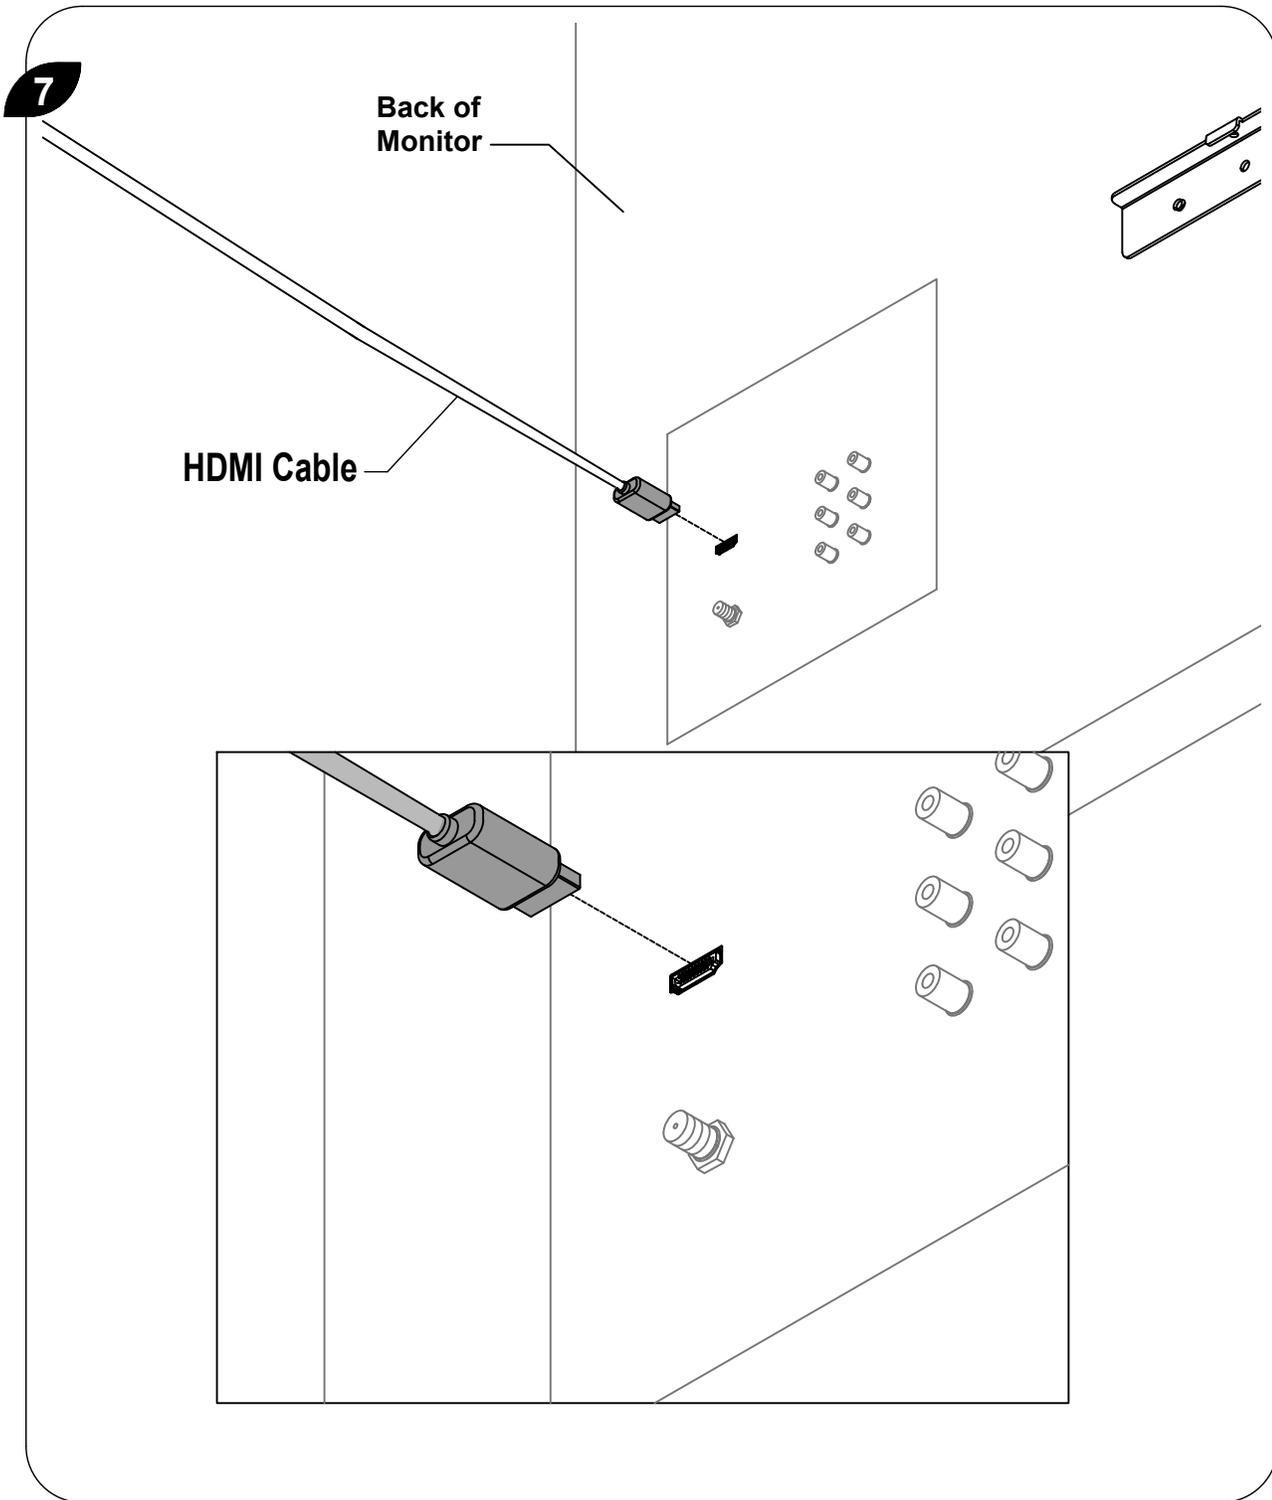


CLUBTalk Worksurface Monitor Mount

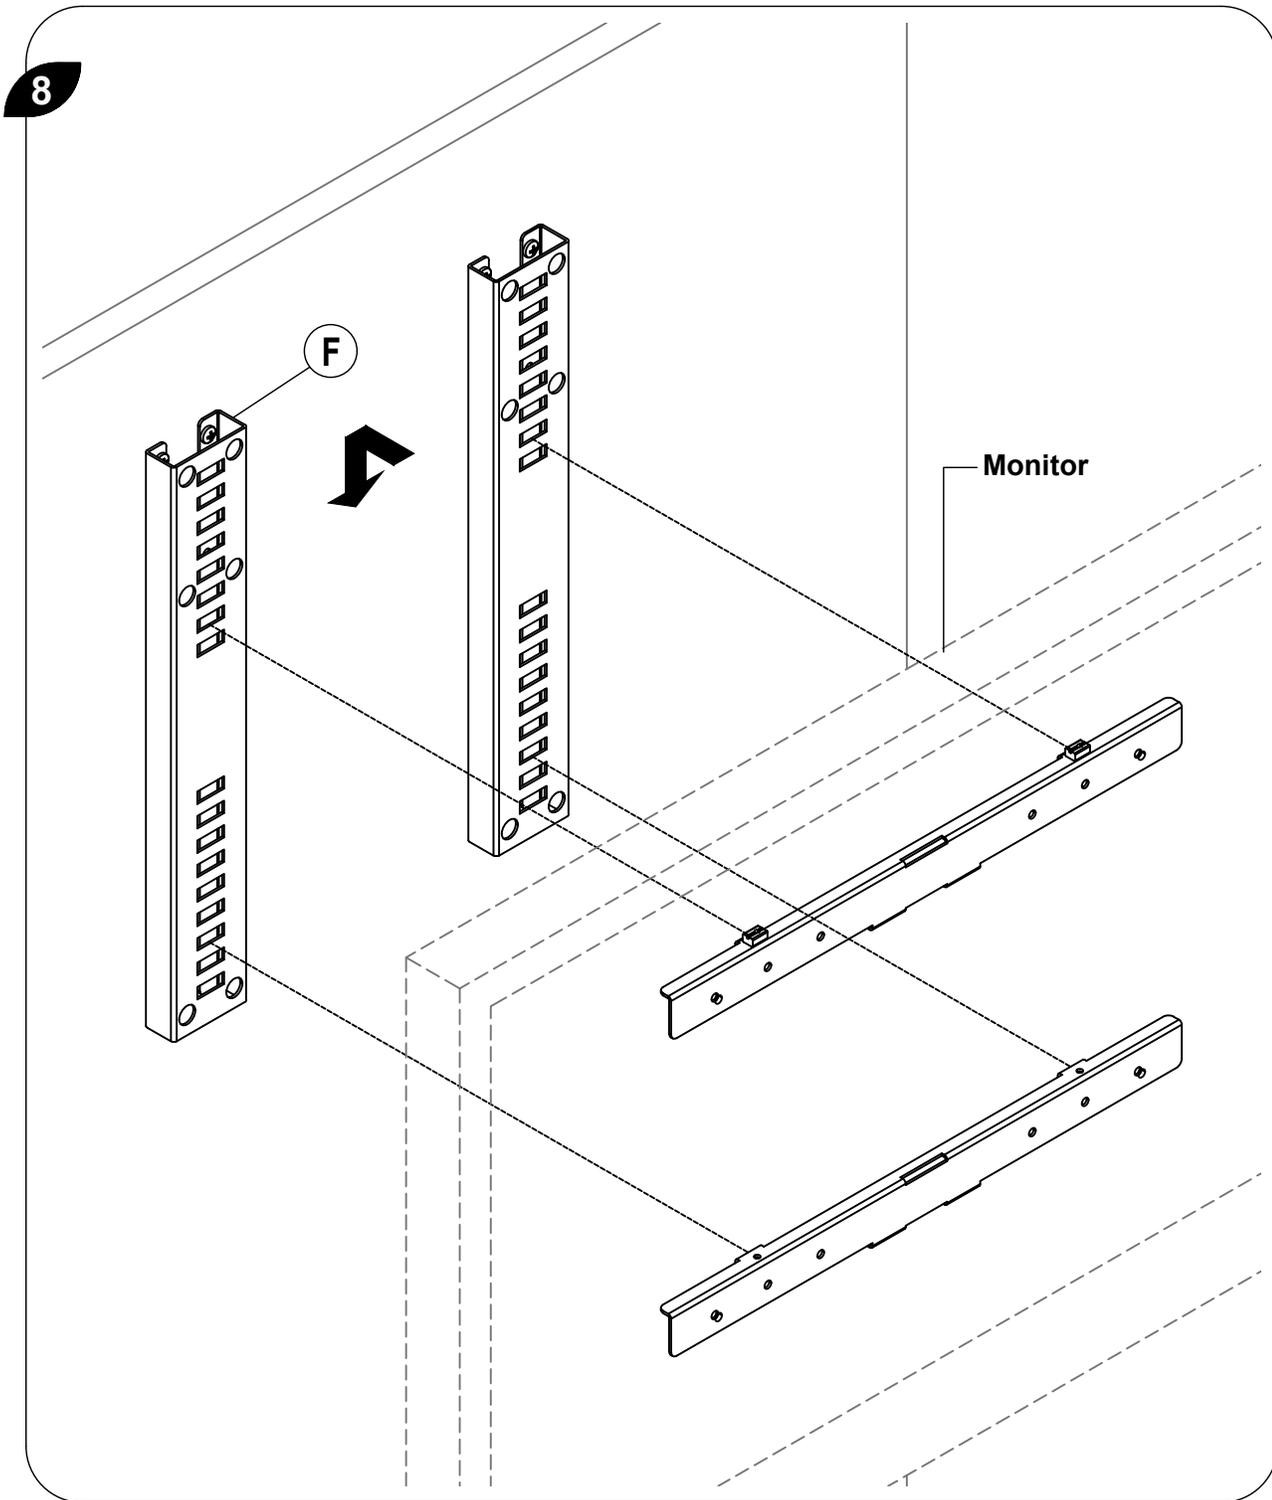




CLUBTalk Worksurface Monitor Mount

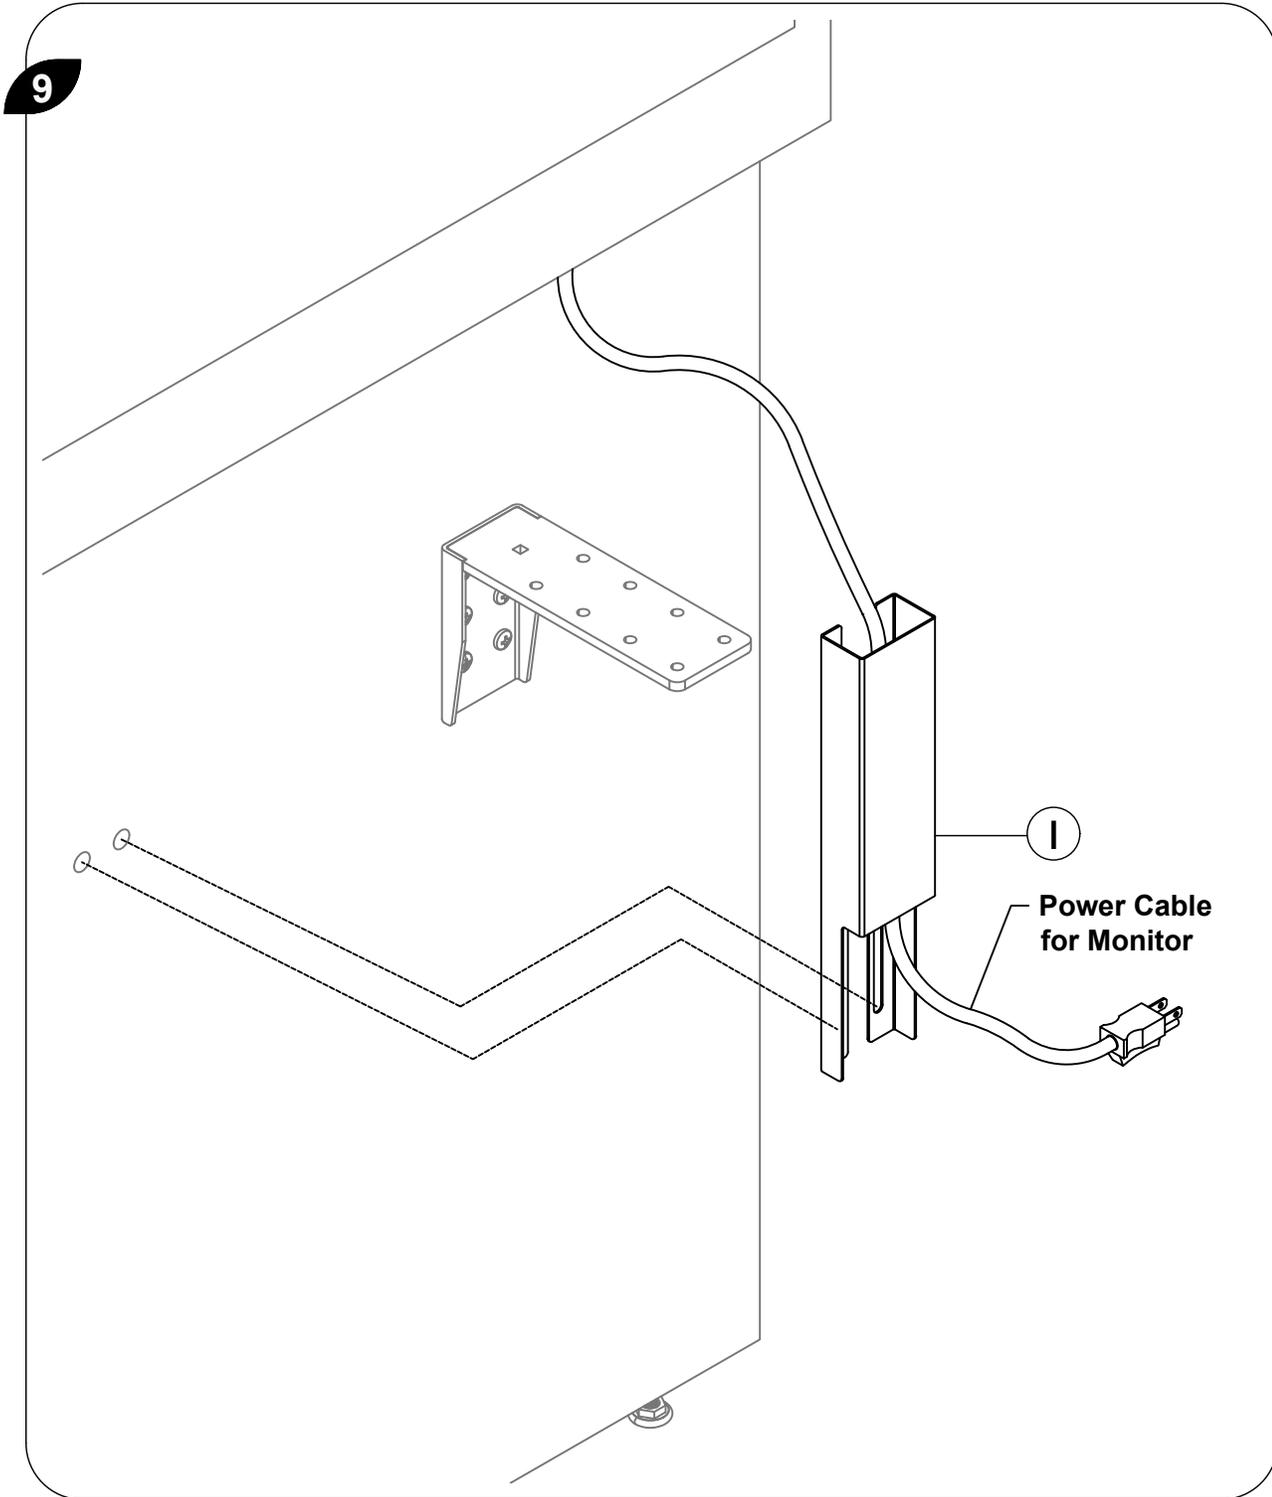



CLUBTalk Worksurface Monitor Mount

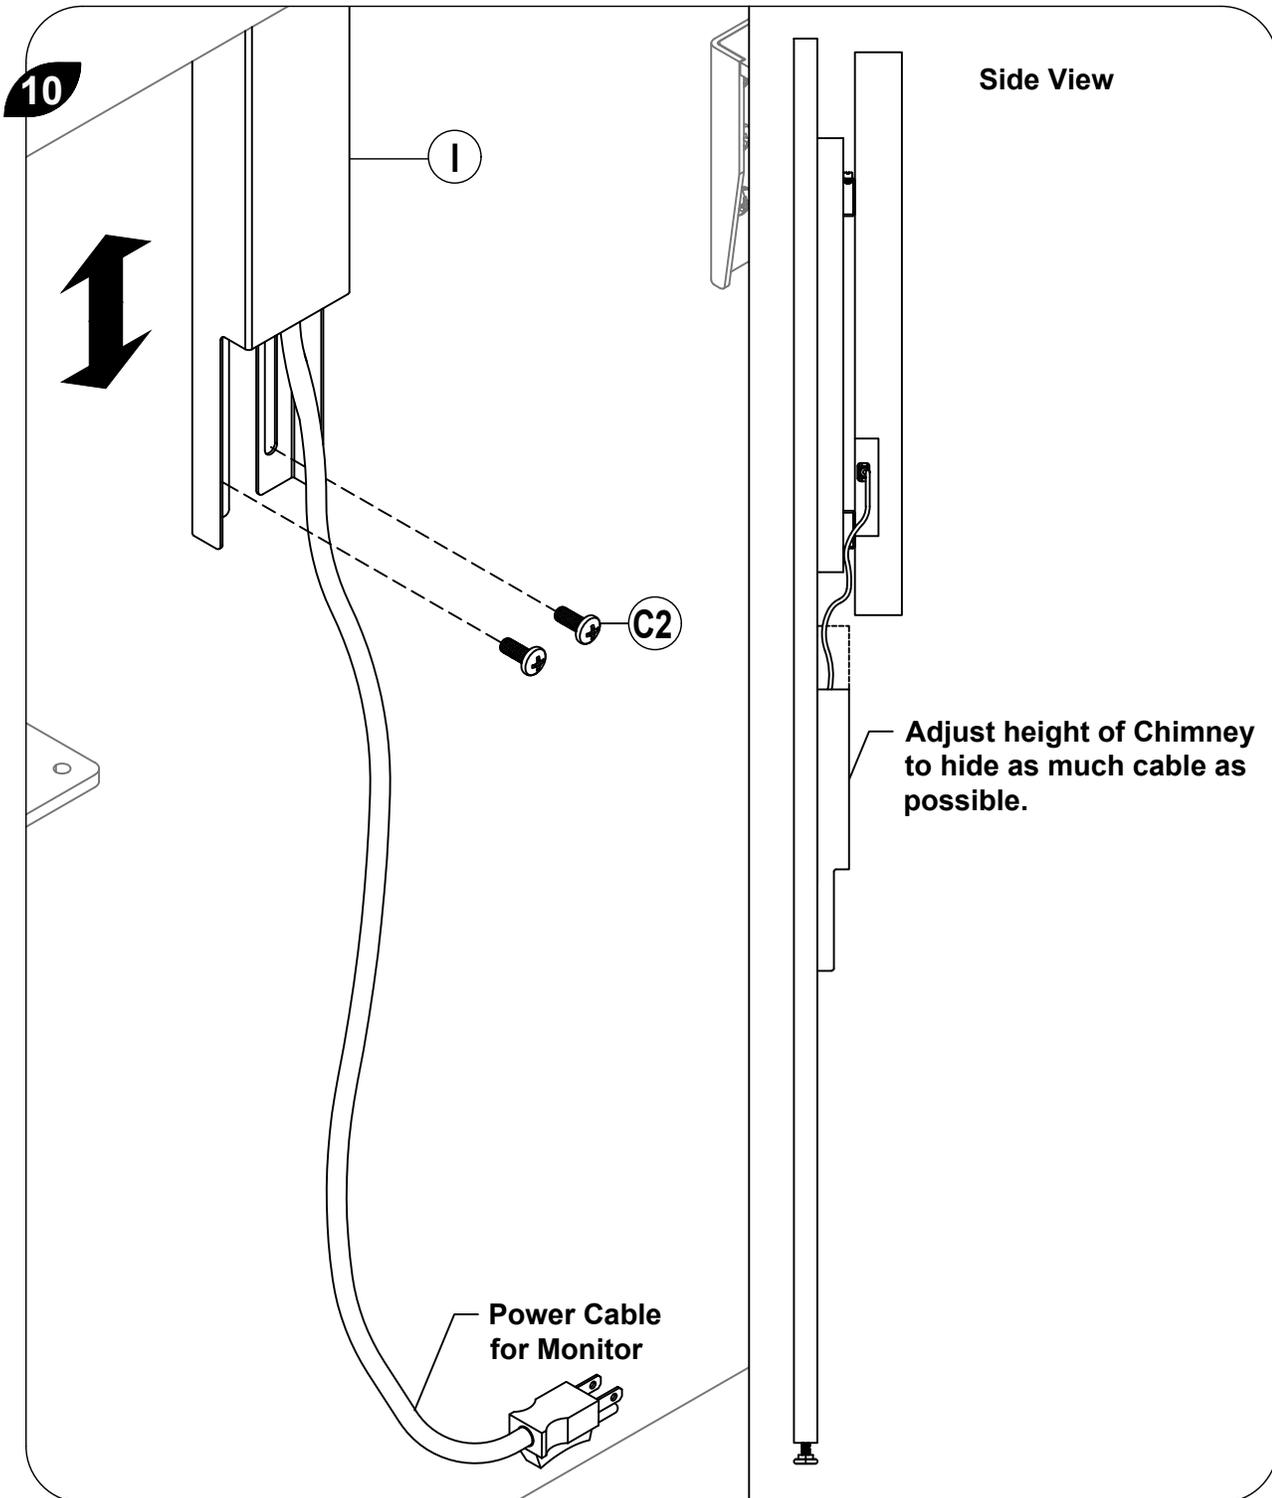

CLUBTalk Worksurface Monitor Mount

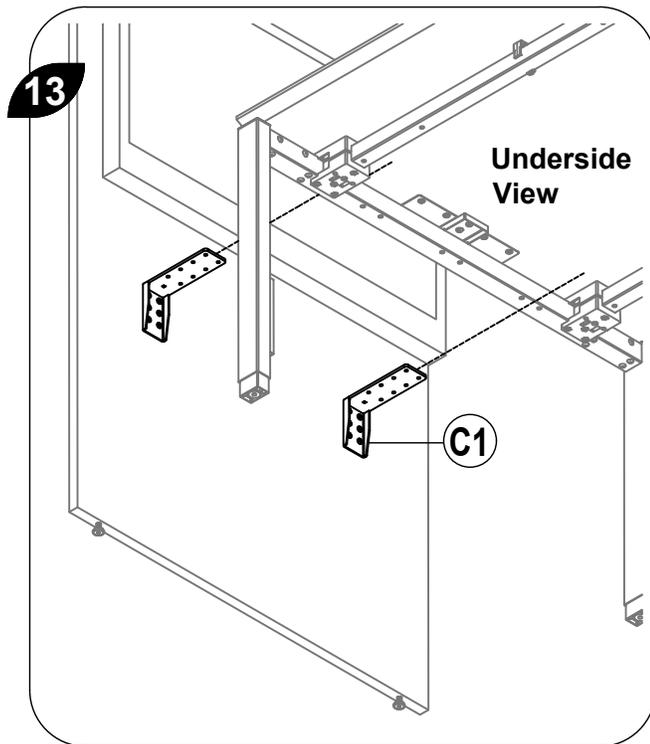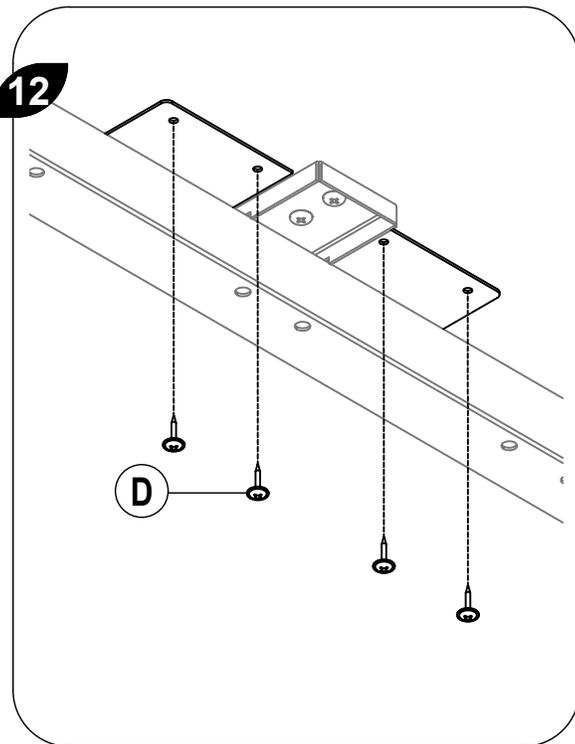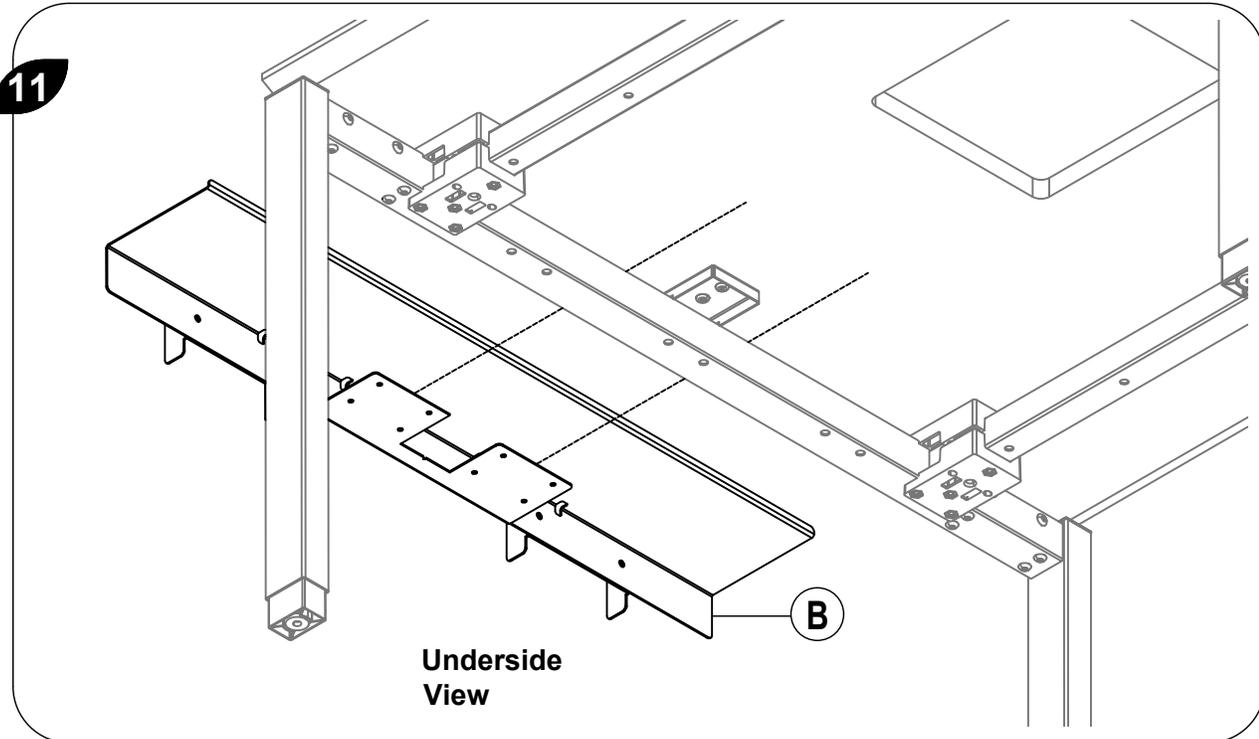

CLUBTalk Worksurface Monitor Mount


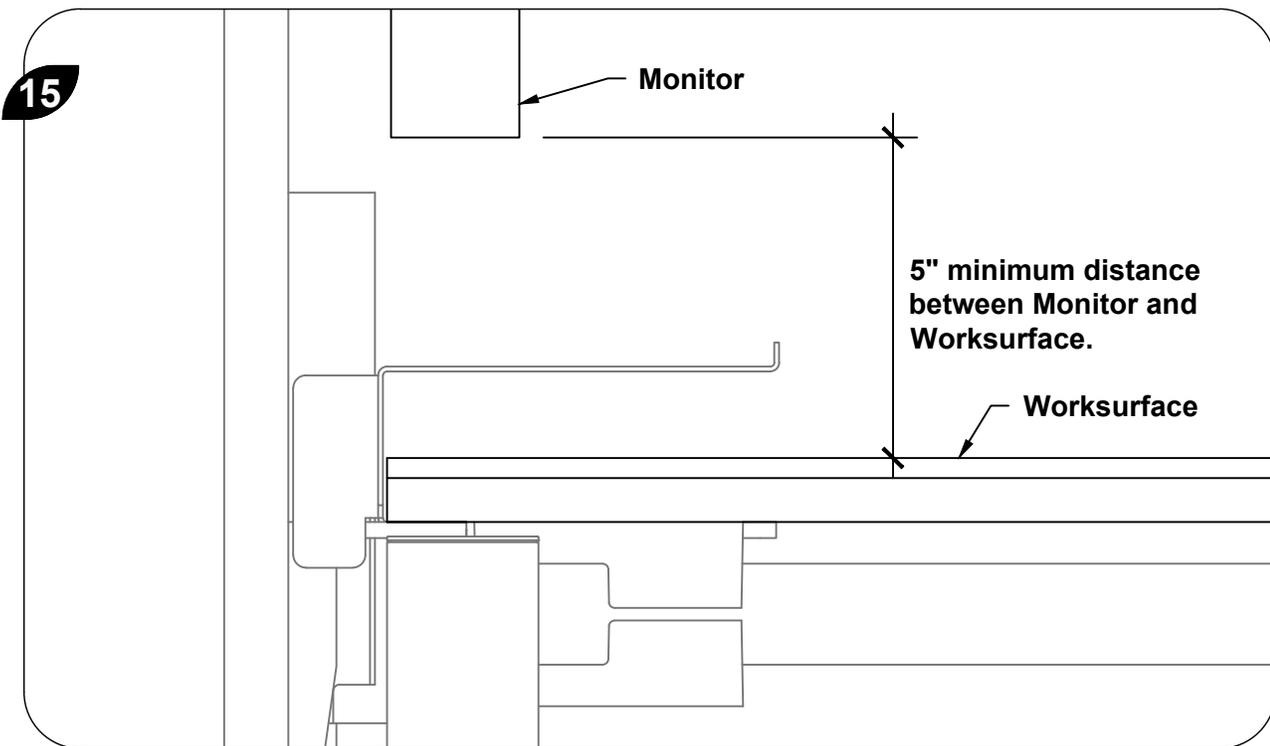
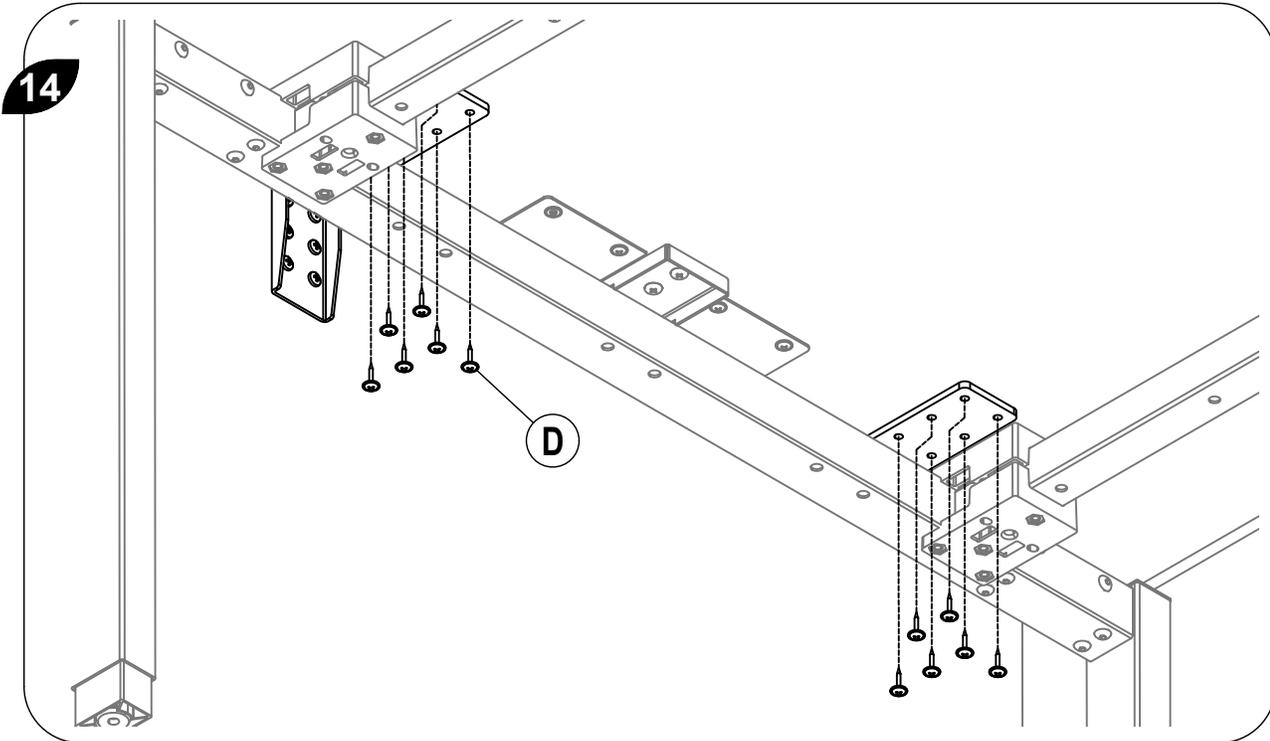


Section – **Storage**


X80-73003, X80-73004 and X80-73005 – Storage (General Installation)

No. **585, 586 and 587**


STORAGE INSTALLATION

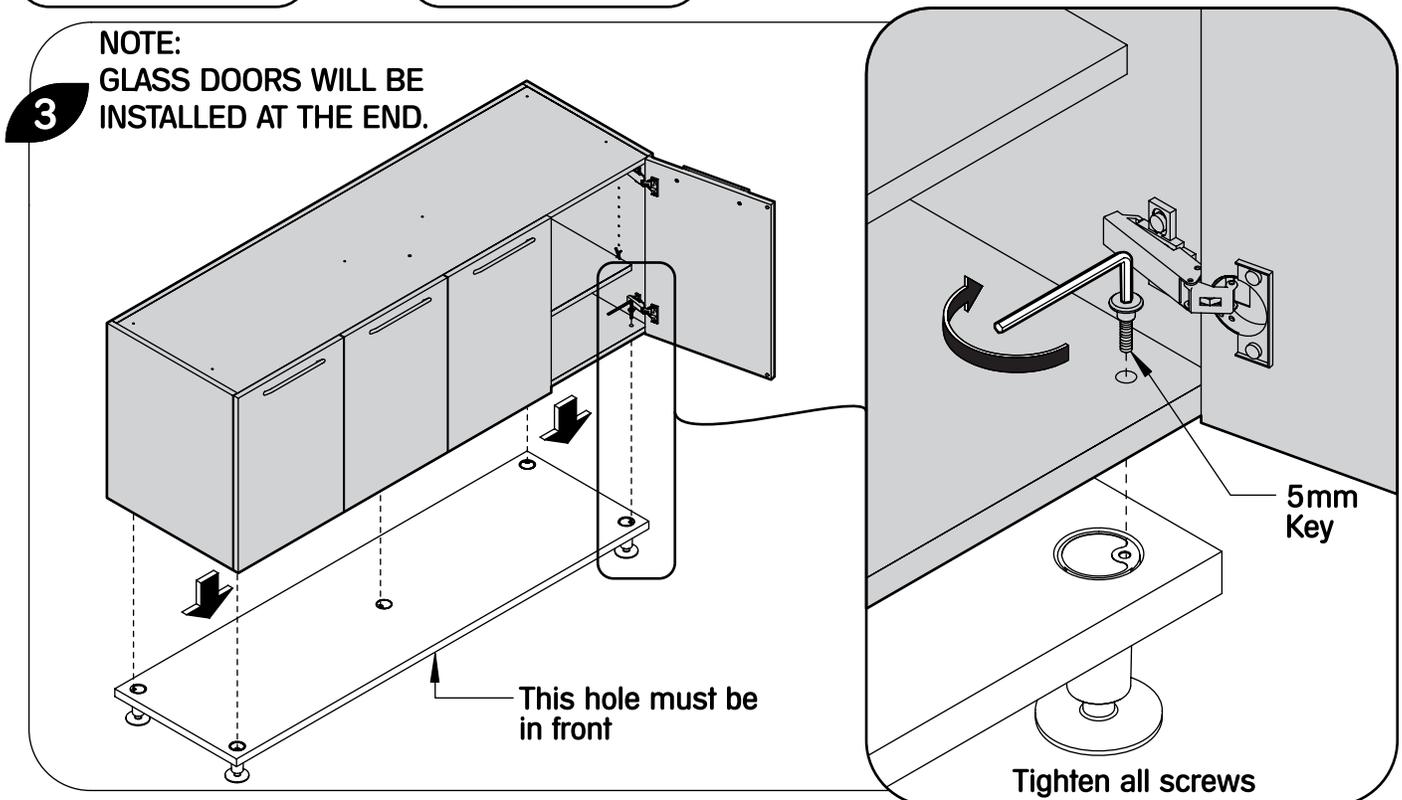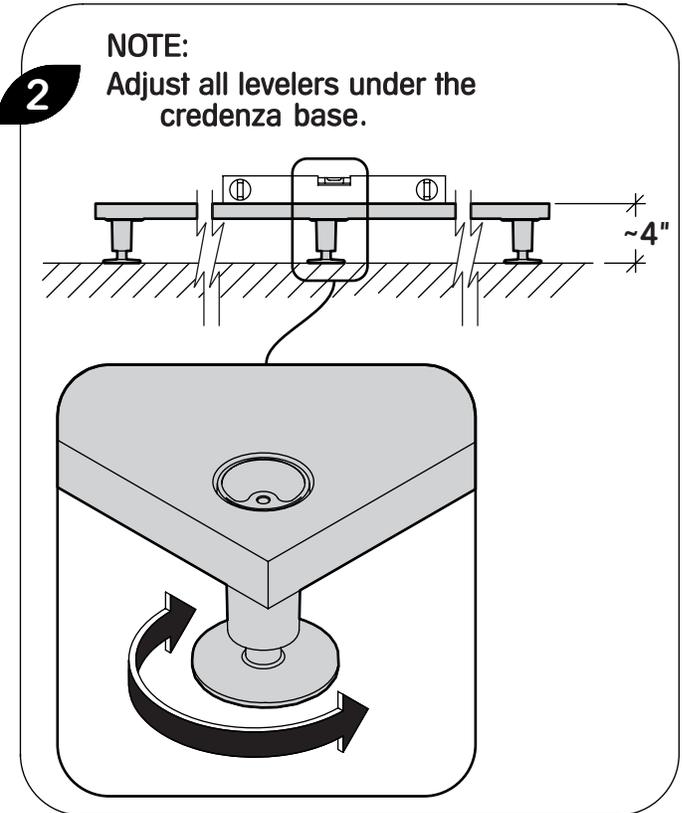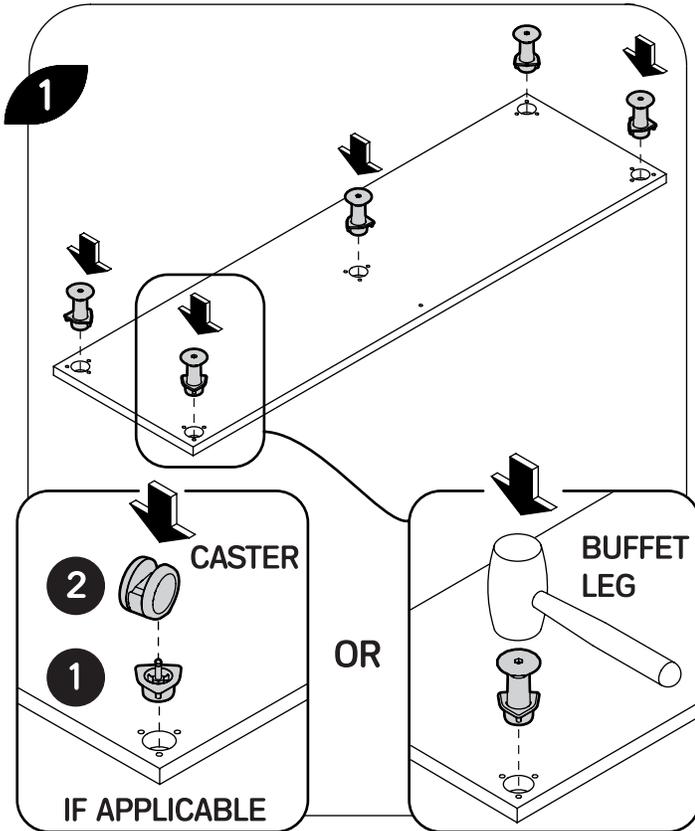

TOP INSTALLATION


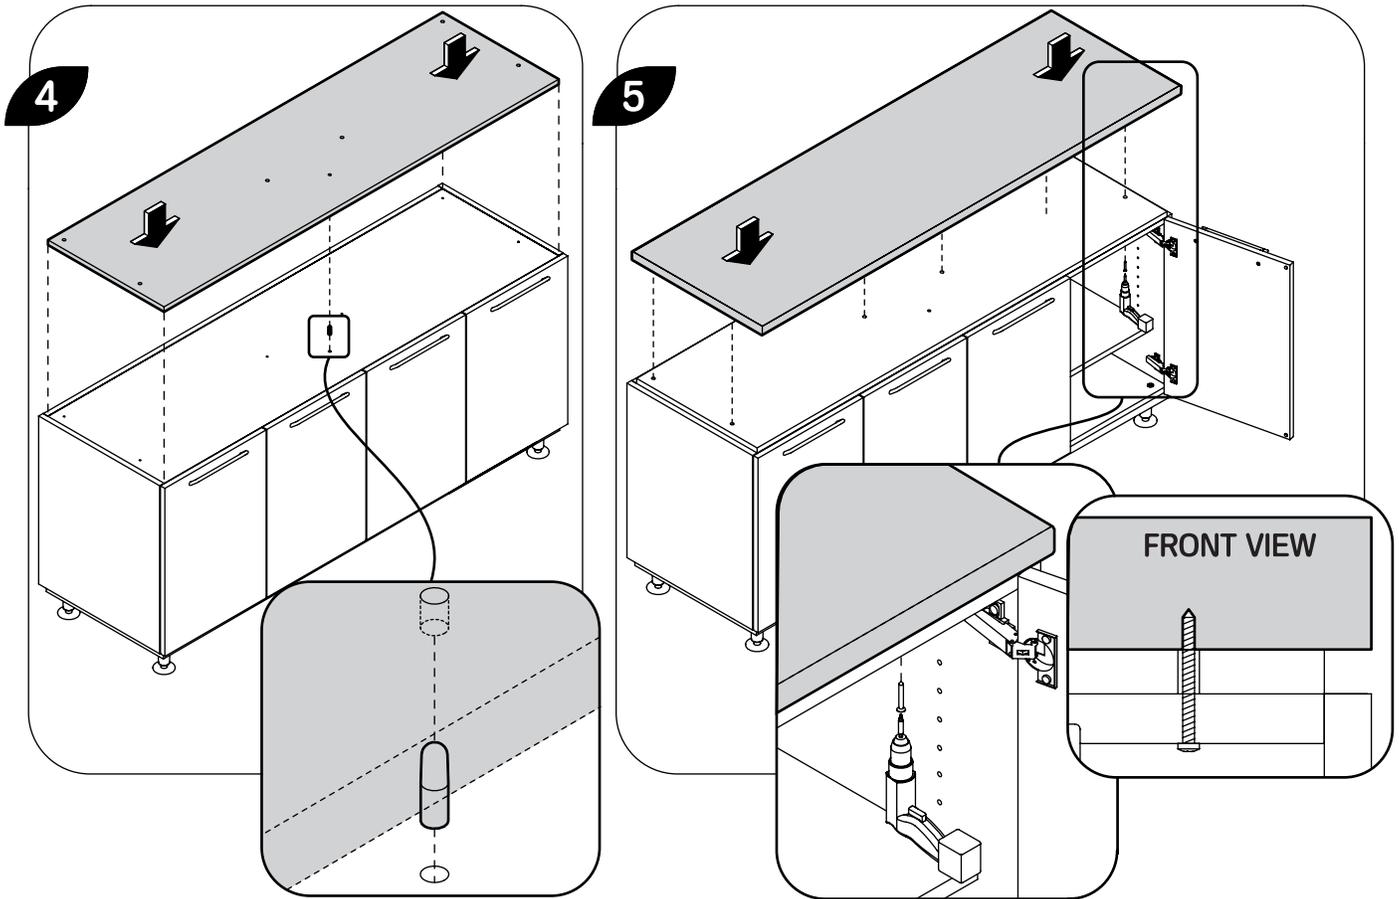


GLASS DOOR INSTALLATION

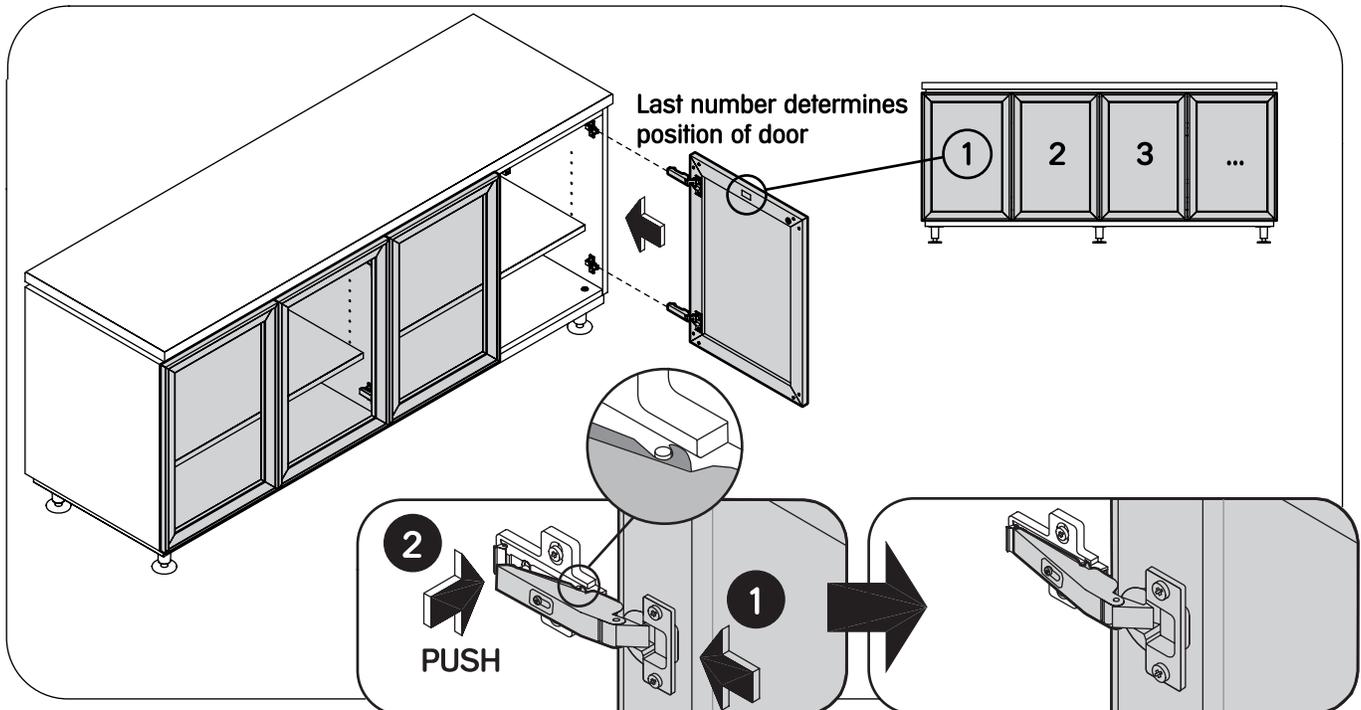


WARNING: Use this arm with 21"- 32" Flat LCD Monitor TV's
TOP WITH LCD ARM OPTION – INSTALLATION

Refer to #L04-73001 for initial steps.

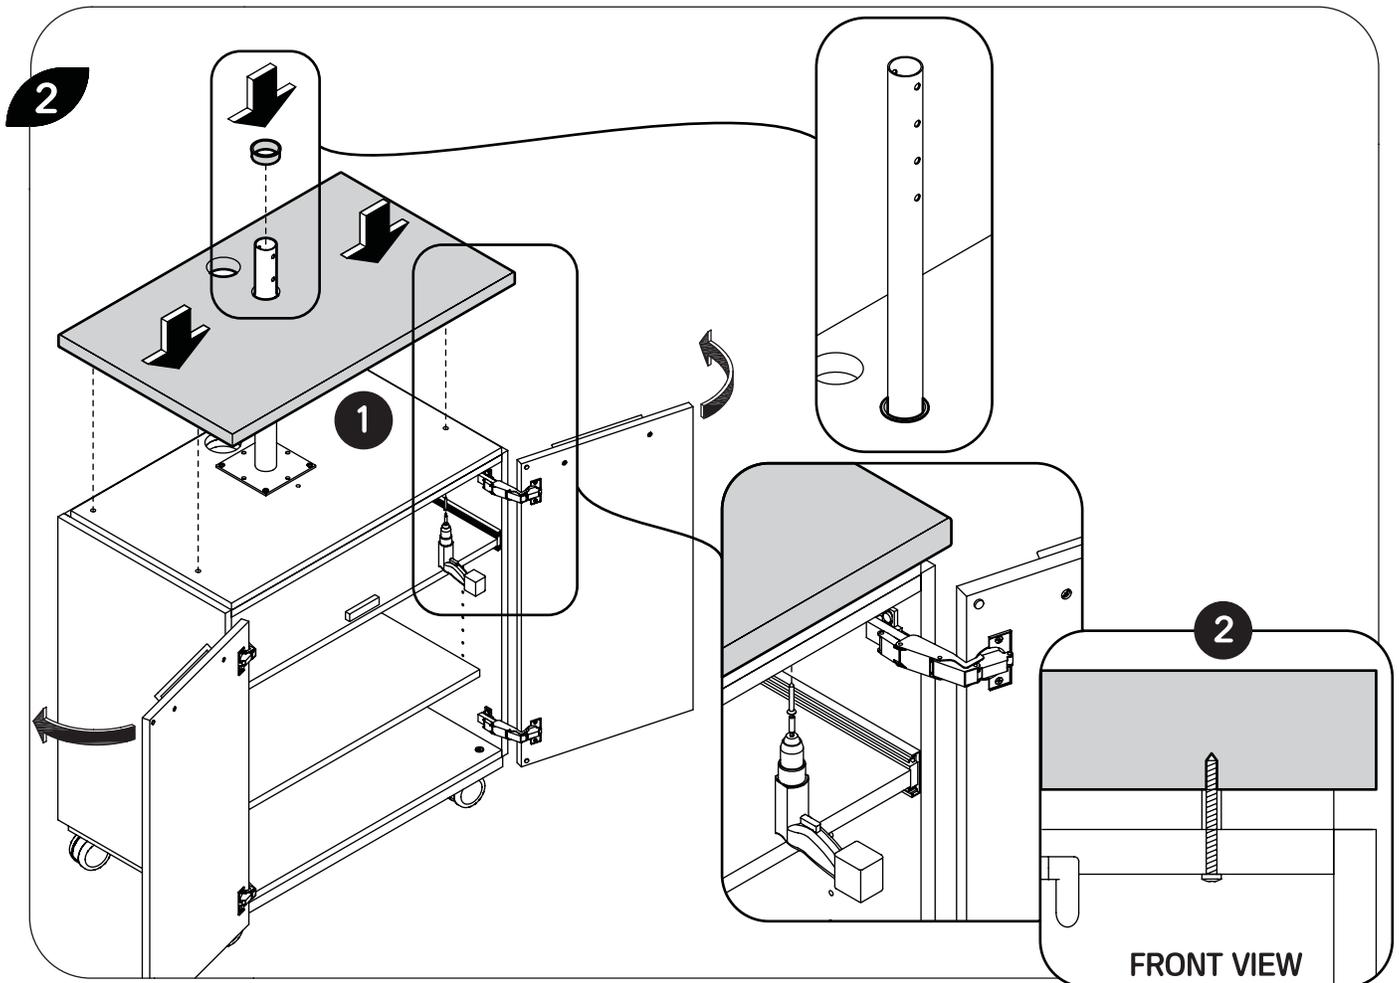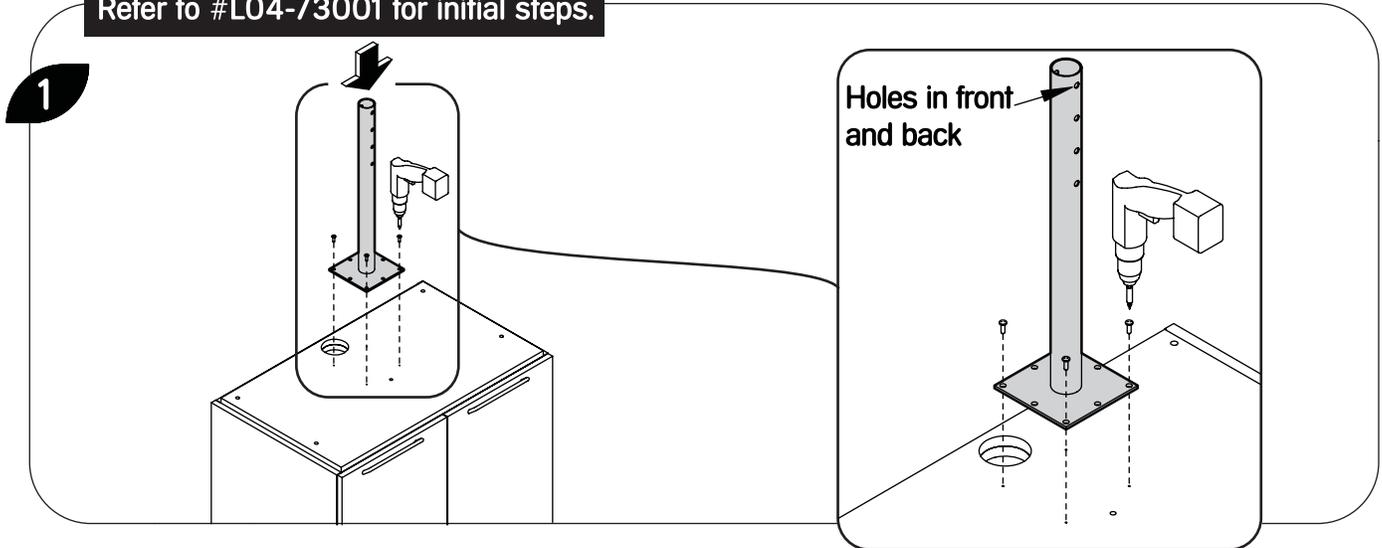




Section – **Storage**

X80-73001 – LCD Arm Option

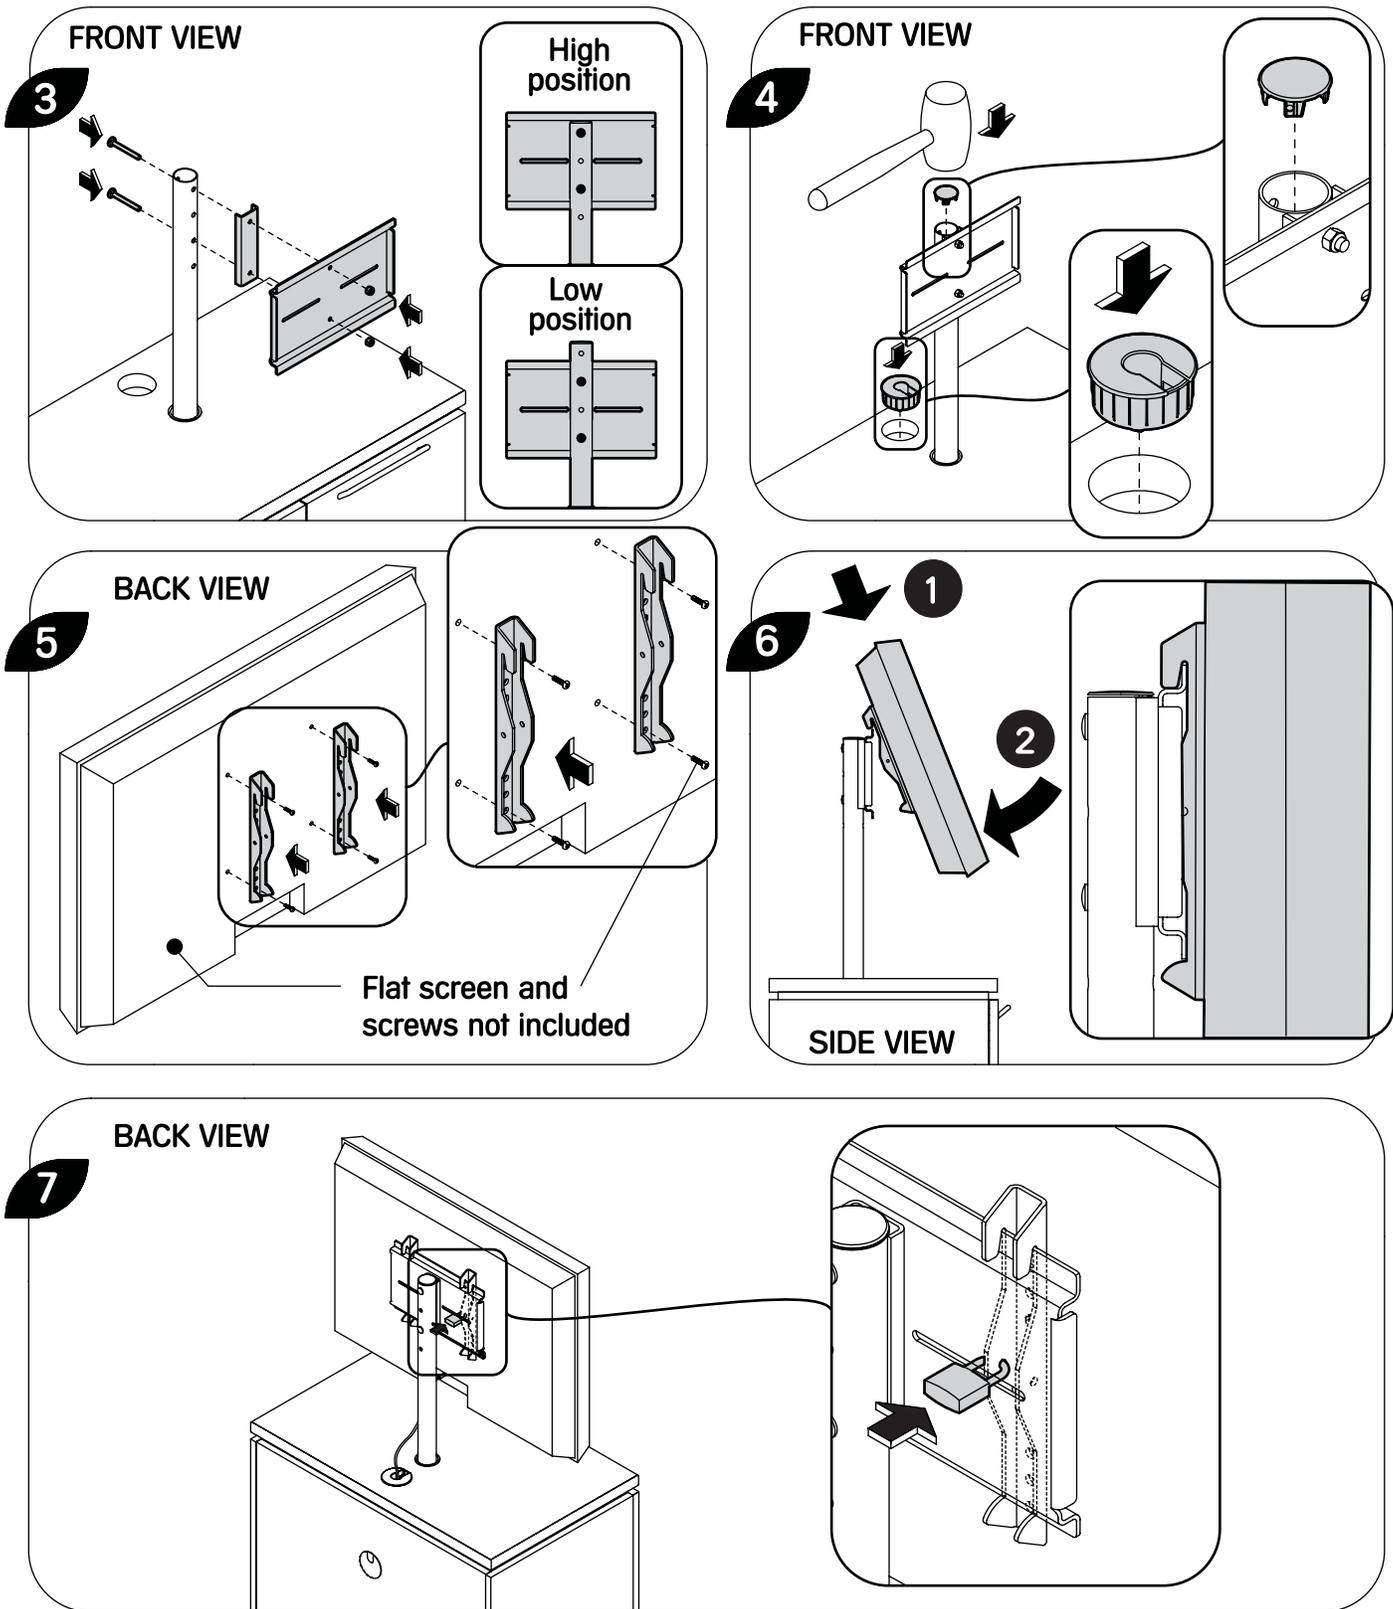



HOSPITALITY CART TOP INSTALLATION

Refer to #L04-73001 for initial steps.

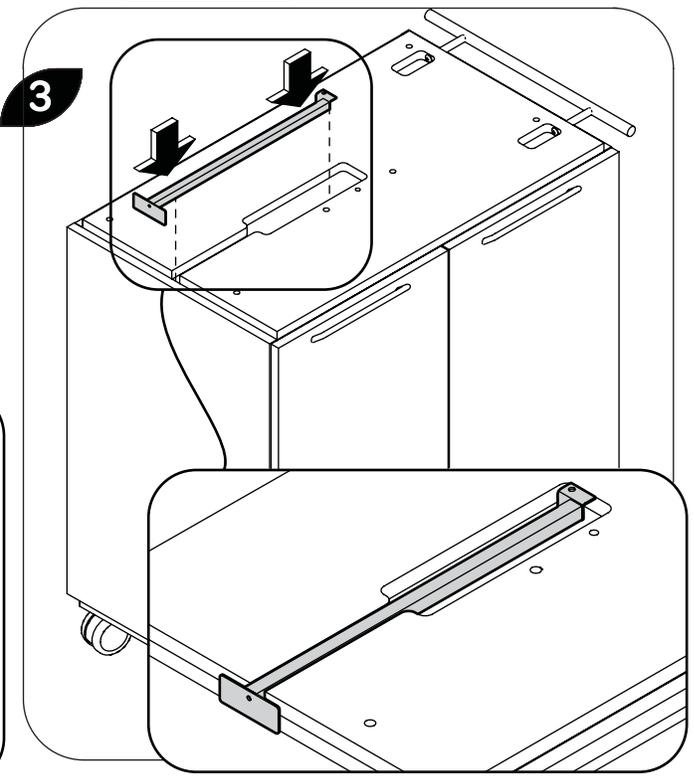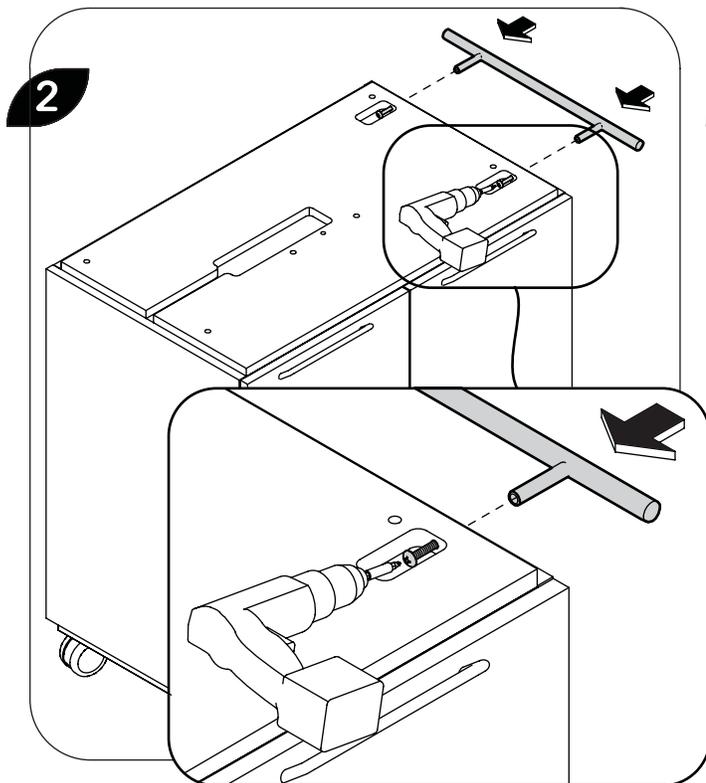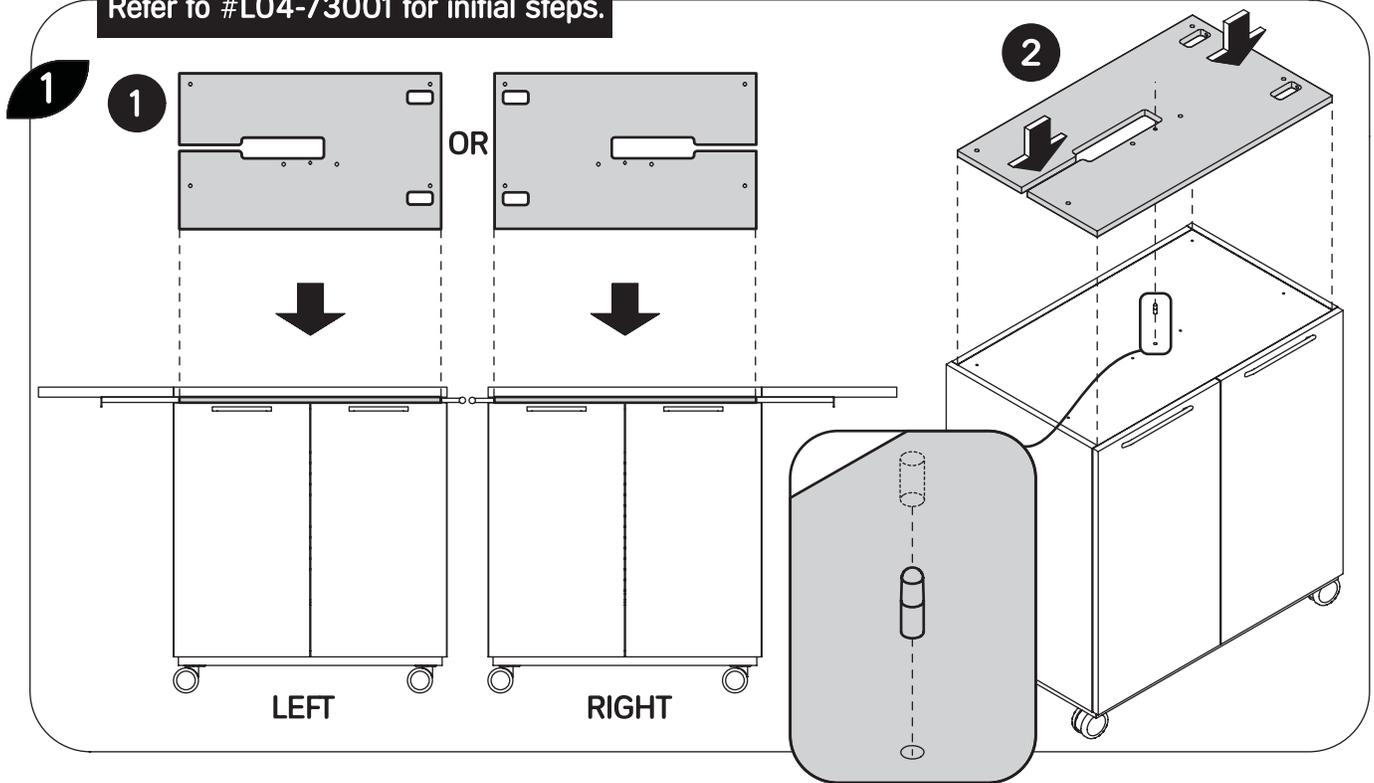

Section – **Storage**

X80-73002 – Hospitality Cart Top

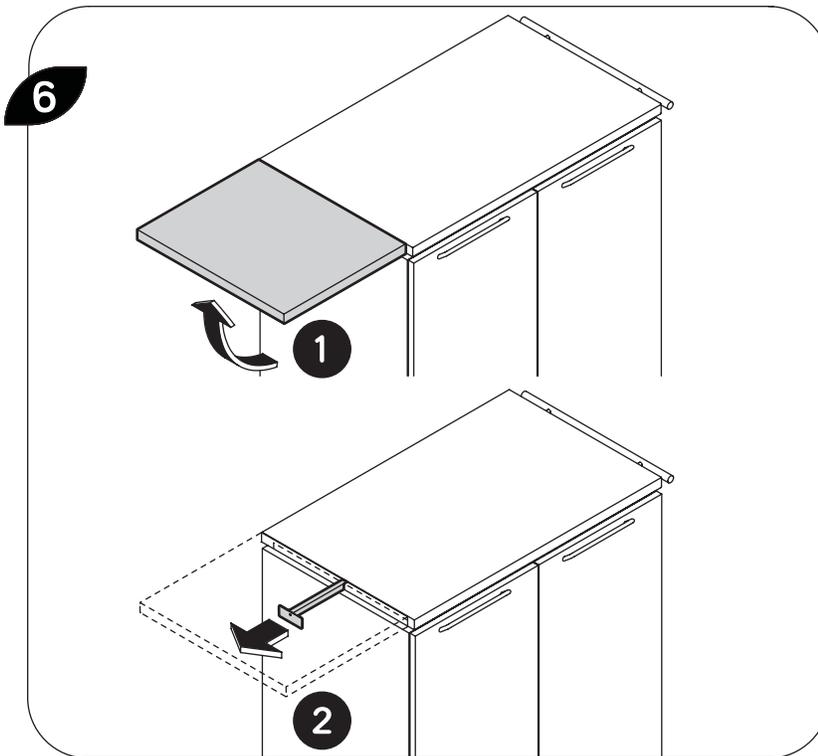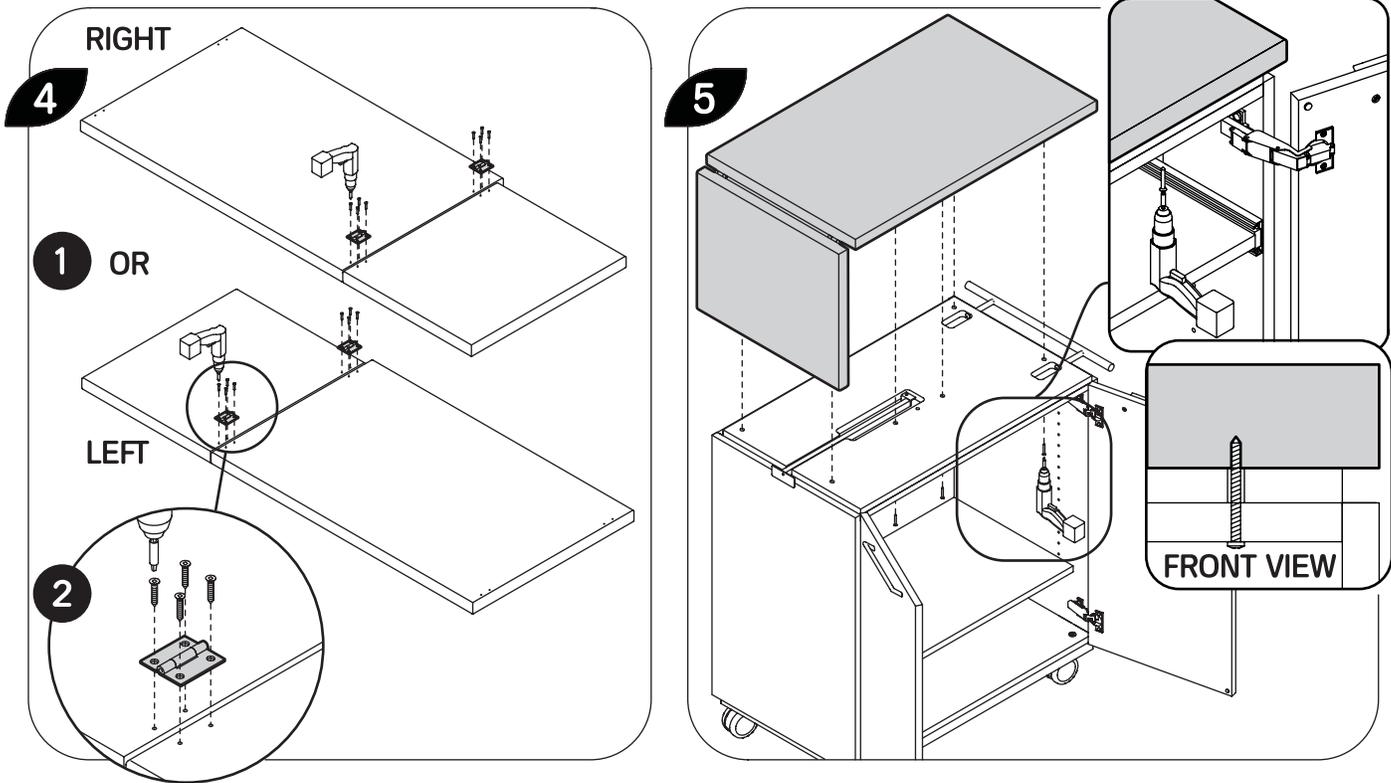


Section – **Work Tools**

No. **590**

Focus Wall Frame
Focus Wall Whiteboard
Focus Wall Tackboard

AFWF
AFWW
AFWT

Product

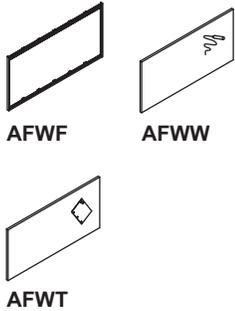


AFWF - Part / Product Identification and What's Included

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.	Kit No. / Assy. No.
A		Horizontal Extrusion	A23-72004 +XX	2 24" to 96" or 4 102" to 192" or 6 198" to 240"	
B		Linking Device	N80-72005	4 102" to 192" or 8 192" to 240"	X80-72001
C		Mounting Bracket	N80-72001	As per Order	
D		End Cover	A23-72001 +ZZ	2	
E		End Cover Junction	N80-72017	4	X80-72003



AFWW, AFWT - Part / Product Identification and What's Included

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.	Kit No. / Assy. No.
F	OR	Focus Wall Whiteboard or Focus Wall Tackboard	P06-72001 +ZZ+XX or N80-72016 +ZZ+XX	As per Order	
G		Linking Strip	A23-72005 +ZZ	As per Order	
H		Top Panel Clip (translucent)	B02-72005	As per Order	X80-72006 or X80-72007 or X80-72008 or X80-72009
I		Bottom Panel Clip (black)	B02-72004	As per Order	
J		Lateral Pressure Clip (gray)	B02-72006	As per Order	




Application

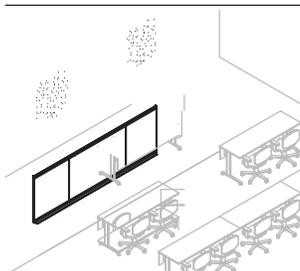


TOOLS REQUIRED: 2mm, 4mm, and 3/32" Hexagonal Socket Keys, Level, Pen, Stud Sensor, Power Driver, Rubber Hammer and Measuring Tape

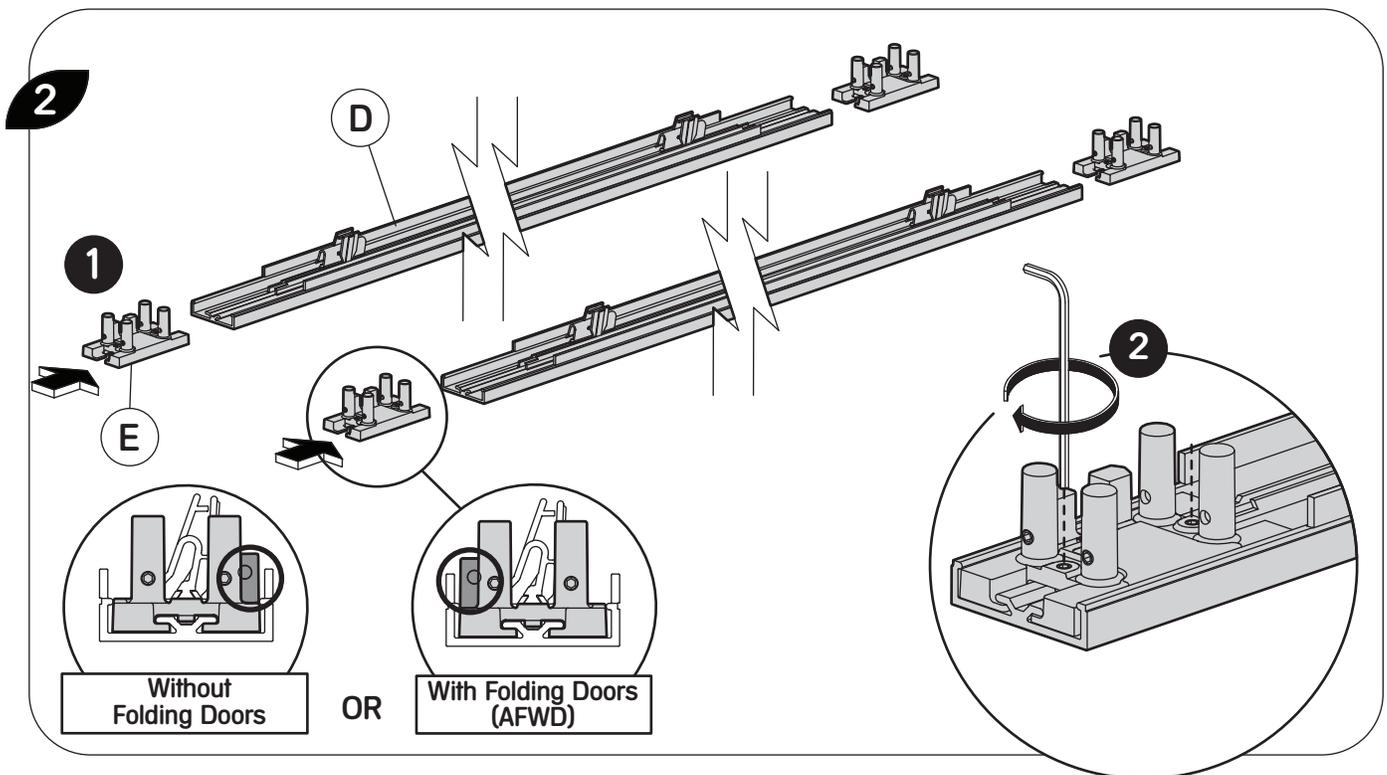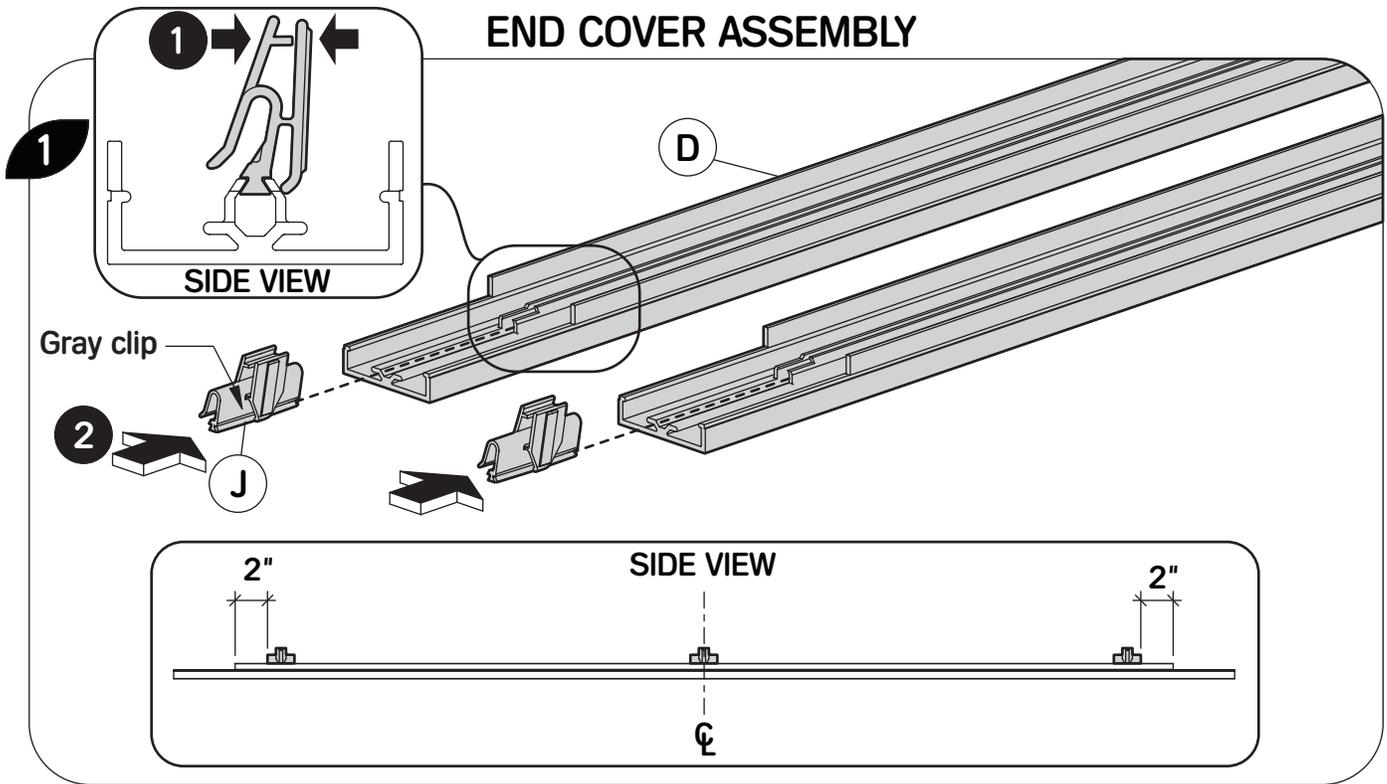

HORIZONTAL EXTRUSION ASSEMBLY

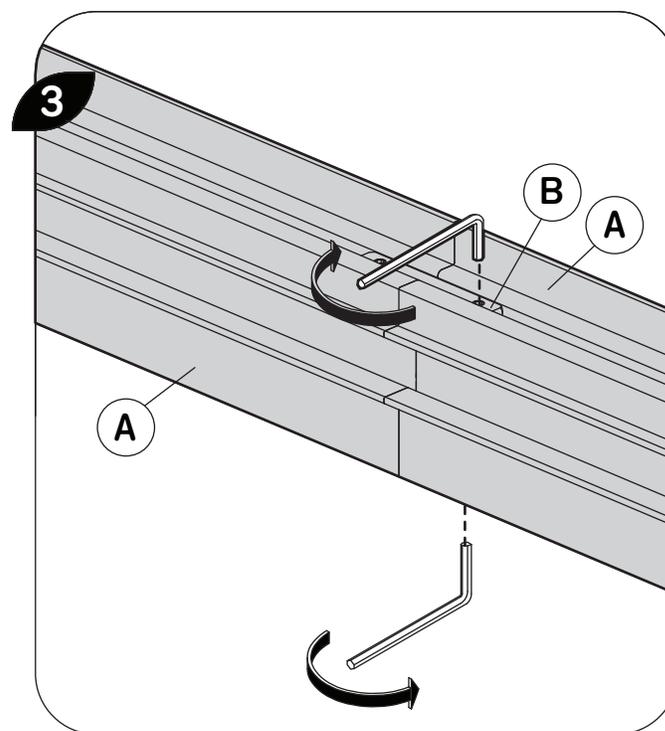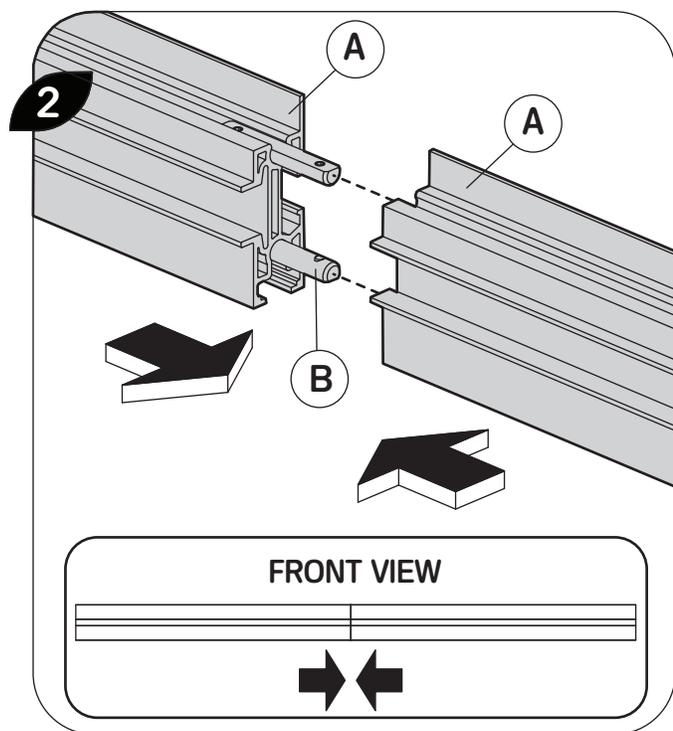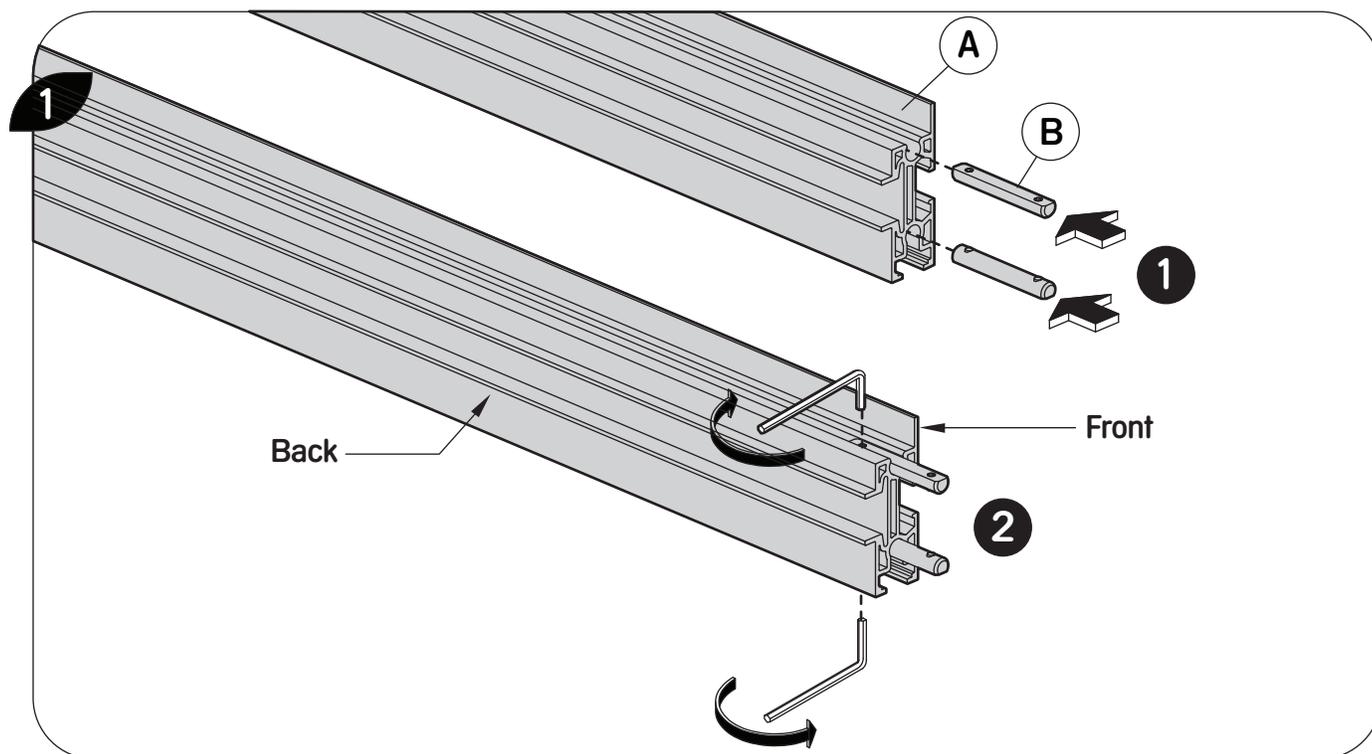


LINKING STRIP ASSEMBLY

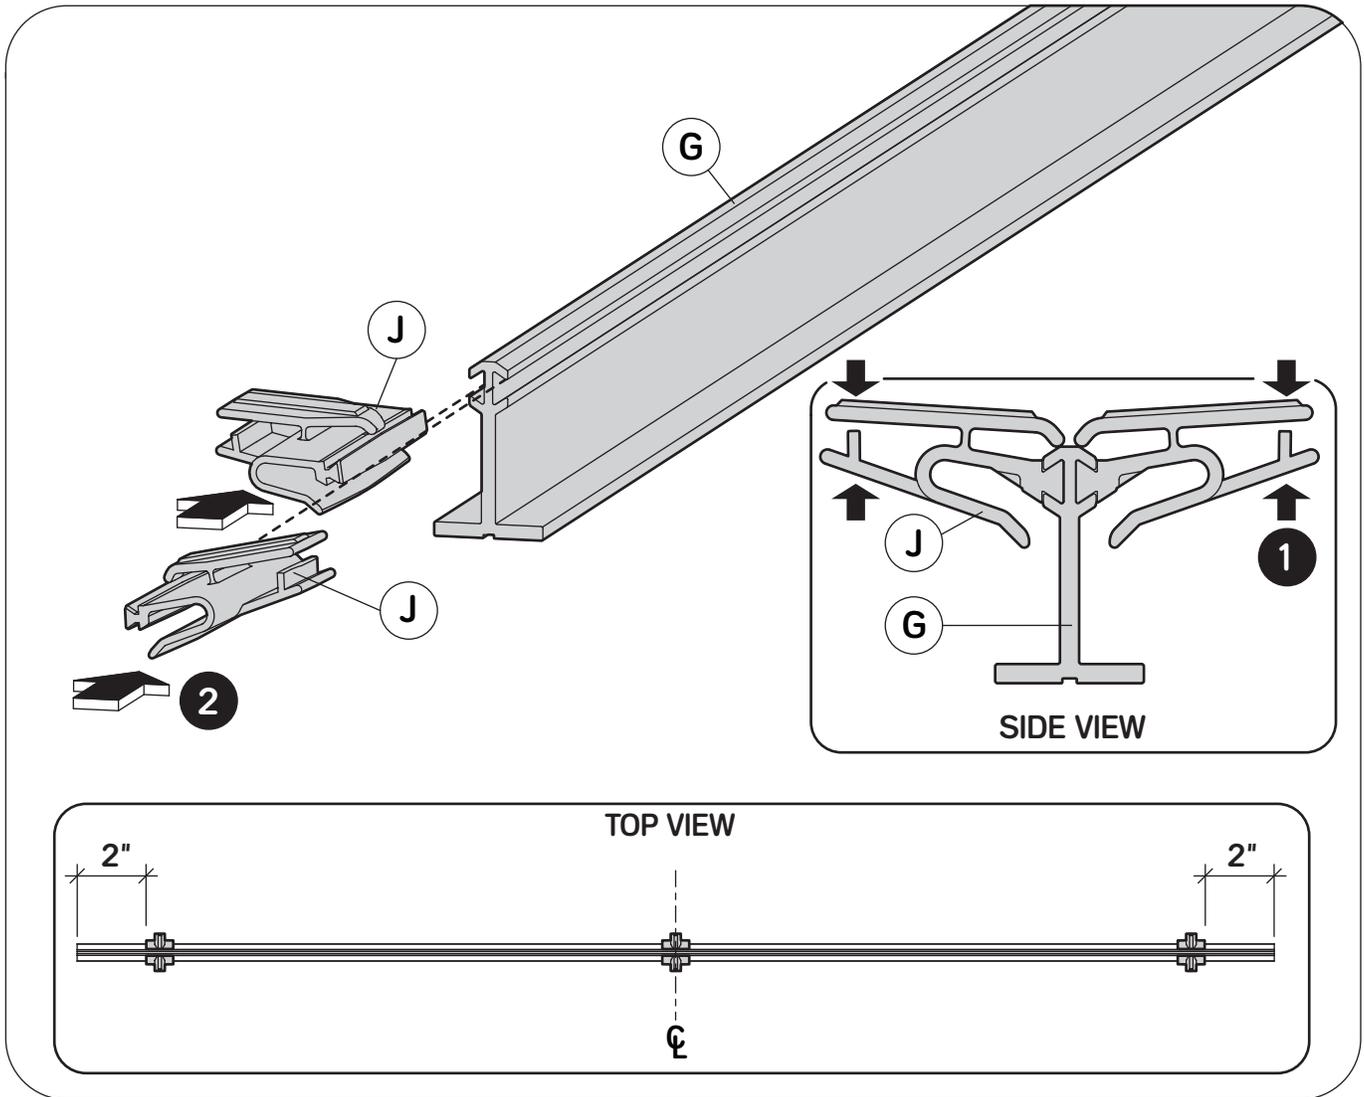


FOCUS WALL FRAME INSTALLATION

TRACING GUIDE LINES AND MARKING WALL BRACKET LOCATIONS

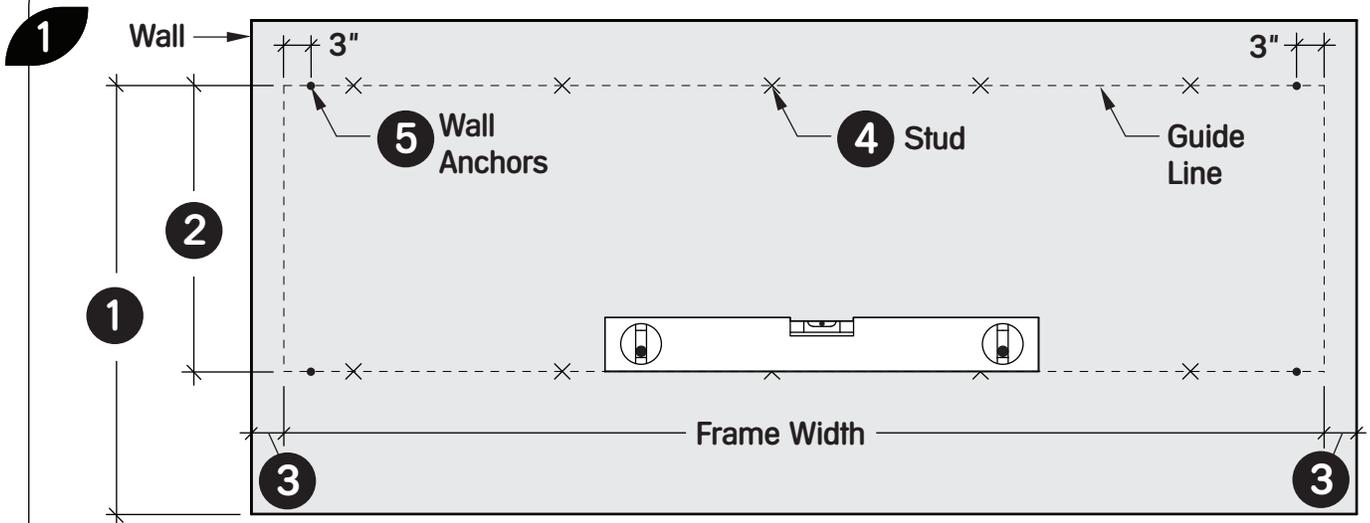


1 Installation Height


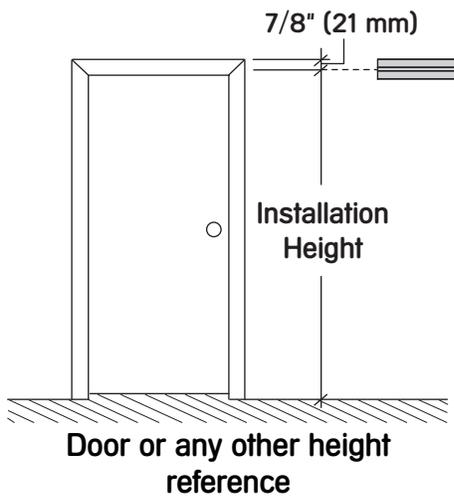


2 Frame Height

AFWF42_ = 39" (990.5 mm)
AFWF48_ = 45" (1142.9 mm)



3 Drywall Restrictions

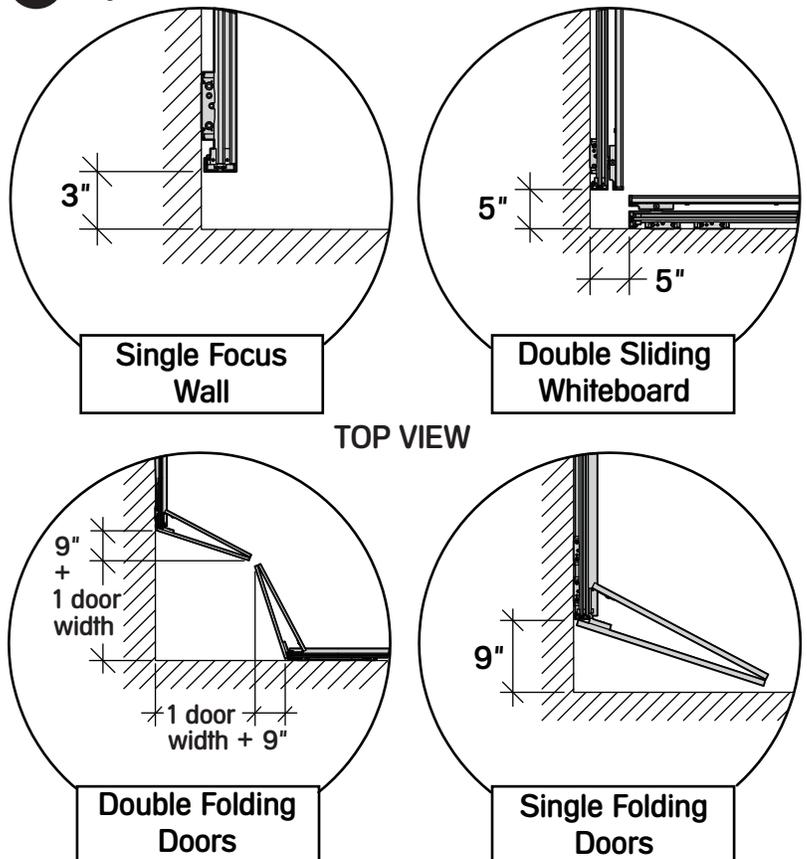

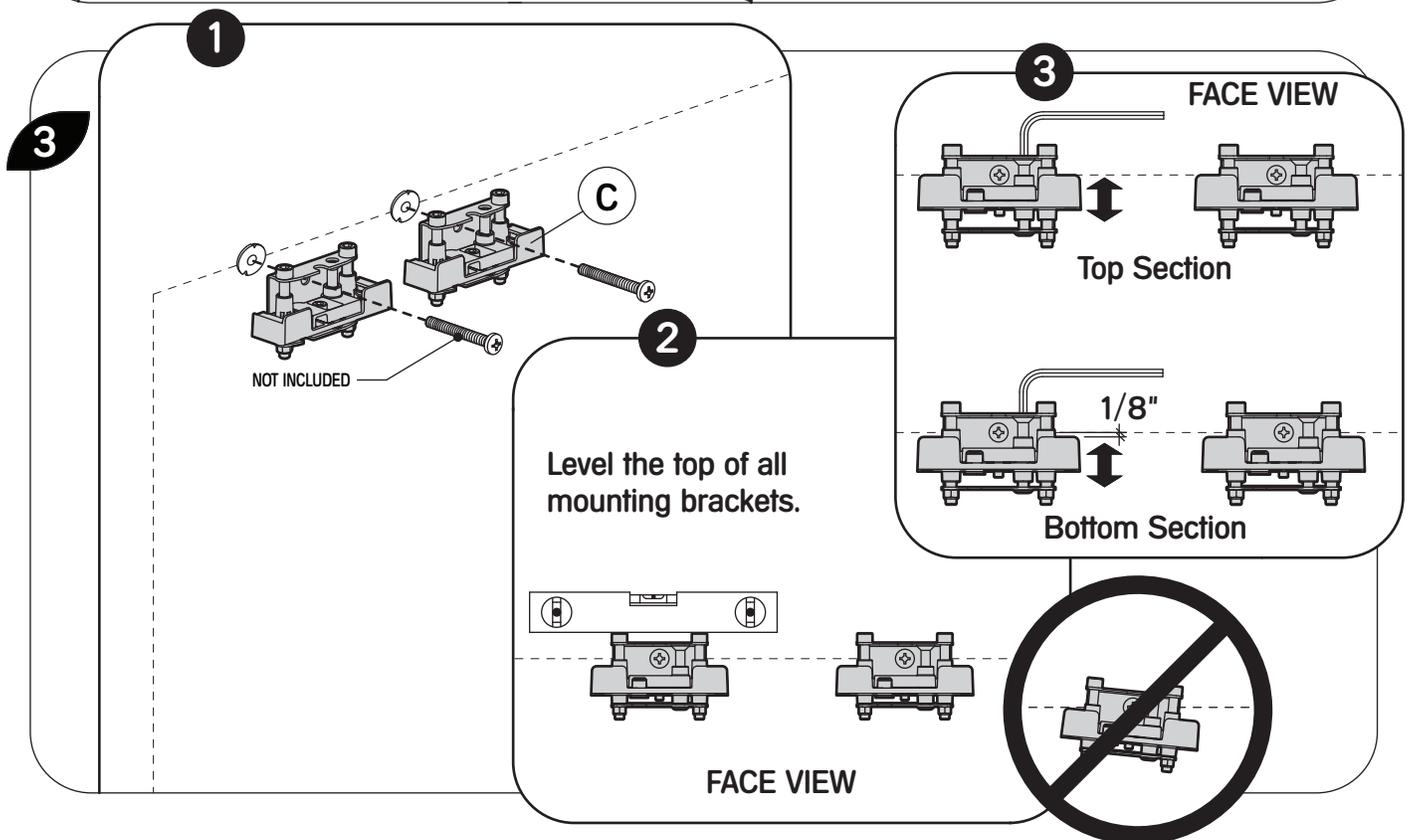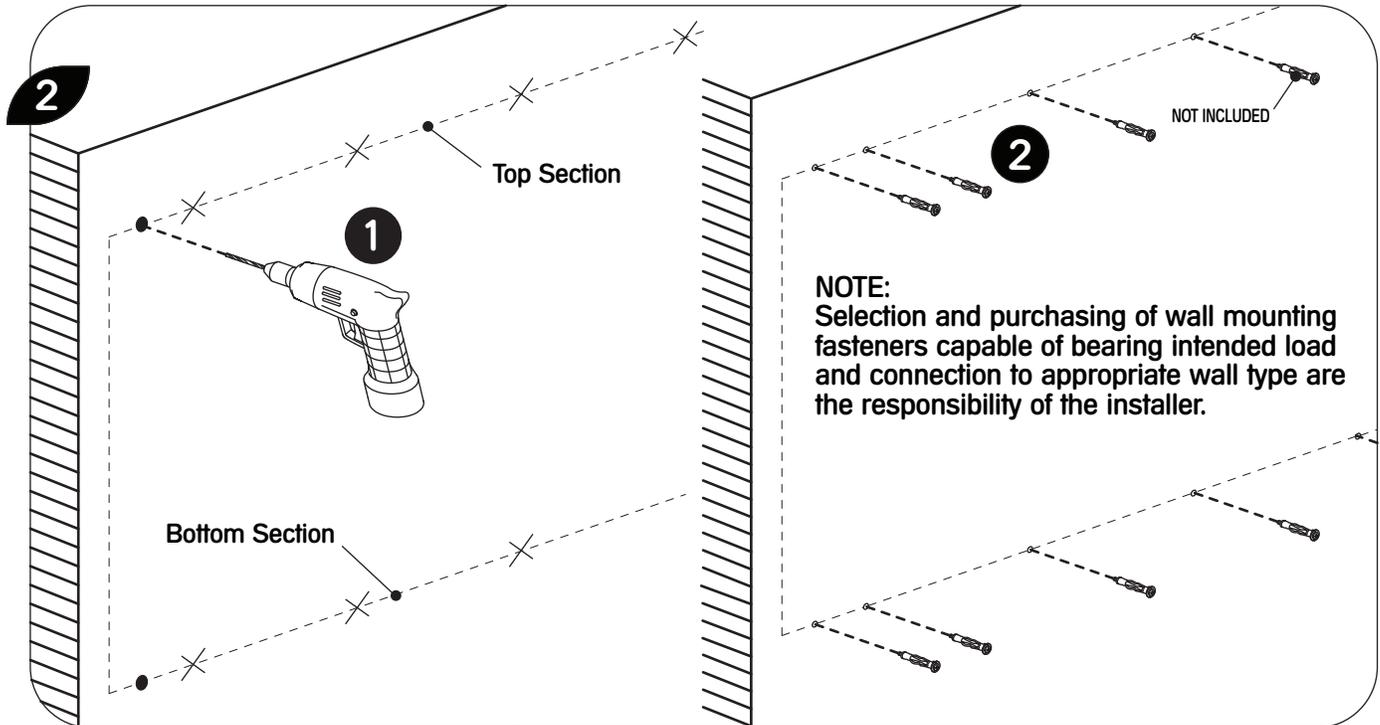


HORIZONTAL EXTRUSION INSTALLATION - TOP SECTION



4

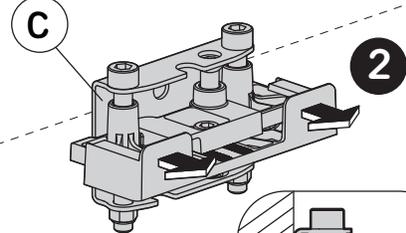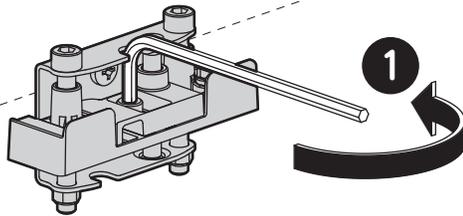

NOTE:
Depth adjustment should not be blocked. Free as needed and position all mounting brackets in full extension.


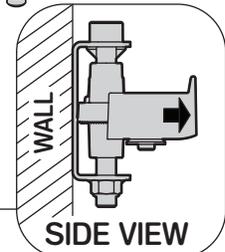


5

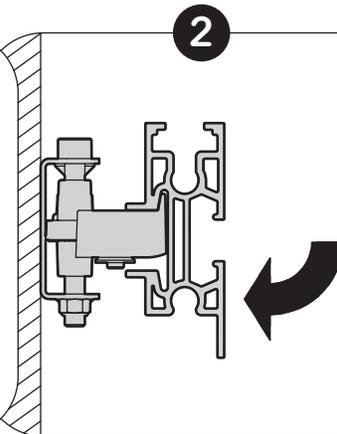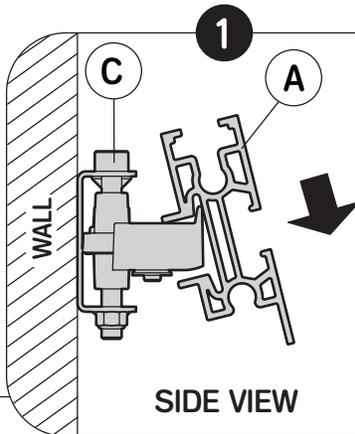


SIDE VIEW

6


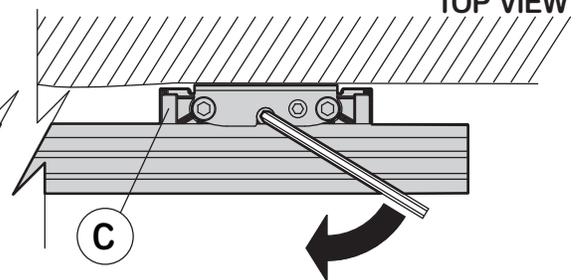
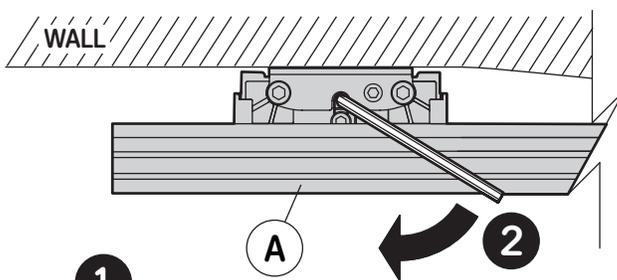



TOP VIEW

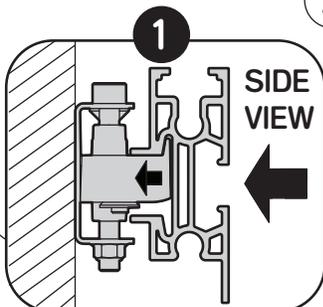



SIDE VIEW



NOTE:
Block depth adjustment of the mounting brackets **at each end only**. Keep horizontal extrusion straight.

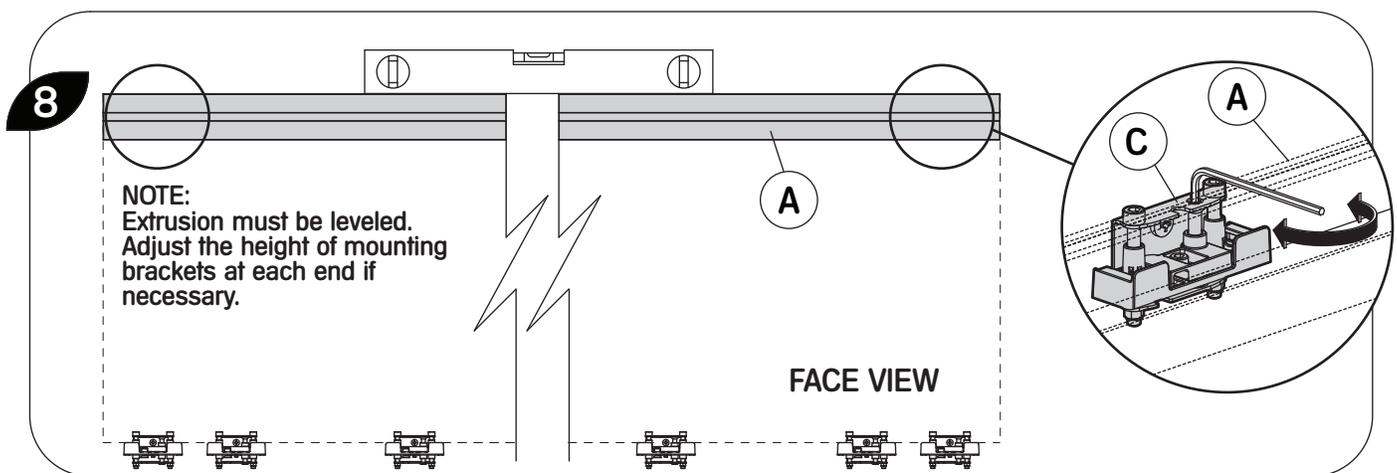
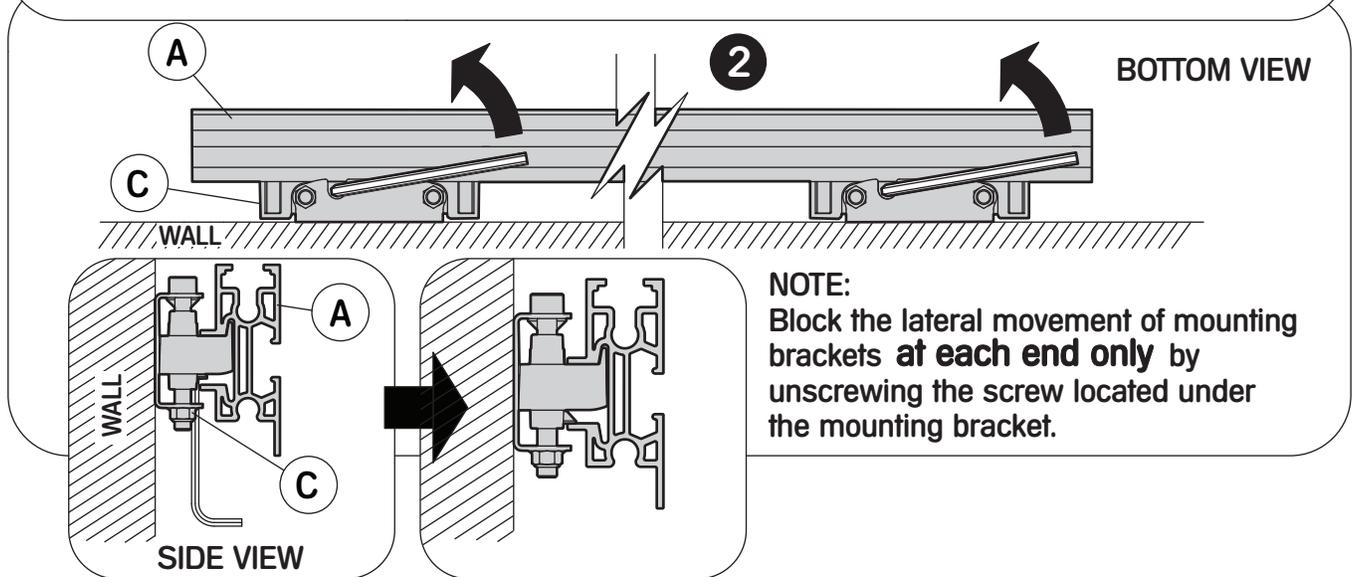
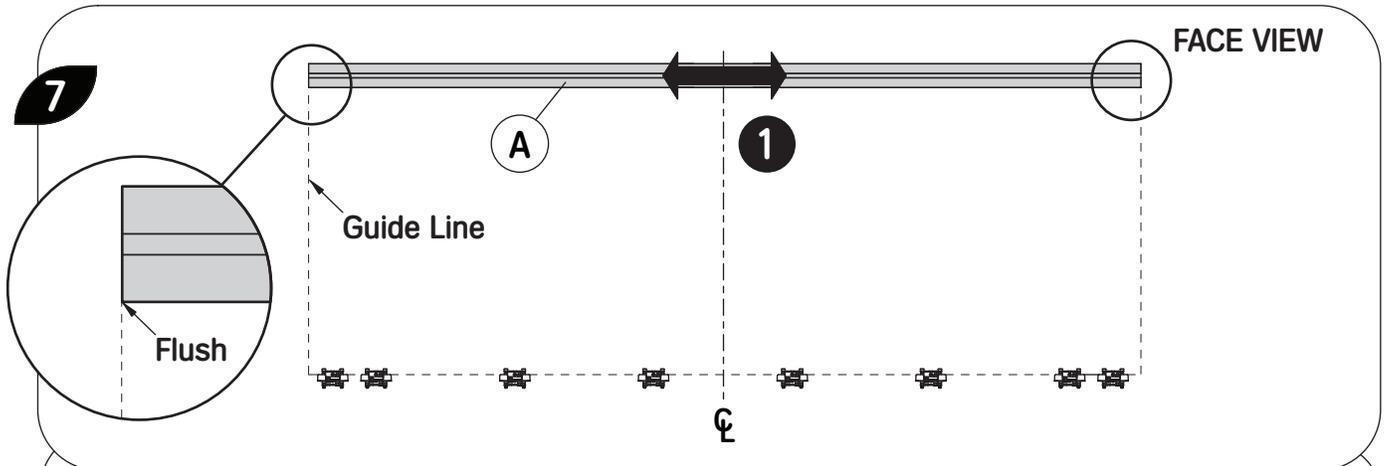



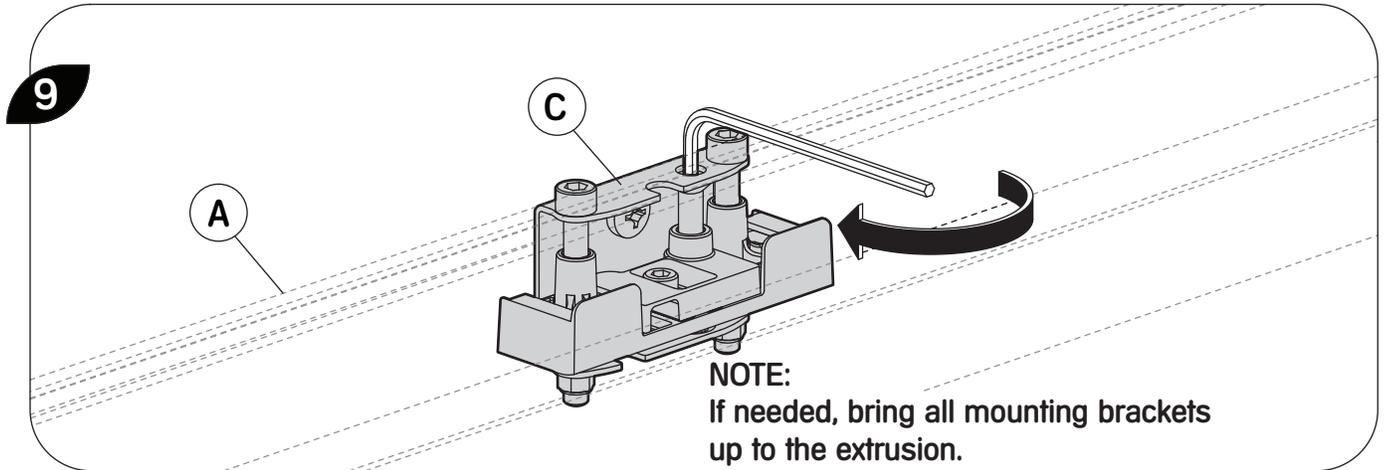




HORIZONTAL EXTRUSION INSTALLATION - BOTTOM SECTION

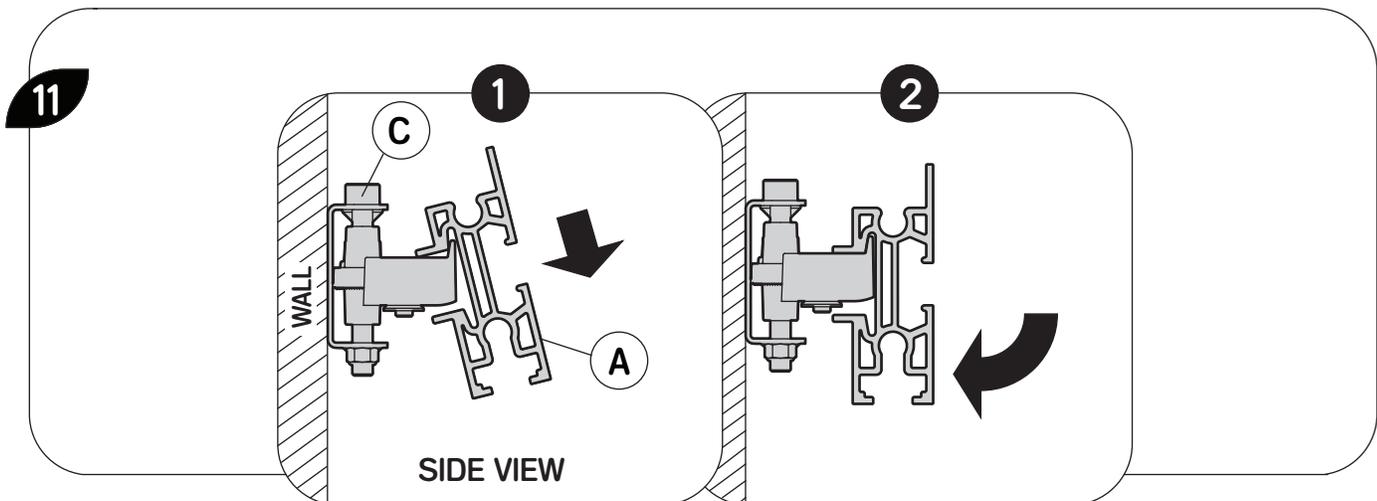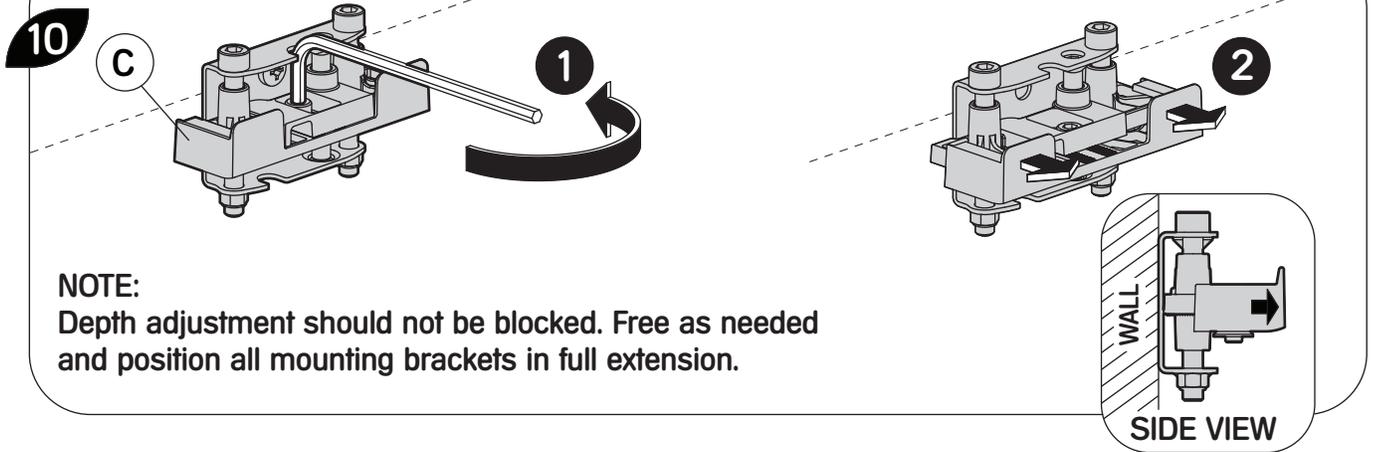

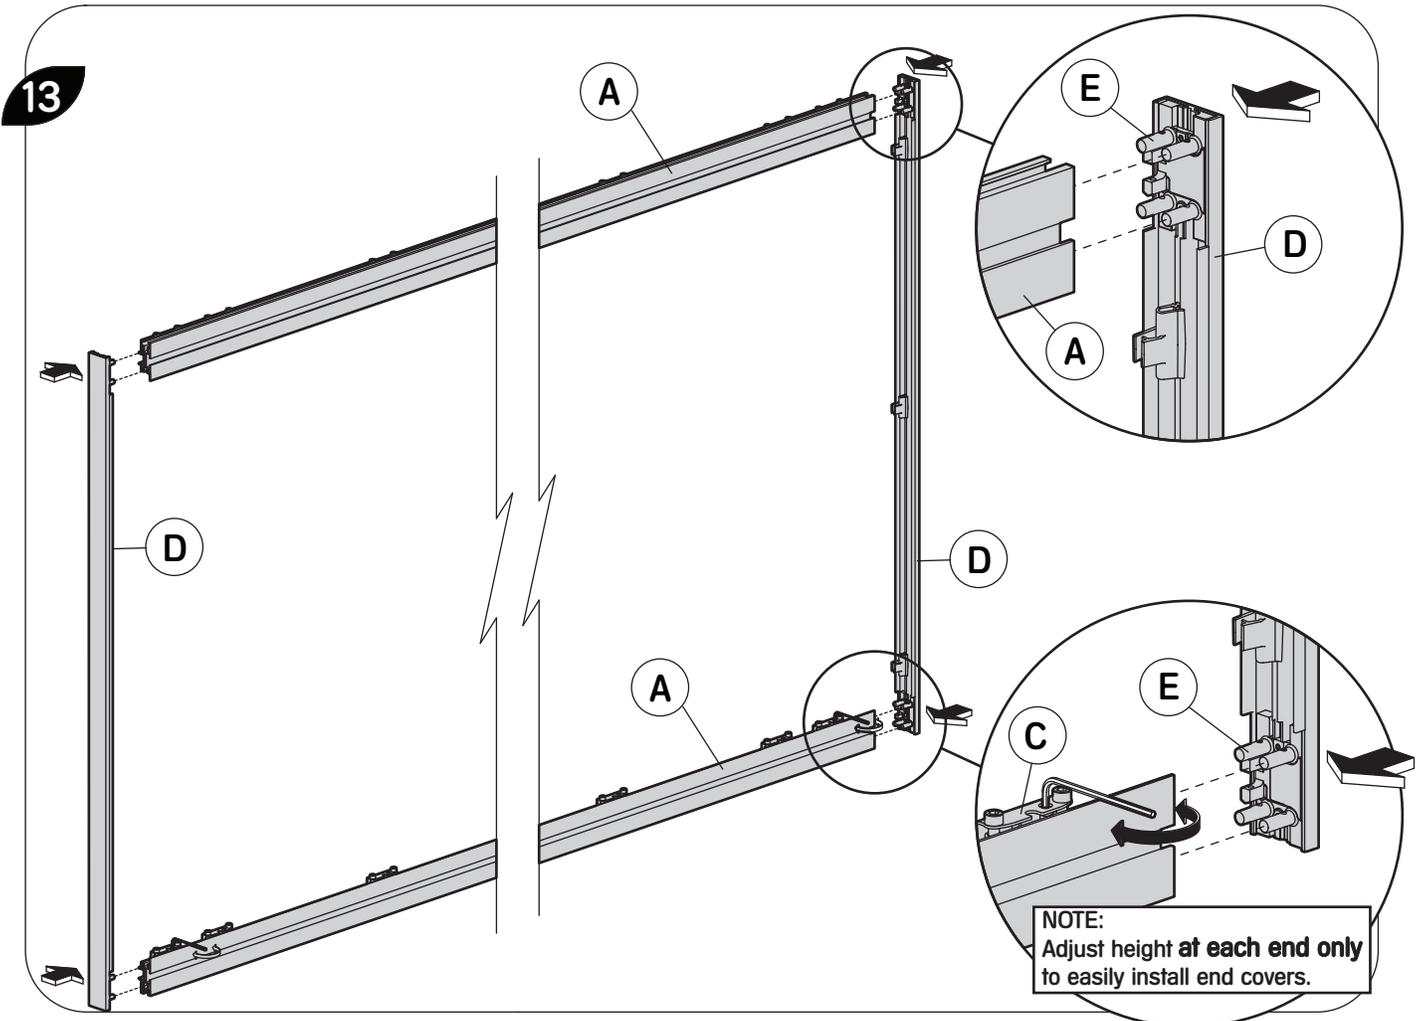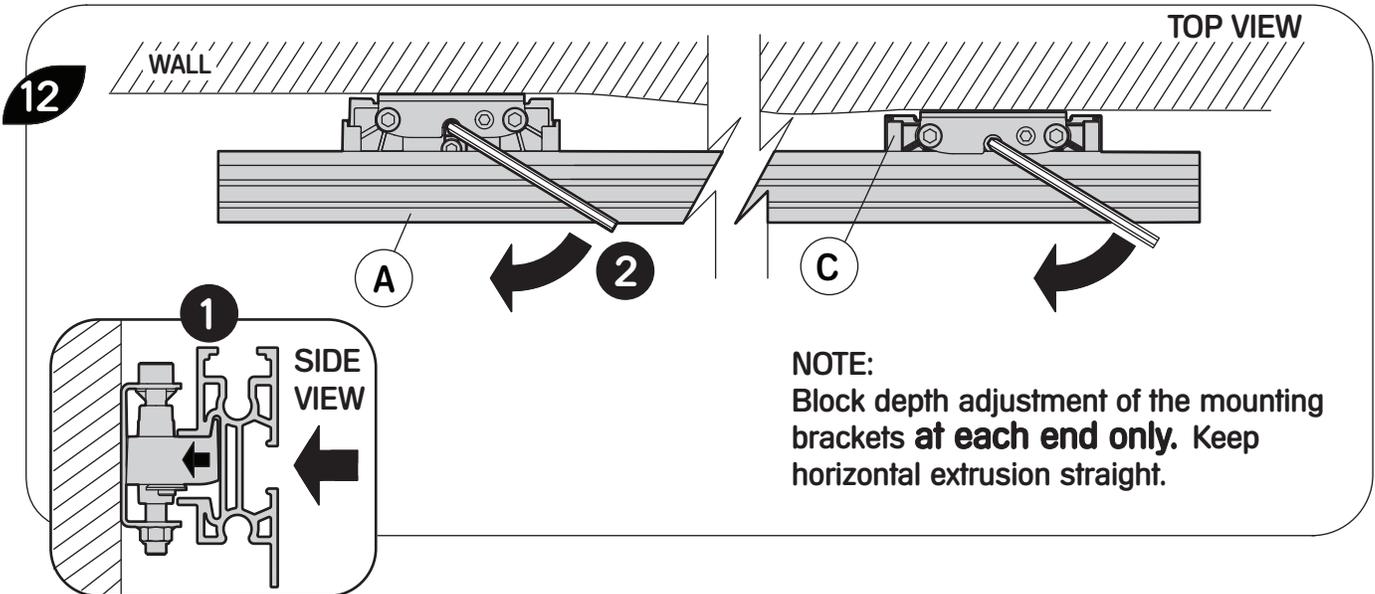

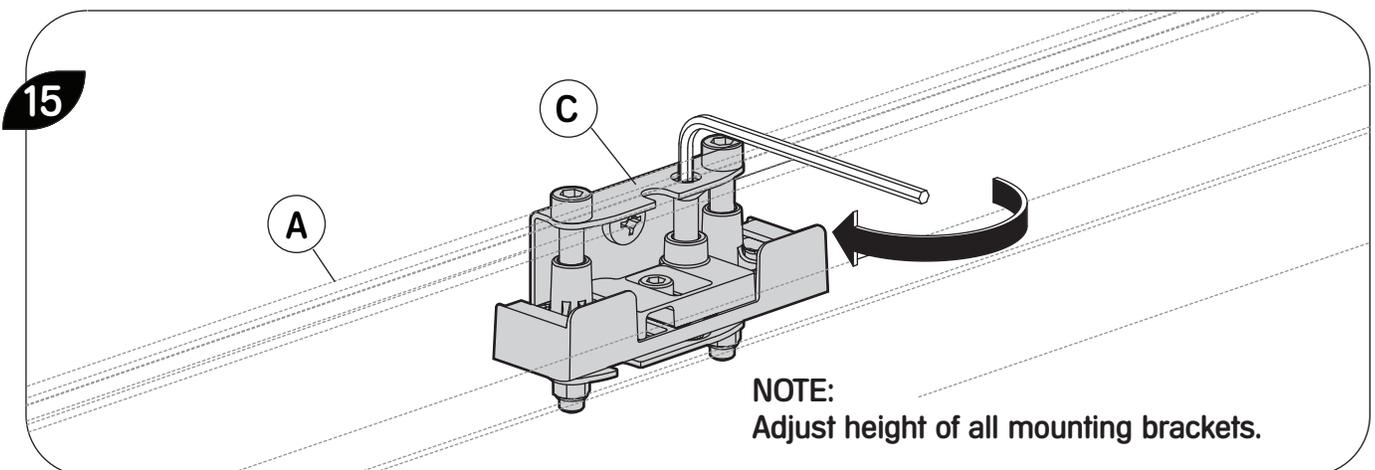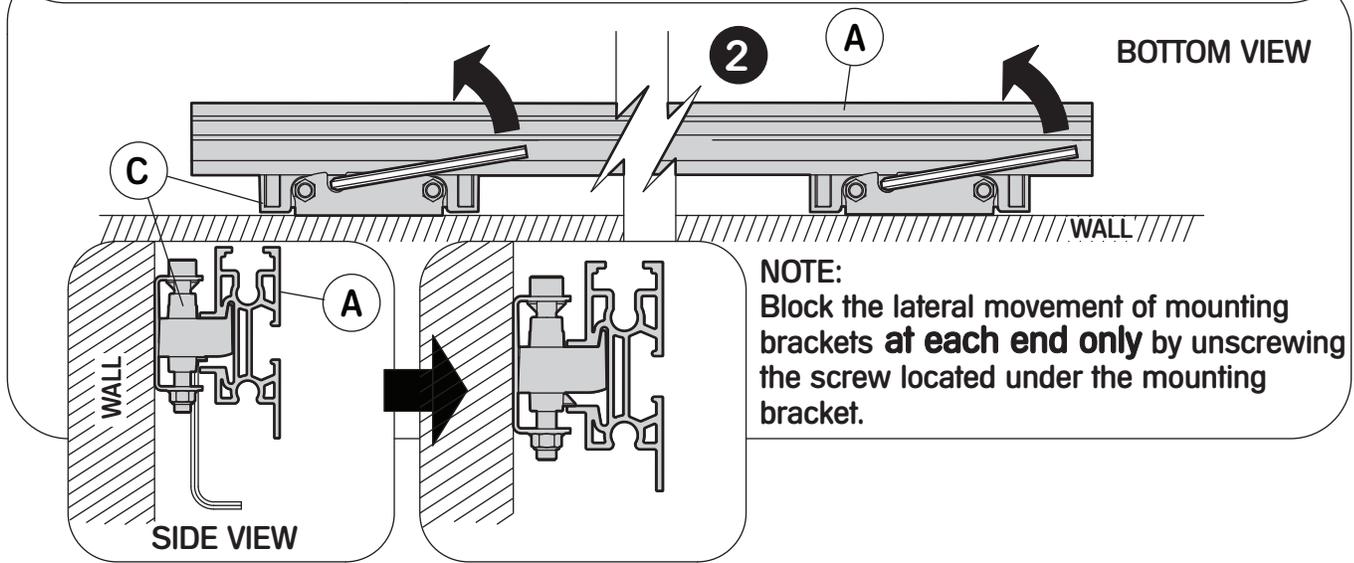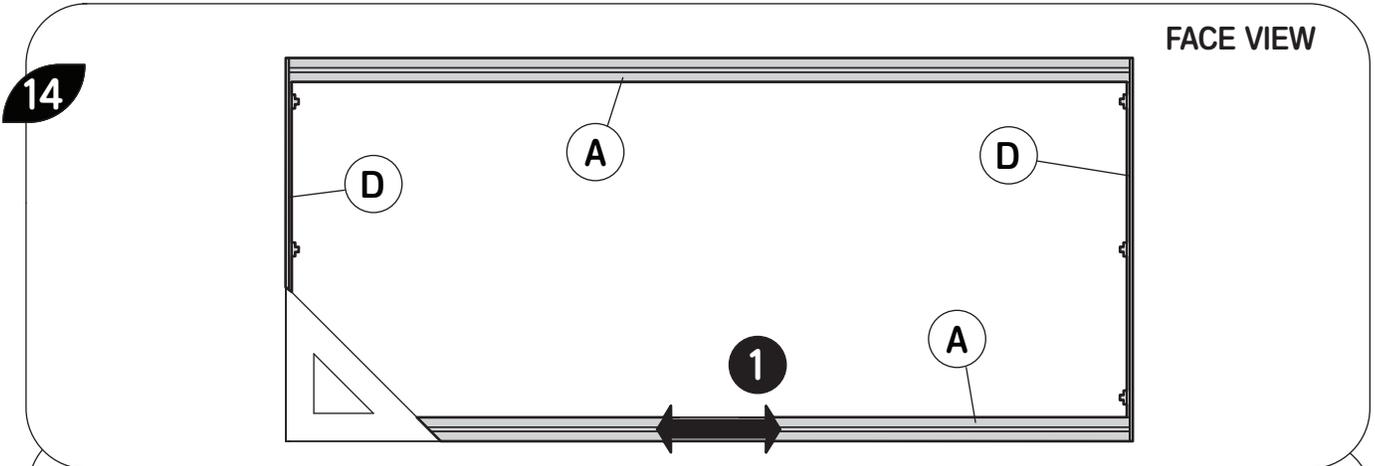


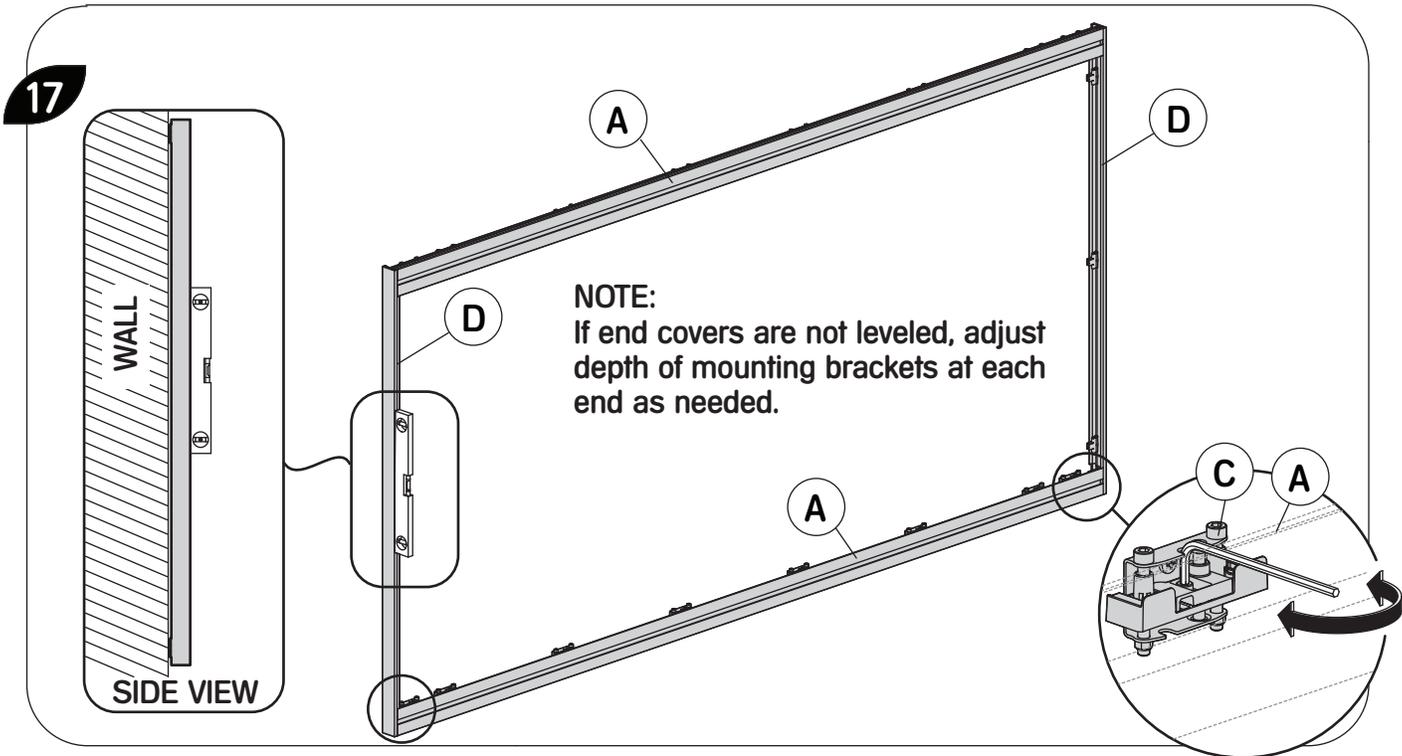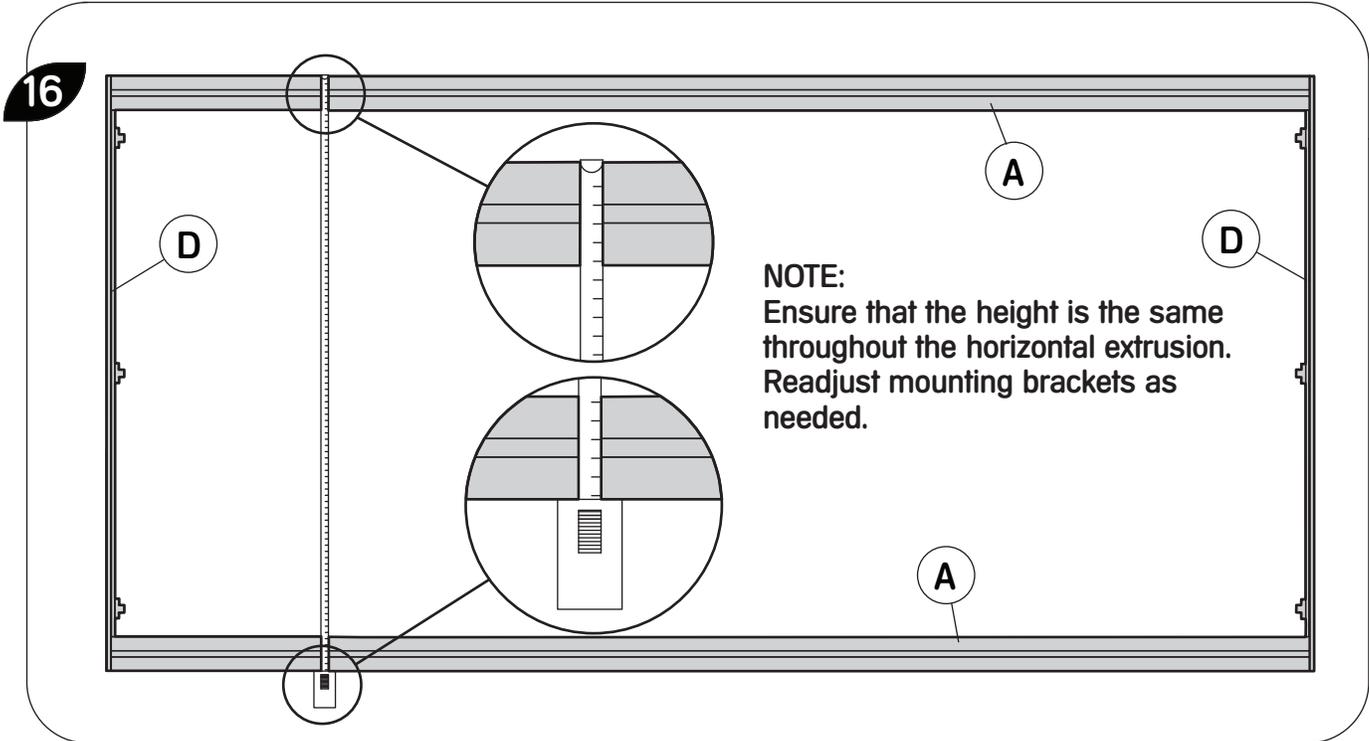

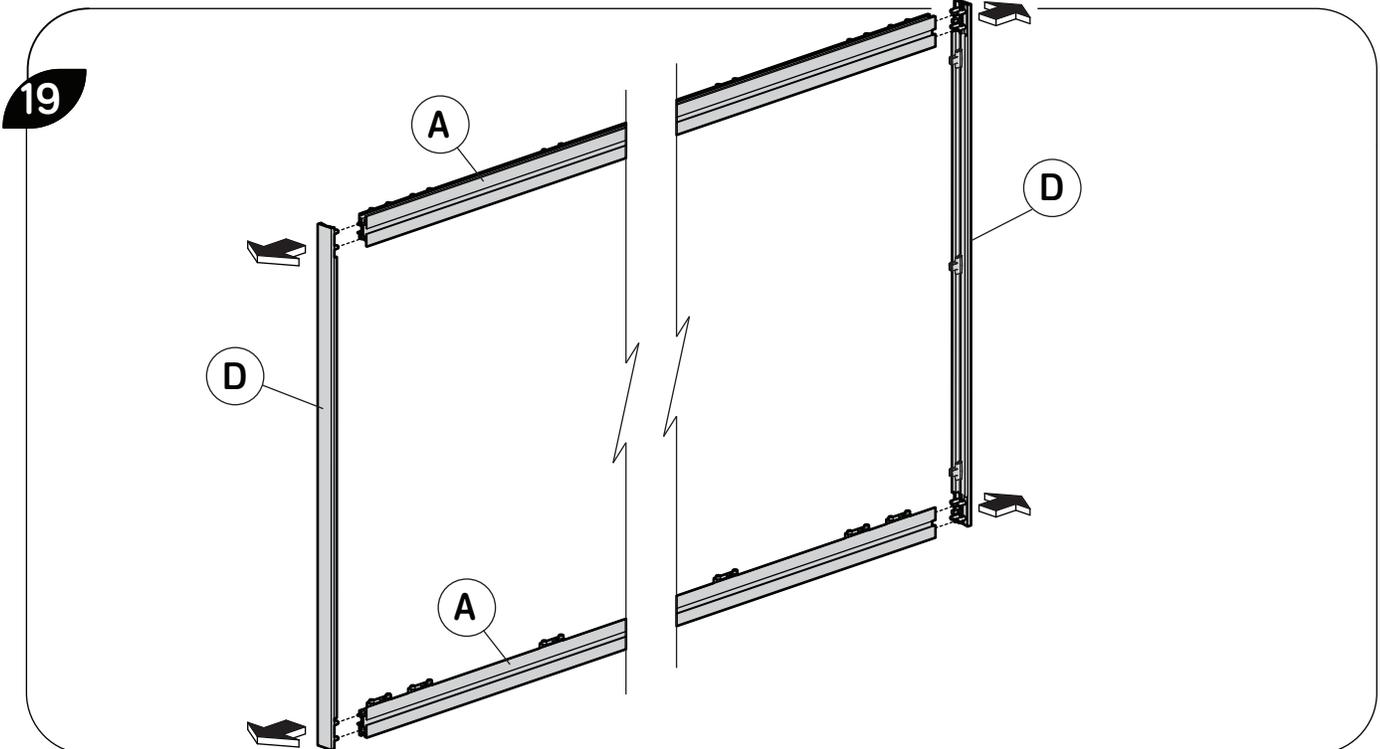
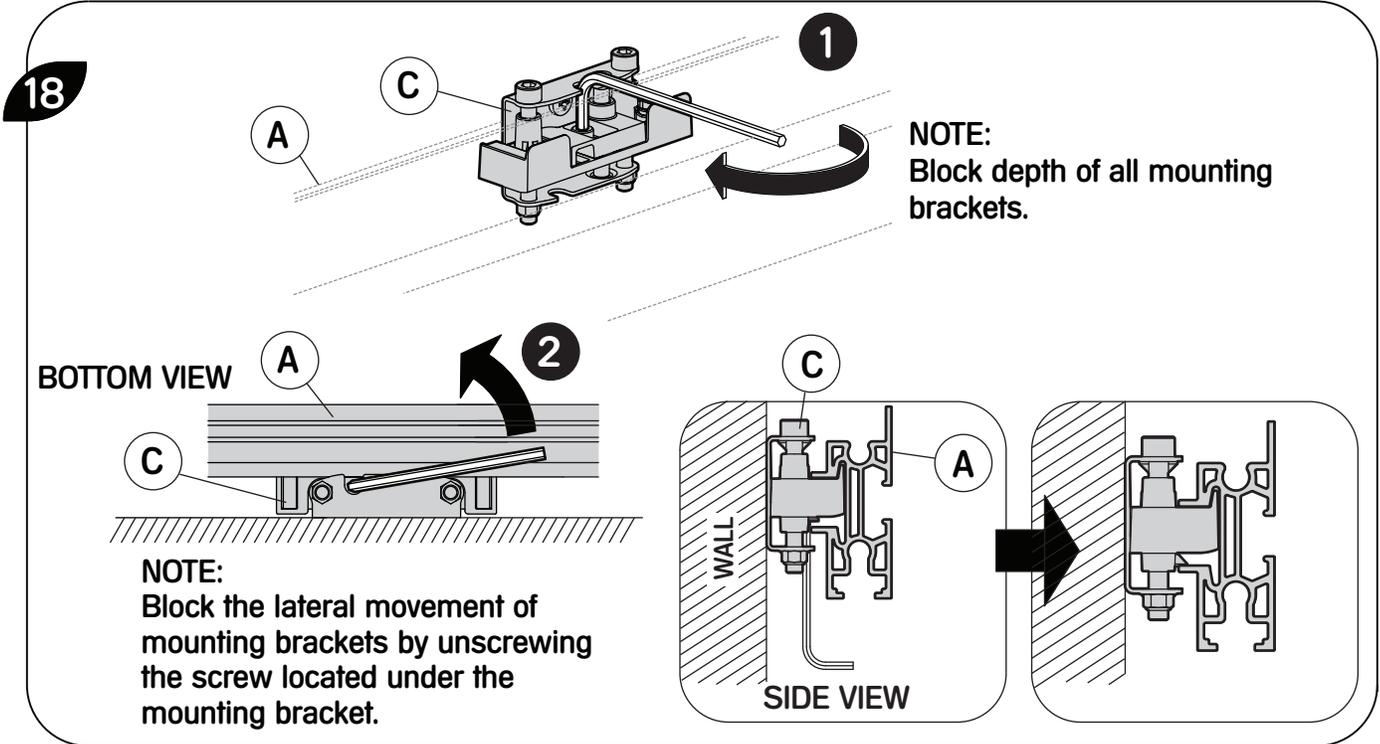



FOCUS WALL WHITEBOARD AND TACKBOARD INSTALLATION



TOP SECTION


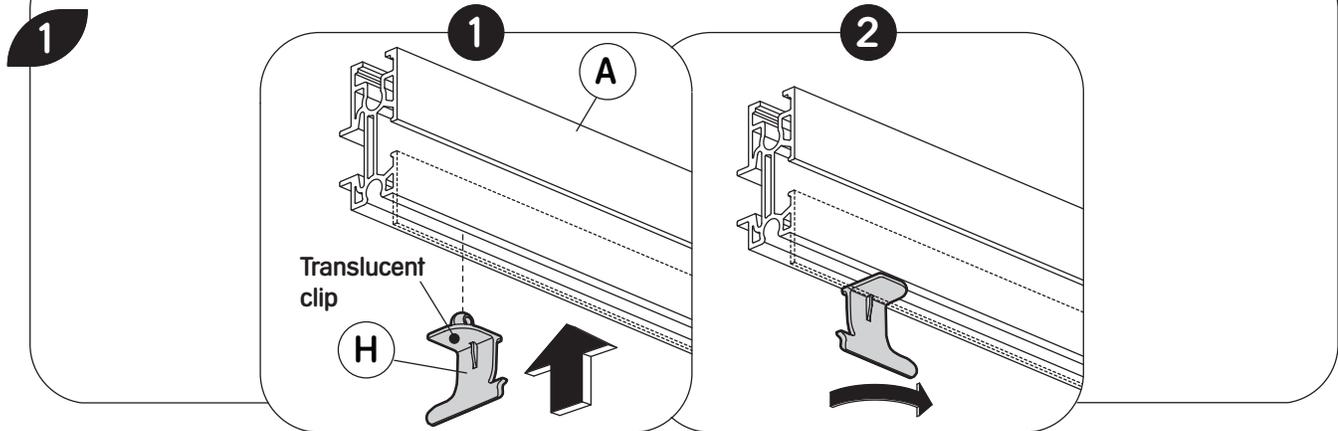


BOTTOM SECTION

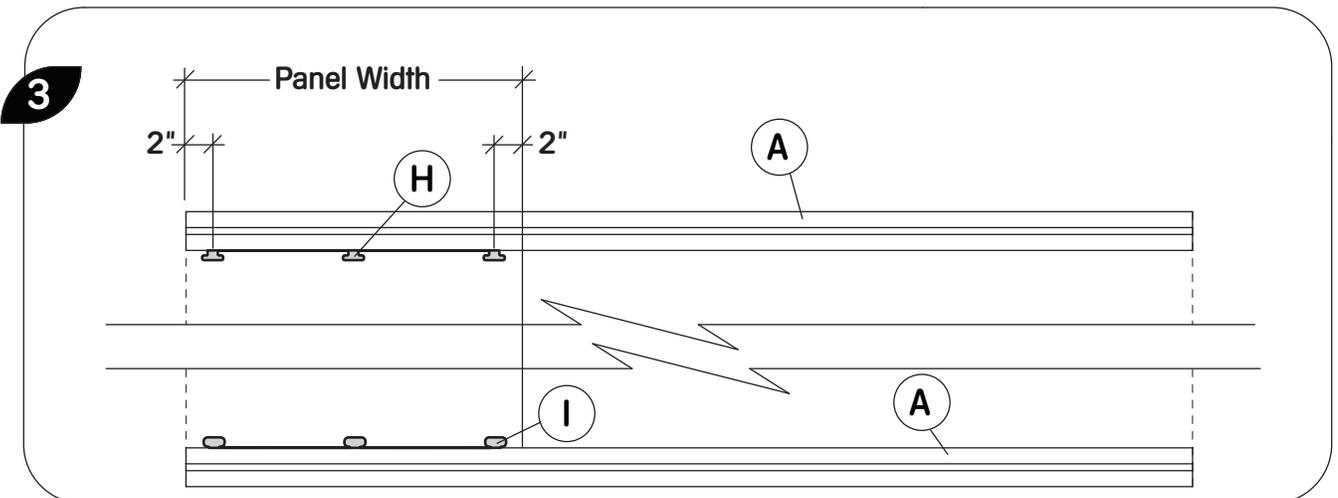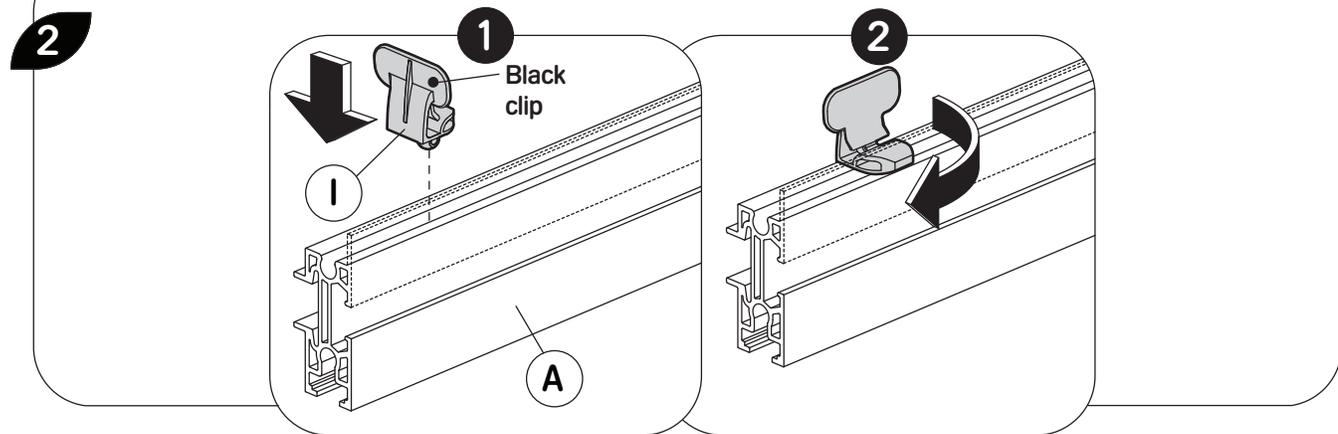


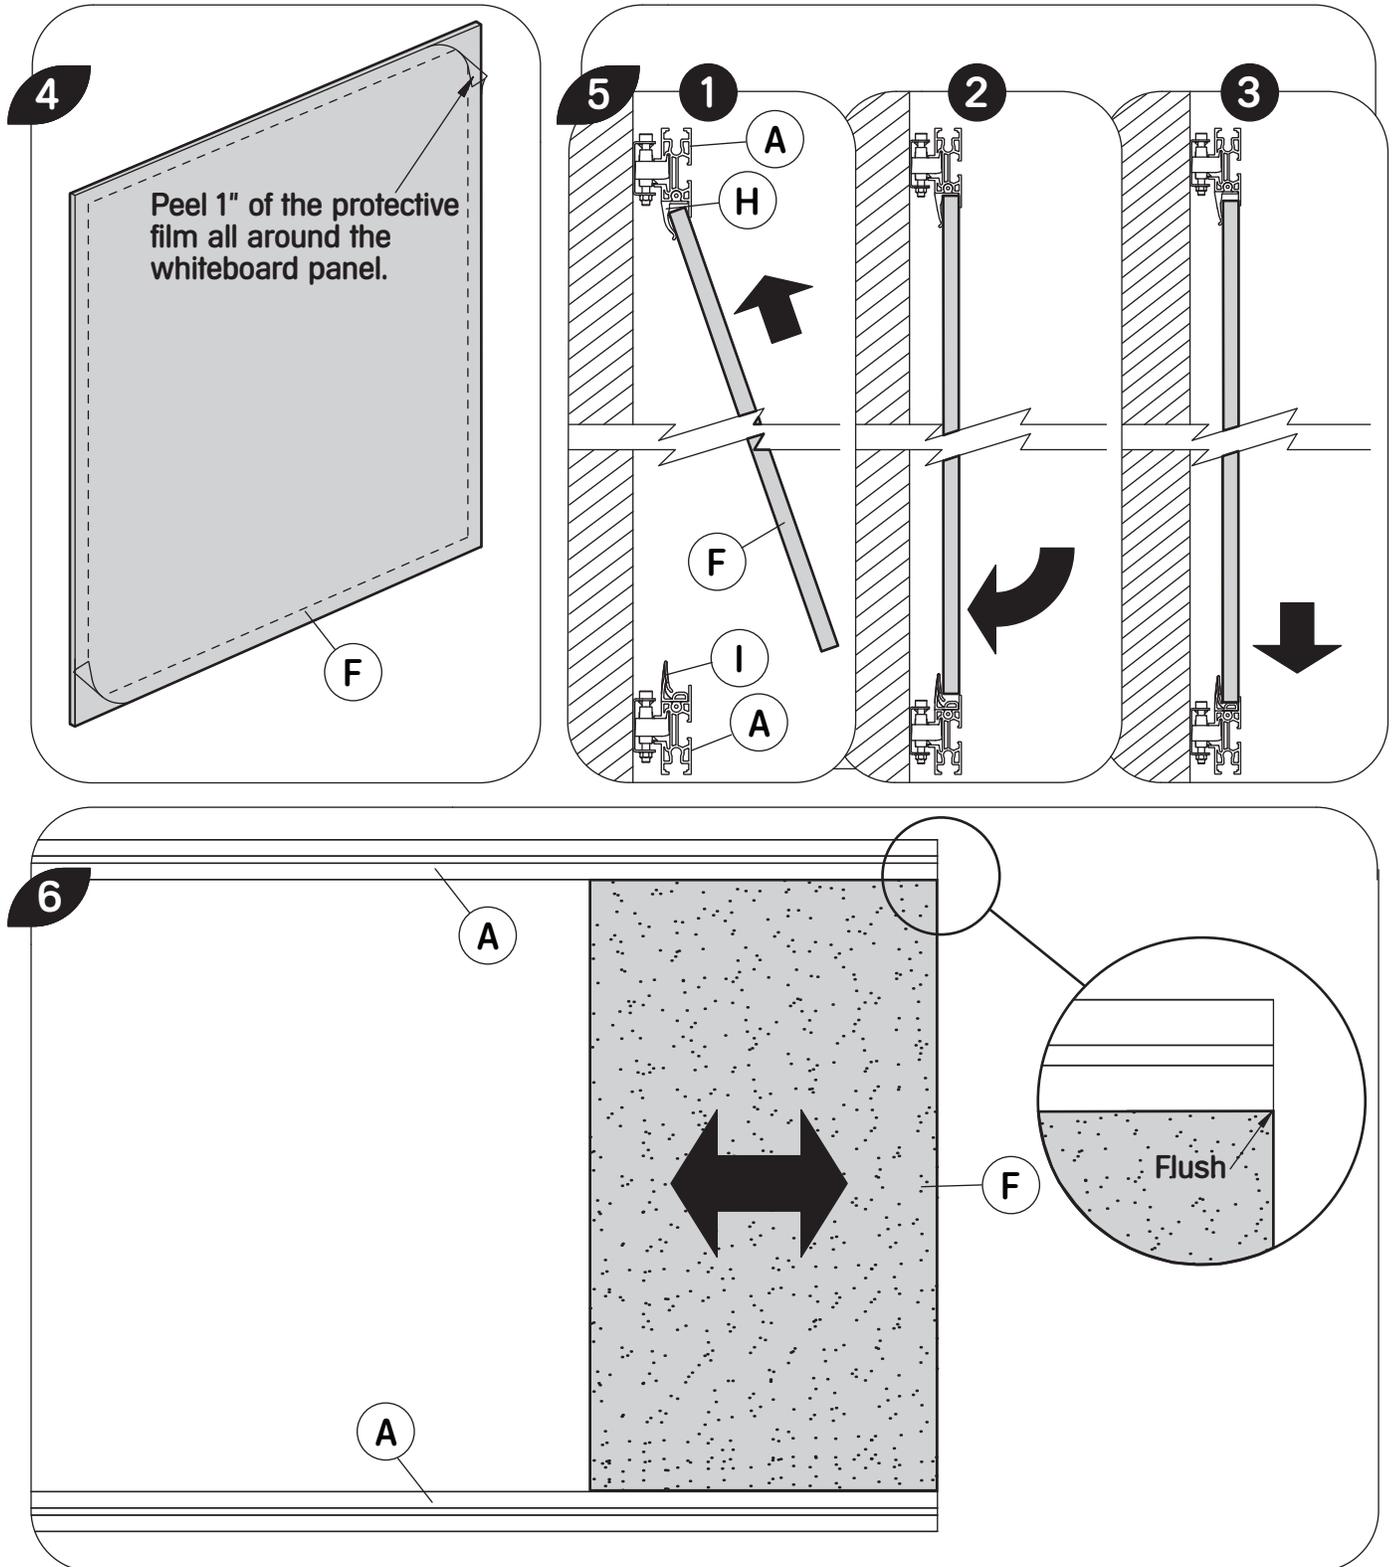

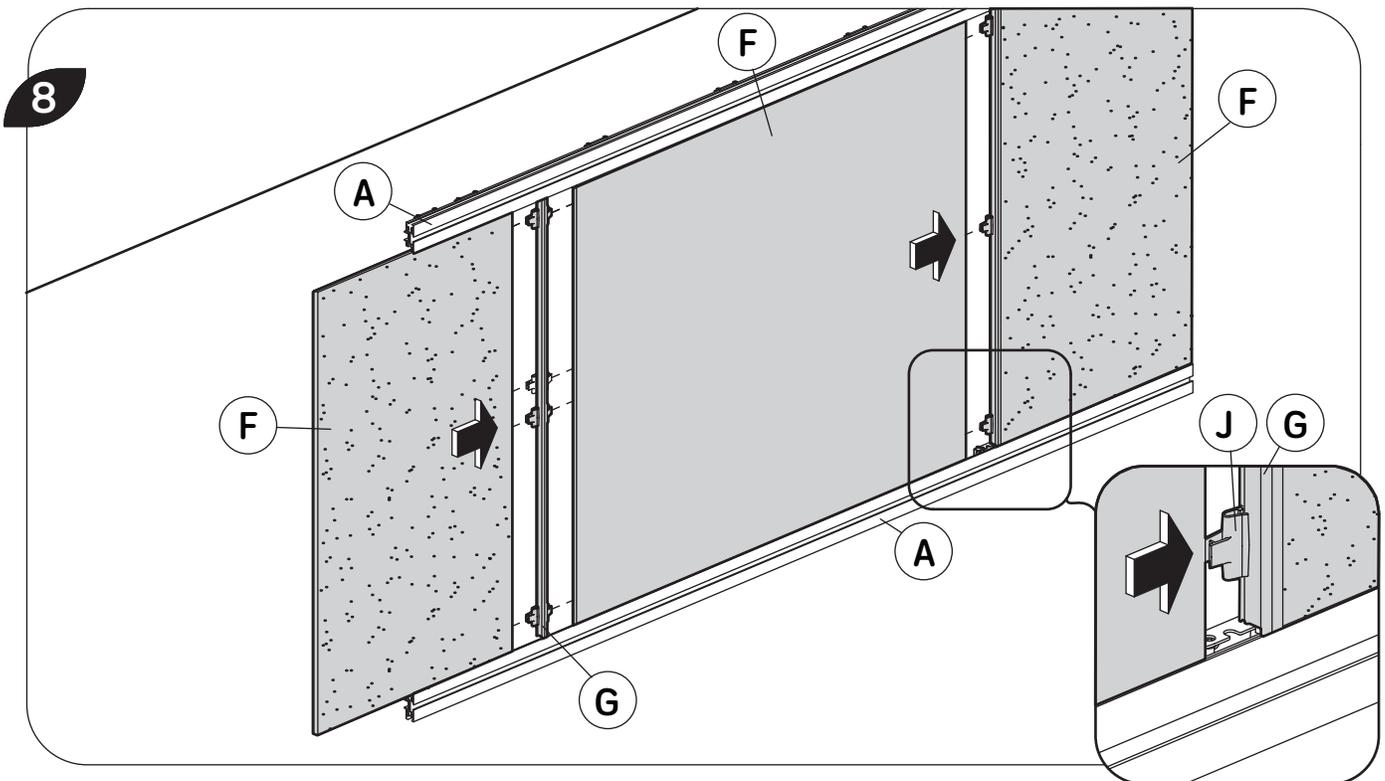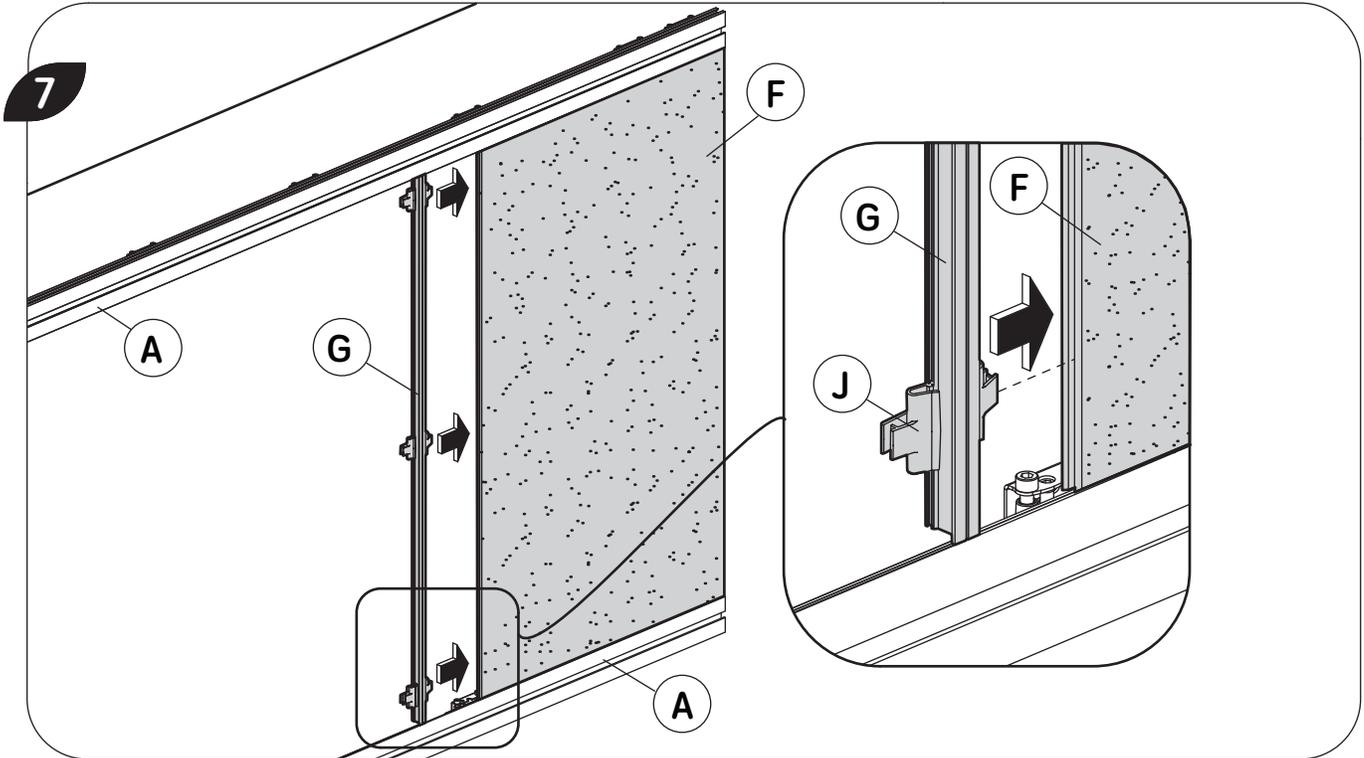

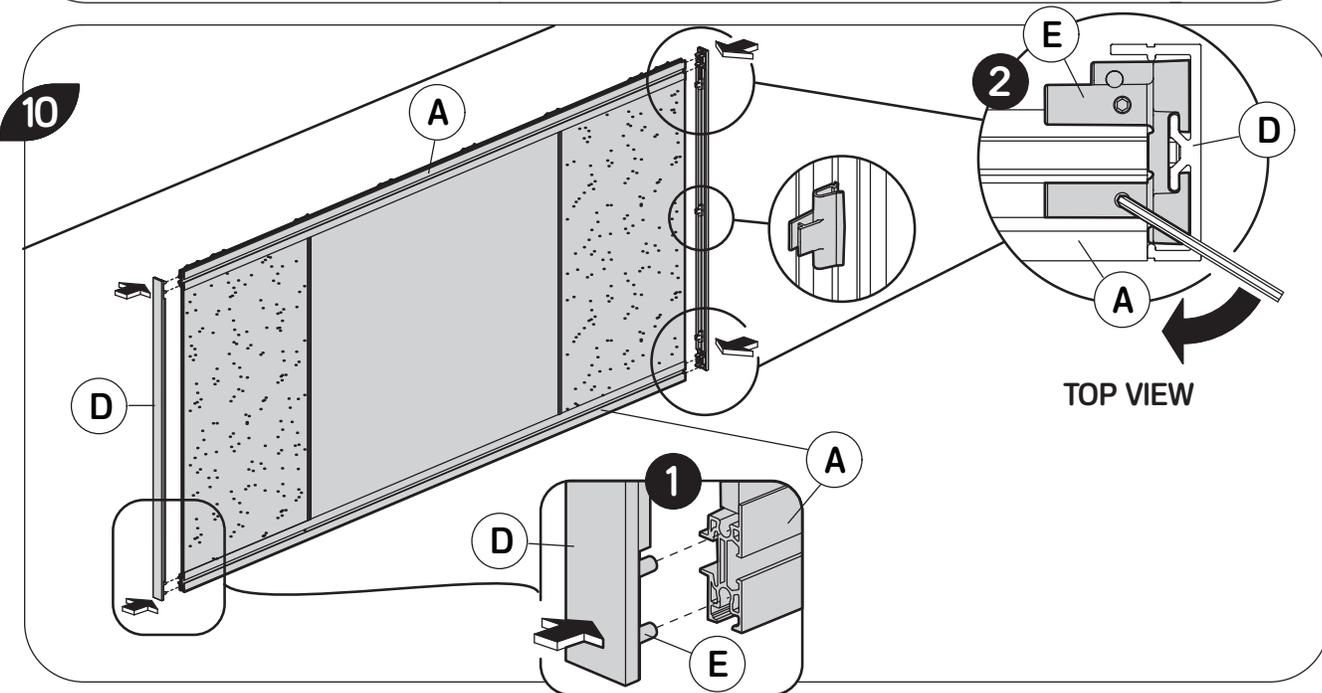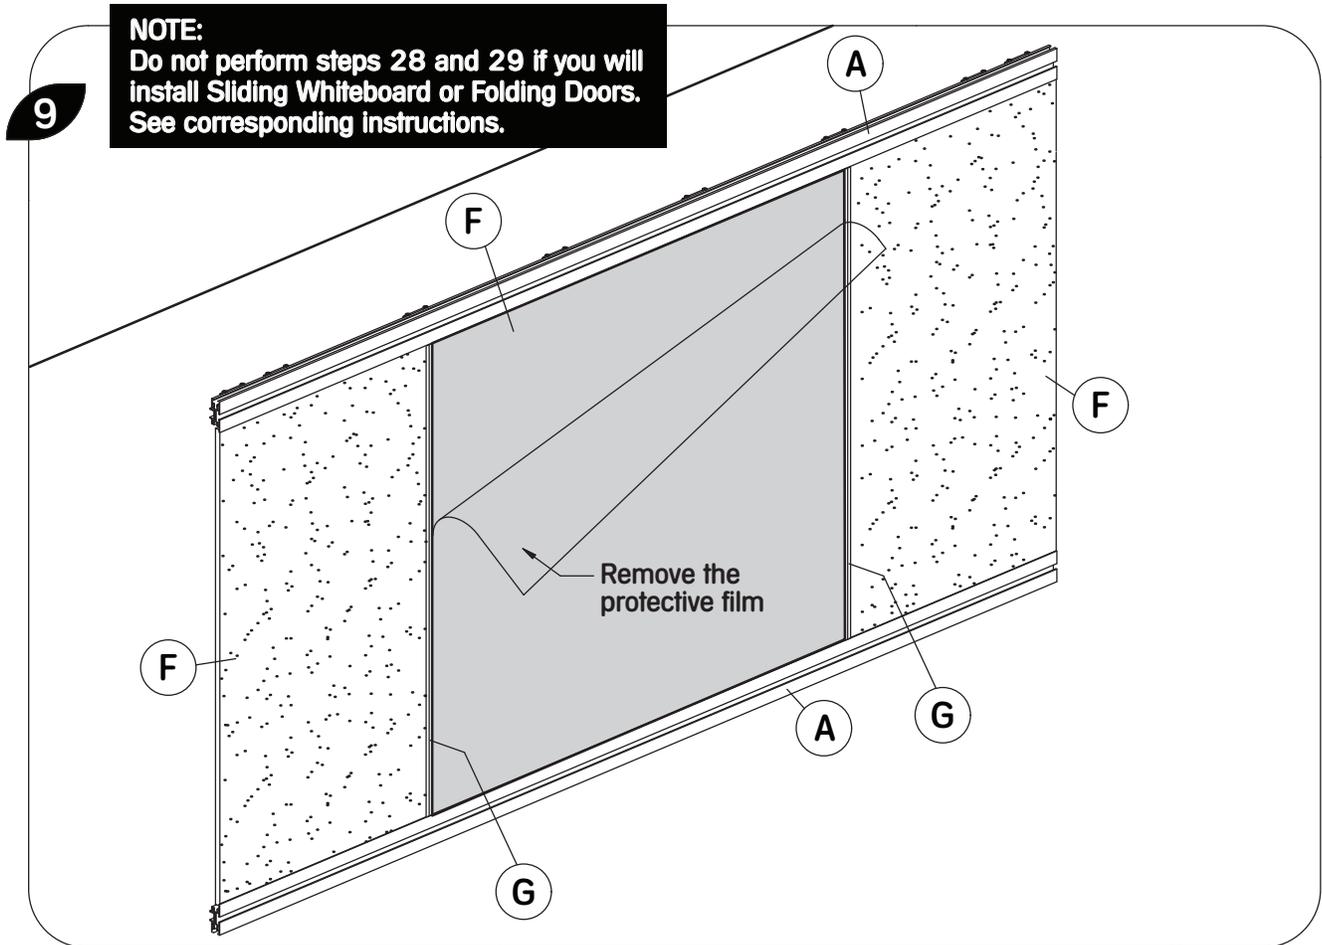

Product

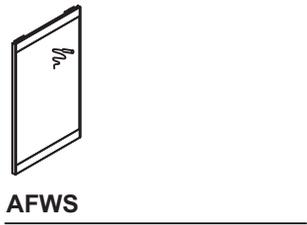


AFWS - Part / Product Identification and What's Included

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.	Kit No. / Assy. No.
A		Sliding Whiteboard	N80-72012 +ZZ+XX	1	
B		Panel Hook	B02-72003	2	X80-72004
C		5/16" x 2-1/2" Clevis Pins, Zinc	E03-50662	2	
D		Roller Wheel	N80-72004	2	
E		Stopper	B11-72001	2	
F		1/4" - 20 x 1-1/8" 90° Countersunk Flat Head Hex Socket Cap Screw	E01-50731	2	

Not Included

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.	Kit No. / Assy. No.
G		Focus Wall Whiteboard or Focus Wall Tackboard	AFWW or AFWT	As per Order	
H		Focus Wall Frame	AFWF	1	

Application

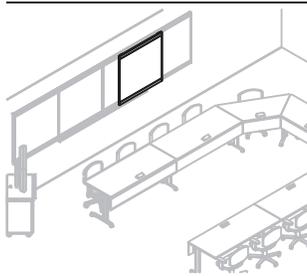





TOOLS REQUIRED: 2mm and 4mm Hexagonal Socket Keys, Flat Screw Driver



Reference Installation Guides:
No. 590 Tables & Collaborative Spaces "Work Tools AFWF, AFWW, AFWT"

For additional information on this installation contact Teknion | Roy & Breton **Technical Support**.

Issue Date: 2006 October 16

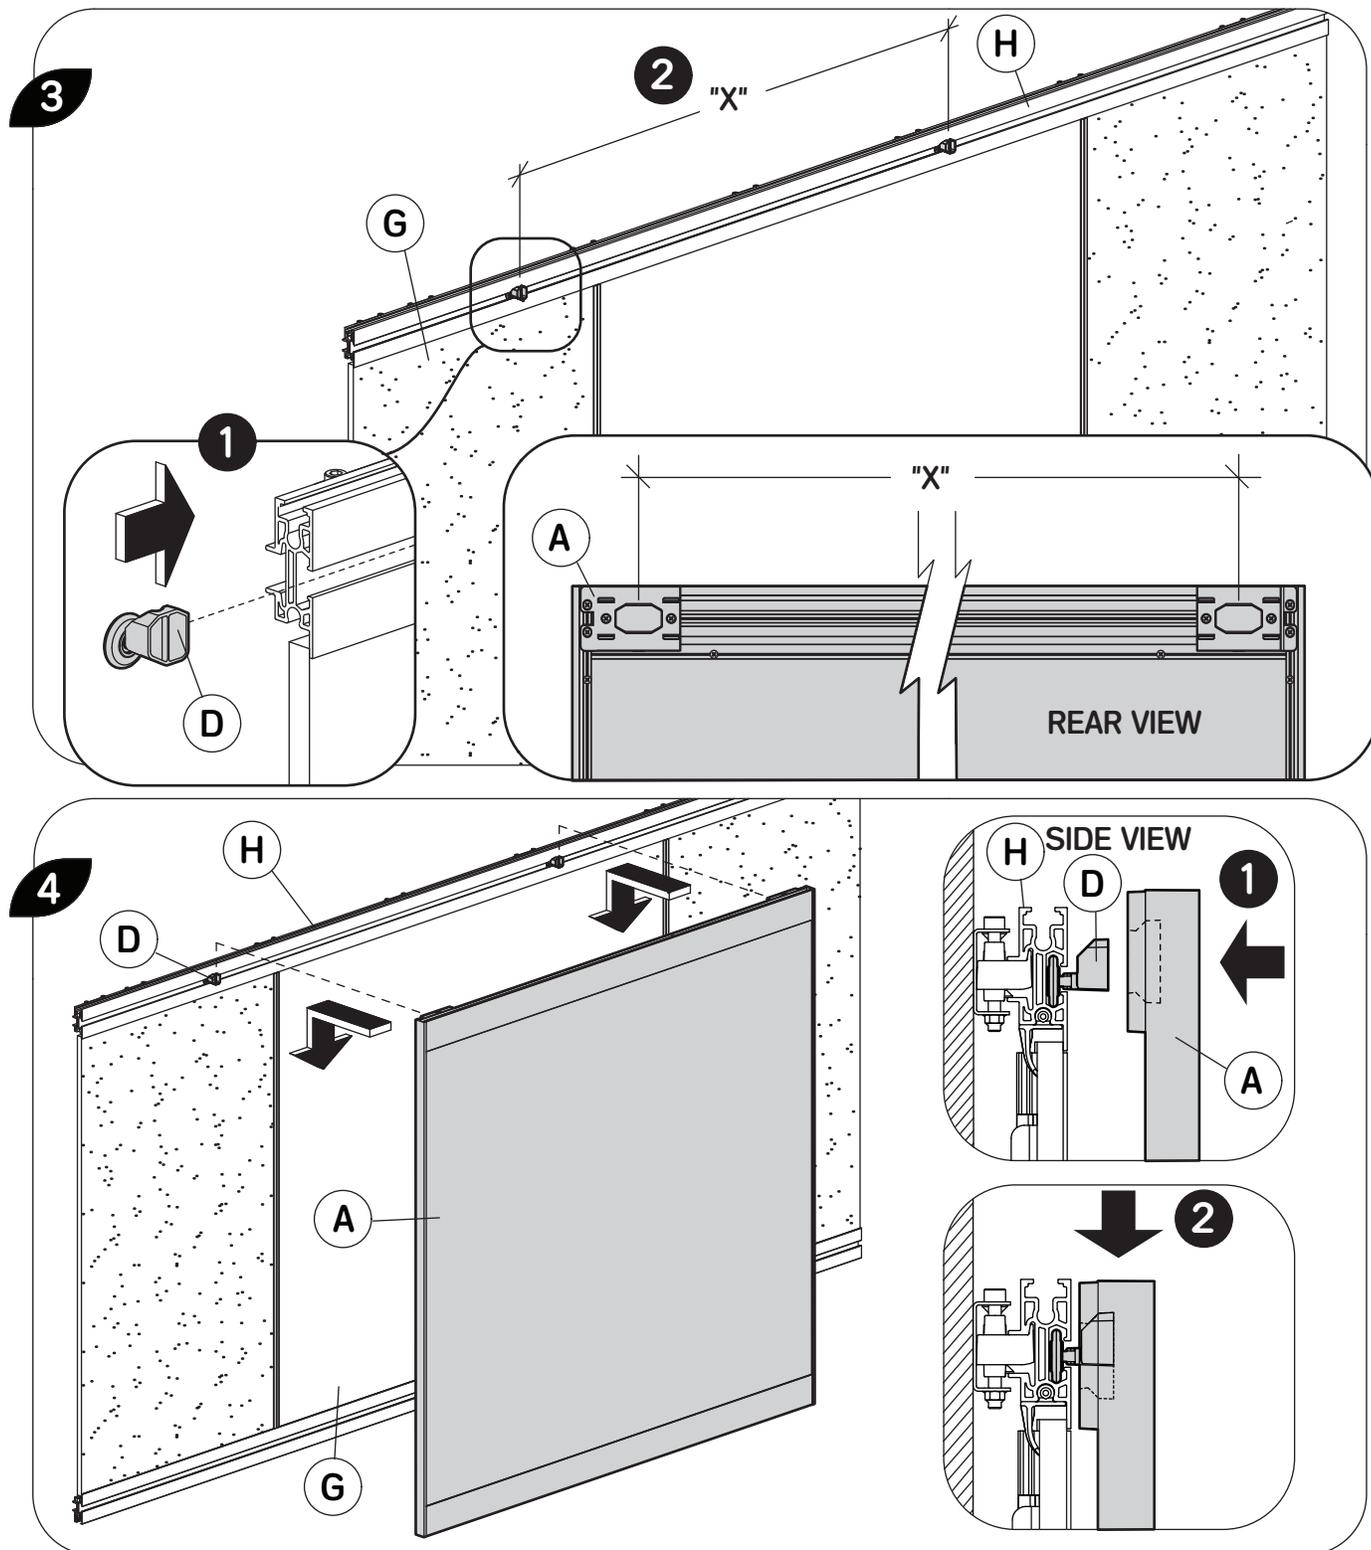

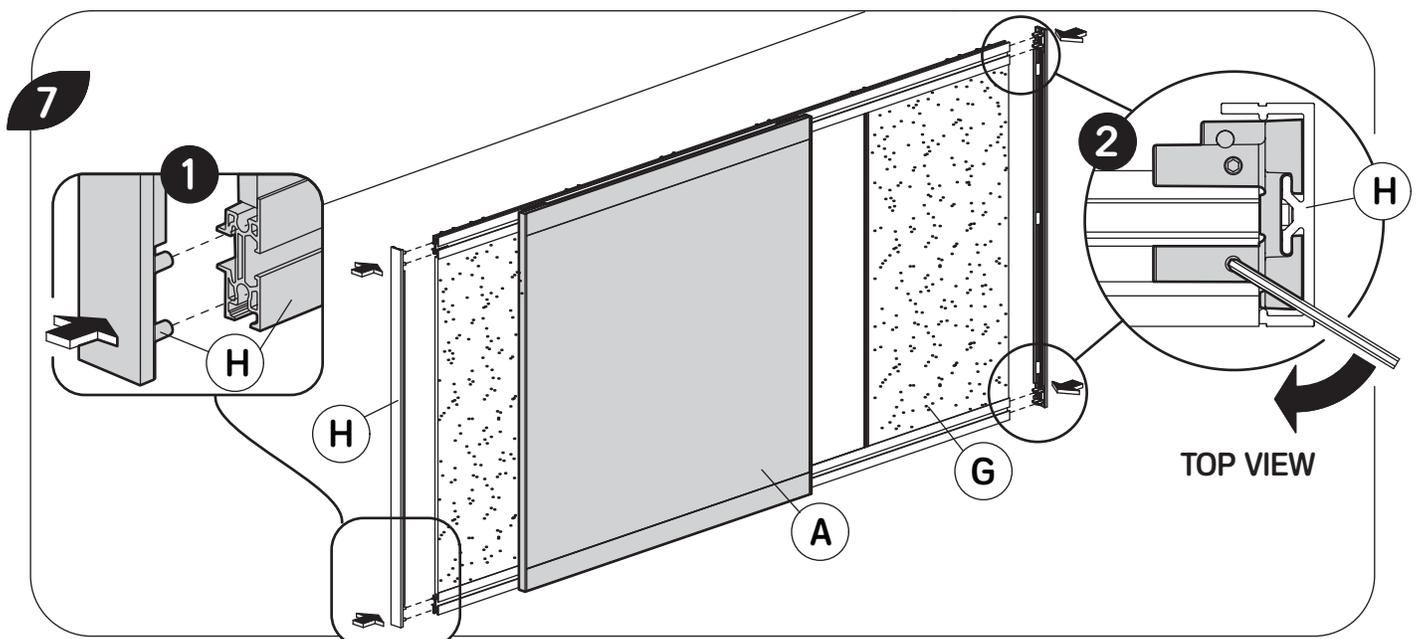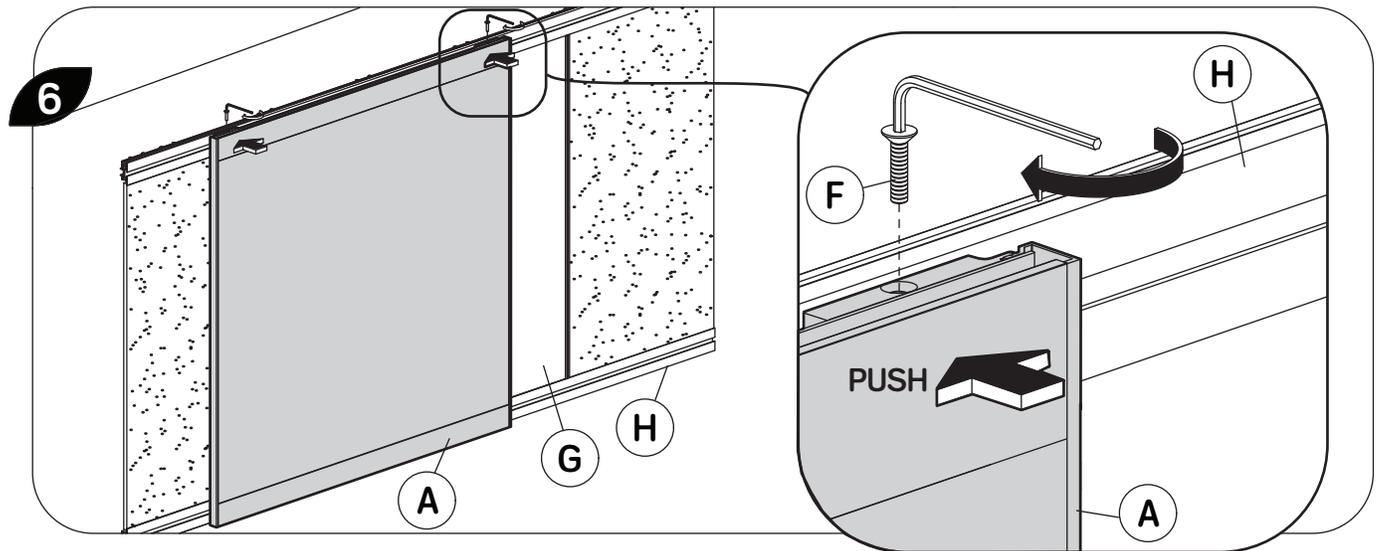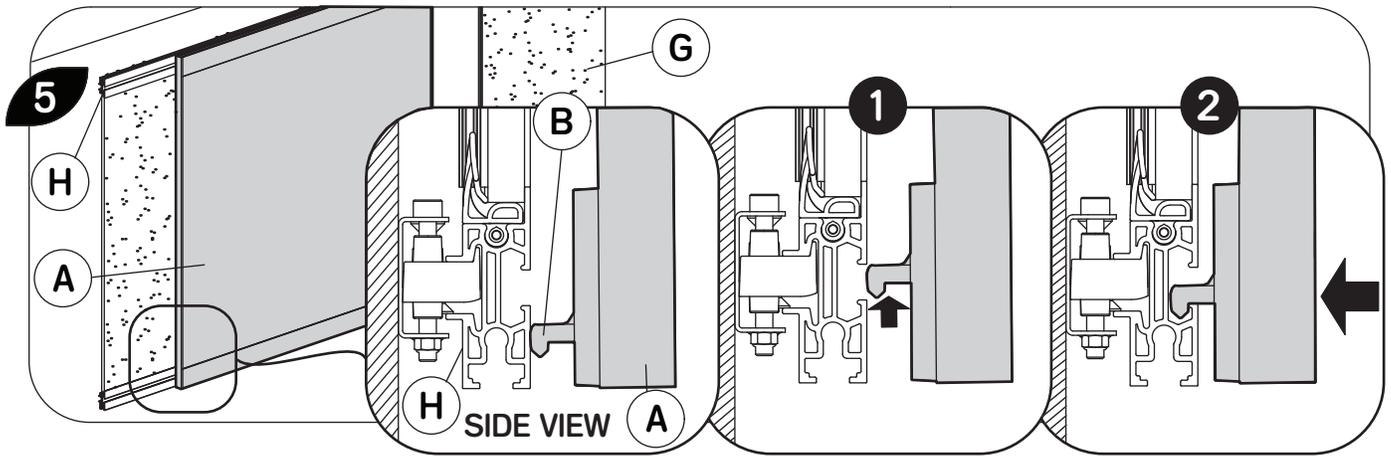


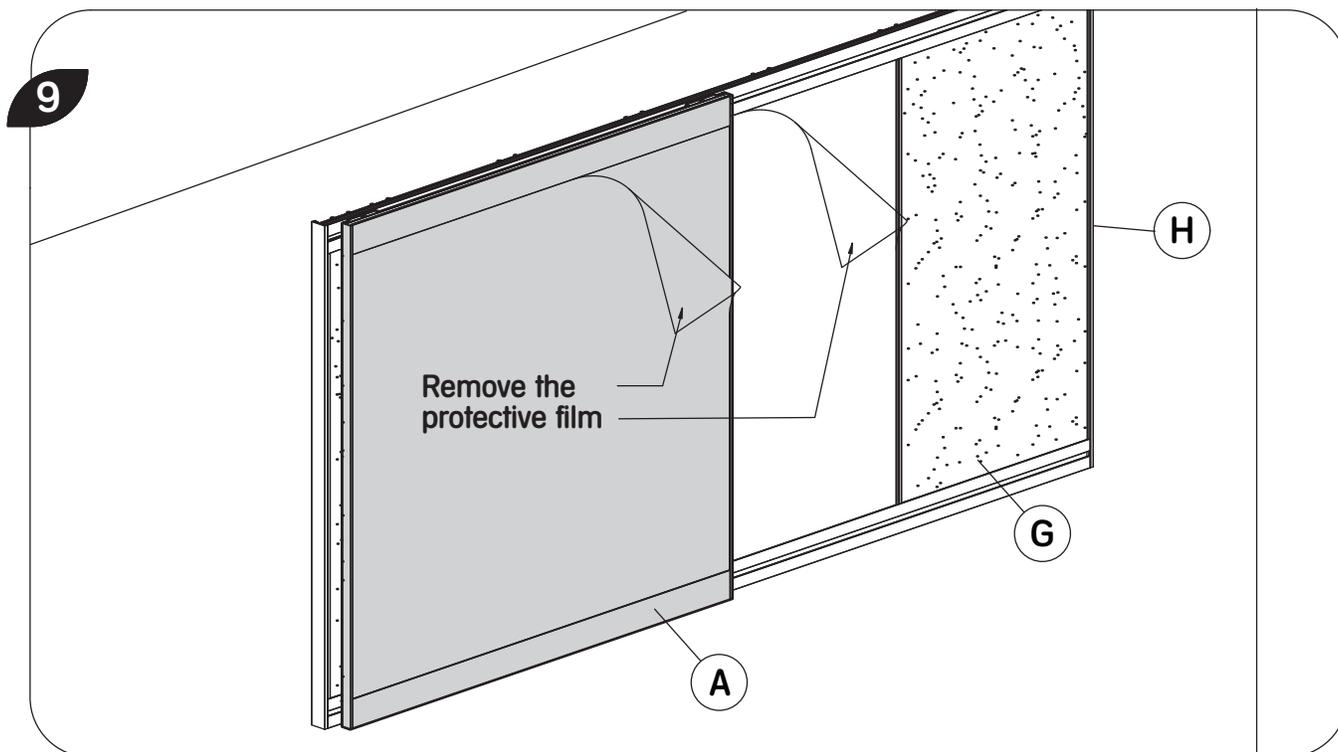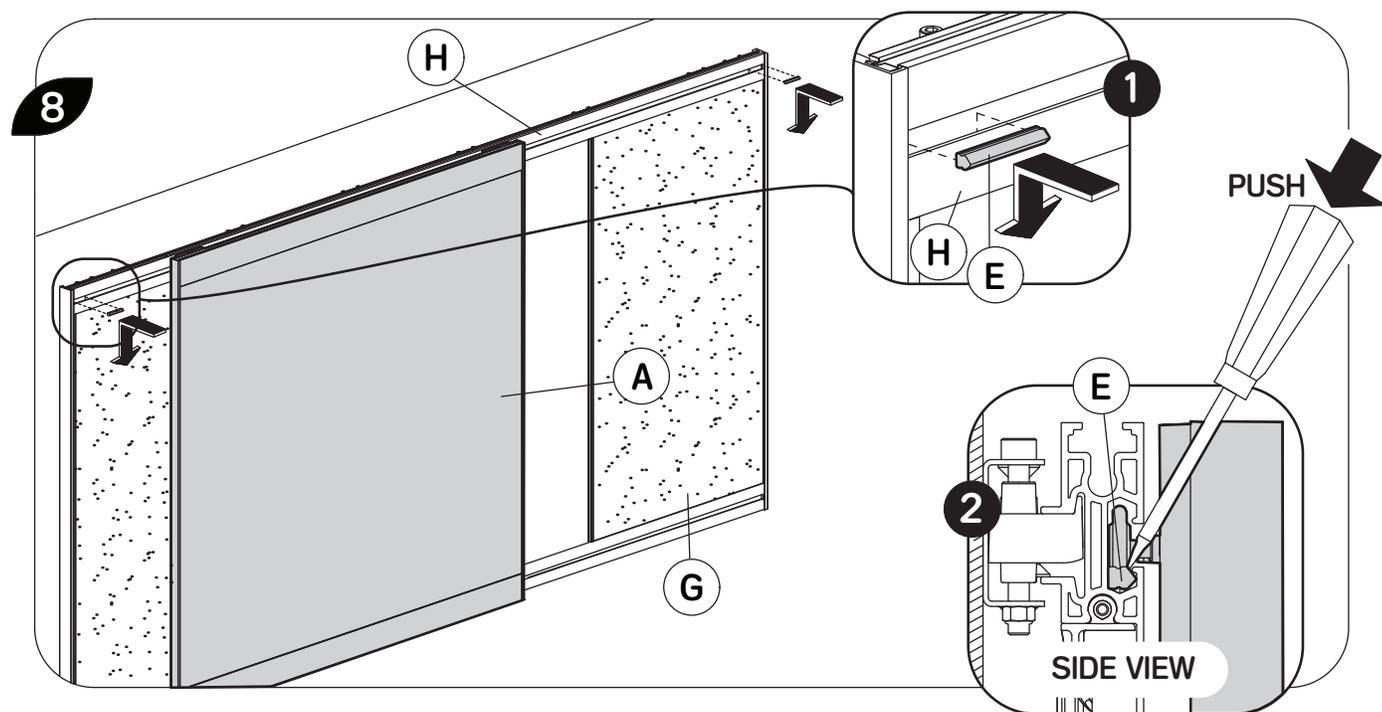

Focus Wall Marker Tray
Focus Wall Flip Chart Hooks

AFWM
AFWC

Product

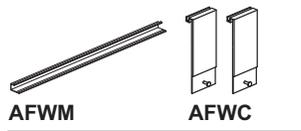


AFWM - Part / Product Identification and What's Included

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.
A		Marker Tray	N80-72015 +XX	1

AFWC - Part / Product Identification and What's Included

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.
B		Flip Chart Hooks	N80-72014	2

Application

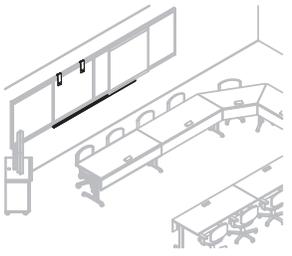


Not Included



Ref.	Illustration	Description	Part No. / Prod. Code	Qty.
C		Focus Wall	N/A	1

TOOLS REQUIRED: 2mm Hexagonal Socket Keys


FOCUS WALL MARKER TRAY INSTALLATION

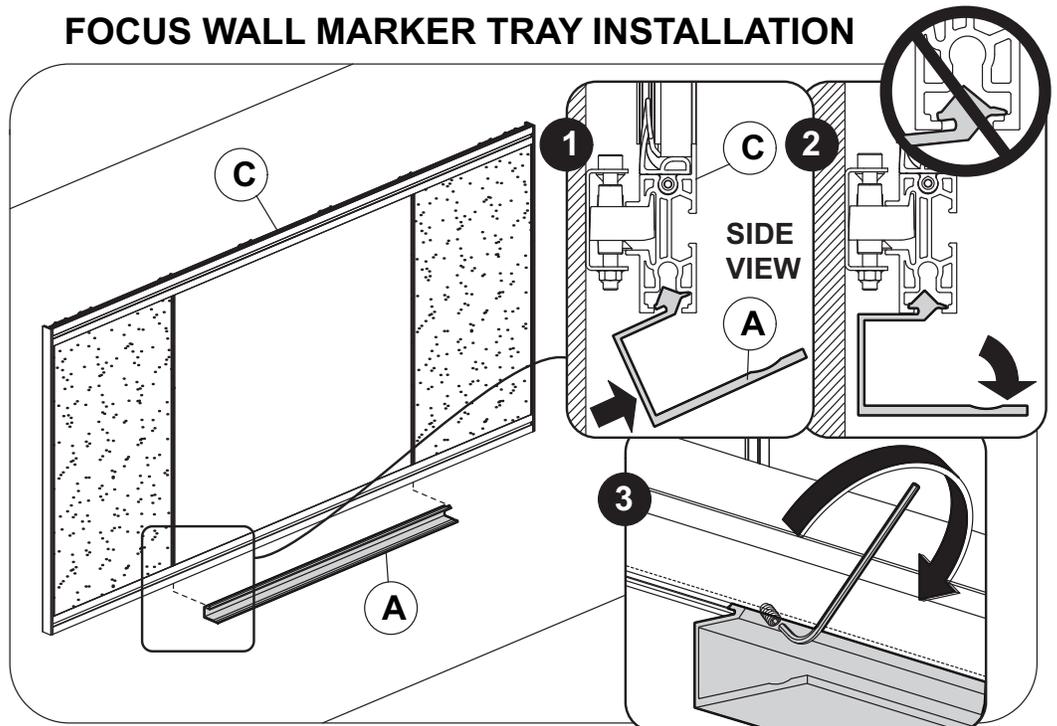

FOCUS WALL FLIP CHART HOOKS

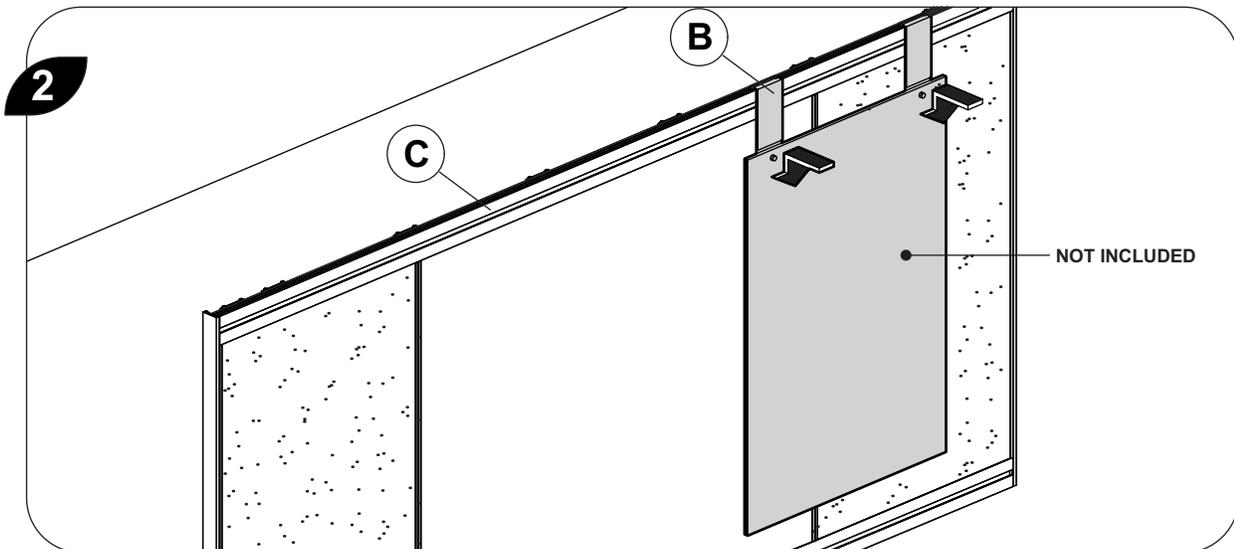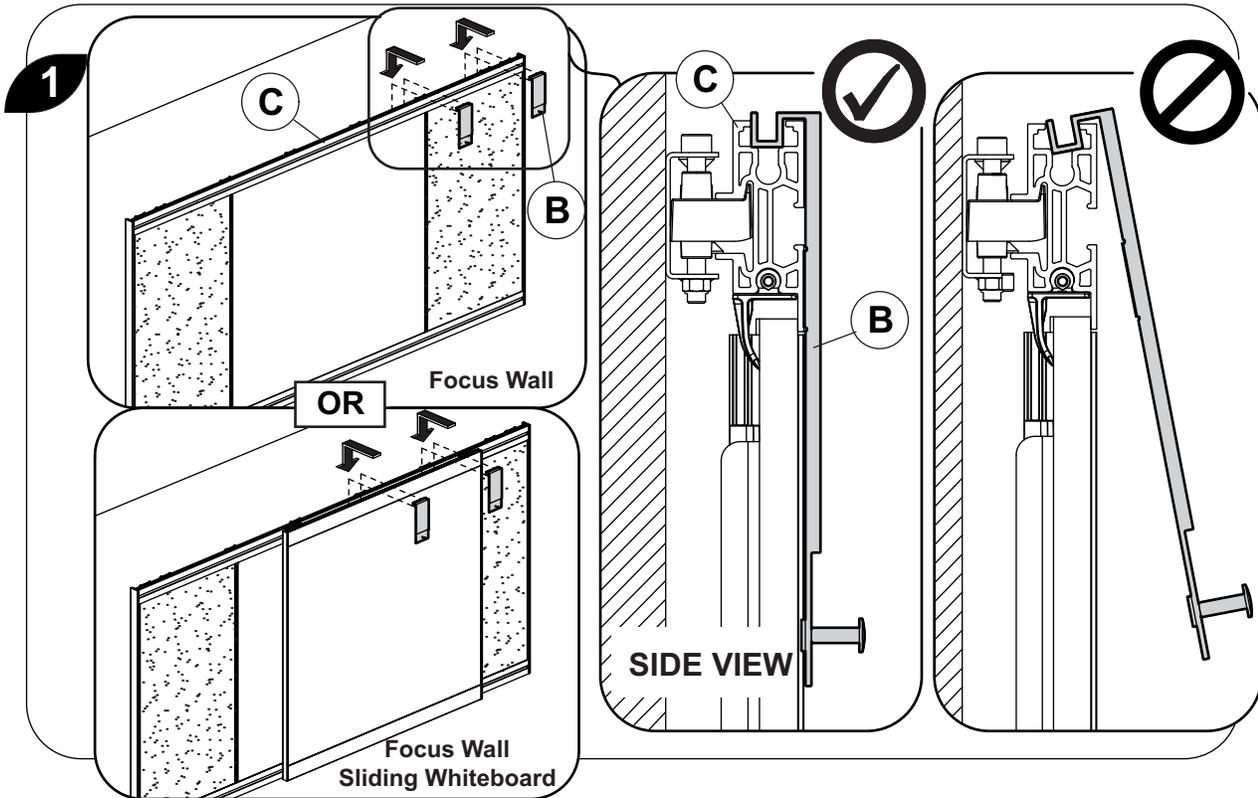

Product

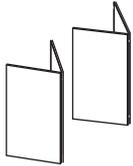

AFWD


AFWD - Part / Product Identification and What's Included

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.	Kit No. / Assy. No.
A		Folding Doors	N/A	2	
B		5mm x 24mm Dowel Pin	E03-50664	4	X80-72005
C		Fixed Hinge	A25-72006	4	
D		Sliding Hinge Top	N/A	2	
E		Sliding Hinge Bottom	N/A	2	
F		1/4" - 20 x 5/8" UNC Cross/Square Comb., Round Head, M. Screw	405955	20	
G		Door Stopper, Brown	460422	4	

Not Included

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.	Kit No. / Assy. No.
H		Focus Wall Whiteboard or Focus Wall Tackboard	AFWW or AFWT	As per Order	
I		Focus Wall Frame	AFWF	1	

Application

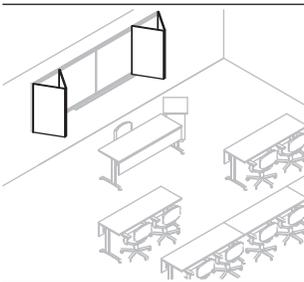

TOOLS REQUIRED: Cross Drive or Square Drive #3 and Cross Drive #2



Reference Installation Guides:
No. 590 Tables & Collaborative Spaces "Work Tools AFWF, AFWW, AFWT"



For additional information on this installation contact Teknion | Roy & Breton **Technical Support**.



Issue Date: 2006 October 16



FOCUS WALL FOLDING DOORS INSTALLATION



NOTE: Skip steps 1 and 2 if you had not previously installed the end covers yet.



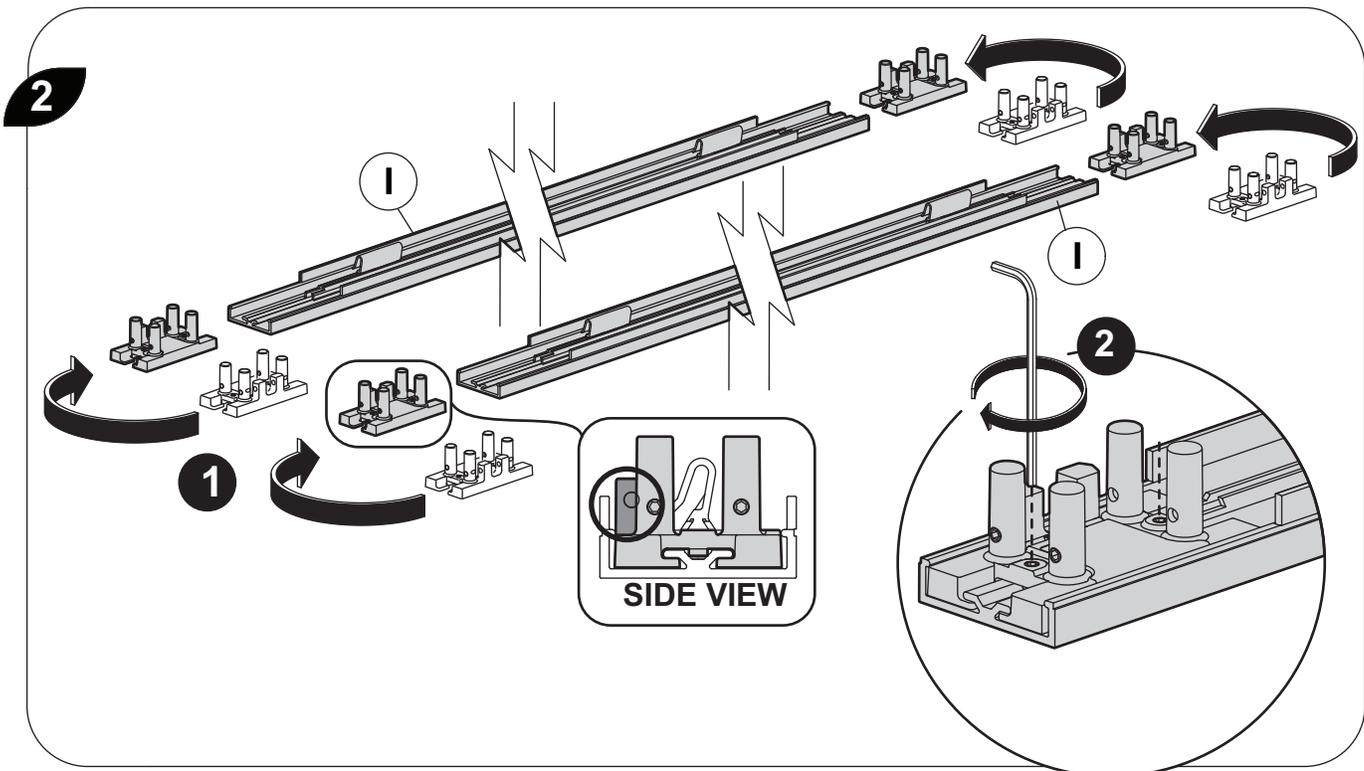
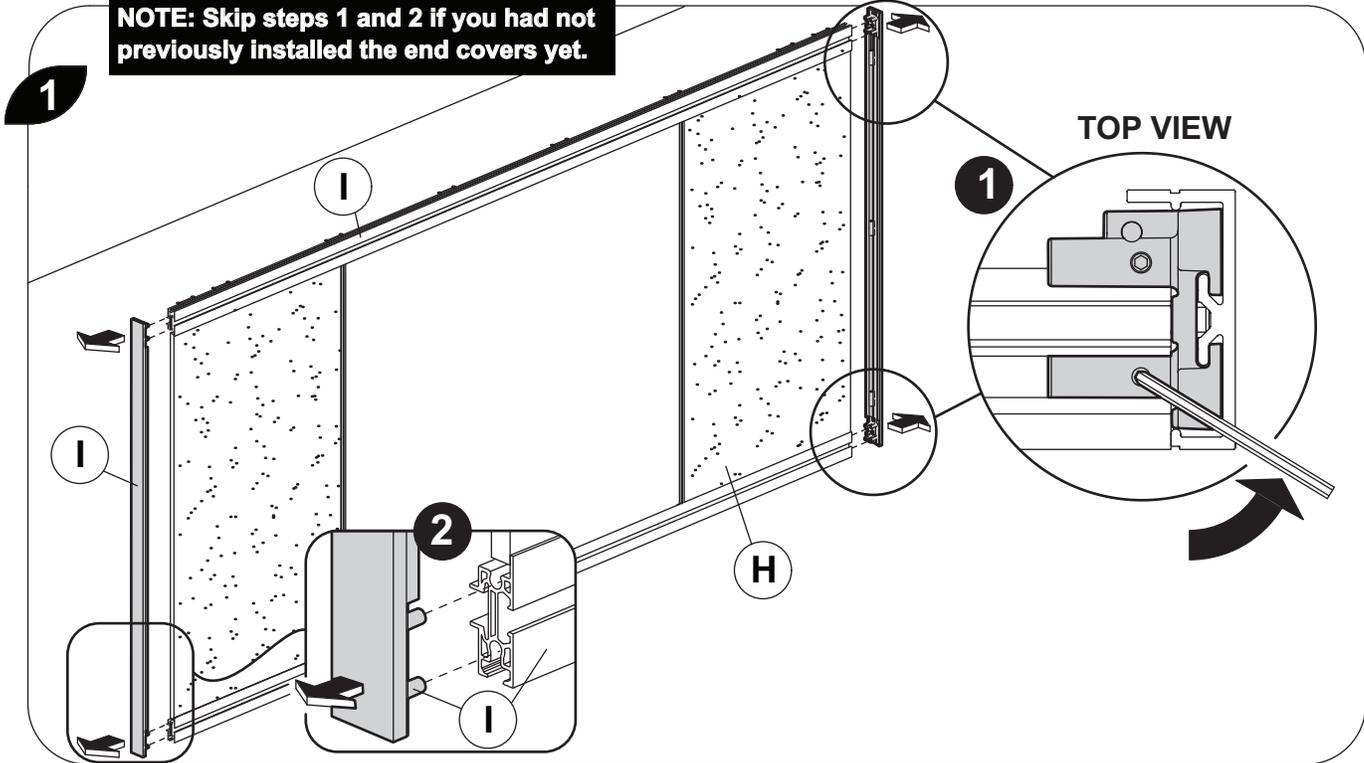


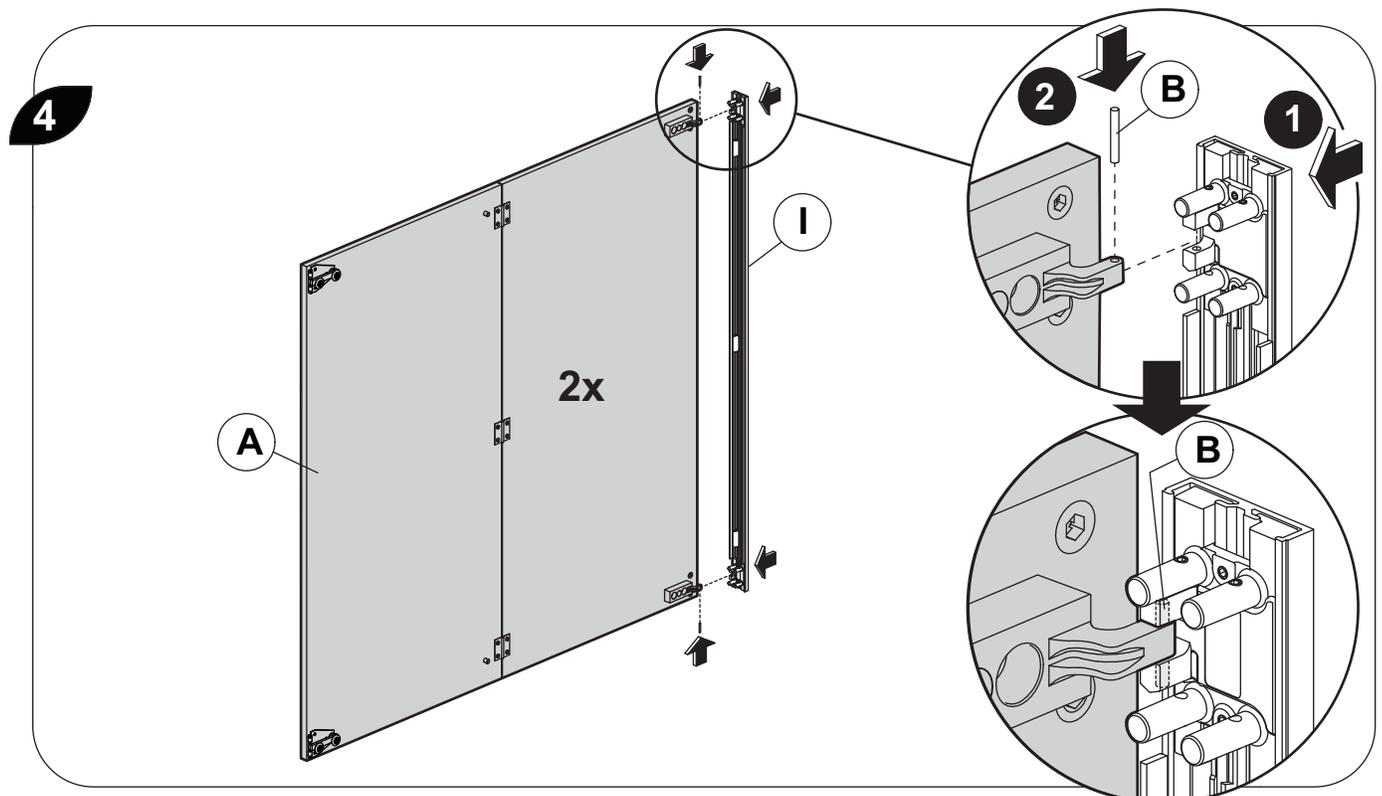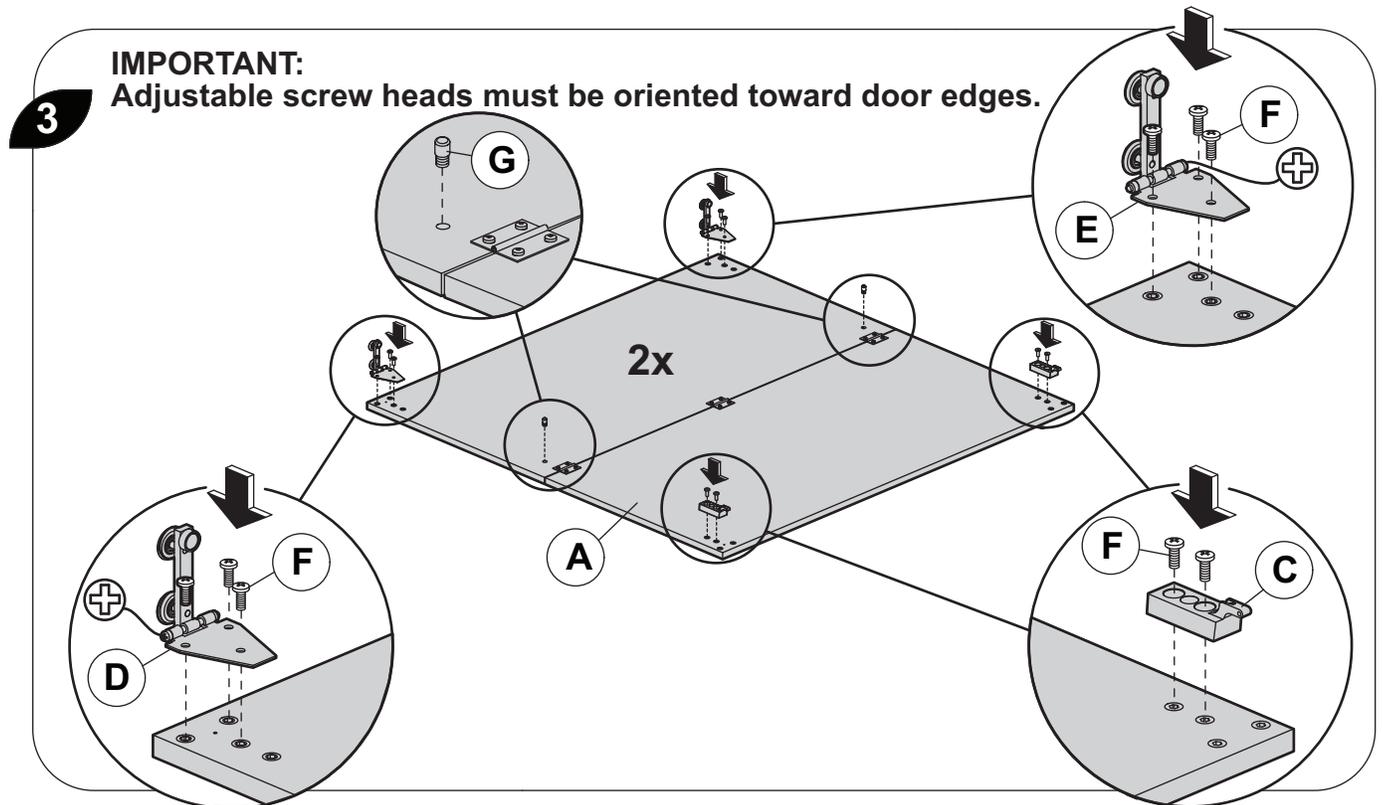

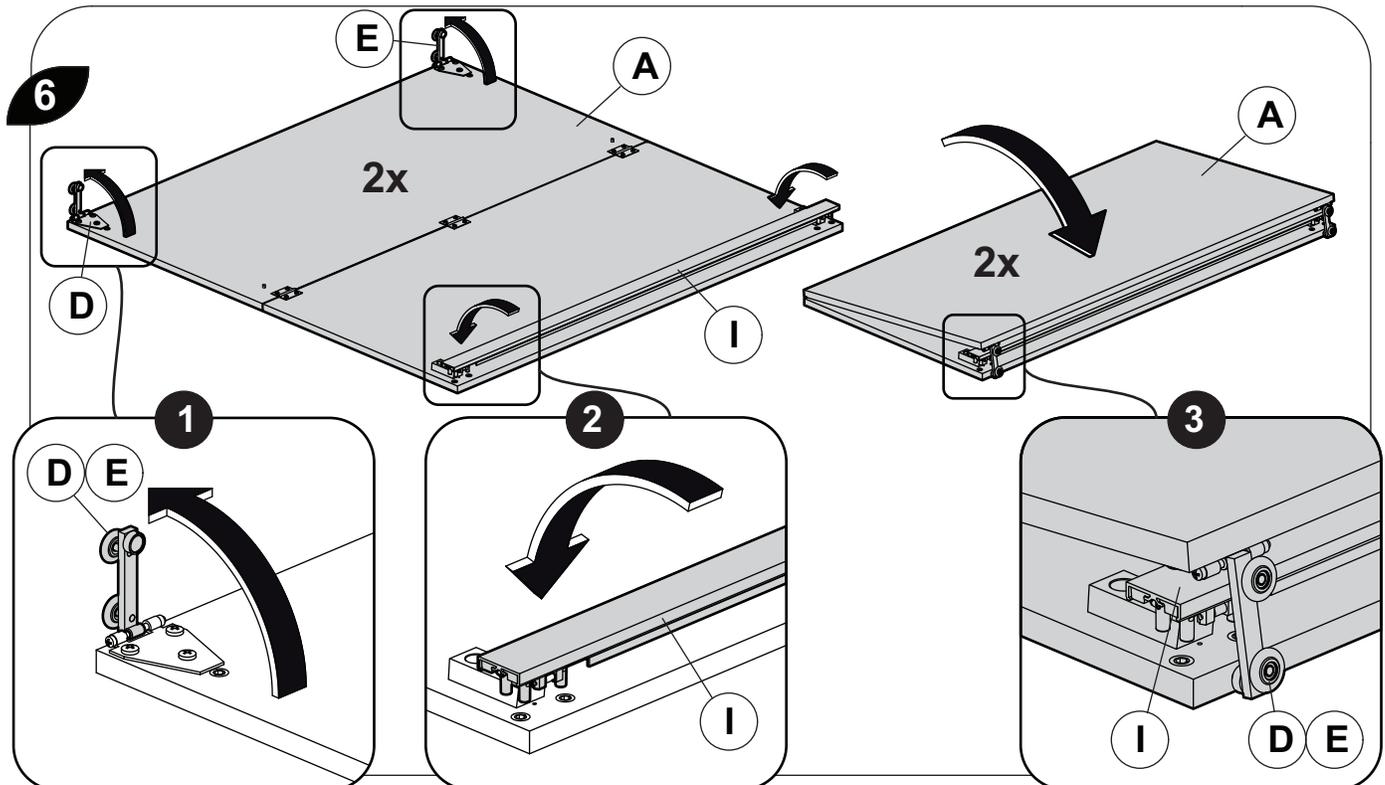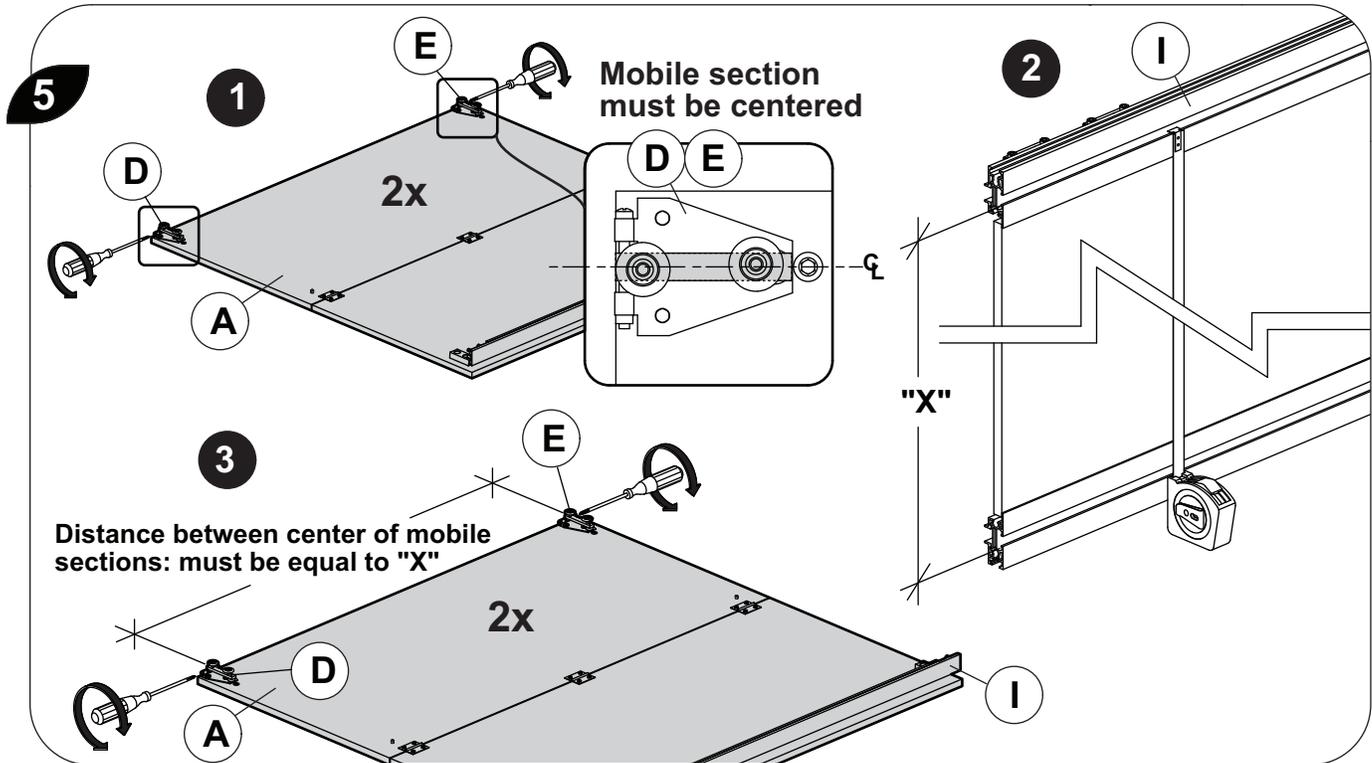

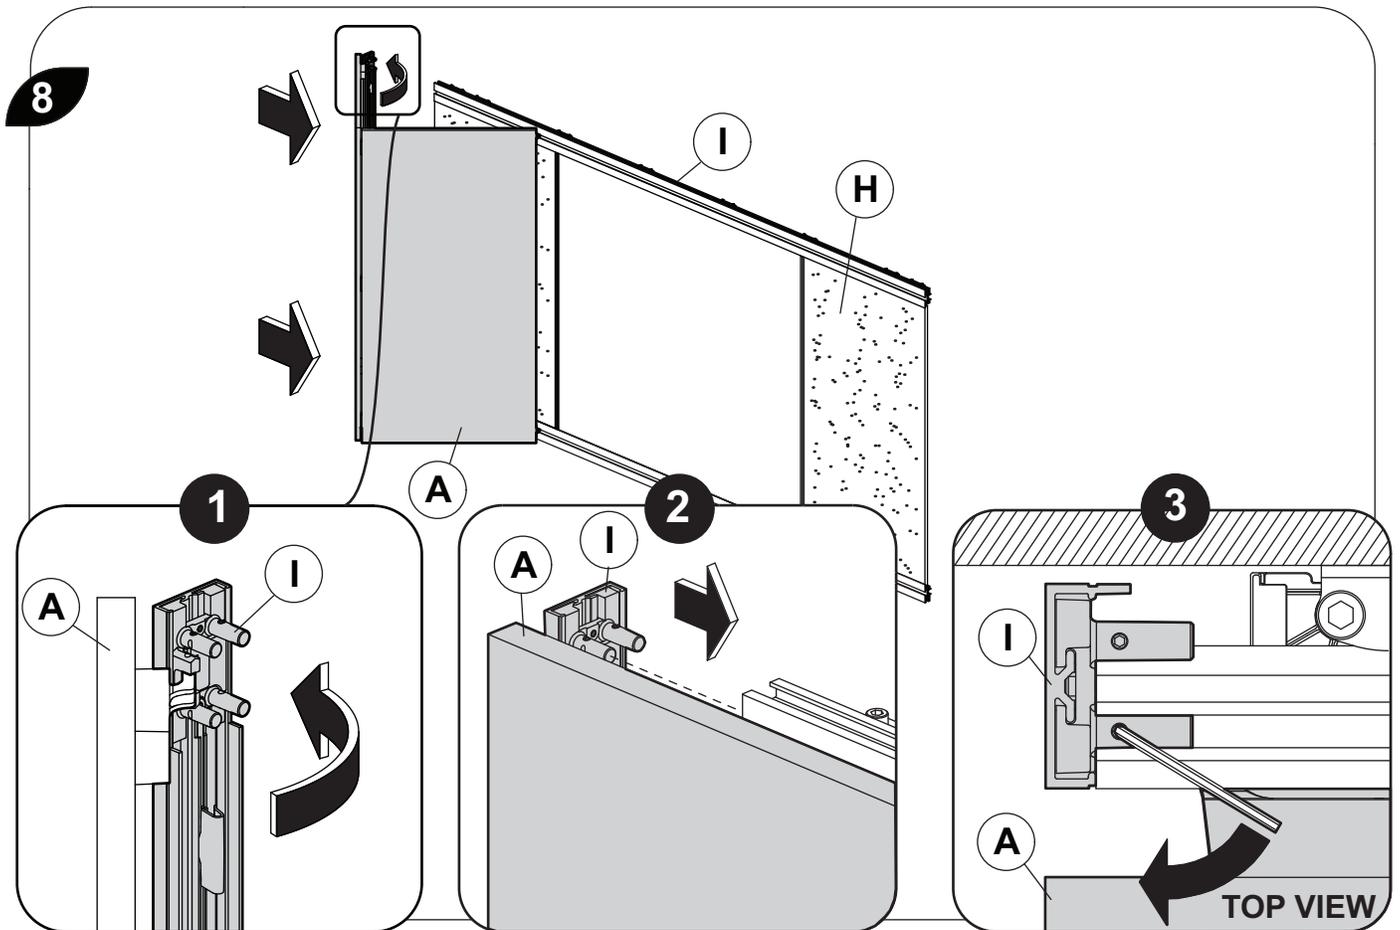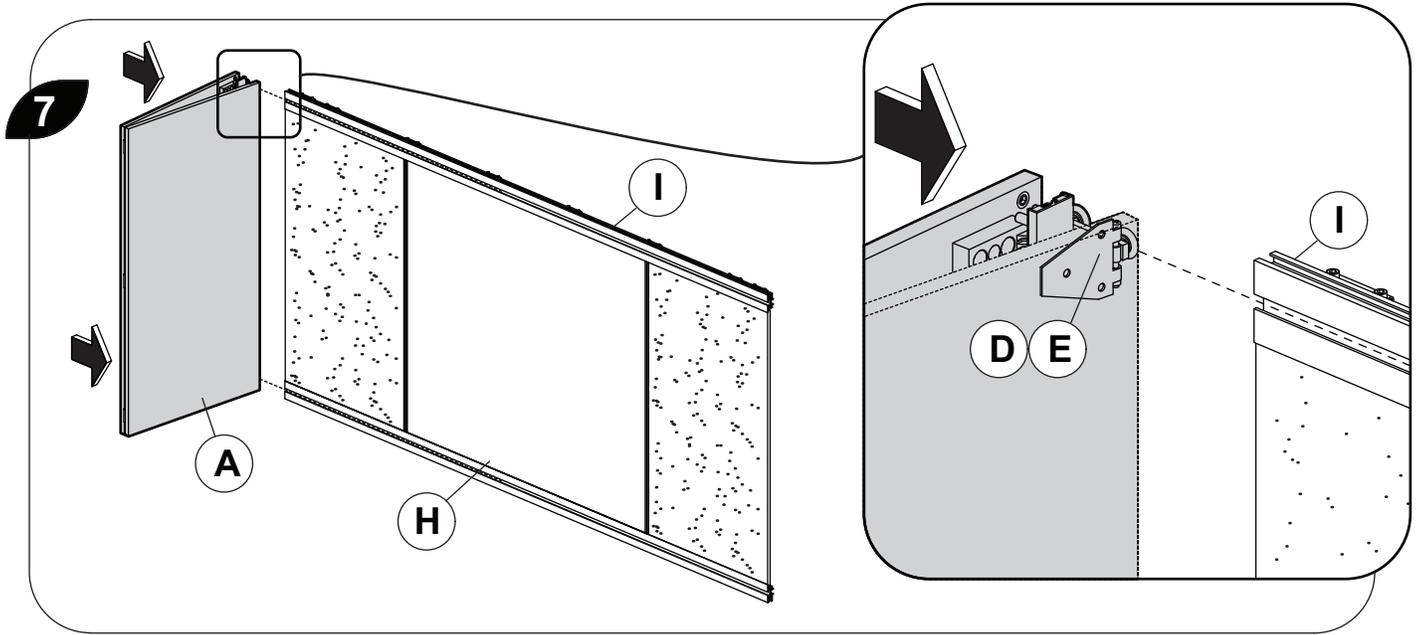

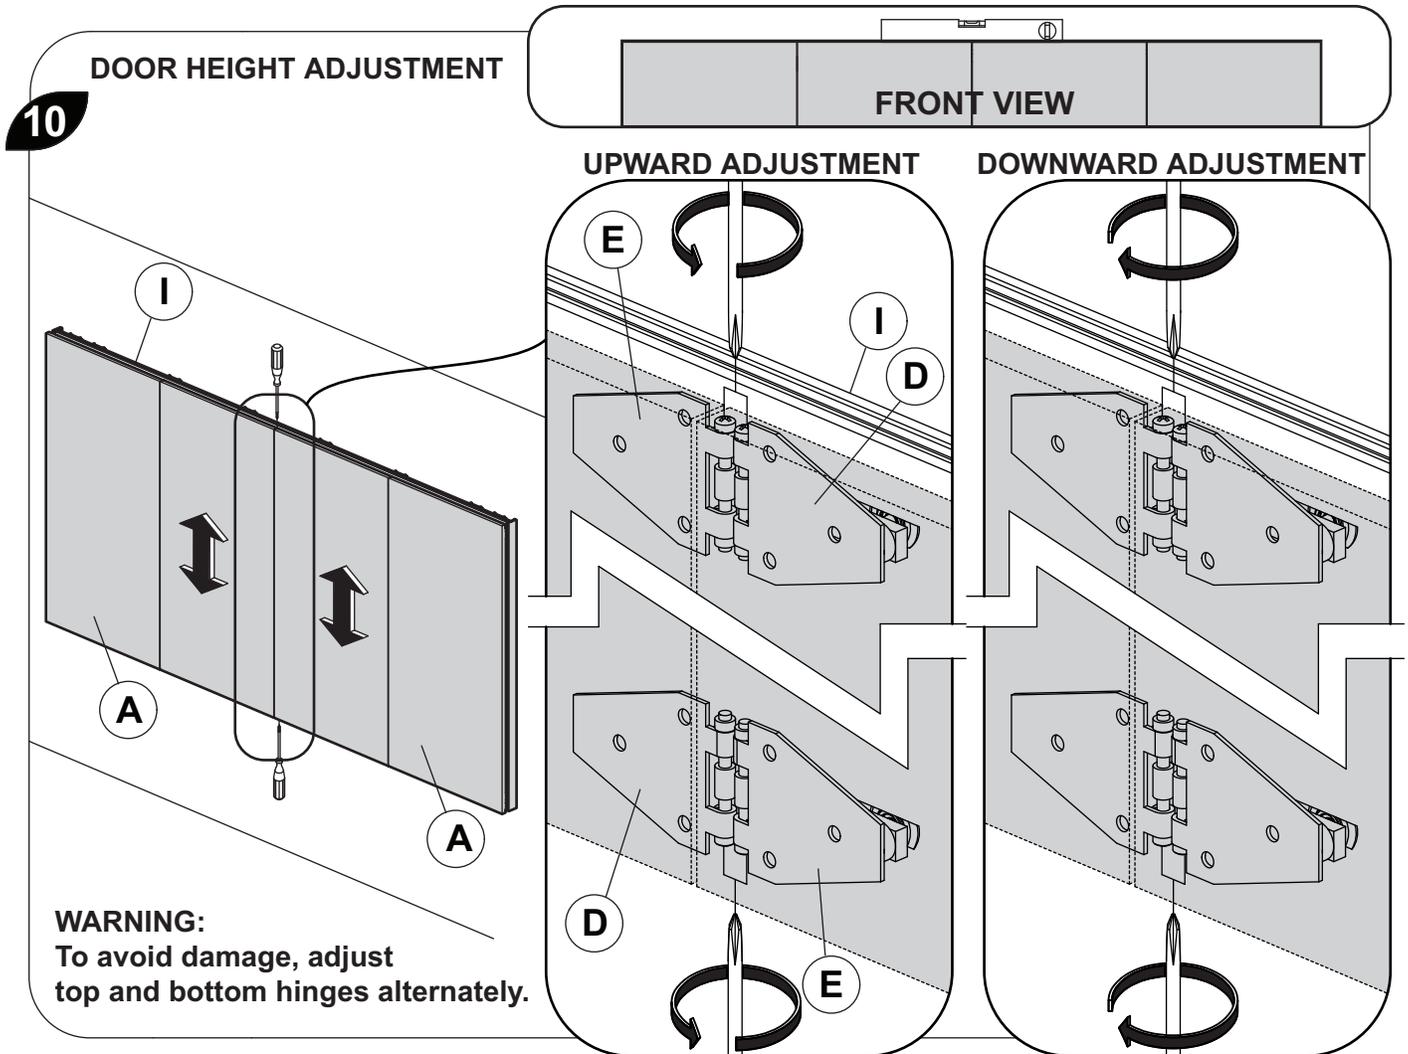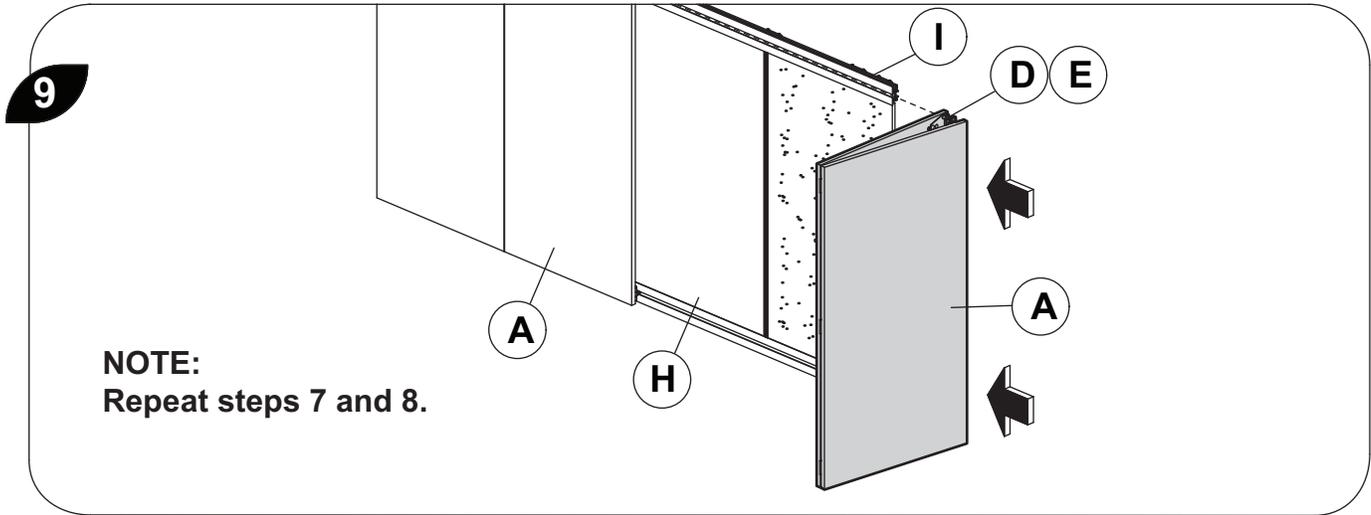


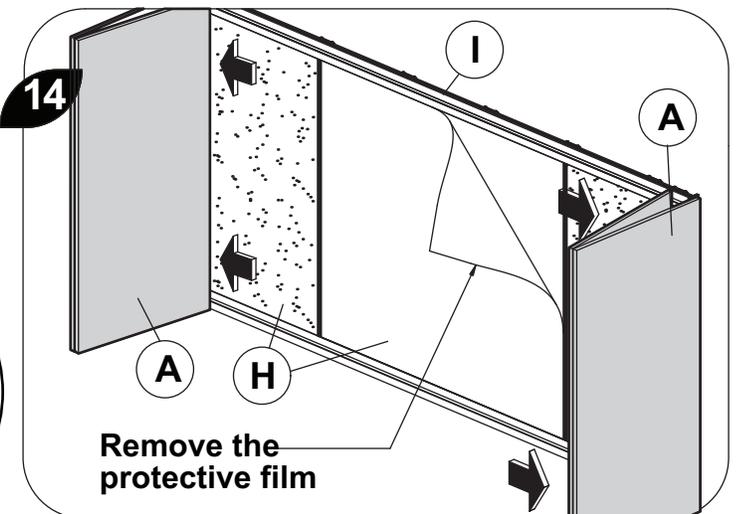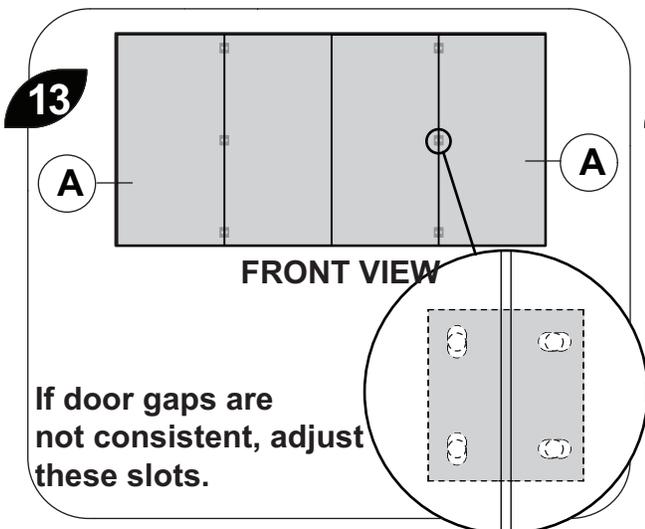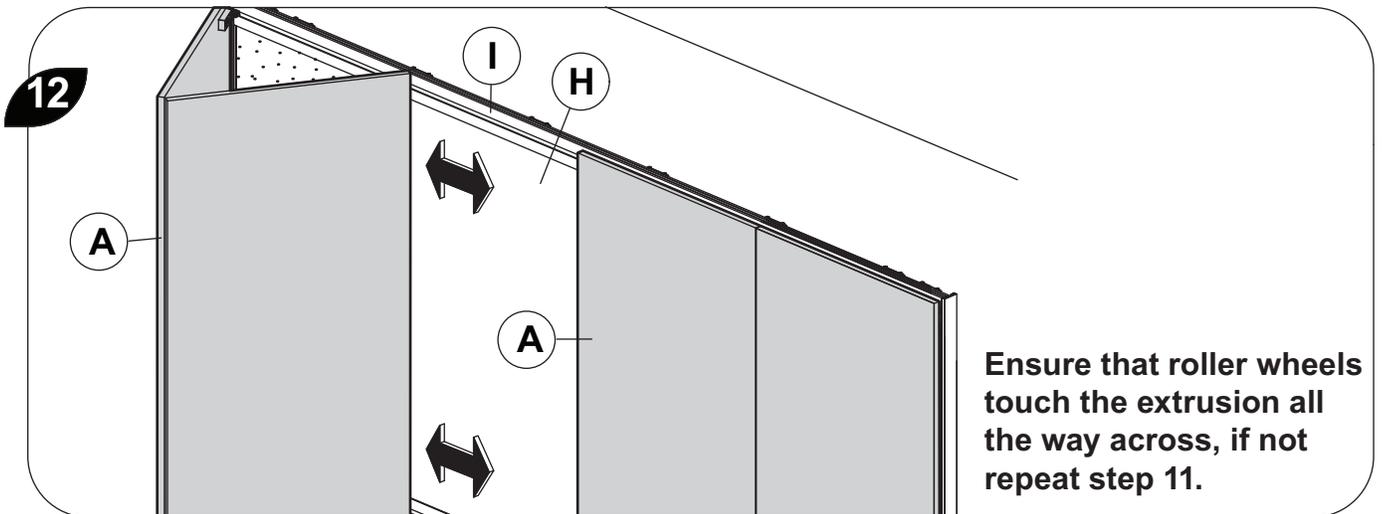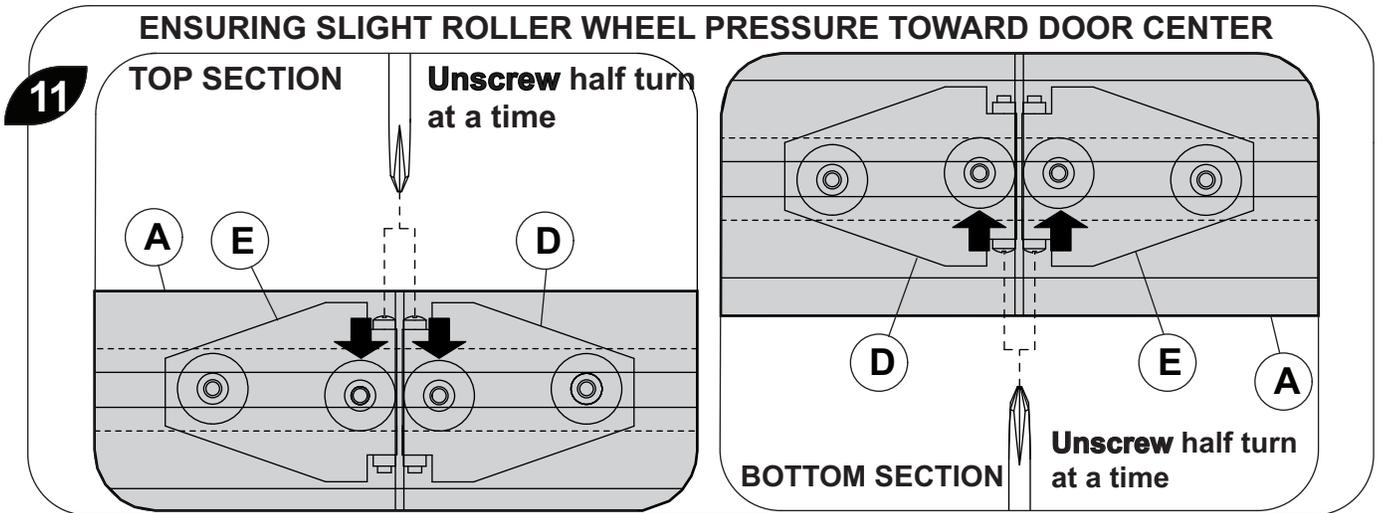

Focus Board


AFWB

Product



AFWB

Application

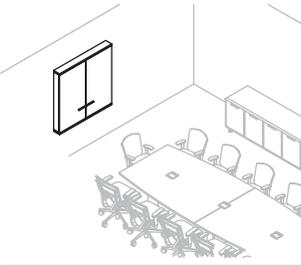


AFWB - Part / Product Identification and What's Included

Ref.	Illustration	Description	Part No. / Prod. Code	Qty.
A		Focus Board	AFWB	1
B		Horizontal Wall Adapter	A23-62203 +48	2

NOTE:

Selection and purchasing of wall mounting fasteners capable of bearing intended load and connection to appropriate wall type are the responsibility of the installer.

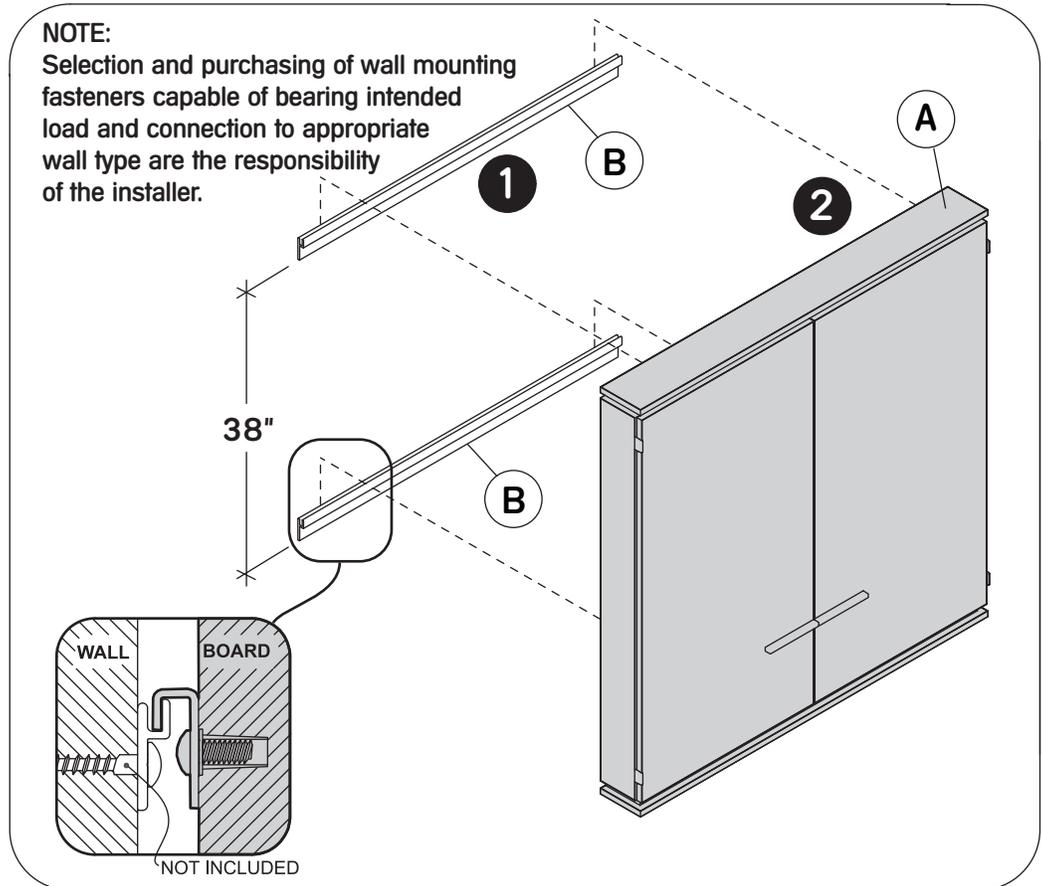

TOOLS REQUIRED: Power Driver